

A white rectangular card is tilted at an angle, featuring the word "REACH" in a bold, italicized, black sans-serif font. The card is set against a background of flowing, wavy lines in shades of blue, purple, and red. The word "REACH" is the central focus of the card.

REACH

REACH AIRBIKE
BASIC TROUBLESHOOTING

TOPICS COVERED

- FAQ's
- HOW TO RESOLVE SQUEAKY NOISE ISSUE
- HOW TO INSTALL LEFT PEDAL
- HOW TO RESOLVE SENSOR WIRE ISSUE
- HOW TO INSTALL INNER BELT
- HOW TO INSTALL FRONT WHEEL BELT
- FUNCTIONING OF RESISTANCE KNOB
- HOW TO INSTALL MONITOR



- Q1) I have received the product but outer box seems to be damaged?
 - Ans: Products are heavy and Bulky and travel from far locations. Please open the box and call Brand Customer Care for installation of the same. Customer Care number can be found on the user manual inside the box
- Q2) Product inside the box is damaged?
 - Ans: Please connect with Brand Customer Care. If the damaged part is replaceable, Brand will replace the same and also help in installation of the product. And if damage is big, Brand will inform you to request replacement of the product.
- Q3) Product inside the box has missing parts?
 - Ans: Please connect with Brand Customer Care. They will provide the missing part within 48 hours and also help in installation of the product. Customer Care number can be found on the user manual inside the box
- Q4) I have received the product and want installation of the same?
 - Ans: Please connect with Brand Customer Care. They will help in installation of the product. Customer Care number can be found on the user manual inside the box.

PRODUCTS



HOW TO RESOLVE SQUEAKY NOISE ISSUE

<https://www.youtube.com/watch?v=fHLqoH5QmZQ>

This Video will guide you how you how to resolve squeaky noise issue

Steps to resolve noise issue – .

Step 1 – Loose up the pedal screws and handle rod screws at joints.

Step 2 – Apply lubricant to the joints(Any oil will work) and keep it loose for 2 minutes

Step 3 – Tightened the screws.



HOW TO INSTALL LEFT PEDAL

https://youtu.be/78hong6_aGk

This video will guide how to install left pedal.

- During fitting Left paddle rotates anti clockwise. Do remember this please. Every screw and nut rotates clockwise only left paddle rotates anti clockwise. If done clockwise it will destroy the thread.

Steps to Install left pedal –

1. Check that the pedal has the L marking on it to indicate the left pedal.
2. Insert the pedal threading into the crank.
3. Screw the pedal in the **anticlockwise** direction till completion.
4. Insert the pedal screw onto the end of the pedal threading.
5. Turn the pedal screw in the clockwise direction till completion.



HOW TO CHANGE SENSOR WIRE

- <https://youtu.be/ktkSVUjLZ-c>

This video will guide how to fix the Display sensor wire.

Steps to change sensor –

- Step 1 - Uninstall left and right pedal
- Step 2 – Uninstall right and left side pedal cover
- Step 3 – Loosen up the inner belt
- Step 4- Loose the front wheel belt
- Step 5 – Removing the front wheel by loosening the screws.
- Step 6- Unhook the sensor wire from rubber clips
- Step 7- Change the sensor and sensor wire.
- Step 8- Install the front wheel, inner belt, covers and pedal.



HOW TO INSTALL INNER BELT OF AIRBIKE

- <https://youtu.be/gGEAxqm7ETA>

This video will guide how to fix the inner Belt.

Steps to Install inner belt –

Step 1 – Uninstall the left and right pedal.

Step 2 – Uninstall the left and right side cover.

Step 3 – Loose up the screw connecting handle rod and front wheel.

Step 4 – Putting the inner belt from the front wheel side.

Step 5 – Tighten the screw connecting handle rod and front wheel.

Step 6 – Putting the inner belt on pulley from pedal side and checking if it is loose.

Step 7 – Put the left and right side cover.

Step 8 – Install both the pedals.

HOW TO INSTALL FRONT WHEEL BELT

- <https://youtu.be/ZaRzvivuWT8>

This video will guide how to fix front wheel belt.

Steps to install front wheel belt –

Step 1 – Open the lock holding front wheel belt.

Step 2- Uninstall the left side cover.

Step 3 – Connect the belt with spring near left pedal.


Step 4 – Put the belt on front wheel.

Step 5 – Put the belt with holder and lock it.

Step 6 – Install the left side cover.

**LOW IMPACT
FULL BODY
WORKOUT**



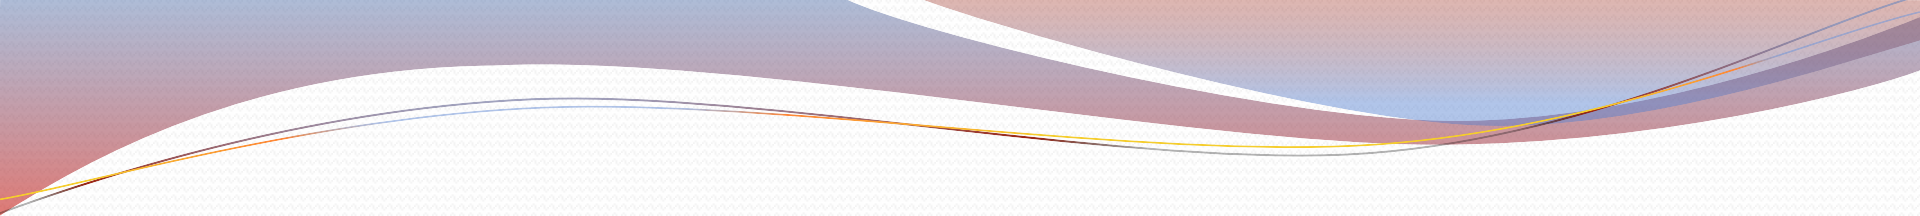

HOW TO INSTALL MONITOR

1. Align the monitor with the bar extending from linkage tube on the front of the cycle so that it slips on and fits.
2. Take the wire attached to the left side of the frame and the wire extending from the back of the display.
3. Make sure that there are no cuts along the wire after the two have been connected.

FUNCTIONING OF RESISTANCE KNOB


- <https://www.youtube.com/watch?v=xrepdbDjyaI>

This video will guide how the resistance functionality works.

When we rotate the knob to right side it increases the resistance and towards left side it decreases resistance. Another way for increasing or decreasing the resistance is through belt. If we tighten the front belt from lock it increases the resistance and loosening it up decreases the resistance.





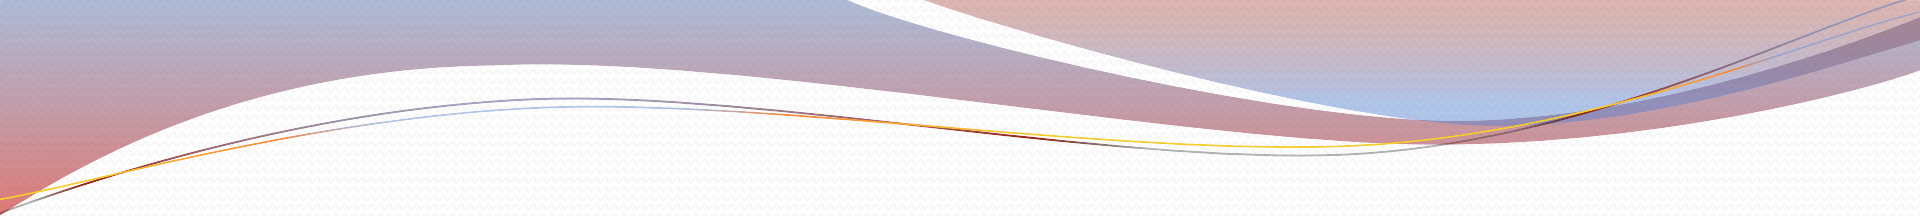

THANK YOU