 



尺寸:宽60mm高90mm, 双面印刷风琴折
字体:思源黑体

Electric nail clipper
instructions

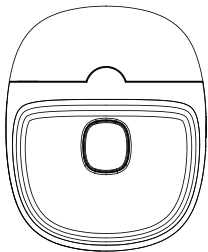

Please read this manual carefully before use.

 PRODUCT INTRODUCTION

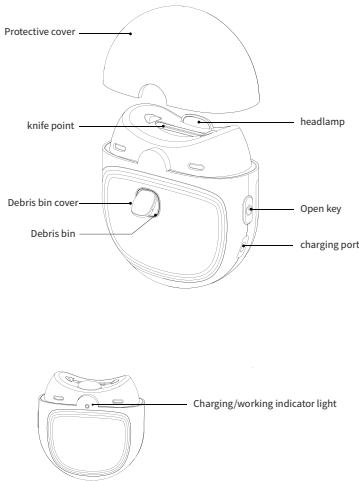


METHOD OF APPLICATION

1.USE

- 1. Press and hold the switch button for 2.5 seconds to turn on the white auxiliary lighting when the machine is started.
- 2. After the machine is turned on, it runs at a low speed by default. Click to switch to a high-speed gear, and click Cycle again.
- 3. Press and hold the key for 1.5s to turn it off when it is turned on.
- 4. When charging, the red light flashes, and the full white light is always on. Do not work when charging.

2.TWO STEPS

- 1. Take off the front cover of the equipment by pinching both sides, and make sure that the side with the work indicator light of the equipment is facing up (the side with the nail clippings bin is facing down).
- 2. Place the nail to be trimmed at the opening of the cutter head, push the nail slightly towards the cutter head, and move the nail or equipment slowly (don't be too fast or too hard) to ensure that the whole nail is trimmed roundly (as shown below).

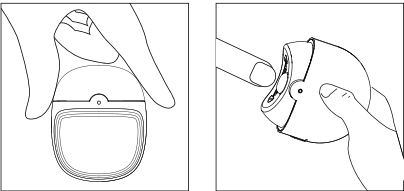

1, hold the side and remove the cover. 2.Lights up, debris bin down.

Tip:

Please don't stay in the same place for a long time, so as to avoid excessive pruning. This product realizes the integrated operation of grinding and shearing, and it is normal to produce slight dust-like nail clippings when using it.

Three cleanness

- 1. Turn off the equipment and press down one side of the nail clippings bin cover slightly.
- 2. Open the bin cover, dump the nail clippings in the nail clippings bin and clean the nail clippings bin with a small brush or a dry paper towel (please do not clean the nail clippings bin when it is turned on,) as shown below.





Three charges

Please charge the equipment in time in the following situations:

- 1 When using this equipment for the first time.
 - 2 When the equipment is working, the working indicator light flashes.
 - 3 Press the power to turn on the key equipment, and the work indicator light will flash for five seconds and then go out. Please use the attached Type-C charging cable and charger (5V output) to charge the equipment.
- During normal charging, the red indicator will flash and be full of long light. It takes about 2-3 hours to fully charge.

TIPS

When using the electric nail clipper, the correct holding method is that the indicator light faces upwards. If the nail clippings bin faces upwards, the effect of nail trimming will be rough and uneven.

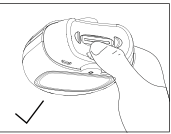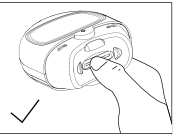

Users are advised to trim and deburr in two directions.

LIGHTING INTERPRETATION

Indicator light status	Functional interpretation
The work indicator is always on.	The equipment works normally.
The work indicator flashes.	The battery is low, please charge it as soon as possible.
Boot does not work, and the indicator light flashes five times and then goes out.	The battery is dead. Please fully charge it before using it.
The red indicator is always on.	Is charging

PRODUCT PARAMETER

Product name:	Electric nail clipper
Model:	ZJD-003
Charging input:	5V 1A
Rated input power:	3W
Operating voltage:	3.7V
Charging time:	2H
Implementation standard:	GB4706.1-2005

INSTALLED LIST:

Host *1, USB charging cable *1, instruction manual *1, CPE bag *1, color box *1, certificate 1.

TIPS:

- ⚠ Babies under 1 year old are forbidden to use, and children aged 1-12 can be operated and used with the help of guardians.
- ⚠ The blade is sharp, and children need to use it under the supervision of adults.
- ⚠ It must be properly placed to prevent children from touching and playing, so as to avoid danger.
- ⚠ Do not touch the cutter head with any body parts other than nails, so as to avoid danger.
- ⚠ When the equipment continues to operate, do not put anything other than nails near the cutter head, otherwise it may damage the cutter head or involve the foreign matter in the cutter head, causing the cutter head to malfunction.

MATTERS NEED ATTENTION

- Please charge the equipment for at least 1 hour when using it for the first time, so as to ensure that the internal battery of the equipment is charged.
- When it is not used for a long time, please charge it every three months. This product is not suitable for trimming other parts of the body except nails.
- When there are skin problems such as wounds around nails, do not use this product for trimming.
- Do not shower or soak this product with water, and stay away from water and fire sources. Keep it out of the reach of children.
- This product cannot be used when charging.
- If you need to clean the appearance, wipe the surface of the product with a clean cleaning cloth and put it in a cool place to dry naturally.
- Avoid water droplets splashing or shower touching the product, so as not to damage internal components. Please do not use this product in transitional high temperature and humid places.
- This product is only suitable for charging with a power adapter with a voltage of 5V.
- Please do not charge this product with a power supply higher than 5V. If the product is not used for a short period (about 3 months), wipe the product clean, fully charge it and put it in a dry place.
- If the product is not going to be used in a short time, please be sure to fully charge it every 3 months to avoid the battery being discharged and the product cannot be started. Do not use thinner, gasoline or alcohol to clean this product, otherwise it may cause component failure, damage or fading. Please use a neutral cleaner to clean it.

BATTERY TREATMENT

- 1. When the electric nail clipper reaches its service life, it may be necessary to remove the internal battery according to the laws and regulations of the country or region where it is located. If the battery cannot be taken out, please deliver the product to the recycling center designated by the government.
- 2. Do not disassemble this product unless it is discarded. Premature disassembly will damage the product: the operation should follow basic safety precautions, and the power supply must be disconnected before taking the battery.
- 3. Ensure that the battery has been exhausted before removing the battery; if you need to run out of power, you can start up and work until you automatically shut down.
- 4. correctly recycle or dispose of the battery, please ask the recycling center designated by the local government whether to recycle other parts of the electric nail clipper.
- 5. Be careful not to short-circuit the positive and negative poles of the battery. After the battery is taken out, the product should not be powered on again.

PROHIBITED ITEMS

- Do not immerse the product in water or any other liquid.
- This product has a built-in rechargeable battery. Please don't put it into fire or charge it at high temperature.
- Do not knock or drop this product. If it is damaged due to collision and drop, please stop using it.
- Do not modify, disassemble or repair this product by yourself.

AFTER-SALES SERVICE

Dear users, thank you for purchasing and using our products. According to the "New Three Guarantees" regulations, you can enjoy free warranty service for quality problems with valid bills from the date of product purchase (from the date of receipt by users).

Service type	Service policy
Return or exchange goods	Reasons for product quality within 7 days from the day after receipt.
Replacement or maintenance	Reasons for product quality within 8-15 days from the day after receipt.
repair	Reasons for product quality within 1 year from the day after receipt.

You can't get free service in the following situations:

- 1. Damage caused by failure to use and maintain the product according to the requirements of the product manual;
- 2. Damage caused by improper operation (such as washing the product), abnormal power supply and other transportation accidents.
- 3. Damage caused by maintenance or modification not approved by the manufacturer
- 4. Damage caused by other force majeure factors (such as lightning, earthquake, fire and flood, etc.)
- 5. Damage caused by non-domestic or personal use (such as industrial and commercial use);
- 6. Aging and wear of products caused by normal use.

Reasons for returning goods:	1 For the return of goods caused by quality problems, please contact the merchant. 2 Please be sure to return the goods without affecting the secondary sales of the products. 3.Please fill in the correct customer's name, contact number, mailing address and replacement reason, and return the after-sales service card to the merchant together with the goods.
Warranty reason:	Thanks for your cooperation.

name: _____ product model: _____
Tel: _____ Receiving address: _____
Warranty time: _____ Return/exchange time: _____

