


MAGICCOS STAINLESS STEEL FOOD PROCESSOR WITH BUILT-IN DRAWER

MODEL FP408

Magiccos


Quick Start Guide Version 2.0

Please make sure that you have read the manual before attempting the operation.

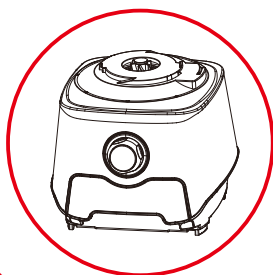


1 Unpack

Unpack the box and take out the contents.
Place the motor base on a flat surface.

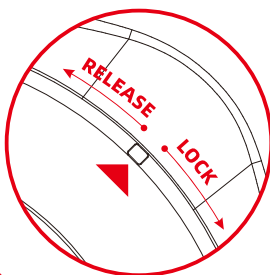


2 Find the Start Position for the Bowl Handle Placement

Find the ▲ on the base which shows the start position for the bowl handle placement.

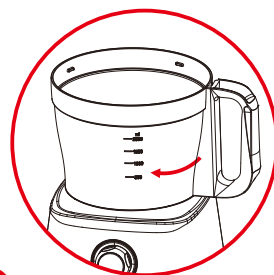


3 Place the Bowl

Place the bowl onto the motor base with handle aligned to the start position.

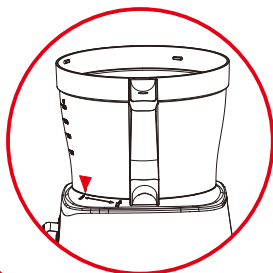


4 Lock the Bowl

Hold the handle then turn clockwise to click the bowl into the locked position with the ▼ on the bowl bottom aligned with the ▲ on the base.

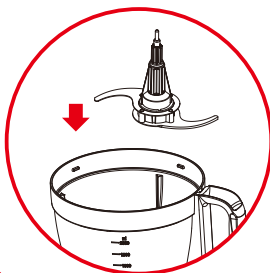


5A Mount the Chopper or Dough Blade Assembly

When using chopper blade or dough blade, mount the assembled drive shaft and blade assembly into the bowl.

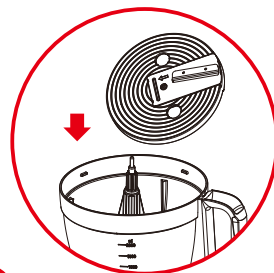


5B Mount the Insert Blade and Holder Disc Assembly

When using an insert blade, insert the drive shaft into the bowl first then put insert blade & holder disc assembly onto the top of drive shaft.

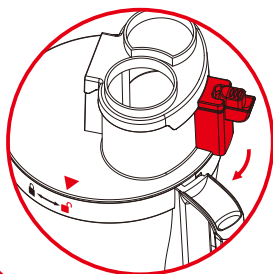

6 Place the Bowl Lid

Find the ▼ on the lid, align the ▼ with the ▲ on the bowl, by the meantime the safety lock buckle on the lid is at 2 o'clock position, then place the lid onto bowl.

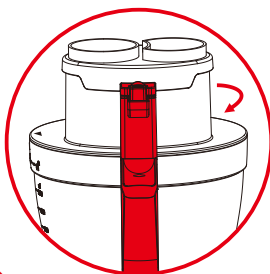

7 Lock the Bowl Lid


Turn clockwise to click the bowl lid into the locked position.
The safety lock buckle on the lid and handle should be in a same straight line.




8 Start Processing

Place the pushers then plug the appliance into a power supply and turn ON. Turn the rotary switch to select the desire speeds, add ingredients through the feeding chute while motor is running.


Installation Tips:

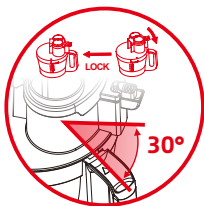


For an easy installation, place the lid with safety lock buckle at the **2 o'clock position** (with 30 degree angle between the safety lock buckle and the handle) as a start position. Please follow the symbol directions on the lid and bowl to lock and unlock the lid.

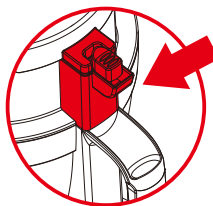


The protective cover and safety lock buckle should be firmly locked as the left picture to make sure the safety system is activated.

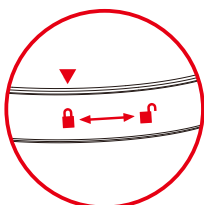

Please notice the  and  on the bowl. While  align with  which means the lid is locked, hold the lid turn counter clockwise to release the lid. While  align with  which means the lid is released, you can lift up the lid or turn clockwise to lock the lid.

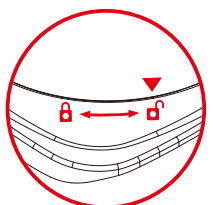

Please notice the  on the bowl bottom, notice  and  on the base. While  align with  which means the bowl is locked, hold the bowl turn counter clockwise to release the bowl. While  align with  which means the bowl is released, you can lift up the bowl or turn clockwise to lock the bowl.

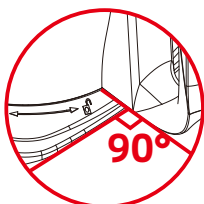


The bowl should be firmly locked to activate the safety lock system. You may need to use some strength to lock it onto the base firmly. Make sure the bowl handle is at **3 o'clock position** (facing to right at a 90 degree angle).




NEVER try to install the bowl with handle on the left, it can not be installed! Please install the bowl with handle on the right.


Operation Tips:

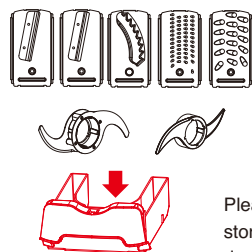


Please notice all the blades can be stored inside the drawer, clean and dry them after using.

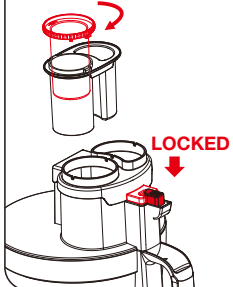

Please always make sure the protection cover and safety lock buckle are locked in place before turning on. You can use the small pusher alone or the small and big pusher together as an assembly. Please mind the  and  on the small pusher for locking and releasing the pushers.

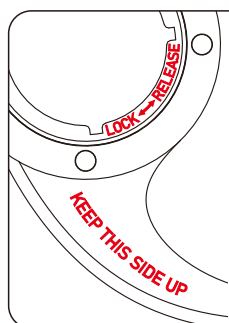

Please find the **UP** side of the chopper blade, the chopper blade must be correctly installed before using or else it can not chop anything and even may hurt the bowl! Once the shaft ribs are completely get through the chopper blade notches, rotate the drive shaft clockwise to lock the chopper and drive shaft assembly.

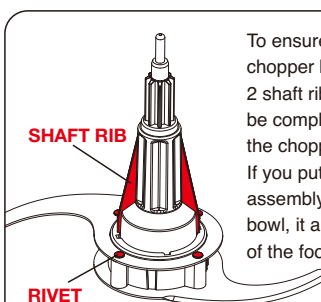

To ensure a tight installation of the chopper blade & shaft assembly, the 2 shaft ribs of the drive shaft should be completely above the 4 rivets on the chopper blade. If you put the chopper blade & shaft assembly into the food processor bowl, it almost touches the bottom of the food processor bowl.