



# RAZER WOLVERINE V2 CHROMA

MASTER GUIDE

Where's the fun in winning if you can't do it your way? With the **Razer Wolverine V2 Chroma**, next-gen customizability is now. Armed with extra remappable buttons, Razer Chroma RGB, swappable thumbsticks and more, you'll always be spoiled for choice when it comes to tearing up the competition.

# CONTENTS



1. WHAT'S INSIDE / WHAT'S NEEDED.....	3
2. LET'S GET YOU COVERED.....	5
3. TECHNICAL SPECIFICATIONS.....	6
4. GETTING STARTED.....	7
5. USING THE CONTROLLER.....	8
6. SAFETY AND MAINTENANCE.....	11
7. LEGALESE.....	12

---

## 1. WHAT'S INSIDE / WHAT'S NEEDED

### WHAT'S INSIDE

- Razer Wolverine V2 Chroma

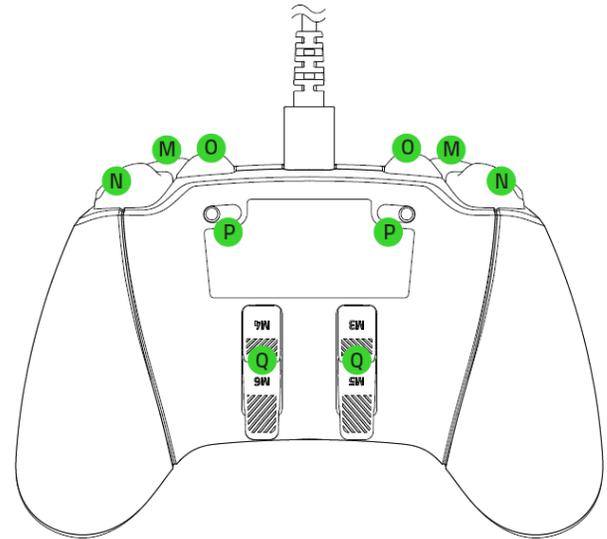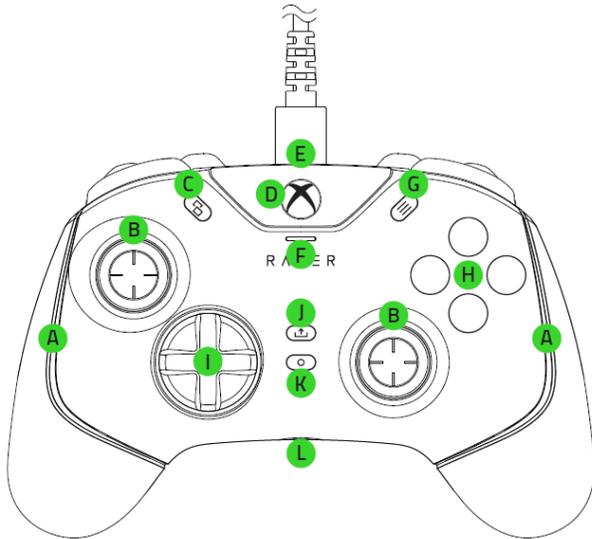

- A. Razer Chroma™ RGB lighting
- B. Standard thumbstick modules
- C. View button
- D. Xbox button
- E. Type C port
- F. Status indicator
- G. Menu button
- H. Razer™ Mecha-Tactile action buttons
- I. Razer™ Mecha-Tactile D-pad

- J. Share button
- K. Audio Configuration button
- L. 3.5 mm headset port
- M. Bumpers (LB / RB)
- N. Triggers (LT / RT)
- O. Multi-function bumpers (M1 / M2)
- P. Trigger stop switches
- Q. Multi-function triggers (M3 / M4 / M5 / M6)

- Type C to Type A cable
- Tall/convex thumbstick modules
- Important Product Information Guide

## WHAT'S NEEDED

- Xbox One™ / Xbox One™ S / Xbox One™ X / Xbox Series™ X|S  
OR
- PC (Windows® 10 64-bit or higher) with a free USB port
- Internet connection for software installation


### SAFETY STATEMENT

**IMPORTANT!** Before using your Xbox console with this product, read its instruction manual for safety, health, and other information regarding the use of your Xbox console.

---

## 2. LET'S GET YOU COVERED

You've got a great device in your hands, complete with a 1-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at [razerid.razer.com](https://razerid.razer.com)

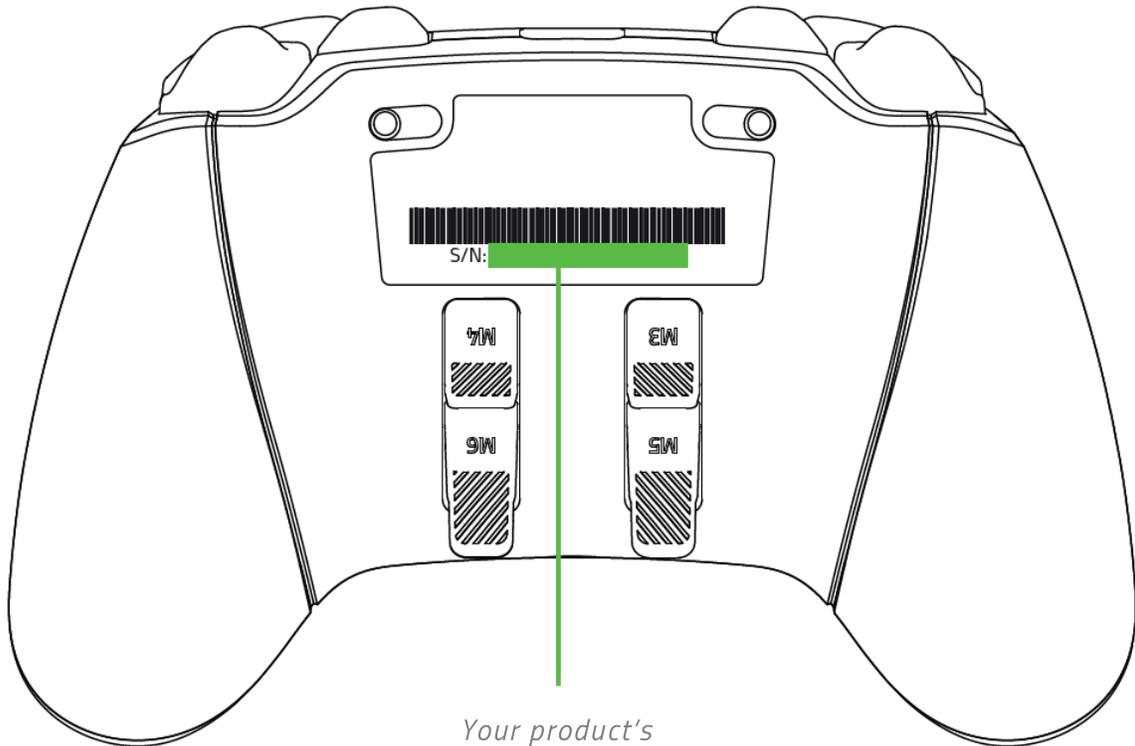

*Your product's  
serial number can  
be found here.*

Got a question? Ask the Razer Support Team at [support.razer.com](https://support.razer.com)

---

## 3. TECHNICAL SPECIFICATIONS

### FEATURES

- Razer™ Mecha-Tactile Action Buttons and Razer™ Mecha-Tactile D-Pad
- 6 remappable multi-function buttons
- Hair Trigger Mode with trigger stops
- 3.5 mm analog audio port compatible for Xbox and PC (Windows)
- 2x additional thumbstick options
- 9.8 ft/ 3 m wired cable with strain relief
- Wired connection

### APPROXIMATE SIZE & WEIGHT


- Length: 161.5 mm / 6.35 in
- Width: 105.8 mm / 4.16 in
- Height: 65 mm / 2.55 in
- Weight: 270 g / 0.595 lbs

---

## 4. GETTING STARTED


### SETTING UP YOUR CONTROLLER

Connect your Razer Wolverine V2 Chroma to your Xbox console or PC using the Type C to Type A cable.

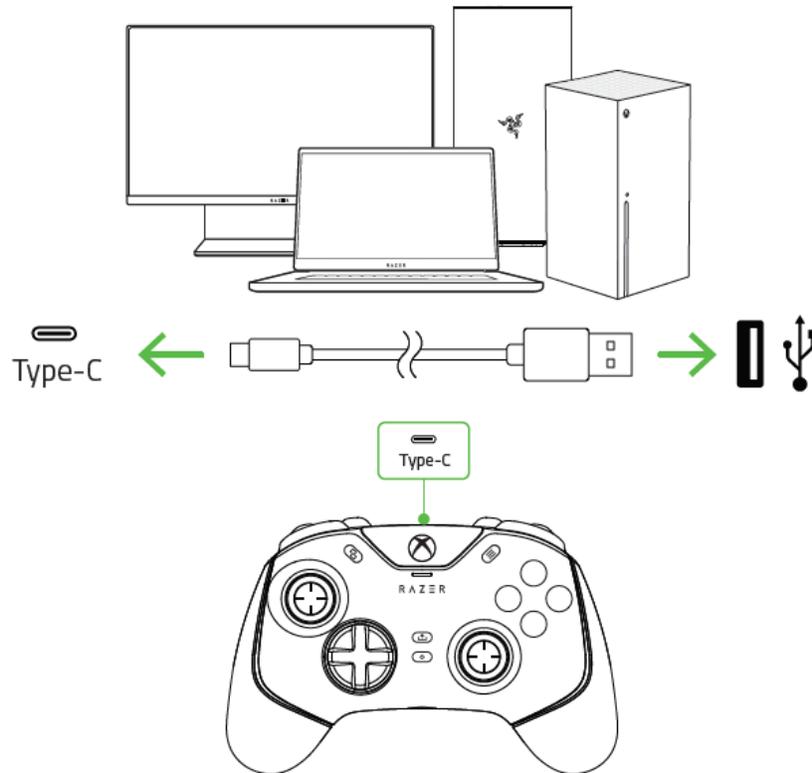

#### On Xbox console

Press the Xbox button to begin using your controller.

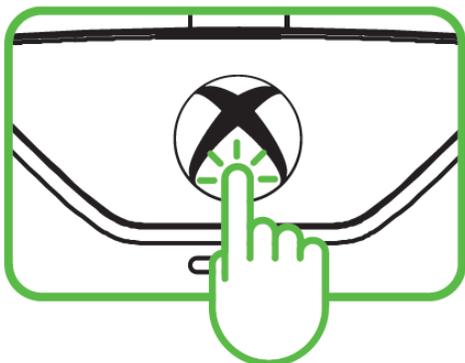

#### On PC

Wait until the controller's drivers are automatically installed or manually update the drivers through Device Manager.




---

## 5. USING THE CONTROLLER


### AUDIO CONFIGURATION BUTTON

Use the Audio Configuration button to fine-tune the master volume as well as adjust the balance between game and chat audio levels.

To increase or decrease the master volume, press and hold the Audio Configuration button then press the Up or Down directional button, respectively.

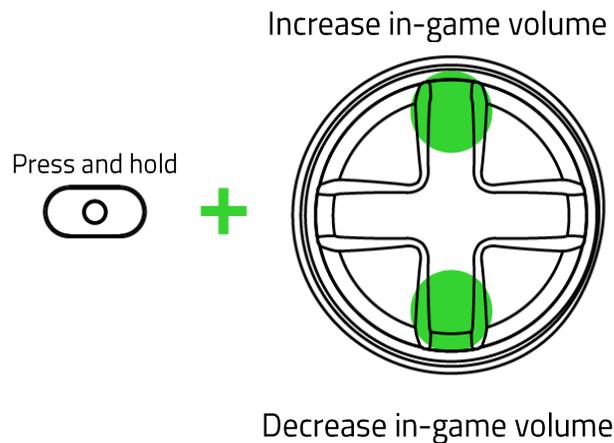


To increase the voice chat and decrease the game volume or vice versa, press and hold the Audio Configuration button then press the Left or Right directional button, respectively.

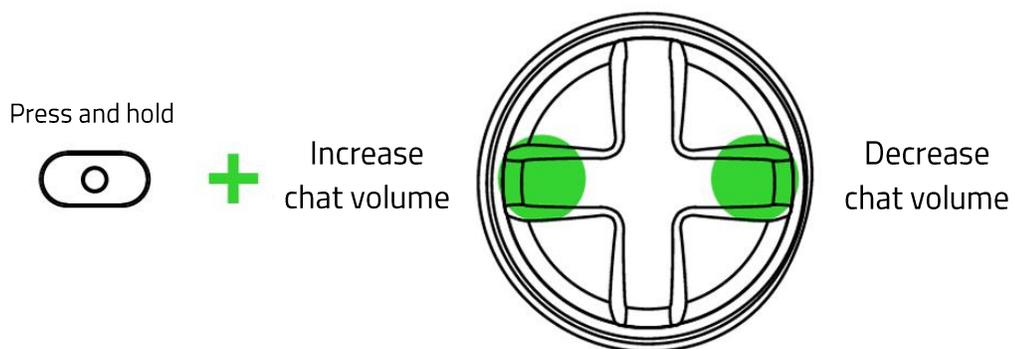


## TRIGGER STOP SWITCHES

You may enable the Trigger Stops to shorten the travel distance and response time (Active Hair Trigger Mode) of the Left and Right triggers by sliding the Trigger Stop Switches outwards. To disable, simply slide the switches inwards.

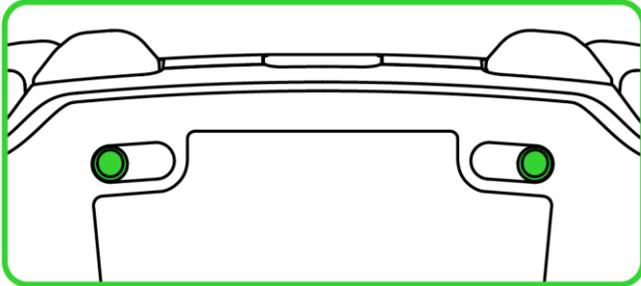



Enable

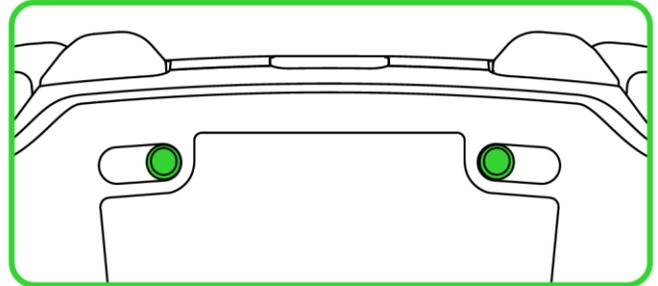

Disable

## USING THE DETACHABLE THUMBSTICK MODULES


The Razer Wolverine V2 Chroma has tall and convex thumbstick modules which you can use to replace the standard thumbstick modules for a more comfortable fit. Simply pull the standard modules to remove them then insert the preferred modules into the controller.

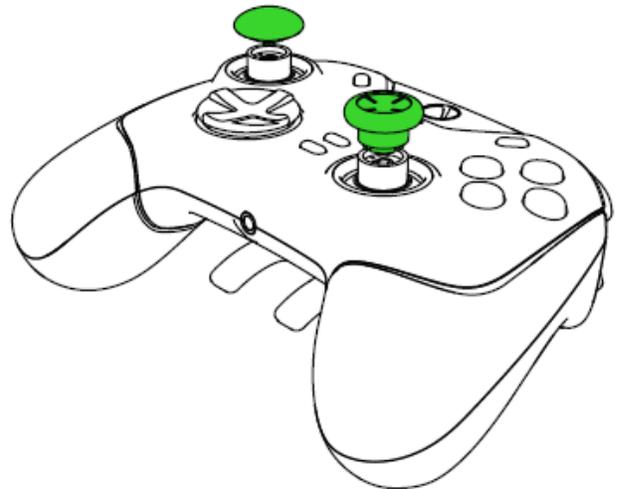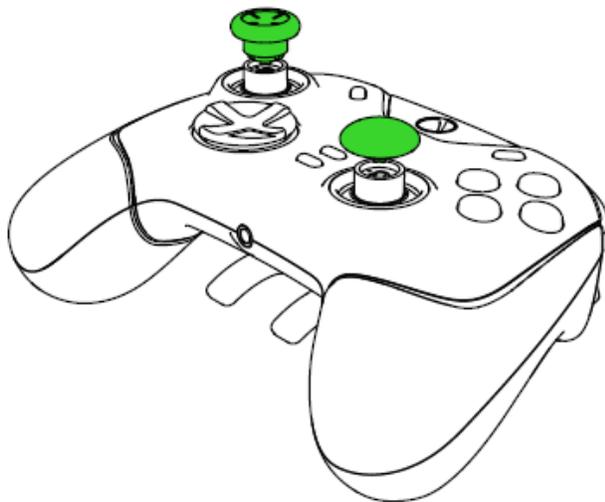

## RAZER™ CONTROLLER SETUP FOR XBOX

Use the Razer™ Controller Setup for Xbox\* app to access countless customization options for your controller such as personalizing its lighting effect, adjusting the sensitivity of its thumbsticks for better aiming and handling, and even remapping its buttons for each game. By default, each button is mapped to its specific function, while the M1 to M6 Multi-Function buttons are mapped with the following functions, as shown here.

**i** *The Xbox button is not remappable.*

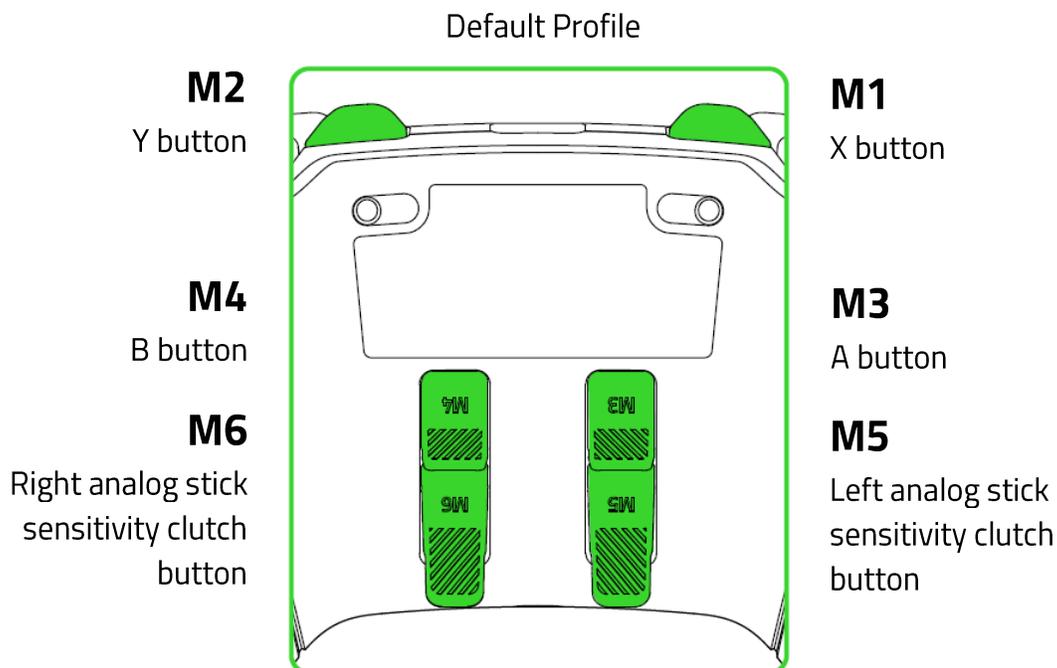

*\*Download and install the Razer™ Controller Setup for Xbox app from the Microsoft Store on your gaming console or PC.*

## USING THE SENSITIVITY CLUTCH BUTTONS

By default, the M5 and M6 buttons are mapped as sensitivity clutch buttons for the left and right analog sticks, respectively. When any of the sensitivity clutch buttons are held down, the sensitivity of the corresponding analog stick will temporarily change, providing more options for aiming precision and ultrafast turns.

**i** *The sensitivity settings can be customized through the Razer Controller Setup for Xbox app.*

---

## 6. SAFETY AND MAINTENANCE

### SAFETY GUIDELINES

In order to achieve maximum safety while using the Razer Wolverine V2 Chroma, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to [support.razer.com](https://support.razer.com) for support. Do not attempt to service or fix the device yourself at any time.

Do not take apart the device and do not attempt to operate it under abnormal current loads. Doing so will void your warranty.

Keep the controller and all its parts and accessories out of the reach of small children to avoid accidents and/or injuries.

Keep the device and its components away from liquid, humidity or moisture. Operate the device and its components only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and switch off the device in order to let the temperature stabilize to an optimal level.

### MAINTENANCE AND USE

The Razer Wolverine V2 Chroma requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device and clean it using a soft cloth or cotton to prevent dirt buildup. Do not use soap or harsh cleaning agents.

---

## 7. LEGALESE

### **COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION**

©2021 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, “For Gamers. By Gamers.” and “Razer Chroma” logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries.

Microsoft, Xbox, Xbox “Sphere” Design, Xbox One and Xbox Series X|S are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Wolverine V2 Chroma (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

### **LIMITED PRODUCT WARRANTY**

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://www.razer.com/warranty).

### **LIMITATION OF LIABILITY**

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

### **GENERAL**

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.