

macard Phone setup

 
View full video setup
tutorial at:

themacard.com/guide



Step 6

Click **“LOGIN”** and wait 10 seconds. The system scans all networks.

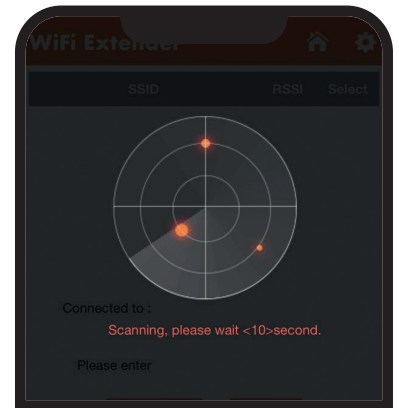

Step 1

Plug the **Extender** into a power outlet near your existing **Wi-Fi Router**.

Turn **ON** the **Extender** with an upward flick of the **“ON/OFF”** switch. The switch is on the left side of the device.



 
Step 2

Activate the **Extender** by pressing the **“RESET”** button for 15 seconds. The **Extender** will reboot within 30 seconds.




Step 3

Open your mobile settings and turn on airplane mode.

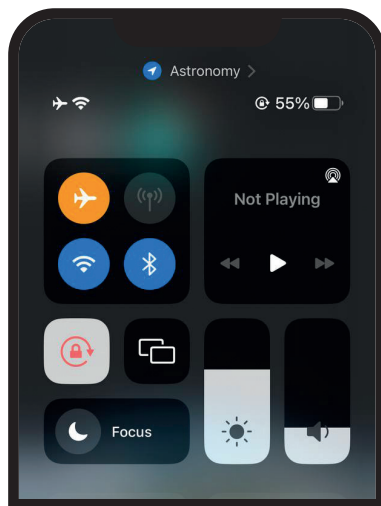

Step 7

 Click on the name of the existing **Wi-Fi Network** you want to extend, e.g., **Home Wi-Fi**.

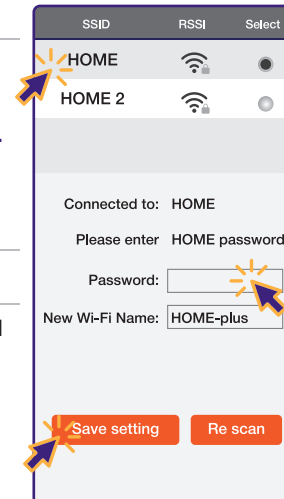

Step 8

Type your Wi-Fi password into the **Password** box. Click the **“Save Setting”** button.

Once you complete the steps, your **Extender** reboots automatically.

Place the **Extender** halfway between your **Wi-Fi Router** and the area with poor signal coverage.

!!!
The **Extender's** default name is your **[Wi-Fi name - Plus]**, e.g., **HOME Wi-Fi - Plus**.
The password remains the same as the existing **Wi-Fi Router's** password.

1. How do I reset the Extender?

Press the **“RESET”** button for 15 seconds. The Extender will reboot within 30 seconds. You can setup the **Extender** again.

2. How far should the Extender be from the router?

The **Extender** should be halfway between the **Wi-Fi Router** and the area with poor signal coverage. The **Extender** must receive a good signal from the **Wi-Fi Router**.

3. Should I connect the ethernet cable from the Wi-Fi Router to the Extender?

No, you should only connect the network cable from the **Extender** to a computer.

4. Does the Extender increase my internet speed?

 
No, it increases the range of your **Wi-Fi Network**.

5. Does the Extender work with 5GHz?

No, the **Extender** only operates in the 2.4GHz band.

Step 4

Go to your Phone settings. Open Wi-Fi, and turn it **ON**. Search for the network name **“Wi-Fi Extender”** and click on it to connect.

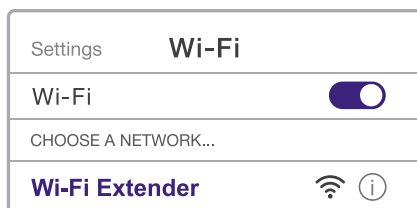


Step 5

Open a web browser and input:
192.168.10.1



 or scan QR Code:

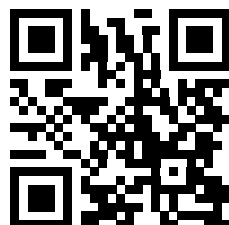

Need help?

We're here for you!



Online support

Available 24/7



care@themacard.com

Available 24/7



+1 (888) 407 1142 (US)

Toll-Free | Mon-Fri 9:00 am - 5:00 pm (CST)

themacard.com/help

WARNING

- Unplug the device in the event of a thunderstorm to prevent damage.
- Keep the device away from any heat source and make sure the device is well ventilated.

Safety Information:

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use the device where wireless devices are not allowed.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- For passthrough devices, plug the power strips into the integrated electrical sockets of the devices, but devices of the same or another type not be stacked in normal use. Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

FCC warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Operation is subject to the following two conditions:
(1) This device must not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the emitter and your body.

macard PC Setup

 
 
View full video setup
tutorial at:

themacard.com/guide



Step 5

Click **“LOGIN”** and wait 10 seconds. The system scans all networks.

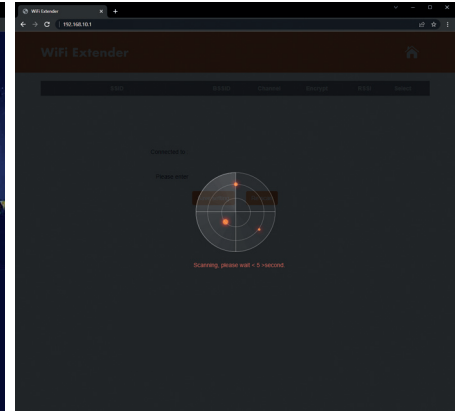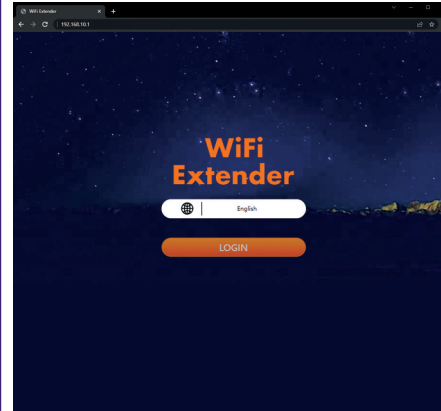

Step 1

Plug the **Extender** into a power outlet near your existing **Wi-Fi Router**.
Turn **ON** the **Extender** with an upward flick of the **“ON/OFF”** switch. The switch is on the left side of the device.



Step 2

Activate the **Extender** by pressing the **“RESET”** button for 15 seconds. The **Extender** will reboot within 30 seconds.



NOTE:

If after login, the **Extender** opens a page with all settings, please click the **“REPEATER”** mode, and the **Extender** will start scanning networks.

 


Step 3

If you have a PC with Wi-Fi settings:
Go to your PC Wi-Fi settings.
Open Wi-Fi, and turn it **ON**.
Search for the network name **“Wi-Fi Extender”** and click on it to connect.


If you have a PC without Wi-Fi settings:
Use the included Wi-Fi network cable to connect your **Extender** to the computer.

OR

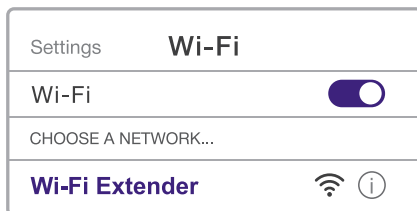

Step 6

 Click on the name of the Wi-Fi network you want to extend, e.g., **Home Wi-Fi**.

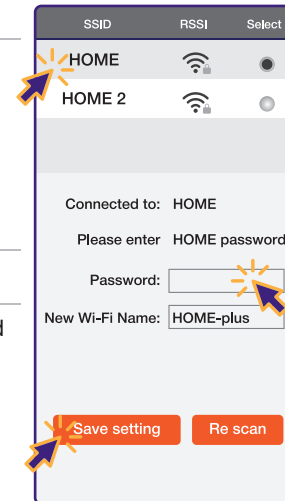

Step 7

Type your Wi-Fi password into the **Password** box.
Click the **“Save Setting”** button.

 
Once you complete the steps, your **Extender** reboots automatically.

Place the **Extender** halfway between your **Wi-Fi Router** and the area with poor signal coverage.



The **Extender's** default name is your **[Wi-Fi name - Plus]**, e.g., **HOME Wi-Fi - Plus**.
The password remains the same as the existing **Wi-Fi Router's** password.

Step 4

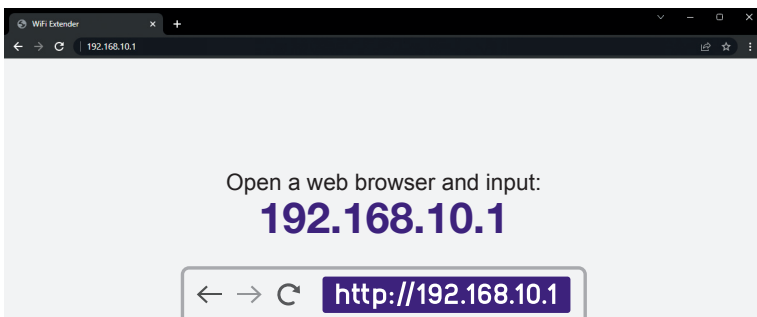

Need help?

We're here for you!



Online support

Available 24/7



care@themacard.com

Available 24/7



+1 (888) 407 1142 (US)

Toll-Free | Mon-Fri 9:00 am - 5:00 pm (CST)

IF YOU HAVE ANY ISSUES WITH THE DEVICE, PLEASE CONTACT US FOR ASSISTANCE BEFORE OPENING A RETURN REQUEST

themacard.com/help

WARNING

- Unplug the device in the event of a thunderstorm to prevent damage.
- Keep the device away from any heat source and make sure the device is well ventilated.

Safety Information:

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use the device where wireless devices are not allowed.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- For pass-through devices, plug the power strips into the integrated electrical sockets of the devices, but devices of the same or another type not be stacked in normal use. Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

FCC warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
RF Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the emitter and your body.