

raydrop

Feel the air of love around you.

raydrop

**USER MANUAL** 

Model: C-RD03A

Need any help?

1 working day.

raydrop

Humidifier × 1

Cleaning Brush × 1

**SPECIFICATIONS** 

KC-RD03A

0.45gal(1.7L)

1.68lbs(0.76kg)

5.7\*5.1\*11.0inches(14.5\*13\*28cm)

03

05

07

09

110V

18W

≤32dB

Model

Capacity

**Rated Voltage** 

**Rated Power** 

Noise Level

**Dimensions** 

**Net Weight** 

Feel the air of love around you.

Please read the following instructions carefully before use!

User Manual × 1

01

Thank you for choosing our humidifier.

**PACKAGE CONTENTS** 

Contact Us: support@raydrop.net

Please feel free to contact us and we would reply within

Humidifier

## CARE & MAINTENANCE TROUBLESHOOTING · · · · · 11 WARRANTY ..... 13

CUSTOMER SUPPORT ..... 13

SAFETY INFORMATION A To reduce the risk of fire, electric shock, or other injury, follow all instructions and safety guidelines. **General Safety** Disassembly, repair or remodeling by an unauthorized person may result in serious harm and will void the manufacturer's

· If the humidifier is damaged or is not functioning properly,

stop using it and contact Customer Support immediately. Please always keep the humidifier out of reach of children & pet. Do not use the humidifier in wet environments. Always place the unit 12 inches (30 cm) away from the wall other appliances or wooden furniture. · Do not handle the plug with wet hands. • Please check the cord for any signs of damage. DO NOT use the humidifier if the cord has been damaged. Do not cover the nozzle while the humidifier is working. Do not move or tilt the humidifier while it is in operation.

warranty.

Use clean or distilled water in tank. Hard water areas will require more frequent cleaning. 02

PRODUCT DIAGRAM

such as a stove, heater or radiator.

Do not fill the water tank with hot or boiling water.

Do not use this product in direct sunlight or near a heat source

1. Nozzle

- 2. Water Tank 9. Air Outlet 10. Base Chamber 3. Mist Tube 4. Water Inlet 11. Atomizer 5. Tank Cap 12. Air Inlet 6. Base 7. Indicator 04 **GETTING STARTED**
- 4. Turn the tank over to place on humidifier base. 5. Plug in the humidifier. 6. Rotate the control knob clockwise to turn it on. 06

1. Turn the water tank upside down and remove the tank cap.

2. Fill the tank with clean and cool water only.

3. Attach the tank cap.


**CARE & MAINTENANCE** • To keep your humidifier running efficiently, clean it regularly. Weekly cleaning is recommended. All maintenance should be done in the kitchen or bathroom on a water-resistant surface near a faucet. • In some areas, tap water is richer in minerals. The humidifier won't instantly go haywire if you do use tap water, but in the long term, this may cause scale, pink mold, or 'slime' forming in the tank, you need to maintain it more often. Distilled or purified water is the best option to keep your machine running at optimum performance. • Change the water daily to avoid bacteria growth.

**CAUTION** 

• Make sure water does not enter the base through the air

• Never immerse the humidifier base in water.

outlet and air inlet.

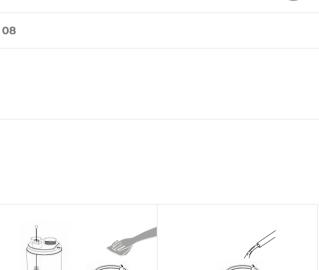

5. Remove the tank and pour out any solution. Clean the atomizer with a soft cloth or cotton swab to remove loosened mineral deposits. (The mist tube or corners that are out of reach can be cleaned with the included brush) 6. Rinse all parts until any vinegar smell is completely gone. **End of Season Storage** • Follow the Cleaning & Descaling instructions when the humidifier will be stored at the end of the season. • Dry the humidifier completely before storing. DO NOT store with water inside the base or water tank.

- 10
- **Problem** Possible Cause Turn the mist level to a higher setting. Mineral buildup on atomizer. Clean atomizer (see Cleaning & Descaling, page 9). Make sure the air inlet on the bottom of the base is not blocked.The humidifier should not Humidity level is be set on carpet or other surfaces that may low or no mist block the air inlet. comes out. Make sure the nozzle is not blocked or clogged. Make sure the humidifier is on a level surface. Water in unit is too cold: Replace with cool water. Saturation of humidity: Lower mist control Condensation setting.

humidifier.

Point mist away from objects: Raise unit on a

Avoid using water with high mineral content.

Clean the water tank and base chamber (see

Bubbling or knocking sounds is normal, that is

water-resistant level surface 2-4 feet off of

Use purified or distilled water to fill the

appears around the Clean the humidifier (see Cleaning & Descaling,

Cleaning & Descaling, page 9).

forms around

Mold grows inside

the humidifier,

or white dust

humidifier. Humidifier

produces an

unusual smell.

humidifier.

the sound of water moving from the water tank **Humidifier makes** to the base. a loud or unusual If it is continuous motor noise, the humidifier may be malfunctioning. Stop using the noise. humidifier and contact Customer Support. (see page 13) 12

• Store in a cool, dry location.

**FUNCTIONS** 

Power On/Off & Mist Level Setting 1. Plug in the humidifier. 2. Power On: Turn the knob dial all the clockwise until it 'click' to turn on the humidifier. The indicator light would be green and produce mist. 3. Mist Level Setting: Rotate the knob dial to adjust the mist level. 4. Power Off: Turn the knob dial counter clockwise, the machine will stop working and indicator light turn off.

8. Control Knob

- **Auto Shut-off** When the humidifier runs out of water, it would stop producing mist and the indicator light turns red. **IMPORTANT TIPS**
- 1. Please always place this humidifier on a firm, flat & waterresistant surface at least 2-4 feet above the floor. Placing a humidifier in a corner, on the floor, or near a wall will get localized higher humidity levels but the rest of the room will still feel dry. 2. It is not recommended to place this humidifier directly on wood furniture or floor, because the locally high humidity levels may wet the surroundings. Please put a tray underneath the humidifier if you place the humidifier on a non-waterproof surface.
- 3. Do not add water into the base or through the nozzle. 4. Do not add essential oils into the water tank or base chamber. Essential oils will corrode the humidifier, causing the water tank or base to crack. 5. Do not place this product on cloth, carpet. This may block Cleaning & Descaling


1. Turn off and unplug the humidifier.

air inlet.

2. Remove the water tank from the base and remove the tank cap. Drain water from the water tank and base. 3. Fill the water tank halfway. Add one to two cups of undiluted distilled white vinegar (add or reduce acetum according to the severity of scaling). Attach the tank cap and shake the tank for 5 seconds. 4. Place the tank on the base. The vinegar solution will enter the base chamber to loosen mineral buildup (scale) on the

atomizer and the bottom of the water tank. Soak for 15–20

**TROUBLESHOOTING** 

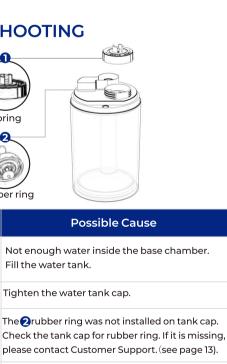

Leak from TANK: Check for possible cracks in the tank or around the seam of the tank. Leak from BASE: Contact Customer Support

Ensure unit is properly plugged into a power

11

13

outlet / try another power outlet.

This humidifier comes with an 1 Year Warranty that begins on

Raydrop will replace any product found to be defective due to

This warranty is void if the defect is due to any damages, losses,

negligence, abuse, or use noncompliant with the user manual

If you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer

or inconveniences caused by equipment failure by user

or any additional safety, use, or warnings included in the

Rubber ring

(see page 13).

**Problem** 

Indicator light

Water leaks from

Humidifier doesn't

(Indicator light

doesn't turn on)

**WARRANTY** 

the date of purchase.

manufacturer flaws based on eligibility.

product packaging and manual.

**CUSTOMER SUPPORT** 

Support Team.

Support.

turn on.

the humidifier.

turn red.





