

# SupMaKin Rapid Mandoline Slicer

## Manual

Safety Instruction	2
Parts & Features	4
Assembly & Install	5
Food Precautions	7
Cut Thick/thin Slices	8
Cut Fries & Julienne	10
Cut Dices	12
Cleaning & Maintenance	13
Storage /Disposal	14
Patents & Certifications	15
Product Details	16



Thanks for purchasing our SupMaKin Rapid Mandoline Slicer.  
 ● Be sure to read this manual carefully before using this product.  
 ● Please keep this manual after reading it.  
 ● For the household use only.

## Safety Instruction

This Mandoline uses sharp blades. Exercise extreme caution when using and cleaning the Mandoline to avoid personal injury.

- When cutting short or small ingredients, be sure to use the Food Pusher!
- Stainless steel blades are very sharp. Exercise extreme caution when using and cleaning!
- If the Mandoline is dyed by food such as carrots, it is a normal phenomenon, not a quality problem of product.

## Warning

- Do not disassemble by yourself
- Do not use the Mandoline to cut unapplicable food
- Do not use the Mandoline for other than its intended use
- Do not touch the blades while in use
- Do not use hot ingredients
- Put the Mandoline far away from baby
- Before using the Mandoline for the first time or before using it after prolonged storage, wash and dry the Mandoline and any accompanying accessories.
- Before using, please assemble correctly.
- After using, please folded for storage.

2

## Notice


- This Mandoline is a household product in kitchen. Prevents product from falling or touching sharp objects. Refrain from using accessories that are produced by our factory. Please put your Mandoline on a flat stable surface. Do not use again if the Mandoline is damaged or deformed.
- When cutting short or small ingredients, be sure to use the Food Pusher. Before using, please check whether all parts are in good condition. When storing, please rotate all the Knobs to original position. Rotate the Thickness Adjustor to 0. Knob1&Knob2 counterclockwise 360° respectively to original position (Two sets of blades can not be seen), at the meantime, place the Front Cover into place and restore the legs to the original position.

## Matters need Attention

- Do not place the Mandoline on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not cut ingredients too hard or too soft.
- Never touch the blades while in use.
- Never add ingredients while the Mandoline is operating.

3

## Parts & Features

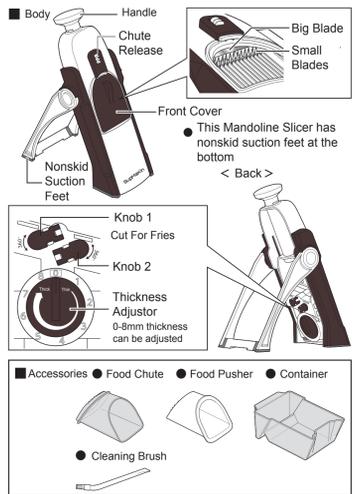

4

## Assembly & Install (1)

- Pull the stand into place, put your mandoline on a flat stable surface.
  - Legs snap in place



- With the Chute release up and remove the front cover.
  - When storing, please install the front cover to avoid losing it




5

## Assembly & Install (2)

- With the Chute Release up and insert the Food Chute.
  - Placing the Food Chute onto the slicer, move Chute Release downwards



- Placing the Container.
  - Place the Container on the stand and fix it

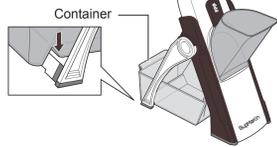

**Note:** Do not put the Container into the microwave oven

6

## Food Precautions

- Do not use the following ingredients:
  - Meat (including meat products, Ham, etc.), Fish
  - Leafy vegetables such as spinach
  - Dry goods such as dried mushrooms
  - Aquatic and frozen food
- Do not cut food that is too hard or too soft, as this may cause damage to the product or malfunction due to clogging of the food.

**Note:** The capacity of the Container is limited, so please put an appropriate of ingredients. If your food is too big to fit into place, resting the Food Chute, simply cut in half or quarters.

7

## Cut Thick/thin Slices

- Adjust the thickness.
  - Clockwise rotation of the thickness adjustor, adjust the thickness according to your preferred preparation
  - The thickness Adjustor can be adjusted from 0-8mm
  - No need to rotate the knob1 & knob2



- Place your food into Food Chute. (If the Food Pusher is still in the Food Chute, remove it)



8

- Just press the handle down quickly. Use the Food Pusher to push the food down. While applying downward pressure on the food, press the handle down. Repeat this step until your food is fully chopped.





## Attention

The faster pressing, the more labor-saving. When cutting short or small ingredients, be sure to use the Food Pusher (As shown above picture) to avoid hand injury.

9

## Cut Fries/Julienne

- Adjust the thickness
- Knob1&Knob2 for Width/Fine

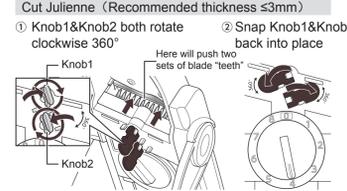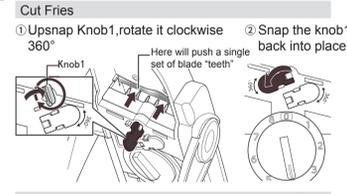

10

- Just press the handle down quickly. Use the Food Pusher to push the food down. While applying downward pressure on the food, press the handle down. Repeat this step until your food is fully chopped.




## Attention

The faster pressing, the more labor-saving. When cutting short or small ingredients, be sure to use the Food Pusher (As shown above picture) to avoid hand injury.

11

## Cut Dices

- Adjust the thickness of Slices
- Put the slices into Food Chute (as shown below Picture 1). Fill the slices as much as possible into the Food Chute. Pay attention to the orientation of slices putting (as shown below Picture 2)

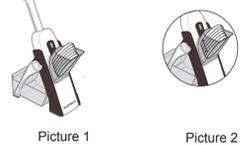

- Cut big dices. According to the method of cutting Fries, which rotate Knob1 clockwise 360°, then snap the Knob 1 back into place. Press the handle downward quickly.




12

## Cleaning & Maintenance

Clean the appliance after every use. Extreme caution when cleaning this Mandoline, please rotate the thickness adjustor to 8 and Knob1&Knob2 snap back into place same as leaving the factory. Cleaning in this way will be cleaner and safer.

**Note:** Please use clean water or neutral detergent to wash. After washing, fully dry for the next use and store in a dry place away from light. Do not use highly concentrated detergents, steel ball and other metals for cleaning. Otherwise it will be discolored or scratched.

**Note:** Do not use the Dryer

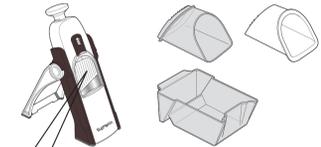

**Note:** Do not touch the blades. Risk of injury.

13

## Storage

- Please rotate all the Knobs to original position. Rotate the Thickness Adjustor to 0. Knob1&Knob2 counterclockwise 360° respectively to original position (Two sets of blades can not be seen)
- Please fold for storage. Restore to the handle and legs to original position same as leaving the factory, and then install the front cover. In order to avoid damage and breakage
- Please do not store in the high temperature humidity environment with direct sunlight
- Please place the Mandoline far away from baby

## Disposal

Please follow the abandonment requirements stipulated by your local government and neighborhood communities Disposal

14

## Global Patents' No

CHINA: 2018 1 0909085.3  
 CHINA: 2018 2 1293309.4  
 CHINA: 2018 3 0455861.8  
 AUSTRALIA: 2019100042  
 AUSTRALIA: 201817335  
 GERMANY: 202018107284  
 KOREA: 20-20190001270  
 JAPAN: 2018 027315

USA: D887 794 S  
 USA: 10 974 411 B2  
 EU: 005621836-0001  
 EPO: 3608070  
 CANADA: 185033  
 ISRAEL: 62980  
 RUSSIA: 116206  
 RUSSIA: 190023  
 JAPAN: 3220865

MORE PATENTS ARE PENDING

## Global Certifications



15

## Product details

Name	SupMaKin Rapid Mandoline Slicer
Item No.	JS01
Folded Size	32*12*6.3CM
Weight	+/- 700g
Material	Body: ABS Container: AS Blades: Stainless steel
Parts	A Food Chute A Food Pusher A Container A Cleaning Brush A Manual
Original	CHINA

16