

[Skip to content](#)

Manuals+

User Manuals Simplified.




HUANUO HNDS8 Dual Monitor Stand Installation Guide

Home » [HUANUO](#) » HUANUO HNDS8 Dual Monitor Stand Installation Guide 



Installation Instructions V1.0

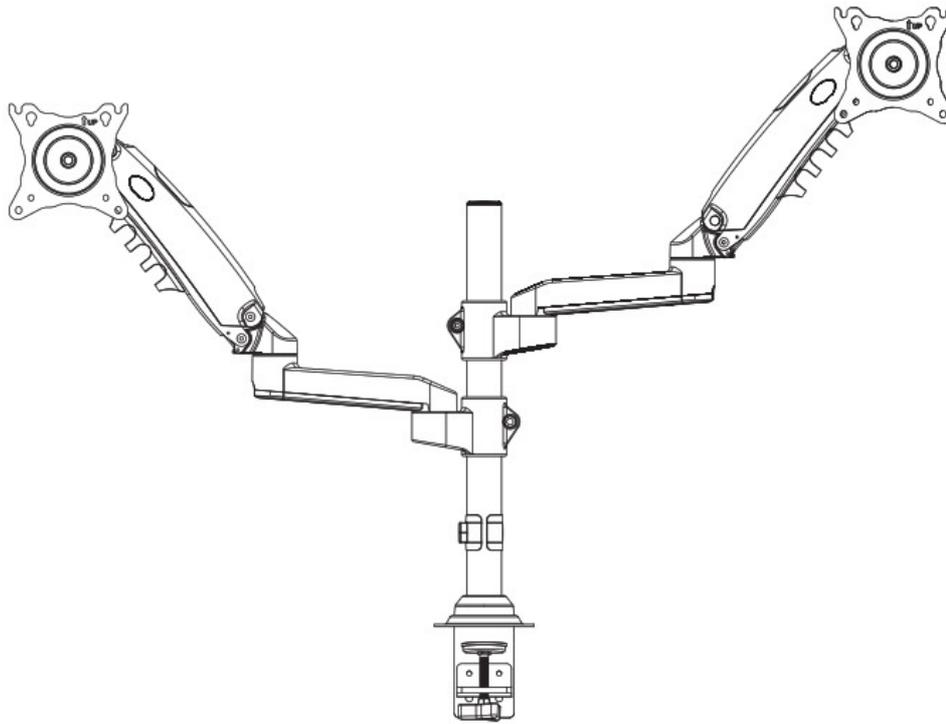

HNDS8



Thank you for choosing our product! We strive to provide the best quality and services for our customers. Would you kindly share your experience on Amazon if you are satisfied? Should you have any issues, please don't hesitate to contact us. Telephone 1-800-556-0533 Mon-Fri 10am – 5pm (PST) (USA) (CAN) Emailsupport@huanuoav.com (US/CA/DE/UK/FR/IT/ES/AU)

Contents [[hide](#)]


- [1 IMPORTANT SAFETY INFORMATION](#)
- [2 Check the VESA Pattern of Monitor Before the Installation](#)
- [3 Weight Restrictions](#)
- [4 Product Features](#)
- [5 Parts and Hardware Included](#)
- [6 Install the Base](#)
- [7 Install the Arms](#)
- [8 Attach Monitors to the Arms](#)
- [9 Adjust Gas Spring Tension](#)
- [10 Rotation Restriction](#)
- [11 Tilt Adjustment](#)
- [12 Rotation Adjustment](#)
- [13 Route Cables along the Arms](#)
- [14 File Downloads](#)
- [15 Related Manuals](#)

IMPORTANT SAFETY INFORMATION

Do not install or assemble if the product or hardware is damaged or missing, if you require replacement parts, please contact customer service at support@huanuoav.com. For safe installation, the desk you are mounting to must

support minimum 3 times the weight of the total load (the mount, the monitor, and all accessories weight). Don't use the product on particleboard. This product contains a high-pressure gas spring, fire and percussion are prohibited. Also, it is strictly prohibited to dismantle without professionals. Please return to the manufacturer or hand it over to professional agencies if the product is abandoned.

Check the VESA Pattern of Monitor Before the Installation

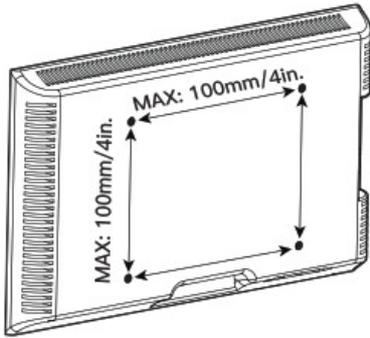

75 mm \approx 2 7/8 in.
100 mm \approx 4 in.

Weight Restrictions



Your monitor (including accessories) CANNOT EXCEED 4.4-19.8lbs (2-9 kg)





WARNING:




DO NOT exceed the maximum weight indicated. This mounting system is intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in failure of the mount and its accessories, causing possible injury.

If your monitor weighs more, this mount is NOT compatible.

Product Features

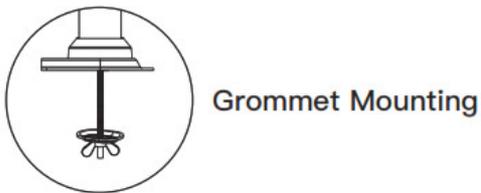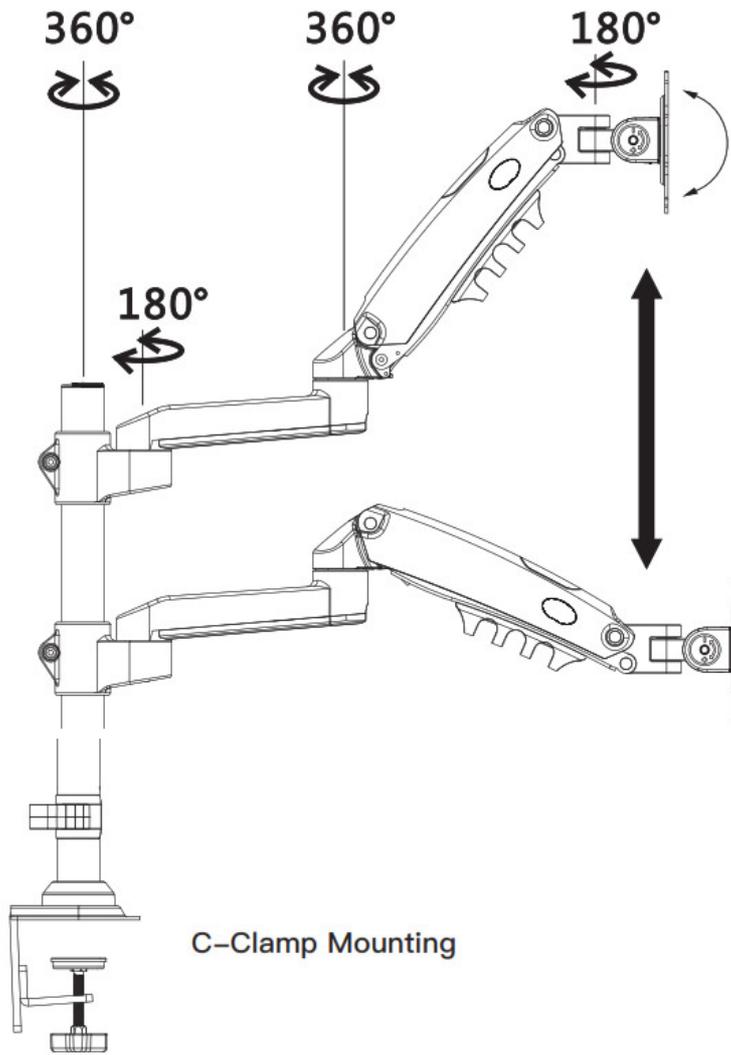


Parts and Hardware Included

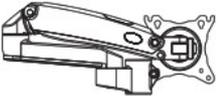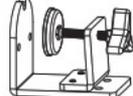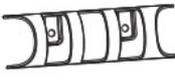 01 Arm X2	 02 C-Clamp X1	 03 Pole Assembly X1	 04 Cable Clip Cover X2
 05 Cable Clip X1	A  Screw M4x12mm (8pcs)	B  Screw M5x12mm (8pcs)	C  Screw M6x12mm (3pcs)
D  Butterfly Nut	 Grommet Bolt	E  Locking Plate	F  4mm 5mm Wrench
		G  Screw M4x6mm (4pcs)	

Install the Base


A. For Clamp Mounting

① Detach the c-clamp entirely

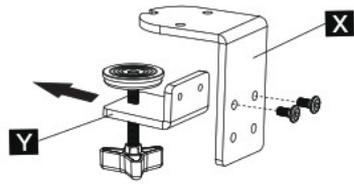


Warning:  Ensure screws are secured firmly.

② Connect part [X] to pole assembly [03]

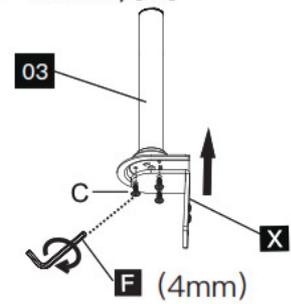


③ Connect part [Y] to part [X] according to the thickness of the desktop

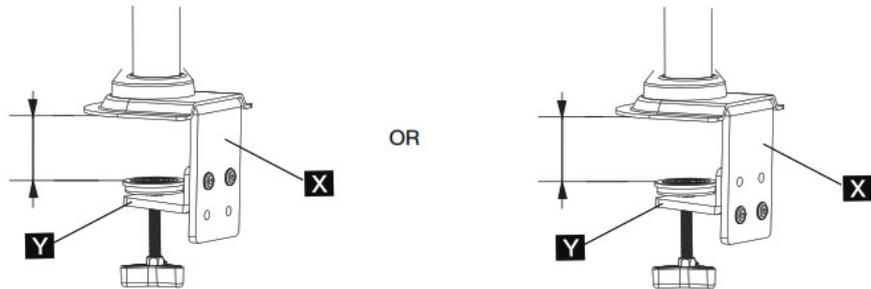


A-1 Install the C-Clamp

④ Secure the base to the desktop

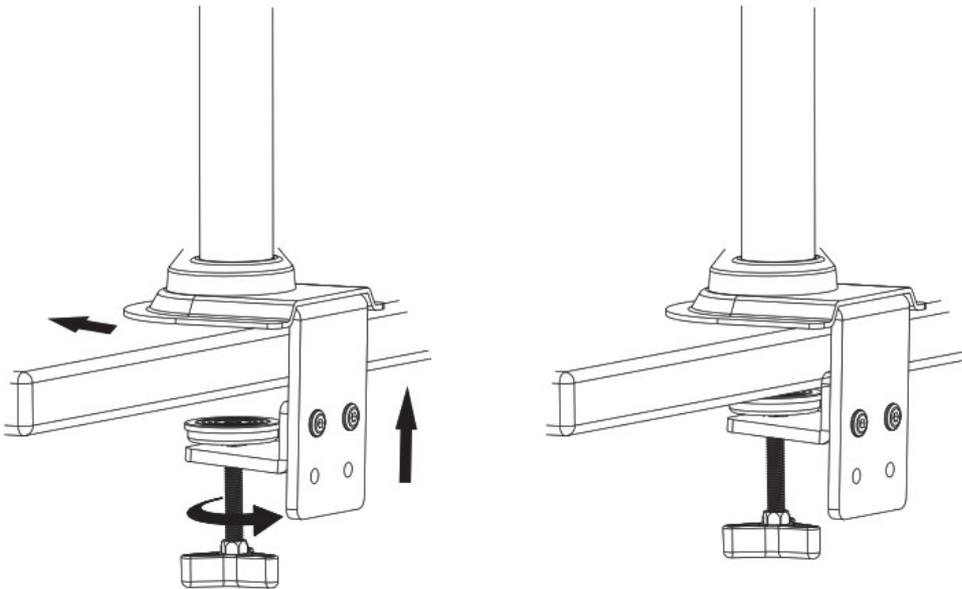


B. For Grommet Mounting

① Install the grommet bolt

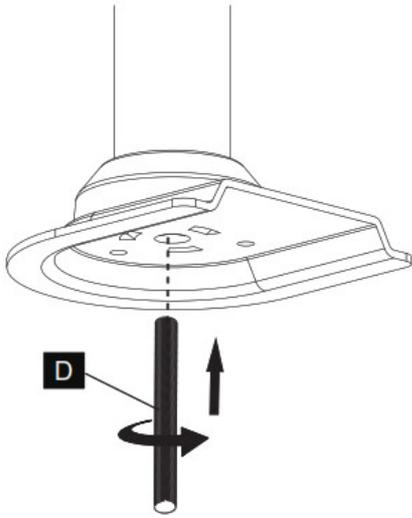

Warning: 
Ensure screws are secured firmly.


② Secure the base to desktop using locking plate and butterfly nut

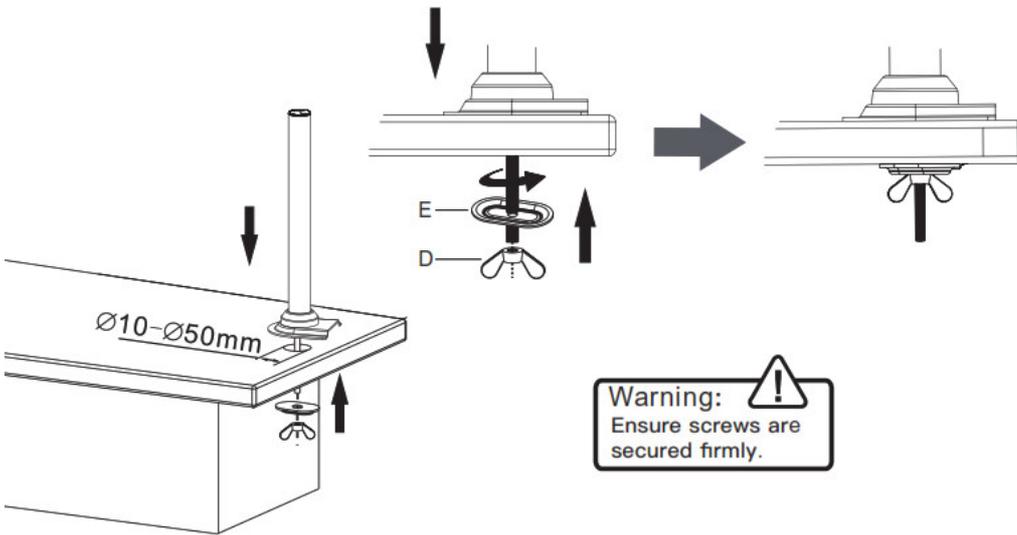


Warning: 
Ensure screws are secured firmly.

Install the Arms

- ① Slide the cable clip [05] to the pole assembly [03]
- ② Slide arm [01] to the pole assembly [03] and secure using wrench [F]

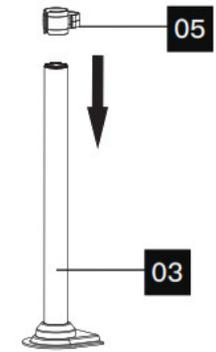


Warning: 
Ensure screws are secured firmly.

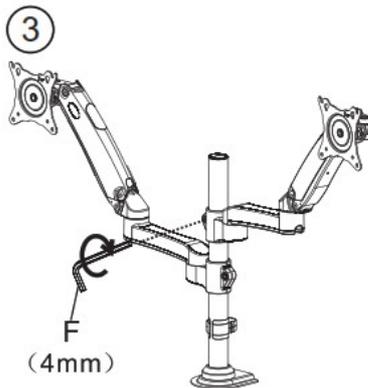

Attach Monitors to the Arms

3-1 Choose Proper Screws

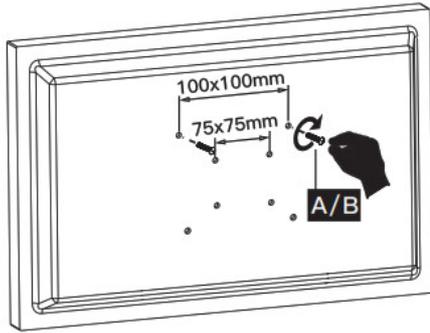


75 mm \approx 2 7/8 in.
100 mm \approx 4 in.

3-2 Install Monitors to the Arms


①

3-5mm(0.1-0.2in.) spacing left

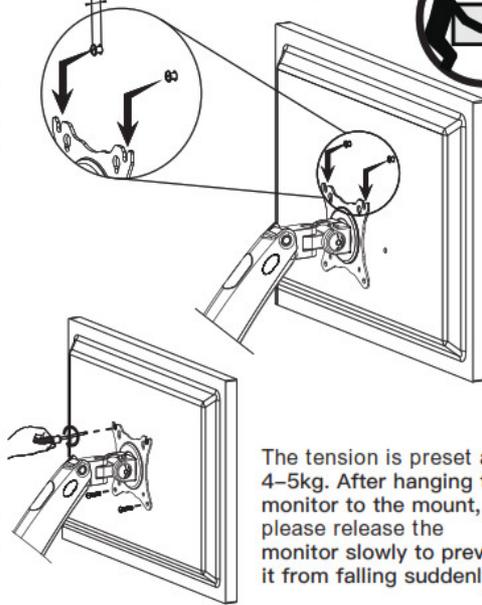


The tension is preset at 4-5kg. After hanging the monitor to the mount, please release the monitor slowly to prevent it from falling suddenly

Adjust Gas Spring Tension

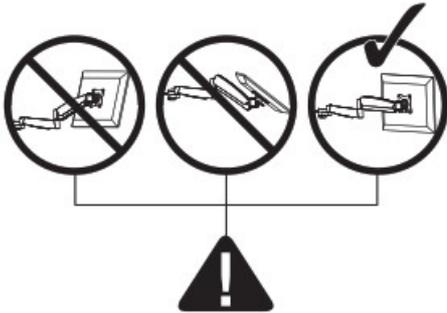


Be sure to keep the arm in a horizontal position during adjustment. Or else, it would be difficult to adjust the mount or damage the mount.


1. If the monitor can stay at the desired height by itself, no adjustment is needed. If the monitor rises up, press the arm to keep it in horizontal position and then use the 5mm Alley key (F) to turn the screw clockwise (“-” direction) to reduce the tension of the arm only until the monitor can stay at the desired height by itself.
2. If the monitor falls down, lift the arm to keep it in horizontal position and then use the 5mm Alley key (F) to turn the screw counter-clockwise (“+” direction) to increase the tension of the arm only until the monitor can stay at the desired height by itself.

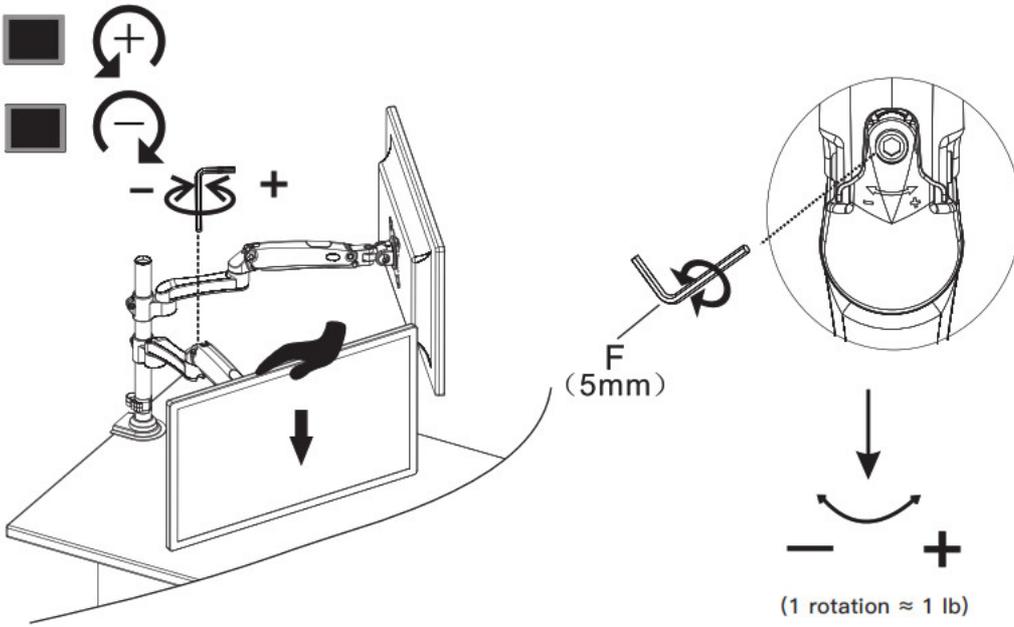

Rotation Restriction

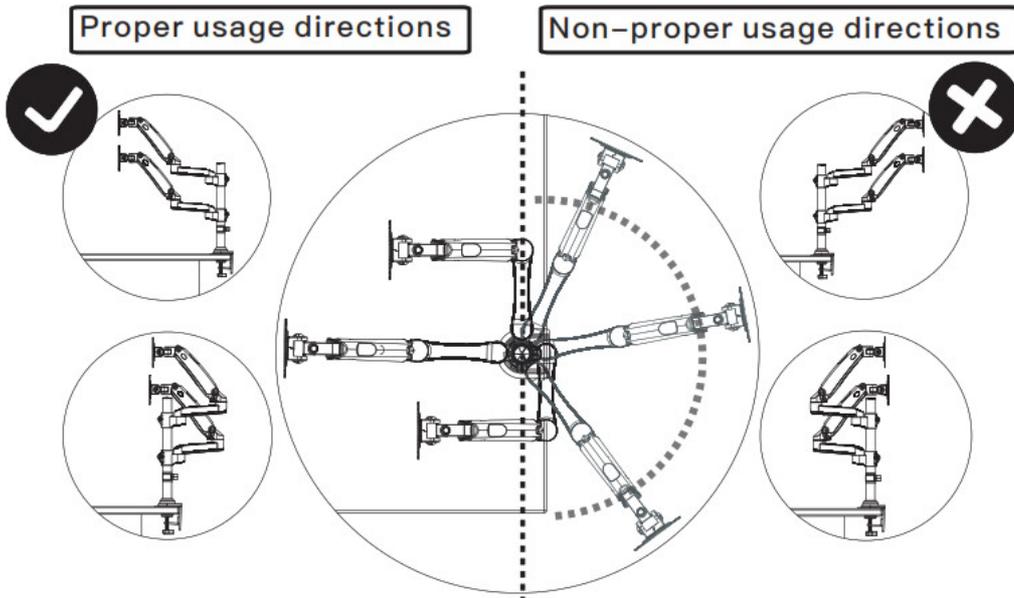

Tilt Adjustment

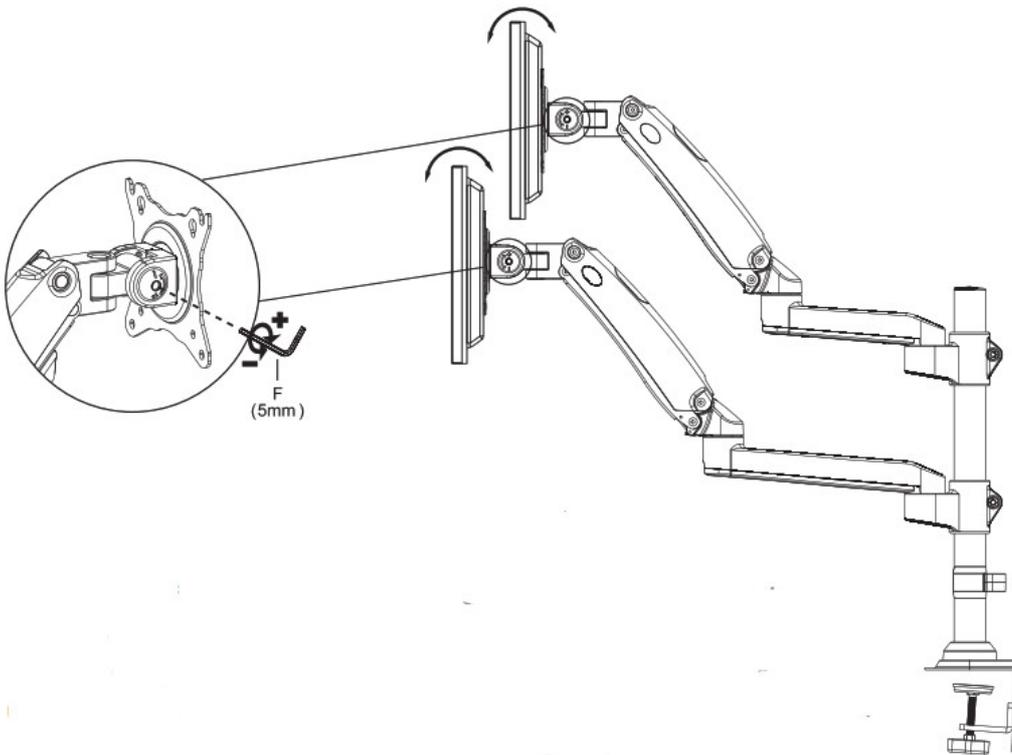


“+” Clockwise: Tighten

“-” Counter-clockwise: Loosen

Situation 1: If the monitor can stay at the desired tilt angle by itself, no adjustment is needed.

Situation 2: If the monitor can not stay at the desired tilt angle by itself, turn the screws clockwise or counter-clockwise as shown until the monitor can stay at the desired tilt angle by itself.






Rotation Adjustment

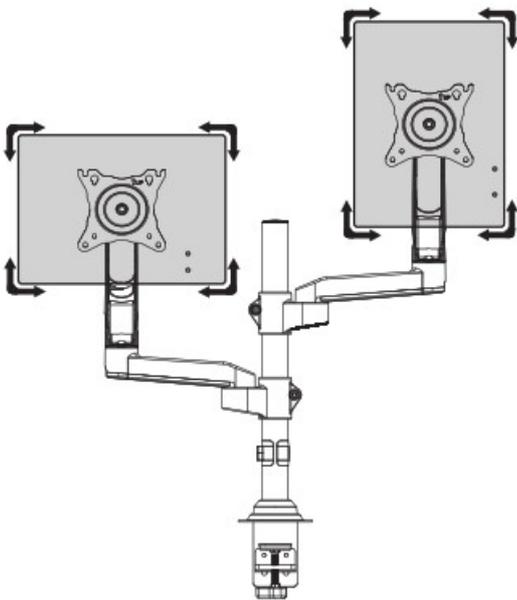

**360°
Rotation**

Only suitable for the monitors with the center of gravity in the center position

Route Cables along the Arms

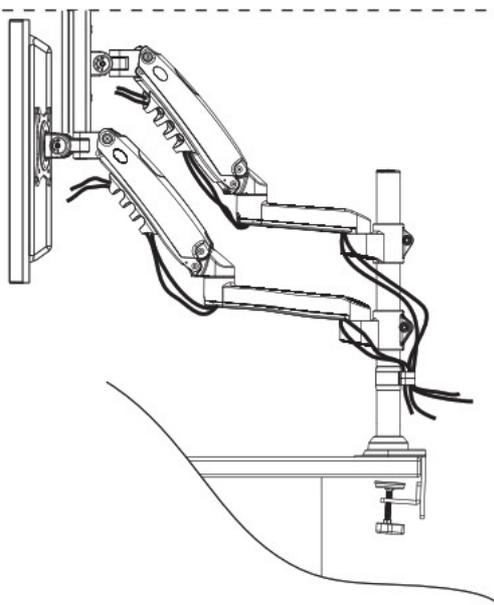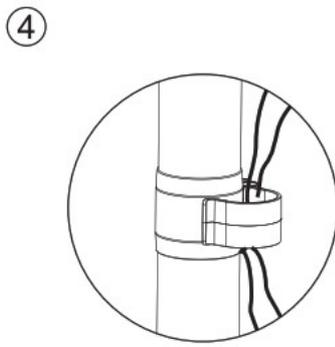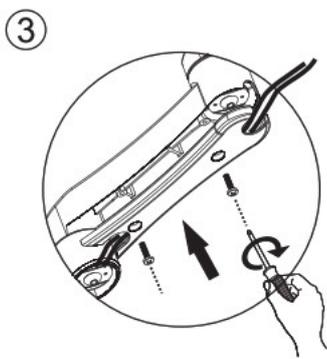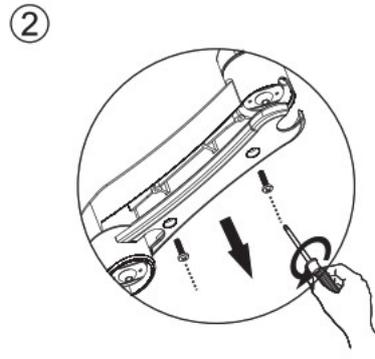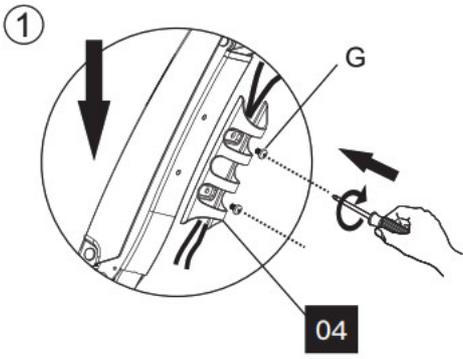

**TENSION ADJUSTMENT SHOULD BE DONE ONLY
AFTER MOUNT INSTALLATION**



Do not adjust tension without a monitor.

1. Ensure the monitor has been attached to the mount.
2. Read your monitor box or manual to find out monitor net weight.
3. Ensure the net weight of the monitor (including accessories) is between 4.4~19.8 lbs (2-9 kg).


Adjustment Sign



Clockwise to reduce tension(carry less weight)

Counter-clockwise to increase tension(carry more weight)

Warning! 

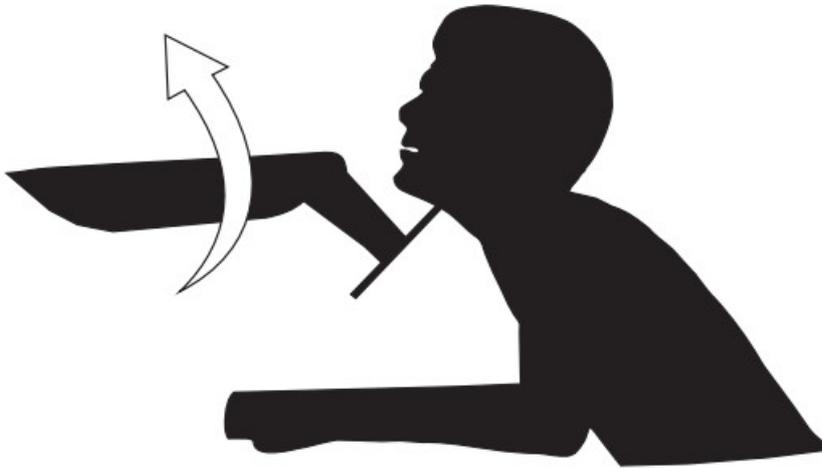

File Downloads

Installation Guide [Download](#) [optimized]
HNDS8 Dual Monitor Stand [Download](#)

Related Manuals

1. [HUANUO Monitor/Printer Stand With Pull Out Drawer Installation Guide](#) HUANUO Monitor/Printer Stand With Pull Out Drawer Installation Guide ...
2. [HUANUO Dual Monitor Mount Stand Instruction Manual](#) Monitor Desk Mount Instruction Manual Model: HNDS7 Website: www.huanuoav.com Thank...
3. [HUANUO Monitor Table Stand Instruction Manual](#) Monitor Table Stand Instruction Manual Model: HNHM5 <https://www.huanuoav.com/> Thank you...
4. [HUANUO Gas Spring Dual and Single Monitor Mount User Manual](#) Gas Spring Dual and Single Monitor Mount Gas Spring Dual...
5. [HUANUO Keyboard and Mouse Tray Installation Guide](#) HUANUO Keyboard and Mouse Tray Installation Guide HNKB03 Thank you...
6. [HUANUO Monitor Desk Mount Instruction Manual](#) HUANUO Monitor Desk Mount Instruction Manual Thank you for

choosing...