

◆ INSTALLATION ◆

1. Connect your air pipe(4mm internal diameter) to the air pump's outlet, position your air pipe in your aquarium with air stone, then start work.
2. Place the air pump above water level on a flat surface, otherwise please connect a non return valve between air hose a few inches from the air pump, to ensure water is not siphoned back into the air pump.
3. Using the dial on the back of the air pump to adjust the output.(only for YT-301C/302C)

◆ NOTICE ◆

1. Do not connect to any voltage other than stated.
2. Disconnect main electricity supply before installation or maintenance.
3. Never submerge the air pump.
4. Do not attempt to modify this unit in any way and only use the recommended parts for replacement.
5. Please use in dry environment.
6. If the unit fails, isolate completely from your aquarium and contact the supplier.
7. Please plug off and stock in a cool and dry place if long time unused.


◆ MAINTENANCE ◆

Regularly clean your air pipe and air stone(if in use) to ensure maximum output and prolonged lifespan.

◆ TECHNICAL PARAMETERS ◆

MODEL	VOLTAGE	POWER	PRESSURE	OUTPUT	WEIGHT
YT-301	220V/50Hz 110V/60Hz	2.5W	0.012MPa	1.5L/min	0.27kg
YT-301C		3.0W	0.012MPa	1.5L/min	0.29kg
YT-302		2.5W	0.015MPa	2x1.5L/min	0.29kg
YT-302C		3.0W	0.015MPa	2x1.5L/min	0.31kg
YT-304		8.5W	0.013MPa	4x4.5L/min	0.93kg
YT-502		4.5W	0.013MPa	2x1.5L/min	0.5kg
HP-1116		15W	0.01MPa	4x2.5L/min	1.2kg

◆ INSTALLATION ◆

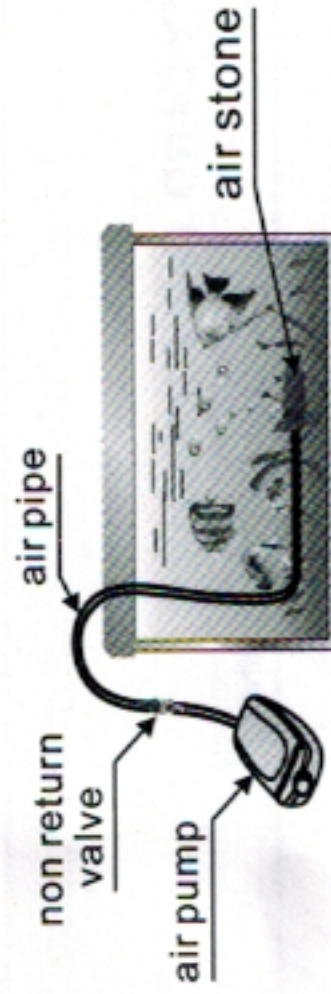

◆ GUARANTEE ◆

- Note: This warranty card is for further quality information from you and timely service from our company.
1. This card is to ensure quality service for products of our company.
 2. The warranty term is 1 year, valid from the date of the sales invoice (also the date of purchase), and fill the date onto this card.
 3. Cup leather and other wearing parts is beyond the scope of the warranty.
 4. The damage caused by incorrect use or the contrive damage will be exempted.