

R-MOTION GOLF

R-MOTION GOLF



THE GOLF CLUB GAME™ SIMULATOR KIT
USER GUIDE

WHAT IS R-MOTION GOLF, THE GOLF CLUB GAME™ GOLF SIMULATOR AND SWING ANALYZER?

R-Motion Golf is a state-of-the-art swing tracker that attaches to your golf clubs and works as a portable golf simulator with The Golf Club Game™ software.

Features:

- Easy to move from club to club
- No cables to connect
- Easy Calibration, Set-up and Installation
- Long Battery Life
- Small Size : 30 x 15 x 9 mm Light-
- Weighted : 5 grams sensor, 10 grams including attachment

01

WHAT IS THE GOLF CLUB GAME?

The Golf Club Game™ is an original award-winning simulator game created in 2014 by HB Studios, and is acclaimed as one of the most realistic golf games thanks to its stunning visual presentation and outstanding gameplay.

For R-Motion, The Golf Club Game™ created a special edition for golf simulators featuring 16 beautifully designed playing grounds:

- 15 world-renowned courses
- 1 driving range

When you purchase R-Motion Golf, The Golf Club Game™ is included in the purchase and is accessible online.

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Europe - EU Declaration of Conformity

This device complies with the essential requirements of the Directive 2014/30/EU.

The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the Directive 2014/30/EU:

- EN 55032:2012+AC:2013
- EN 55024:2010

18

GENERAL INFORMATION

R-Motion golf is designed and produced by Rapsodo Pte. Ltd.

Do not use R-Motion golf hardware in wet conditions

Your R-Motion device is not water-resistant. Do NOT use the device under rain or in wet environments, as the product may get damaged.

App Updates

Rapsodo will periodically update and improve the features of the PC Interface and phone apps. It is recommended that users download the latest version to make for the best performance.

Return Policy and Warranty

Rapsodo provides a (6) six-month limited warranty for manufacturing defects. Under conditions of the warranty agreement, purchasers will be entitled to repair or replacement for defective Rapsodo products. This warranty begins from the date of initial purchase. Rapsodo may also choose to refund the purchase price of the product to the purchaser, at its sole discretion. Warranty detailed information and return policy can be found online at www.rapsodo.com/warranty.

Regulatory notice: Waste electrical and electronic equipment



The symbol on the product or its packaging signifies that this product has to be disposed separately from ordinary household wastes at its end of life. Please kindly be aware that this is your responsibility to dispose electronic equipment at recycling centres in order to help conserve natural resources. Each country in the European Union should have its collection centres for electrical and electronic equipment recycling. For information about your recycling drop off point, please contact your local electrical and electronic equipment waste management authority. Do not dispose of the Rapsodo device with household waste. Batteries are not to be disposed of in municipal waste stream and require separate collection. Disposal of the packaging and your Rapsodo should be done in accordance with local regulations.

PRODUCT OVERVIEW



Clip with tracker inserted

WHAT IS IN THE PACKAGE?



R-Motion Swing Tracker



Attachment Holder

to pre-equip your own golf clubs, attach the device and quickly switch between clubs



USB Charging Cable

Use your PC or a standard charger to connect charging cable

CORRECT PLACEMENT OF YOUR CLUB BEFORE SWINGING

Square the club face to the ball for 1 second, and wait for the light to turn green. Swing away.



Square clubface
to the ball.



3. Pair sensor with the app

Open the R-Motion app on your phone and double tap the sensor to wake it. Then click on the connection status tab to make sure your connected. The sensor LED should turn from Red to Blue.

4. Attach the tracker to your golf club and play

Once finished pairing the tracker, attach the clips and tracker to your golf club, and make sure the light is green (Green light should occur once you are at a tee box).

Then you are ready to play.



WHAT ELSE DO YOU NEED TO PLAY?

Compatibility - PC

Minimum:

OS: Windows 7-8 (32bit or 64bit) **Processor:** Intel Core i5 or equivalent
Memory: 4 GB RAM
Graphics: NVidia GTX 670 or AMD 7850 w/ 2GB (or better!)
DirectX: Version 11
Network: Broadband Internet connection
Hard Drive: 20 GB available space **Sound Card:** DirectX 9.0c compatible

Recommended:

OS: Windows 10 (64Bit)
Processor: Intel Core i7
Memory: 8 GB RAM
Graphics: NVidia GTX 970
DirectX: Version 11
Network: Broadband Internet connection
Hard Drive: 20 GB available space
Sound Card: DirectX 9.0c compatible

Compatibility - APP

iOS 9.0 and above
 Android 6.0 Marshmallow and above



DirectX 11 compatible graphics card is essential for a realistic gameplay on PC (note that old Graphics Processing Unit may not have it)

Golf clubs

Golf ball


Hitting mat (recommended for optimum performance)

SETTING UP YOUR SIMULATOR SPACE

To reduce the risk of injury or property damage, it is recommended that the R-Motion kit is set up using the guidelines below. Please ensure that you have complied with all applicable safety precautions at all times before using R-Motion Golf.

Minimum Unobstructed Area Dimensions

- **Ceiling Height:** Safe ceiling height varies and depends on your physical height and the length of your club. Recommended: 12 feet minimum.
- **Length:** 10 feet (3,35m)
- **Width:** 10 feet (3,35m)

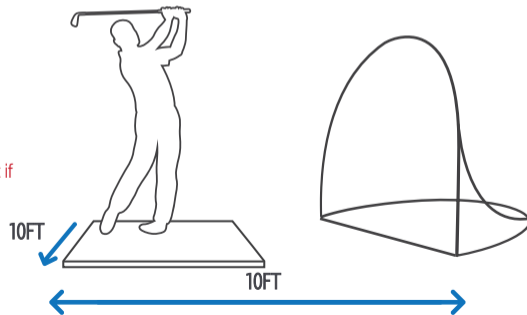

Always use a safety net and hitting mat if the hitting area or the ball flight area is restricted.

SETTING UP SWING ANALYZER ON YOUR PHONE

1. Charge your R-Motion tracker

Plug the R-Motion tracker into the charging cord, and plug the cord into a power source.



2. Go to the App Store or Google Play Store and download the R-Motion App





2. Register your device and download the free Apps

Go to www.rmotion.com/register/ to register your device and download the R-Motion app and The Golf Simulator app on your computer.

13 3. Pair sensor with the app/software

Open the R-Motion app ONLY. Plug in the USB dongle then double tap the sensor to wake it. The sensor LED should turn from Red to Blue. Once the R-Motion app shows all 3 check marks, click the now lit "Play" button. The TGC app should then automatically launch.



4. Attach the tracker to your golf club and play

Once finished pairing the tracker, attach the clips and tracker to your golf club, and make sure the light is green (Green light should occur once you are at a tee box). Then you are ready to play.

CHARGING YOUR R-MOTION TRACKER

To charge the battery, insert the R-Motion tracker in the USB charging cable and connect it to your PC or wall plug USB Adapter. Upon connection, the LED will turn AMBER and once the unit is fully charged, the LED will turn OFF. Every time the front LED is flashing RED charge the device.



POWERING ON / OFF



Double TAP to Turn ON



Led will turn RED



AUTOMATIC power OFF
(3 min after not being used)



RED

Device turned ON , waiting for an connection with R-Motion



BLUE

Device connected to R-Motion application



GREEN

READY to play



FLASHING RED

Low battery



AMBER

Battery is charging

1. Charge your R-Motion tracker



Plug the R-Motion tracker into the charging cord, and plug the cord into a power source.



once R-Motion tracker has been successfully configured and connected with the software, the LED will turn GREEN and the R-Motion application displays a green status.

Note

Keep the dongle plugged into your computer while you play, to ensure the synchronisation between the R-Motion tracker and the game software.



THE TRACKER UNIT

To use a club in the simulator game, just slide the R-Motion tracker unit into the attachment holder, from the grip side, like illustration below To move the tracker to a different club, just slide the tracker unit out towards the grip.

Correct position of the device fitted into its case is shown below. Make sure the "R" logos are aligned.



Note

Want more attachments? You can place orders on www.rmotion.com



GETTING STARTED - REGISTER FOR YOUR LICENSE



1: Go on www.rmotion.com to register and get started.

Your name, e-mail address and username are required. Upon registration, you will receive an e-mail that provides a link to download:

- the R-Motion PC Interface application
- the The Golf Club game software

Follow the installation instructions

2: Get your The Golf Club (TGC) license.

- Plug in the provided USB dongle to the PC port.
- Connect to the internet
- Open the PC interface Application and Login with User name and password.
- Click "GET THE FREE LICENSE" on the set up screen.
- Once the installation is complete, the license status on your R-Motion application will turn GREEN.

 support@rmotiongolf.com

Application needs USB dongle to be in place or license acquisition and proper operation.



GETTING YOUR CLUBS READY FOR THE GAME




To avoid risk of damaging the device, we strongly recommend that you remove the tracker unit from the attachment holder before attaching or removing it from a club.

09

We recommend you attach the holder at the uppermost part of the shaft, just below the grip.



Make sure the "R" points upward on the grip, as in the illustration to the right:

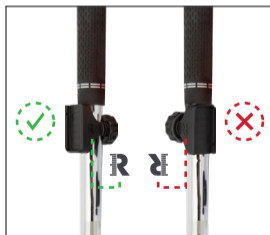

BEFORE THE GAME



10

