



Gourmia

MODEL# GSI180

FRUIT DESSERT MAKER HEALTHY DESSERTS

Gourmia

www.gourmia.com





© 2016 Gourmia
www.Gourmia.com
The Steelstone Group
Brooklyn, NY

All rights reserved. No portion of this manual may be reproduced by any means whatsoever without written permission from The Steelstone Group, except for the inclusion of quotations in a media review.

Although every precaution has been taken in the preparation of this manual, The Steelstone Group assumes no responsibility for errors or omissions. Nor is any liability assumed for damages resulting from the use of the information contained herein. Although every effort has been made to ensure that the information contained in this manual is complete and accurate, The Steelstone Group is not engaged in rendering professional advice or services to the individual consumer; further, The Steelstone Group shall not be held responsible for any loss or damage allegedly arising from any information or suggestion in this manual.

10 9 8 7 6 5 4 3 2 1

Printed in China

Welcome to **Indulgence of Homemade** **Fruit Dessert Maker from Gourmia!**

With the purchase of your Fruit Dessert Maker, you are ready to enjoy the delicious and healthy rewards of making your desserts at home! You will enjoy creating homemade frozen yogurt, sherbet and gelato in your own kitchen. Just add your favorite ingredients, let the Fruit Dessert Maker do its job and you'll be spooning delicious ice-cold desserts in no time! By controlling the ingredients you put in, you are keeping yourself and your family happy and healthy. The Fruit Dessert Maker is sure to become your favorite kitchen appliance.

The following pages of this manual offer full and complete instructions for all the functions and features of your Fruit Dessert Maker. Inside these pages, you'll find information on and instructions for assembly, operating, cleaning and maintenance of your Fruit Dessert Maker. Please read all safety instructions and complete directions carefully for safe usage at all times.

Thank you for your purchase! We hope you will enjoy all the innovative products brought to you by our family at Gourmia.

SAFETY FIRST p. 6

FEATURES & ASSEMBLY p. 8

USAGE & CLEANING p. 10

TROUBLESHOOTING & DISPOSAL p. 12

WARRANTY & SERVICE p. 14



IMPORTANT SAFEGUARDS

When operating this electric appliance, basic safety instructions should always be followed. Refer to the following for these instructions.

1. Before connecting the appliance to the outlet, check whether the type of supply and the outlet voltages are compatible.
2. Always switch OFF and pull the plug out of the socket before you clean the appliance or when you have finished using it. Never pull the plug out using the power cord, always pull directly on the plug. Never carry the unit by its power cord.
3. Indoor use only. Never immerse the device in water and do not expose the device to rain or moisture. Should it fall into water, pull the plug out of the socket and only then remove the device from the water. Afterwards have the unit examined by an authorized service center before you use it again.
4. Do not use the appliance if your hands are wet or if you are standing on a wet floor.
5. Set up and store the appliance and its attachments out of reach of children.
6. Do not leave the appliance unattended while it is on.
7. Always ensure that the device is safely set up before you start to use it.
8. Do not reach into the feed tube. Always use food pusher to avoid injury.
9. This device is not suitable for crushing ice cubes or extremely hard products.
10. Keep your hair, clothing and jewelry away from the rotating parts.
11. Check unit and its components regularly for damages. Do not use the appliance if it is damaged in any way. Have it immediately repaired at an authorized service center. Never try to repair the unit yourself. There is a danger of electrical shock.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid injury.
13. No claims under the warranty or liability for damages will be accepted if they result from improper or incorrect usage.
14. Switch off and unplug the device before removing or inserting the attachments.

CAUTION! HANDLE THE ATTACHMENTS WITH CARE.

15. Do not try to open the housing yourself. Do not introduce any kind of objects into the housing.
16. Do not operate the unit continuously for more than 2 minutes. Allow the unit to cool completely before using again.
17. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
18. Make sure the Chute, Grinder and Dispenser are securely locked in place before operating.
19. Position the appliance as close to the outlet as possible to prevent injury from tripping over the hanging cord. A short power supply cord is provided to reduce this risk.
20. Do not place on or near a hot gas or electric burner, nor in a heated oven.
21. Longer detachable power-supply cord or extension cord are available and may be used if care is exercised in their use. Exception: An extension cord or longer detachable cord is not recommended for use with this appliance.
22. Appliances may be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge only if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

23. Children should not play with the appliance.
24. The symbol "O" on switch means "OFF", the symbol "I" on switch means "ON".
25. Do not let cord hang over edge of table or counter or touch hot surface.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY




Electrical 3-conductor Cord Set:

Appliance is equipped with a 3-conductor cord set that has a 3 prong grounding-type plug. It should be properly connected to a grounding-type outlet. The plug is designed to fit ONLY a 3-grounding outlet unit, and as such, the grounding prong should never be removed. If needed, purchase a 2-prong adapter and ground it to the outlet. Consult a qualified electrician if in doubt. Do not use an adapter unless you are confident it is grounded. Do not modify this plug. If the plug does not fit the outlet securely, call a qualified electrician for assistance.

WARNING: This product contains a chemical known to the State of California to cause cancer.


WARNING: This product contains a chemical known to the State of California to cause birth defects or other reproductive harm.

FEATURES & ASSEMBLY

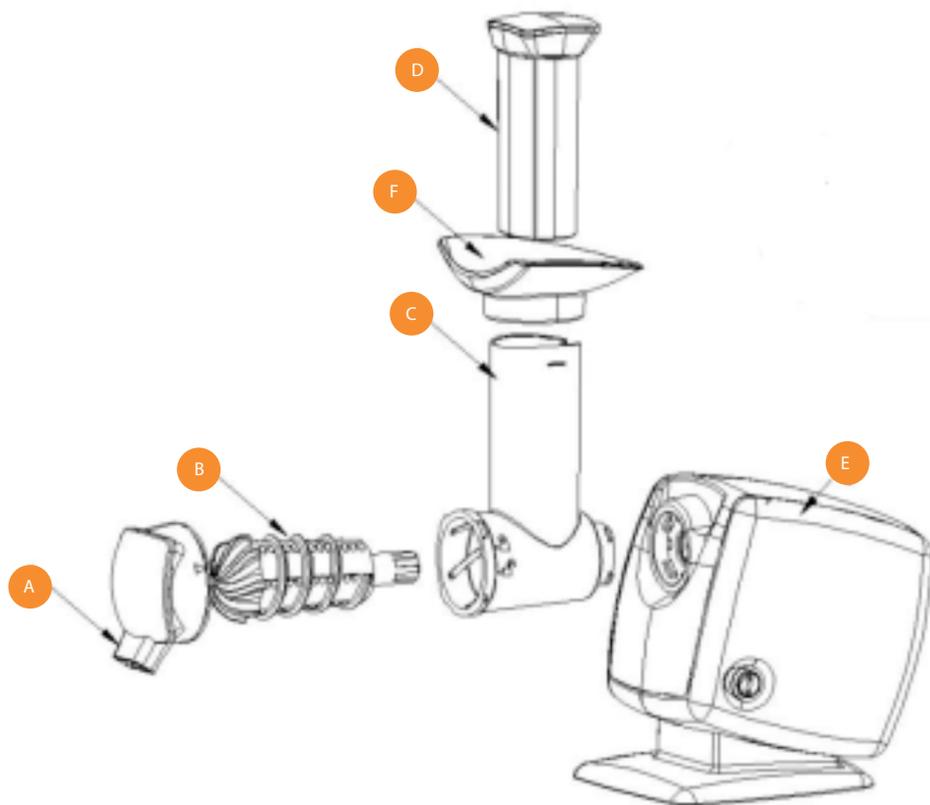


- A. Dispenser
- B. Grinder
- C. Chute
- D. Plunger
- E. Housing
- F. Tray

ASSEMBLY

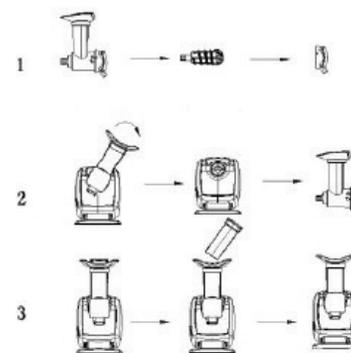

1. Put the tray on top of the chute securely and lock into place. Insert the grinder into the chute. Be sure the gasket is properly placed inside the dispenser. Then affix the dispenser to the chute by placing on the front and turning counterclockwise to lock.
2. Insert the tip of the grinder into the housing. Turn counterclockwise to lock the chute assembly in place.
3. Insert the plunger into the chute.

DISASSEMBLY

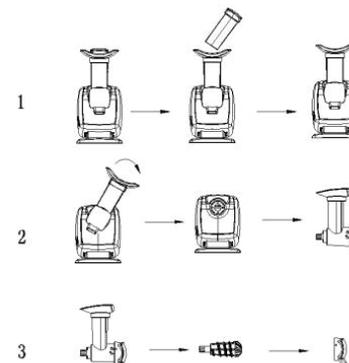

1. Switch off and unplug the device, then take out the plunger out of the chute.
2. Remove the chute assembly by turning clockwise from the housing.
3. Remove dispenser from chute assembly by turning clockwise. Then take out the grinder from the chute and remove the tray from chute top.

USAGE

Note: Prior to the first use, you should use hot water and mild detergent to clean the dispenser (A), grinder (B), chute (C), plunger (D) and tray (F), shown on page 8.

- To safeguard your fingers always use the food plunger. Never put hands, or utensils into chute or into rotating attachment.
- Use the device only for normal household frozen fruit, never use the appliance to crush ice cubes or hard foods.
- In order to ensure a softer dessert consistency, remove the frozen fruits from the freezer for about 5 minutes before you start making the dessert.
- Do not operate the appliance continuously for more than 2 minutes. Allow it to cool completely before using again.
- Do not operate too long without inserting food.
- We recommend that you chop your food into small pieces before placing them into the chute. This will make it easier to push down the plunger.

Note: After dessert is finished, it is recommended that you place the bowl in the freezer for about 30 minutes to allow the dessert to firm up.

CLEANING

WARNINGS

- It is necessary to clean the device attachments chute, plunger, grinder, dispenser and tray completely after every to avoid food to accumulate and become contaminated.
- Do not wash and immerse the housing in water.
- Do not use sharp or abrasive cleaning tools.

CLEANING

1. Before cleaning the appliance, switch it off and unplug from the outlet.
2. Remove the attachment, the chute, plunger, grinder, dispenser and tray and clean thoroughly in warm water and mild dish soap.
3. Wipe and clean the housing with a damp cloth and dry with a soft cloth.
4. To prolong the life for your FRUIT DESSERT MAKER, hand-washing all parts is recommended.
5. Dishwasher use is not recommended. Never place the Base in a dishwasher.

TROUBLE SHOOTING

In the unlikely event that you experience a problem with your device, please take a couple of minutes to check these possible causes prior to contacting customer support:

Symptoms	Possible Solutions
The machine does not turn on.	Ensure that the machine is plugged in and the power to the outlet is turned on.
	Check that the lid is attached to the machine correctly (see Assembly and Usage).
The machine does not complete the churning process.	Keep the machine away from direct sunlight or other heat sources.
	Make sure the machine has good ventilation around it and there are no objects obstructing the fans.
	Close the lid tightly and do not open during the churning process

DISPOSAL

DISPOSAL OF THE DEVICE
PROTECTION OF THE ENVIRONMENT



At the end of the life of your product, it should go to a specially adapted waste-recycling center.

ENVIRONMENT PROTECTION FIRST



1. The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable. Collection point for the recycling of electrical and electronic equipment.
2. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product .For more detailed information about the recycling of this product, Please contact your local council office or your household waste disposal service.

WARRANTY & SERVICE

.....

This Limited Warranty is for one full year from the date of purchase. It is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/part. If product repair/replacement won't suffice, the seller has the option of refunding the cash value of the product or component returned.

Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.

For Customer Service or Questions, Please call: 888-552-0033



NOTES

.....