



XS WIRELESS 2

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kisa Kilavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Set	Lavalier Set	Headmic Set
XS WIRELESS 2	XSW 2-835	XSW 2-865	XSW 2-CI1	XSW 2-ME2	XSW 2-ME3
EM-XSW 2 NT 12-5CW	•	•	•	•	•
SKM 835-XSW	•	•	•	•	•
MZQ 1 SKM 865-XSW	•	•	•	•	•
SK-XSW	•	•	•	•	•
ME 2-2	•	•	•	•	•
ME 3-II	•	•	•	•	•
CI 1-N	•	•	•	•	•
2 x AA LR6 1.5 V	•	•	•	•	•

Battery

Low battery

~ 10 h	
~ 7 h	
~ 3 h	
Low Batt	

Setup

On/Off

Display

Volume

Mute

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
Printed in Germany, Publ. 02/17, 571344/A03

SENNHEISER

Change frequency



SET

Scan mode

⚠ SKM/SK Off!

606.500 MHz
B. 1 CH. 01

+ Bank
- Bank

SET

615.400 MHz
B. 2 CH. 03

SET

SET

Preset mode

606.500 MHz
B. 1 CH. 01

+ Bank
- Bank

SET

606.500 MHz
B. 2 CH. 01

+ Channel
- Channel

SET

615.400 MHz
B. 2 CH. 03

SET

SET

Tune mode

Bank U only!

606.000 MHz
B. U CH. 00

+ 25 kHz
- 25 kHz


SET

606.025 MHz
B. U CH. 00


SET

Sensitivity

0 dB
-10 dB
-20 dB
-30 dB

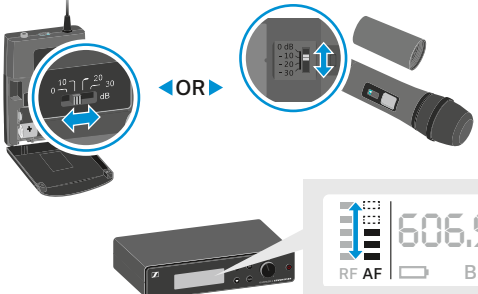

ME 2-2

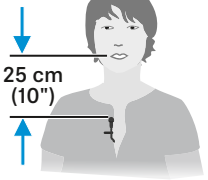

25 cm (10")

ME 3-II



2...3 cm (1")

Squelch




min. SQ




max. SQ




Sync

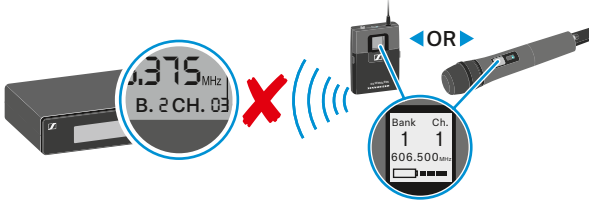


1

hold

OR


2

2x

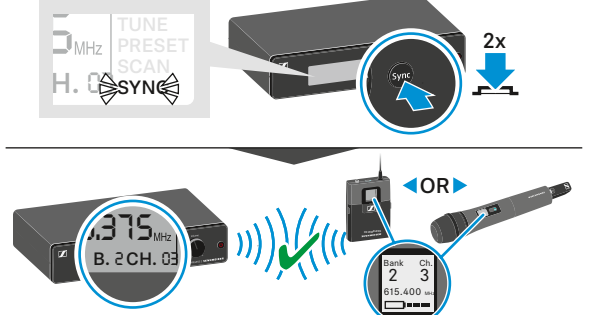

Multichannel

 
Bank 1...8; U
CH. 01...12



max. 12 CH.


Bank	CH.	Bank	CH.	Bank	CH.	Bank	CH.	
2	3	2	4	2	5	2	6	✓
1	1	1	2	1	3	1	8	✓
2	3	1	3	4	7	8	9	✗
2	3	2	3	2	3	2	3	✗

Min. distance

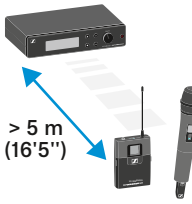

> 5 m (16'5")

SKM

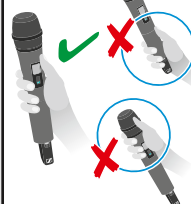

Guitar pickup



> 20 cm (8")

