 


ROVRAK

User Manual

Stainless Steel Food Dehydrator Machine

Model NO: YY-FD16TRAY

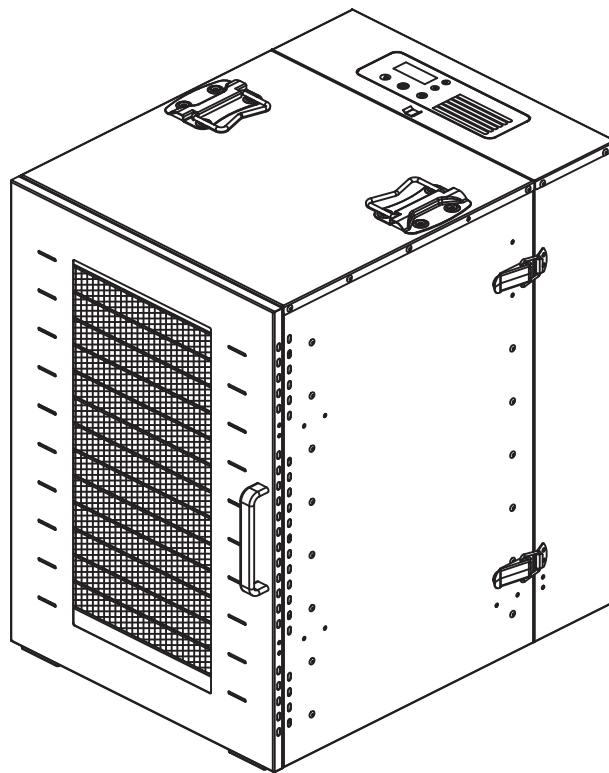

Please read all instructions carefully before operating your new appliance, and keep it for future reference.



TABLE OF CONTENTS

Product Introduction-----	3
Food Dehydrator Diagram-----	3
Control Panel-----	4
Technical Specification-----	4
Package Contents-----	5
Plug and Cord-----	5
Operating Instructions-----	6
Important Safeguards-----	7
Cleaning Instructions-----	8
Problem-Solving-----	9
Warranty-----	10
Customer Support-----	11

Product Introduction


▶ Food Dehydrator Diagram

- a. Dehydrator Cabinet
- b. Door
- c. Control Panel
- d. Racks
- e. Rubber Feet
- f. Power Cord
- g. Fan

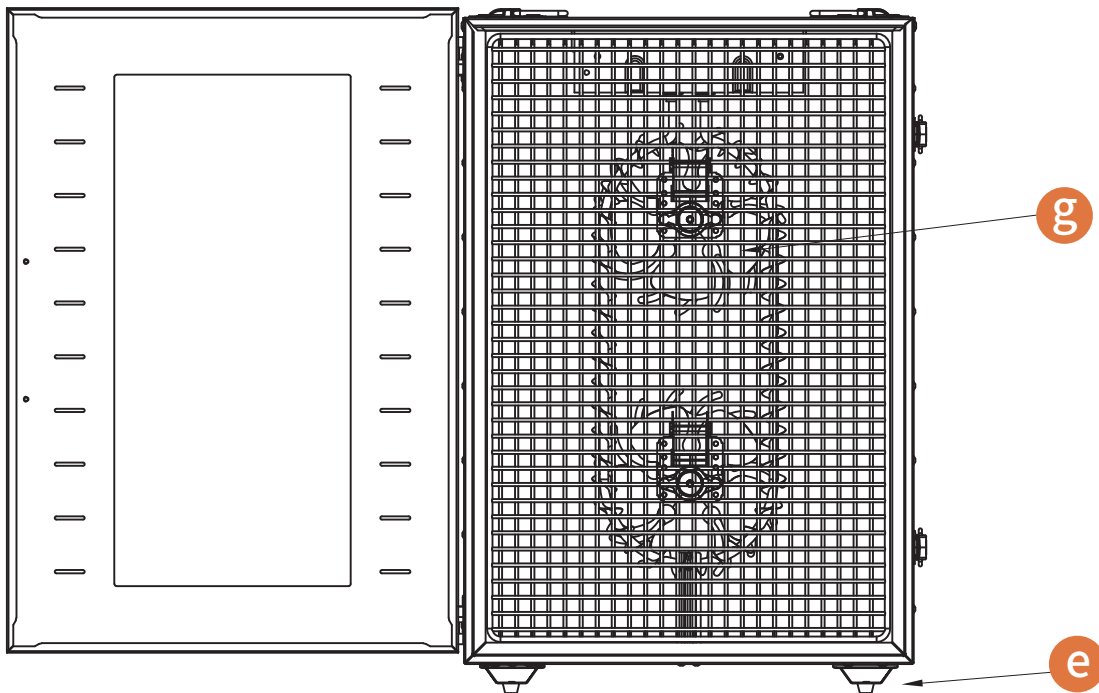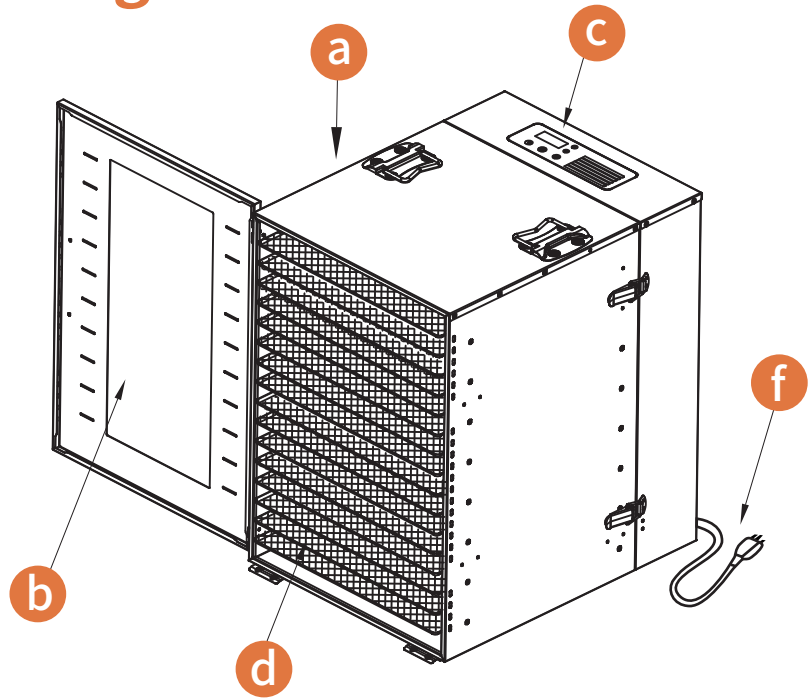

▶ Control Panel

- a. Display Window
- b. Power Button
- c. Temperature Setting
- d. Time Setting

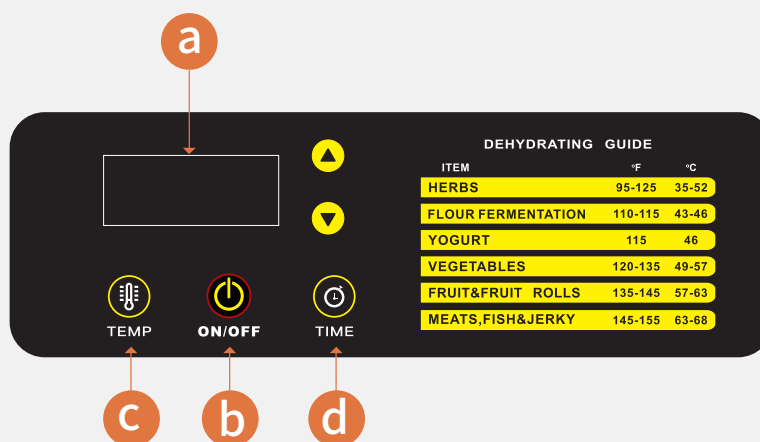

▶ Control

1. Switch Temperature Unit: Press the temperature button for 5 seconds. When switching the temperature, the initial temperature is displayed as 20 °C or 70 °F. (Note: the original temperature unit is Celsius by default.)
2. Change Time/Temperature: Press TEMP/TIME first, then press corresponding buttons to adjust.

3. When the countdown reaches 1 minute before the set time, the heating pipe stops heating and the fan continues to run.

When the countdown hits zero, the screen will be turned off, all the indicators will be off except the switch indicator, the switch indicator will flash slowly, the fan will stop running, the buzzer will give three long beeps, and then the whole machine will shut down, all the indicators will be off (enter sleep state).

Note: The above process takes 1 minute in total. The first 30 seconds are used to determine whether there is operation, and the next 30 seconds to enter the shutdown.

▶ Technical Specification

Voltage: 120V,60Hz

Rated Power: 1500W

Temperature: 70°F-190°F

Time: 0-24H

Decibel: 42dB

Product Size: 21.4*16.5*24.8 inch

► Package Contents

1 x Food Dehydrator

4 x Silicone Pad

1 x Recipes

16 x Tray Racks

1 x Oven Glove

1 x User Manual

► Plug and Cord


- Do not let the cord (or any extension cord) hang over the edge of a table or counter, or touch hot surfaces.
- This dehydrator has a 3-prong grounding plug, and should only be used with 120V, 60Hz electrical systems in North America. Always plug it into a grounded electrical outlet. Do not modify the plug in any way.
- Do not use a 220-240V outlet.
- Any extension cord must also be a grounding-type 3-wire cord.
- This dehydrator uses a short power cord to reduce the risk of entanglement or trip. Be careful when using extension cords.
- The marked electrical rating of an extension cord should be at least as high as the rating of the dehydrator.



Voltage: 120V, 60Hz



caution!

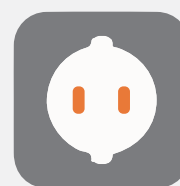

Voltage: 220-240V



SAVE THESE INSTRUCTIONS!

Refer To Them Often And Use Them To Instruct Others.

Operating Instructions

Important! it is important to monitor the dehydrator while in use. Never leaves the dehydrator unattended. Read and fully understand all instructions and warnings prior to using this unit.

1. Operate the dehydrator on a clean, dry surface.
2. Set the power button and the timer knob to the "OFF" position.
3. Plug the dehydrator into a standard 120-volt, 60Hz wall outlet.
4. Position the dehydrator at least 12"(30.5 cm) from any wall during operation to allow for proper air circulation. Do not block the air vents at the rear or on the door of the dehydrator.
5. Remove the racks from the dehydrator. Load the dehydrator racks with the items to be dried. Position the pieces and make sure they do not overlap or touch each other. Allow ample space between the product for proper air circulation. Remove any excess water from the food, which may cause the dehydrator temperature to drop.
6. Turn on the dehydrator and switch "TEMP" or "TIME".
7. Turn the temperature control knob to the desired heat setting, using the "Recipes" as a reference. It is recommended to place an oven thermometer (not included) into the dehydrator to monitor the temperature setting. Adjust the temperature control knob as necessary.
8. Set the timer knob to the desired drying time.
9. Preheat the dehydrator for 5-10 minutes before loading the racks into the dehydrator.
10. Water droplets may form on the surface of some food while dehydrating. These can be removed by blotting the food with a clean towel or paper towel. Be careful when the temperature rises!

NOTE: Drying time may vary depending on several factors, including relative humidity, air temperature and the thickness, temperature, and fat content of the food.

The actual temperature of the dehydrator is based on the ambient temperature of 70°F(20°C). If the dehydrator is not used at the ambient temperature of 70°F (20°C), the temperature indicated on the temperature control knob may not be reached/may be exceeded.

Important Safeguards

ROVRAk takes consumer safety very seriously. Products are designed and manufactured with our consumers' safety in mind.

Additionally, we ask that you exercise a level of caution and follow all instructions and important safeguards when using any electrical appliance.

General Safety

1. Check for damaged parts. Before using the Dehydrator, check that all parts are operating properly and performing their intended functions. Check for any conditions that may affect the unit's operation. Do not use it if the power cord is damaged or frayed.
2. To avoid unintentional starting, make sure the power switch is in the "OFF" position before connecting the dehydrator to the power source.
3. Always disconnect the dehydrator from the power source before servicing, replacing accessories, or cleaning the unit. Unplug the dehydrator when not in use.
4. Keep children away. Never leave the appliance unattended. Monitor the dehydrator when it is in use.
5. Electrical repair must be done by an authorized dealer. Use only original parts and accessories. Modification of the dehydrator voids the warranty. Never open the rear panel of the dehydrator. Never remove the back screen from the dehydrator.
6. Do not pull the power cord to unplug. It is recommended not to use extension cords with the dehydrator.
7. Be sure that the dehydrator is stable during use. All four feet should be secured on a level surface. The dehydrator should not be moved during operation.
8. Do not block the air vents on the door or at the rear of the dehydrator. Keep the dehydrator at least 12 inches (30.5cm) away from any wall to allow for proper air circulation.
9. To prevent electric shock, do not immerse the dehydrator in water or liquid. Electric shock may cause serious injury, please do not use this machine with wet hands or bare feet. Do not operate it near running water.

10. Disconnect from the power source before cleaning the components of this machine. Read all directions on how to clean this dehydrator before attempting to clean it.
11. After cleaning, make sure the dehydrator is completely dry, otherwise reconnecting the power supply may result in electric shock.
12. Do not operate the dehydrator on a hot stove top or inside an oven. Do not allow the power cord to drape over the dehydrator or hot surfaces.
13. It may be necessary to put heat-resistant material under the appliance to avoid possible damage to the surface during use.
14. Edges may be sharp.
15. Do not use while under influence of drugs or alcohol.

Cleaning Instructions

WARNING! Before cleaning or servicing the dehydrator, make sure it is unplugged and the power switch is set to the "OFF" position.

Clean the tray racks and interior of the cabinet before using the dehydrator for the first time and after each use.

1. Set the power switch and the timer knob to the "OFF" position. Disconnect the electrical cord from the power outlet.
2. Allow the dehydrator to completely cool before cleaning.
3. Remove the tray racks from the dehydrator cabinet.
4. Wipe the dehydrator cabinet (inside and outside) with a damp sponge or washcloth. Caution! Edges may be sharp! Do not splash water onto the heating element (located behind the screen at the back of the cabinet). Water may damage the electrical components and increases the risk of electrical shock. Do not immerse the dehydrator in water.
5. Clean the tray racks with warm, soapy water, then rinse with clean water and dry immediately.

Problem-Solving

Moisture in the container

Cause: Incomplete drying. Food is cut unevenly and therefore is not completely dried. Dried foods is left at room temperature too long after cooling, and moisture re-enters the foods.

Prevention: Test food for dryness before removing it from the dehydrator. Cut foods evenly. Cool the food quickly and package immediately.

Mold on food

Cause: Incomplete drying. Food is not checked for moisture content within a week. Storage container is not air-tight. Storage temperature is too high/there is moisture in food. Surface hardening may have occurred, meaning the food was dried at too high temperature, and the food was dried on the outside but not completely dried on the inside.

Prevention: Test several pieces of food for dryness, check the storage container within 1 week for moisture. Redry the food if needed, and use air-tight containers for storage. Store foods in cool areas at 70 °F (20 °C) or below. Dry foods at appropriate temperatures/use the drying guide for reference.

Brown spots on vegetables

Cause: The drying temperature used is too high. Vegetables were over-dried.

Prevention: Dry foods at appropriate temperatures/use the drying guide for reference. Check foods often for dryness.

Food sticking to the tray racks

Cause: Food is not turned over.

Prevention: After one hour of dehydrating, use a spatula to flip the foods.

Warranty

ROVRAk offers a 1-year warranty on all our products. If the food dehydrator is defective in manufacturing, parts, or workmanship during the warranty period, please provide us with the original proof of purchase, and we will replace any product with a defect due to the manufacturer based on eligibility. Refunds are available within the first 30 days of purchase, and only available to the original purchaser of the product. This warranty only applies to personal use and does not apply to any products used for commercial, rental or other purposes.

This warranty is non-transferable. ROVRAk is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure by user's negligence, abuse, or use of non-compliance with the user manual or any additional safety or usage warnings included in the product packaging and manual.

The warranty does not apply if the damage is caused by other factors, including without limitation of:

- (a) Normal wear and tear;**
- (b) Abuse, mishandling or failure to follow operating instructions;**
- (c) Modified from its original condition;**
- (d) Connect to peripherals, additional equipment or accessories.**
- (e) Unsupervised use by children under 18 years of age.**

We always urge our customers to contact us with any issue, regardless of warranty terms.

Customer Support



Thanks for trusting **ROVRAK**
which can meet your household and kitchen needs!



We're here to help !

ROVRAK always strives to provide the fastest and easiest shopping experience possible and has a dedicated customer service team available 24/7.

If you experience an issue with a ROVRAK product,



please contact us at **support@rovraкус.com**,
and we will do our best to resolve it for you.



Additional 1 -Year Warranty !

Register your product within 14 days of your purchase to get an extra 1-year warranty!

1. Visit **www.rovrakus.com**.
2. Go to the registration page.
3. Enter your purchase information(including order number) to get your exclusive services.



Make Healthy and Delicious Food at Home
Enjoy Energetic and Exquisite Life at Will

