

Size:280 X 100mm

Electric Grooming Set

Model: MS-672



Notes:

- ⚠ WARNING:** Separate the handheld part from the power cord before cleaning the handheld part in water.
1. This product uses a TYPE-C charging cable.
 2. You can use the DC 5V2A adapter mobile phone charger, or a USB interface of cars, computers and others for charging.
 3. If the charging cable is damaged, replace it with a new one to avoid danger.
 4. The product shall be charged and stored between 5°C and 35°C.
 5. Make sure the charge and charging cable are dry. Do not plug or unplug with wet hands to prevent electric shock.
 6. Please check if the foil is damaged or deformed before use to avoid damage to your skin.
 7. Clean the electric shaver with clean water, but do not soak it in water for a long time.
 8. Do not use salt water, hot water above 60 °C, thinners, gasoline, alcohol or other chemicals to clean the electric shaver.
 9. It's necessary to ensure to cover the electric shaver with the protective cover when you travel to protect its foil.
 11. Please do not charge the electric shaver too long.
 12. Do not store the electric shaver in direct sunlight or near other sources of heat.

 
Accessories List

1. Product Body
2. 7D Integrated Disassembly Cutter Head
3. Nose Trimmer
4. Face Cleaning Brush
5. Facial Massager
6. Hair Trimmer
7. Hair Trimmer Combs (3mm)
8. Hair Trimmer Combs (5mm)
9. Hair Trimmer Combs (7mm)
10. TYPE-C Cable
11. Cleaning Brush

Specifications

Model: MS-672
Product Name: Electric Grooming Set
Battery: 800mAh Lithium Battery
Charging: 90 Minutes
Discharge: 90 Minutes
Waterproof: IPX7

Charging Method



Charge

1. When the display shows "Available time, 05 minutes", the indicator light will flash, indicating that the battery is low-energy and needs charging.
2. Plug the charging cable end into the electric shaver, then connect the charging cable to the charger and plug it into the power socket, or plug the other end of the charging cable into a USB port of computers or cars.
3. When the power is turned on, the display will light up, with scrolling numbers which will increase as the charging time extends, indicating that it's charging.
4. Full charging takes about 1.5 hour on a continuous basis. After full charging, "FULL" and "90 min" will be displayed, indicating the shaver has been fully charged and can be used for about 90 minutes.

Charging WarmTips

1. Please use a 5V/1A charger or charging port to charge the product.
2. This product has an overvoltage protection function. When the user uses a charger or charging port exceeding 5V to charge the product, the inside product program will stop charging automatically.
3. There will be no damage to the product after the "overvoltage protection" function is activated. You only need to match a suitable charger or charging port to charge the product normally.



Screen Display

Remaining Energy

The Screen display of this product can display remaining energy. A fully charged electric shaver can provide a shaving duration up to about 90 minutes, but the actual shaving duration may be less than expected due to differences in shaving habits, cleaning habits and beard types. The electric shaver can be used in the meanwhile it's being charged by means of charging cable connection if it still has remaining energy."



Travel Lock

1. Press and hold the electric shaver switch button for 3 seconds, and then the electric shaver LED display indicates that the safety lock has been locked.
2. Repeat the above step to unlock .



Overload Protection Function

Overload protection is mainly for tool head blockage. When the electric shaver is overloaded, it will automatically shut down and the display screen will show stall protection. At this time, it should be cleaned before use.



Washing Reminder

When the faucet symbol flashes on the display, it indicates that the electric shaver needs to be cleaned.

How to Use

Shave Beard and Head



Press the switch button to turn on the electric shaver.



Move the electric shaver foil against the growth direction of your beard on your skin and make straight and reciprocated movements.



Hair on your neck can also be shaved.



Before shaving your head, clean it with warm water and keep your hair dry. For a better effect of use, please use the brush if you need to clean the shaving head during the head shaving process, and wash the shaving head after shaving is completed.

When Shaving Completed

Press the switch button again to turn off the electric shaver, and then cover it with the protective cover to avoid damages to the foil.

⚠ Please do not use any damaged shaving head to avoid injury to your skin; instead, replace it immediately with our original spare shaving head which can be bought where you buy your shaver.

Wash and Clean with Water

1. Before cleaning, be sure to separate the electric shaver from the charging cable and press the switch to the off state.
2. The cutter head of this product is an integrated magnetic suction cutter head, which can be disassembled as a whole by gently breaking off the cutter head by hand.
3. The electric shaver can be washed directly under running tap. But please do not soak it in water for a long time.
4. After washing, drain any excessive water, put it horizontally and air-dry it. Do not wipe the shaving head part with tissue or cloth, which may cause damage.
5. First air-dry the electric shaver, then cover it with the protective cover to prevent damage to the foil and avoid accumulation of dust.

Replace Shaving Head

The shaving head should be replaced at least once every six months for a good experience. If there is no damaged caused by human factors, the shaver can have a long service life. Any damaged shaving head can only be replaced with our original shaving head.

Customer Service

If you have any questions, please contact us via Amazon "Contact Seller" or email (MS_Support@163.com), we will be happy to serve you and guarantee 100% satisfactory treatment plan.

Any problem? Contact Us First!

Contact Seller

MS_Support@163.com