


Instruction

Key Function Introduction:

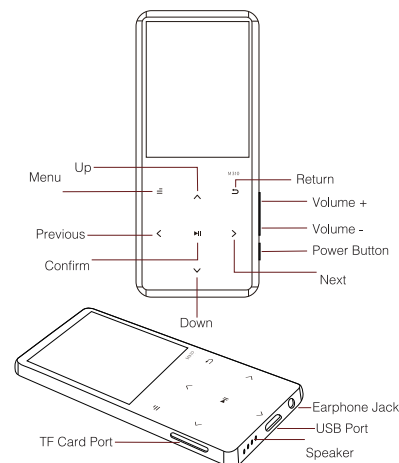

Thank you for purchasing our product, you are welcome to share your feeling.
☺ Satisfied: Share your happy shopping experience with your friends and family.
☹ Unsatisfied: Contact us via email and we will try our best to solve your problem to your satisfaction.

This music player is a new generation of digital walkman equipment, which supports lossless full format. It's perfect sound quality, high reliability and exquisite appearance complement each other, makes it an essential device for enthusiastic listeners.

Basic Functions:

- Music playback: Support MP3, WMA, OGG, APE, FLAC, WAV format playback
- Video playback support: support AMV, AVI (requires conversion tool to convert)
- Record
- Radio
- Picture browsing: support JPEG, BMP format browsing
- E-book reading
- Folder
- Alarm clock
- Stopwatch
- Bluetooth function
- Settings
- Support TF card
- Input voltage: DC5V ~...1000 mA

Function Description:

Turn on/off machine

Long press the power button to shut down in the power on

state, long press to boot in the power off state. When the system's idle time reaches to the shutdown time that the user has set, the player automatically shuts down.

Note: This function does not work when the player is connected to a PC or charged.

Low battery

When the battery is low, the player prompts low power once, then automatically shuts down to standby state. Do not reboot at the moment, please charge in time.

Connect to PC

Connect the PC to the player with the supplied USB cable, and the PC will prompt the removable disk, then select the appropriate file to copy.

What should do if the connection is not displayed? Check if the interface is well connected. Have a try to use another USB cable, maybe it's the problem of USB cable.

Music

Select the music menu and press **▶** to confirm. Press the < key and > key to switch between up and down songs, press **▶** to select the option, **↵** key returns to the

previous menu, and press **≡** key pops up the setup menu.

How to download music:

You need to connect the device with your PC, use the usb cable we offer you, then you can see the removable disk in your PC, you can download the music to your PC then transfer the music to the removable disk.

How to set playback mode:

In the song playback interface, click **≡** to enter "Play mode" you can set your playback mode as you like.

Video

Select the video menu, press **▶** to enter the video, and select the ^ file up and v file down, press **▶** to confirm, enter the video playback interface, press **↵** to exit.

Note: It needs conversation tool to convert, please contact us via email, we will send conversation tool to you..

Recording

Select the recording menu, press **▶** to enter the recording, press **▶** to start recording, press **▶** to pause the recording, and press **↵** to exit.

Note: Recording file is in the folder RECORD

Radio

Select the radio menu, press **▶** to enter the radio, press **≡** to pop up the menu, auto-tune, manual tune, preset radio save to preset, clear preset. Press **▶** to confirm and press **↵** to exit.

Note: When you listen to FM radio, please remember to plug in the earphone and use it as an antenna.

When the FM radio signal is in bad reception: Please adjust the direction of the player and the environment. Elongated earphone cable. Check whether is interfered by electronic equipment nearby.

Bluetooth

Select the bluetooth menu and press **▶** to enter the bluetooth interface.

Press **▶** to confirm to open bluetooth. Press ^ and v to select, press **▶** again to confirm and press **↵** to return.

Note: Bluetooth can only pair with speaker and headphone, it couldn't pair with mobile phone.

TF Card

It is recommended to use the TF card of MYMAHDI. If you buy our player, you could have 10% discount for TF card, you can contact us by email for the detail.

What if the player doesn't read the card? Check whether the card is broken or not, have a try to use another TF card.

Check whether it's the problem of the player, you could contact us by email for the product problem, we will try our best to solve it.

Image

Select picture menu, press **▶** to enter, then press **▶** to play, you can adjust the time of automatic play in the settings, press **↵** to exit.

E-book

Press **▶** to enter the E-book text file list interface. Press **▶** to confirm to open the text file. Press ^ and v to page forward and backward. During E-book browsing, press **▶** to switch between manual page turning and automatic page turning. Press **≡** to enter the submenu option and press **↵** to exit.

Folder

Select the folder menu, press **▶** to enter the folder, the screen displays all the directories and files on the internal storage device, you could delete the file in this folder, select one of

file, press to **≡** display "Delete", press **▶** to confirm the deletion, press **↵** to exit.

Alarm clock

Select the alarm menu, press **▶** to enter the alarm setting, press ^ and v to select, press **▶** to confirm, press **↵** to exit.

Stopwatch

Select the stopwatch menu and press **▶** to enter the stopwatch interface. Press **▶** to confirm to start timing, Press > to time continuously, press **↵** to exit

Setting

Select the setup menu, press **▶** to enter the setup, press ^ and v to select the menu, press **▶** to confirm, press **↵** to return to the previous menu.

FAQ

The player does not work or the display does not display content

- Check the battery level.

Power button does not work

- No battery, or the battery is exhausted.

Unable to download file

- Check the connection of the computer's USB port to the player interface
- Format the player

Cautions:

1. Do not hit this product seriously.
2. Do not touch chemicals such as benzene, thinner and so on.
3. Please do not approach strong magnetic and electric fields.
4. Please avoid direct light and heat appliances.
5. Do not disassemble, repair or modify it by yourself.
6. Do not use the player and headphones during cycling or driving to avoid danger!
7. Do not listen to loud sounds to avoid adverse effects on your hearing.
8. Dispose of packaging, batteries, and old electronic products, please sort them properly.

Declaration

1. First of all, thank you very much for using our MP3 digital player. Please read the operation guide before using the product.
2. It is strictly forbidden to copy, transmit, distribute and store the

- contents of the company's manual in any form without the prior written permission of our company.
- 3. Follow the strategy of continuous development, we reserve the right to modify and improve the product described in this manual without prior notice.
- 4. Under no circumstances shall we be responsible for any loss of data or income and for any special, incidental, or consequential damages, regardless of the cause of the loss.
- 5. The final interpretation of this player belongs to the company.

Thank you for reading our product instruction. If you have any questions, please contact us by email, your thoughts and opinions are very important to us. We will try our best to improve.