


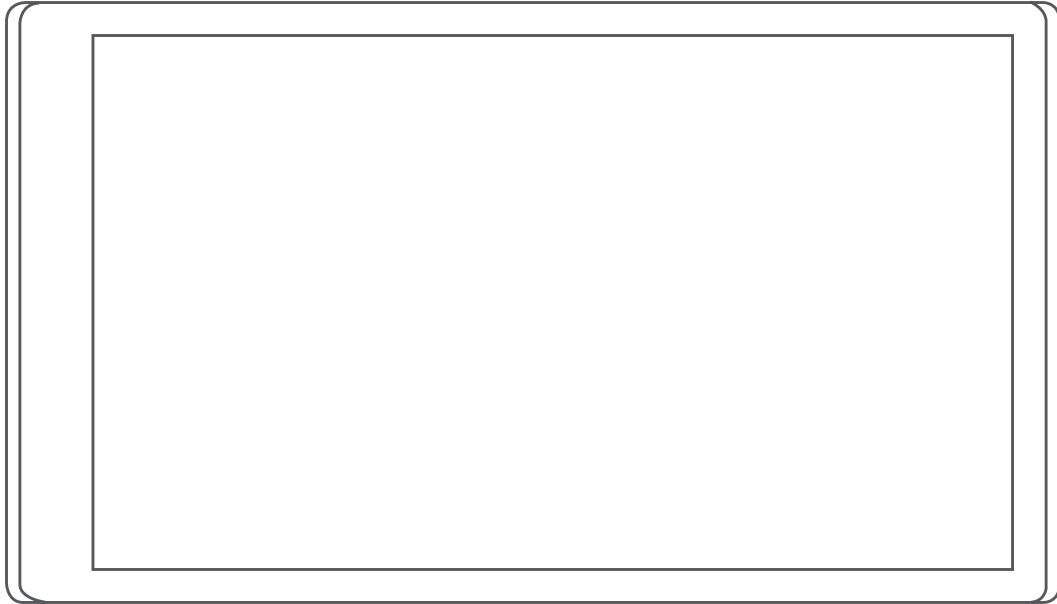

GARMIN DRIVESMART™ 65 WITH AMAZON ALEXA

Owner's Manual

© 2019 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin.

Garmin Drive™, Garmin DriveSmart™, Garmin Express™, and myTrends™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Amazon, Alexa and all related logos and motion marks are trademarks of Amazon.com, Inc. or its affiliates. Android™ is a trademark of Google Inc. Apple®, iPhone®, and Mac® are trademarks of Apple Inc, registered in the U.S. and other countries. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such word mark or logo by Garmin is under license. Foursquare® is a trademark of Foursquare Labs, Inc. in the U.S. and in other countries. HISTORY® and the H logo are trademarks of A+E Networks and are protected in the United States and other countries around the globe. All Rights Reserved. Used with Permission. microSD® and the microSDHC logo are trademarks of SD-3C, LLC. TripAdvisor® is a registered trademark of TripAdvisor LLC. Windows®, Windows Vista®, and Windows XP® are registered trademarks of Microsoft Corporation in the United States and other countries.

Table of Contents

Getting Started	1	Saving a Location	10
Device Overview	1	Saving Your Current Location	10
Vehicle Power Adapter Overview	1	Editing a Saved Location	10
Mounting Considerations	1	Assigning Categories to a Saved Location	10
Mounting and Powering the Garmin DriveSmart Device in Your Vehicle	1	Deleting a Saved Location	10
Pairing with Your Smartphone	2	Following a Route	10
Connecting to the Vehicle Stereo	2	Routes	10
Connecting to the Stereo Using a Bluetooth Connection	2	Starting a Route	10
Connecting to the Stereo Using an Auxiliary Audio Cable	3	Starting a Route by Using the Map	10
Turning the Device On or Off	3	Going Home	10
Acquiring GPS Signals	3	Your Route on the Map	10
Status Bar Icons	3	Active Lane Guidance	11
Using the On-Screen Buttons	3	Viewing Turns and Directions	11
Adjusting the Volume	3	Viewing the Entire Route on the Map	11
Using the Audio Mixer	4	Arriving at Your Destination	11
Enabling or Disabling Sounds and Audio Sources	4	Parking Near Your Destination	11
Adjusting the Screen Brightness	4	Changing Your Active Route	11
Voice-Activated Features	4	Adding a Location to Your Route	11
Tips for Speaking to the Device	4	Shaping Your Route	11
Launching Garmin Voice-Activated Navigation	4	Taking a Detour	12
Starting a Route	4	Changing the Route Calculation Mode	12
Placing a Phone Call Using Your Voice	5	Stopping the Route	12
Changing Device Settings Using Your Voice	5	Using Suggested Routes	12
Amazon Alexa Skills and Features	5	Avoiding Delays, Tolls, and Areas	12
Checking the Weather Forecast	5	Avoiding Traffic Delays on Your Route	12
Enabling Skills	5	Avoiding Toll Roads	12
Playing Music and Media	5	Avoiding Toll Stickers	12
Media Player	5	Avoiding Road Features	12
Controlling Media Playback Using Your Voice	5	Avoiding Environmental Zones	12
Adding Music Accounts	6	Custom Avoidances	12
Muting the Microphones	6	Navigating Off Road	13
Driver Awareness Features and Alerts	6	Using the Map	13
Enabling or Disabling Driver Alerts	6	Map Tools	13
Red Light and Speed Cameras	6	Viewing a Map Tool	13
Finding and Saving Locations	6	Up Ahead	13
Finding a Location Using the Search Bar	7	Viewing Upcoming Locations	13
Finding an Address	7	Customizing the Up Ahead Categories	13
Location Search Results	7	Cities Ahead	14
Location Search Results on the Map	7	Viewing Upcoming Cities and Exit Services	14
Changing the Search Area	7	Trip Information	14
Points of Interest	7	Viewing Trip Data from the Map	14
Finding a Location by Category	7	Viewing the Trip Information Page	14
Finding National Parks	8	Viewing the Trip Log	14
Finding HISTORY® Points of Interest	8	Resetting Trip Information	14
Foursquare	8	Viewing Upcoming Traffic	14
TripAdvisor	8	Viewing Traffic on the Map	14
Navigating to Points of Interest Within a Venue	8	Searching for Traffic Incidents	14
Search Tools	9	Customizing the Map	14
Finding an Intersection	9	Customizing the Map Layers	14
Finding a Location Using Coordinates	9	Changing the Map Data Field	14
Parking	9	Changing the Map Perspective	14
Finding Parking Near Your Current Location	9	Live Services, Traffic, and Smartphone Features	14
Finding Parking Near a Specified Location	9	Showing or Hiding App Notifications (Android™)	15
Understanding Parking Colors and Symbols	9	Showing or Hiding Notification Categories (iPhone®)	15
Viewing Recently Found Locations	9	Smart Notifications	15
Clearing the List of Recently Found Locations	9	Receiving Notifications	15
Viewing Current Location Information	9	Viewing the List of Notifications	15
Finding Emergency Services and Fuel	9	Hands-Free Calling	16
Getting Directions to Your Current Location	9	Placing a Call	16
Adding a Shortcut	9	Receiving a Call	16
Removing a Shortcut	9	Using the Call History	16
Saving Locations	10	Using In-Call Options	16
		Saving a Home Phone Number	16
		Disconnecting a Bluetooth Device	16
		Deleting a Paired Phone	16

Traffic	16	When is the Garmin DriveSmart device listening?	22
Receiving Traffic Data Using Your Smartphone	16	A skill I want to use is not available	22
Enabling Traffic	16	The suction cup will not stay on my windshield	22
Viewing Traffic on the Map	16	My device is not acquiring satellite signals	22
Searching for Traffic Incidents	16	My battery does not stay charged for very long	22
Using the Apps	17	My device does not connect to my phone	22
Viewing the Owner's Manual on Your Device	17	Appendix	23
Viewing the Weather Forecast	17	Installing a Memory Card for Maps and Data	23
Viewing Weather Near a Different City	17	Data Management	23
Viewing the Weather Radar	17	About Memory Cards	23
Viewing Weather Alerts	17	Connecting the Device to Your Computer	23
Checking Road Conditions	17	Transferring Data From Your Computer	23
Trip Planner	17	Disconnecting the USB Cable	23
Planning a Trip	17	Viewing GPS Signal Status	23
Editing and Reordering Locations in a Trip	17	Purchasing Additional Maps	23
Discovering Attractions Along Your Trip	17	Purchasing Accessories	23
Changing Routing Options for a Trip	17	Index	24
Navigating to a Saved Trip	17		
Editing and Saving Your Active Route	18		
photoLive Traffic Cameras	18		
Viewing and Saving photoLive Traffic Cameras	18		
Viewing photoLive Traffic Cameras on the Map	18		
Saving a Traffic Camera	18		
Viewing Previous Routes and Destinations	18		
Settings	18		
Map and Vehicle Settings	18		
Enabling Maps	18		
Navigation Settings	18		
Calculation Mode Settings	18		
Setting a Simulated Location	18		
Wireless Network Settings	19		
Driver Assistance Settings	19		
Proximity Alerts Settings	19		
Backup Camera Settings	19		
Display Settings	19		
Traffic Settings	19		
Units and Time Settings	19		
Setting the Time	19		
Language and Keyboard Settings	19		
Device and Privacy Settings	19		
Resetting Data and Settings	20		
Device Information	20		
Viewing E-label Regulatory and Compliance Information	20		
Specifications	20		
Charging the Device	20		
Device Maintenance	20		
Garmin Support Center	20		
Map and Software Updates	20		
Connecting to a Wi-Fi Network	20		
Updating Maps and Software Using a Wi-Fi Network	20		
Updating Maps and Software with Garmin Express	21		
Device Care	21		
Cleaning the Outer Casing	21		
Cleaning the Touchscreen	21		
Avoiding Theft	21		
Restarting the Device	21		
Removing the Device, Mount, and Suction Cup	21		
Removing the Device from the Mount	21		
Removing the Mount from the Suction Cup	22		
Removing the Suction Cup from the Windshield	22		
Troubleshooting	22		
I cannot hear sound from my device	22		
My device audio has background noise when using an auxiliary audio cable	22		

Getting Started

⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

- Update the maps and software on your device (*Map and Software Updates*, page 20).
- Mount the device in your vehicle and connect it to power (*Mounting and Powering the Garmin DriveSmart Device in Your Vehicle*, page 1).
- Acquire GPS signals (*Acquiring GPS Signals*, page 3).
- Adjust the volume (*Adjusting the Volume*, page 3) and display brightness (*Adjusting the Screen Brightness*, page 4).
- Navigate to your destination (*Starting a Route*, page 10).

Device Overview




①	Voice button. Press to activate the Amazon Alexa voice feature. TIP: You can also say <i>Alexa</i> to activate the Amazon Alexa voice feature. Hold for two seconds to mute the microphones for voice features.
②	Microphones for voice features and hands-free calling.
③	Power button. Press to turn the device on or off.
④	USB power and data port.
⑤	Map and data memory card slot.

Vehicle Power Adapter Overview

NOTICE

The vehicle power adapter included with your Garmin DriveSmart 65 with Amazon Alexa device is not compatible with any other Garmin® devices. Connecting this vehicle power adapter to a different device could cause damage to the device.

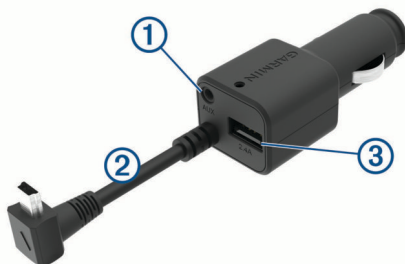

①	3.5 mm stereo audio output jack. Connects to the auxiliary input of the vehicle stereo using a 3.5 mm audio cable (not included). Used only when Bluetooth® technology is not enabled for audio.
②	Power cable. Connects to the mini-USB power port on the back of the device.
③	2.4 A USB charging port. Charges a connected phone or portable media device.

Mounting Considerations

- Do not mount the device in a location that obscures the driver's view of the road.
- Choose a location that allows you to route the power cable safely.

⚠ WARNING

When installing the device in a vehicle, install the device and power cable securely so they do not interfere with the vehicle operating controls. Interference with the vehicle operating controls can result in a collision, which could result in injury or death.

- Choose a location that allows the device to clearly hear your voice.
You should avoid placing the device near a speaker or air vent, which can produce noise that interferes with the microphones.
- Choose a location that is within easy reach.
- Thoroughly clean the windshield before installing the mount.


Mounting and Powering the Garmin DriveSmart Device in Your Vehicle

⚠ WARNING


This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, store the device out of direct sunlight.

Before you use your device on battery power, you should charge it.

- 1 Press the suction cup to the windshield, and flip the lever ① back toward the windshield.

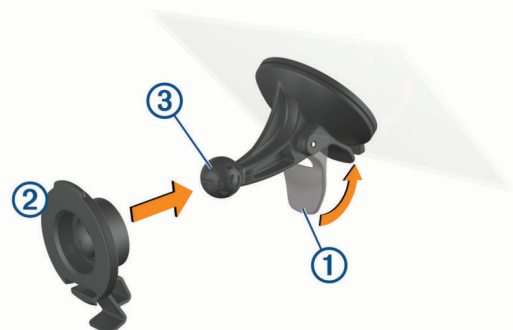

- 2 Press the mount ② onto the suction cup ball ③ until it snaps into place.
- 3 Plug the vehicle power cable into the mini-USB port ④ on the device.

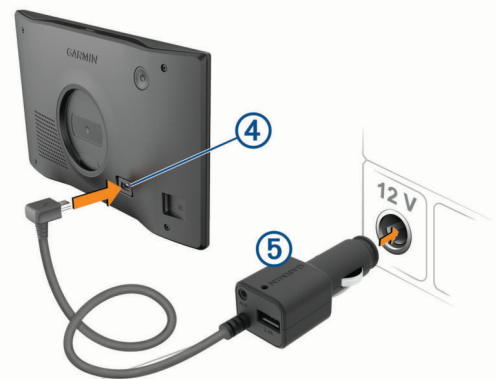

- 4 Plug the other end of the vehicle power cable ⑤ into a power outlet in your vehicle.

- 5 Fit the tab on the top of the mount into the slot on the back of the device, and press the bottom of the mount into the device until it clicks.



Pairing with Your Smartphone

You can pair your Garmin DriveSmart device with your smartphone and the Garmin Drive™ app to enable additional features and access live information ([Live Services, Traffic, and Smartphone Features, page 14](#)). The Garmin Drive app also enables advanced Garmin voice-activated navigation and Amazon Alexa skills and features.

- 1 From the app store on your smartphone, install the Garmin Drive app.
- 2 Turn on your Garmin DriveSmart device, and place the device and your smartphone within 3 m (10 ft.) of each other.
- 3 On your phone, open the Garmin Drive app.
- 4 Follow the on-screen instructions to sign in to a Garmin account and complete the pairing and setup process.

The main app dashboard appears. After the devices are paired, they connect automatically when they are turned on and within range.

Connecting to the Vehicle Stereo

Connecting to the Stereo Using a Bluetooth Connection

If you have a compatible vehicle stereo, you can send the Garmin DriveSmart device audio to the vehicle stereo using a wireless Bluetooth connection. This allows you to hear high-quality audio for navigation prompts, media, Alexa responses, and phone calls from your vehicle speakers without a wired connection.

NOTE: If your stereo does not have Bluetooth technology, you can send audio to the stereo using an auxiliary audio cable ([Connecting to the Stereo Using an Auxiliary Audio Cable, page 3](#)).

- 1 Select an option:
 - During the initial Garmin Drive app pairing process, select **Yes** when the app asks whether you currently use Bluetooth technology to connect your smartphone to your vehicle.
 - After the initial pairing process, from your Garmin DriveSmart device, select **Volume > Bluetooth Audio Setup**, and verify **Vehicle** is selected for each audio type you want to send to your stereo using a Bluetooth connection. Audio types set to **Garmin Device** play from the Garmin DriveSmart device speaker.
- 2 Set the audio source for your vehicle stereo to the Bluetooth input.

NOTE: By default, the device sends audio to your stereo using Bluetooth media mode, which requires your stereo to be set to the Bluetooth source. You can change the Bluetooth mode settings to send some or all audio using Bluetooth

hands-free calling mode instead ([Bluetooth Audio Modes, page 2](#)).

Bluetooth Audio Settings

When your device is connected to your vehicle stereo using a Bluetooth connection, you can select how to play each type of audio on your device. For each audio type, you can select **Vehicle** to play that audio type from your stereo through the Bluetooth connection, or you can select **Garmin Device** to play that audio type from the device speaker or auxiliary output cable.

Select **Volume > Bluetooth Audio Setup**.

Guide Me: Provides on-screen instructions to help you choose the best Bluetooth audio settings for your vehicle and stereo.

Navigation: Allows you to select how to play navigation voice prompts, such as upcoming turns and lane guidance.

Alexa and Media: Allows you to select how to play Amazon Alexa responses, music, audiobooks, and other media.

Phone Calls: Allows you to select how to play phone call audio.

Bluetooth Audio Mode: Allows you to select the Bluetooth mode used to send audio to your vehicle stereo.

Bluetooth Audio Modes

Your device can send audio, such as navigation prompts, Amazon Alexa responses, and music, to your stereo using two Bluetooth modes.

NOTE: Phone calls are always sent to your stereo using Bluetooth hands-free calling mode.

Select **Volume > Bluetooth Audio Setup > Bluetooth Audio Mode**.

Play as Media: Sets the device to send audio in Bluetooth media mode using A2DP audio protocol. For most vehicles, this option provides the best sound quality. To hear audio sent in Bluetooth media mode, you must set your stereo to the Bluetooth input source.

Play as Phone Call: Sets the device to send audio as a Bluetooth hands-free phone call. This option uses your stereo's Bluetooth hands-free calling feature to play the audio. This allows you to hear navigation prompts and Amazon Alexa responses on your stereo, even while listening to other audio sources, such as the radio. It can also be useful for vehicle stereos that do not have a Bluetooth media input source, or for which the Bluetooth media input provides lower sound quality. When using this mode, all Bluetooth audio from the device interrupts all sources on your stereo, and most stereos do not allow you to switch to another source while Bluetooth hands-free calling is active. The device automatically stops sending a Bluetooth hands-free calling signal after it finishes playing an audio item, and the stereo switches back to the previously active audio source.

NOTE: This option is available only while the navigation device is paired with an Apple® device.

Sets the device to send audio using a combination of Bluetooth media and Bluetooth hands-free calling signals. Music, audio books, and other media are sent to the stereo in Bluetooth media mode using A2DP audio protocol. Navigation prompts and Amazon Alexa responses are sent to the stereo as a Bluetooth hands-free phone call. When using this mode, navigation prompts and Amazon Alexa responses interrupt all audio sources on your stereo. However, to hear media playback from the device, you must select the Bluetooth input source on your stereo. This mode is useful if you switch between device media and other media sources, but you always want to hear navigation prompts and Amazon Alexa responses.


Connecting to the Stereo Using an Auxiliary Audio Cable

If your Garmin DriveSmart device is not connected to the vehicle stereo using a Bluetooth connection, you can send the device audio to the vehicle stereo using a 3.5 mm stereo auxiliary audio cable.

- 1 Connect one end of the audio cable to the 3.5 mm audio output jack on the Garmin DriveSmart power cable plug.



TIP: The electrical system in some vehicles may generate background noise in the device audio, such as buzzing or squealing, when you connect to the stereo using an auxiliary audio cable. If this occurs in your vehicle, you can connect a ground loop isolator ① (sold separately) between the audio cable and the audio output jack on the power plug. This can help eliminate the electrical background noise.

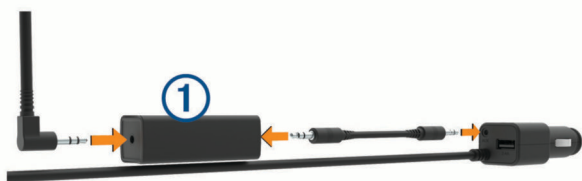

- 2 Connect the other end of the audio cable to the auxiliary input jack for your vehicle stereo.

This jack may be labeled AUX or Line In. See your vehicle owner's manual for more information.

- 3 Set the audio source for your vehicle stereo to the auxiliary input.
- 4 Select an option:
 - During the initial Garmin Drive app pairing process, select **No** when the app asks whether you currently use Bluetooth technology to connect your smartphone to your vehicle.
 - After the initial pairing process, from your Garmin DriveSmart device, select **Volume > Bluetooth Audio Setup**, and verify **Garmin Device** is selected for each audio type.

Turning the Device On or Off

- To turn the device on, press the power key ①, or connect the device to power.



- To put the device in power saving mode, press the power key while the device is on.

While in power saving mode, the screen is off and the device uses very little power, but it can wake instantly for use.

TIP: You can charge your device faster by putting it in power saving mode while charging the battery.

- To turn off the device completely, hold the power key until a prompt appears on the screen, and select **Off**.

The prompt appears after five seconds. If you release the power key before the prompt appears, the device enters power saving mode.

Acquiring GPS Signals

When you turn on your navigation device, the GPS receiver must collect satellite data and establish the current location. The time required to acquire satellite signals varies based on several factors, including how far you are from the location where you last used your navigation device, whether you have a clear view of the sky, and how long it has been since you last used your navigation device. The first time you turn on your navigation device, it may take several minutes to acquire satellite signals.

- 1 Turn on the device.
- 2 Wait while the device locates satellites.
- 3 If necessary, go to an open area, away from tall buildings and trees.

Four bars in the status bar indicate the satellite signal strength. When at least half the bars are filled, the device is ready for navigation.

Status Bar Icons

The status bar is located at the top of the main menu. The status bar icons display information about features on the device. You can select some icons to change settings or view additional information.

	GPS signal status. Hold to view GPS accuracy and acquired satellite information (Viewing GPS Signal Status, page 23).
	Bluetooth technology status. Select to view the Bluetooth settings (Wireless Network Settings, page 19).
	Wi-fi signal strength. Select to change the wi-fi settings (Wireless Network Settings, page 19).
	Connected to hands-free calling. Select to place a phone call (Hands-Free Calling, page 16).
	Current time. Select to set the time (Setting the Time, page 19).
	Battery charge level.
	Garmin Drive app connection status (Pairing with Your Smartphone, page 2).
	Temperature. Select to view the weather forecast (Viewing the Weather Forecast, page 17).

Using the On-Screen Buttons

On-screen buttons allow you to navigate the pages, menus, and menu options on your device.

- Select  to return to the previous menu screen.
- Hold  to quickly return to the main menu.
- Select  or  to scroll through lists or menus.
- Hold  or  to scroll faster.
- Select  to see a context-based menu of options for the current screen.

Adjusting the Volume

- 1 Select **Volume**.
- 2 Select an option:
 - If your device is not connected to a smartphone, use the **Master Volume** slider to adjust the device volume.
 - If your device is connected to a smartphone, use the two sliders to adjust the volume for different types of audio.

The title above each slider indicates the types of audio affected by the slider. These titles change based on your audio settings ([Bluetooth Audio Settings, page 2](#)).

- To mute the device, set the volume sliders to 0.
- To adjust the relative volume for different audio sources, select **Mixer**.

Using the Audio Mixer

You can use the audio mixer to set the relative volume levels for different audio sources, such as navigation prompts, voice-activated feature responses, or alerts. The level for each audio type is a percentage of the master volume.

1 Select **Volume > Mixer**.

2 Use the slider bars to adjust the relative volume for each audio source.

For example, when a slider bar is set to the far right position, that audio source plays at the master volume level. When a slider bar is set to the center position, it plays at half the master volume level.

Enabling or Disabling Sounds and Audio Sources

You can turn specific audio sources and system sounds on or off without affecting other audio sources.

1 Select **Volume**.

2 In the **Sounds** section, select an option:

- To enable the device to speak navigation prompts and directions, select the **Spoken Navigation** check box.
- To enable the device to play a tone when a driver awareness alert is triggered, select the **Alerts and Tones** check box.
- To enable the device to play a sound when you touch on-screen buttons, select the **Button Presses** check box.
- To enable the device to play a tone when it starts listening to a voice request, select the **Start of Request Sound** check box.

When you press the voice button or say *OK, Garmin* or *Alexa*, the device plays a tone to indicate it is listening for your request.

- To enable the device to play a tone when it stops listening to a voice request, select the **End of Request Sound** check box.

The device plays a tone when it detects you have stopped speaking, and it starts processing your voice request.

Adjusting the Screen Brightness

1 Select **Settings > Display > Brightness**.

2 Use the slider bar to adjust the brightness.

Voice-Activated Features

To use the voice-activated features, your device must be connected to the Garmin Drive app on your smartphone. To use Amazon Alexa features, you must sign into your Amazon account from the Garmin Drive app.

The Garmin DriveSmart device uses natural language processing to understand the intent of your spoken requests. You can ask questions or speak commands in natural language, using complete sentences. Many example phrases are provided in the manual, but you can experiment with speaking to the device using the language most comfortable to you.

The device includes Garmin voice-activated navigation and Amazon Alexa skills and features.

Garmin voice-activated navigation allows you to search for locations and addresses, start routes with turn-by-turn directions, place hands-free phone calls, and more. You can

launch Garmin voice-activated navigation by saying *OK, Garmin* followed by a request.

The device also provides access to many Amazon Alexa features, such as playing music, checking the weather, or listening to the news. You can launch Amazon Alexa skills and features by saying *Alexa* followed by a request.

Tips for Speaking to the Device

- Speak in a clear voice directed at the device.
- Start each request using one of these options:
 - Say *OK, Garmin*.
 - Say *Alexa*.
 - Press the voice button.
- Reduce background noise, such as voices or the radio, to help the device interpret your commands more accurately.
- If you do not receive a useful response, try rephrasing your request.
- If the device does not respond to your requests, try one or more of these options:
 - Verify the device is not placed near a speaker or air vent, which can produce noise that interferes with the microphones.
 - Verify the microphones are not muted ([Muting the Microphones, page 6](#)).

Launching Garmin Voice-Activated Navigation

Garmin voice-activated navigation allows you to use plain language spoken requests to search for locations and addresses, start routes with turn-by-turn directions, place hands-free phone calls, and more.

- Say *OK, Garmin*, and make a spoken request.

For example, you can say phrases like these:

- *OK, Garmin, take me home.*
- *OK, Garmin, where's the library?*

Starting a Route

Going to a Saved Location Using Your Voice

It is useful to start a route on your Garmin DriveSmart device each time you travel to a saved location, even though you may already know how to get there. Your device can help you avoid reported traffic delays and construction that may affect your route.

You can say phrases like these to start a route to your saved locations ([Saving Locations, page 10](#)).

- *OK, Garmin, take me home.*
- *OK, Garmin, take me to work.*
- *OK, Garmin, start a route to school.*

Going to an Address Using Your Voice

You can say phrases like these to start a route to a nearby address, or to an address in a specific city.

- *OK, Garmin, take me to One Garmin Way.*
- *OK, Garmin, start a route to twelve hundred East 151st Street in Olathe, Kansas.*

Going to a Business or Named Location Using Your Voice

You can say phrases like these to find and navigate to a business or location by name or category.

Nearby locations

Nearby locations:

- *OK, Garmin, find a coffee shop.*
- *OK, Garmin, where's the library?*
- *OK, Garmin, take me to Starbucks.*

Locations near a different city

Locations near a different city:

- OK, Garmin, find Mexican food near Denver, Colorado.
- OK, Garmin, find The Field Museum near Chicago, Illinois.
- OK, Garmin, find Casa Bonita near Denver, Colorado.

Locations near an intersection

Locations near an intersection:

- OK, Garmin, find barbecue near 12th Street and Vine Street.
- OK, Garmin, find Arthur Bryant's Barbecue near 12th Street and Vine Street.

Going to a City or Intersection Using Your Voice

You can say phrases like these to find and navigate to a city or intersection.

- OK, Garmin, find Chandler, Arizona.
- OK, Garmin, find Michigan Avenue and Erie Street.

Checking Your Arrival Time

While a route is active, you can say a phrases to check your estimated time of arrival at your destination.

Say OK, Garmin, what time will we arrive?.

Stopping a Route Using Your Voice

You can say phrases like these to stop navigating a route.

- OK, Garmin, stop the route.
- OK, Garmin, stop navigating.

Placing a Phone Call Using Your Voice

You can use a voice command to call to a contact from the phone book of your paired smartphone.

Say OK, Garmin, call, and say the contact name.

For example, you can say OK, Garmin, call Mom..

Changing Device Settings Using Your Voice

You can say phrases like these to set the volume or brightness to a value from 0 to 10.

- OK, Garmin, increase the volume.
- OK, Garmin, set the volume to 0.
- OK, Garmin, set the volume to 9.
- OK, Garmin, decrease the brightness.
- OK, Garmin, set the brightness to 5.

Amazon Alexa Skills and Features

In addition to the navigation features offered by Garmin voice-activated navigation, the Garmin DriveSmart device provides access to many Amazon Alexa features, such as playing music, checking the weather, or listening to the news. You can also use the Amazon Alexa app to customize features, add streaming music accounts, and explore thousands of skills in the Alexa Skills Store. Adding skills requires linking to your Amazon account.

NOTE: Some Amazon Alexa skills may not be compatible with the Garmin DriveSmart device. Skill compatibility is determined by the skill developer and Amazon.

Checking the Weather Forecast

You can say phrases like these to check the weather forecast near you or in another area. The device speaks the requested weather information and displays weather information on the screen.

Today's weather

Today's weather:

- Alexa, how's the weather?

- Alexa, what's the temperature today?

Future weather

Future weather:

- Alexa, will it rain tomorrow?
- Alexa, what's the weather this weekend?

Weather in another location

Weather in another location:

- Alexa, what's the weather in Atlanta?
- Alexa, will it snow in Chicago this weekend?

Enabling Skills

You can enable additional skills by speaking to your Garmin DriveSmart device, or by using the Amazon Alexa app.

- To enable a skill using your voice, say a phrase like *Alexa, enable the Pandora skill.*
- To browse and enable skills from the Amazon Alexa app, select **Skills** from the Amazon Alexa app menu.

Playing Music and Media


You can use voice commands to stream music, podcasts, or audio books from your Amazon Music account and other compatible Alexa skills and services. You can connect your streaming music accounts using the Alexa app. You can also start playing media manually using another app on your phone. In this case, the device controls playback using a Bluetooth media connection.

You can say phrases like these to play music based on genre, artist, title, album, recent releases, and more.

- Alexa, play music.
- Alexa, play some popular new rock music.
- Alexa, play my driving music station on Pandora.

Media Player

The media player allows your device to control the media currently playing on your phone, whether you started playback using an Alexa voice command or using another media app on your phone. You can open the media player at any time by selecting Media from the main menu.

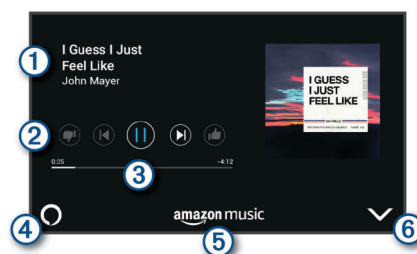

①	Information about the currently playing media, such as title, artist, album, station, or channel.
②	Playback controls. The controls change based on the service providing the media.
③	Progress through the current media item.
④	Audio source. ○ indicates the media is being played from an Alexa skill. ✕ indicates the media is being played by another media app on your phone and sent to the device using a Bluetooth media connection.
⑤	Media service. Indicates the service or provider from which you are streaming media.
⑥	Hides or shrinks the media player.

Controlling Media Playback Using Your Voice

If you started playing media using an Alexa voice command, you can say phrases like these to control playback using your voice.

- To stop playback, say *Alexa, stop.*

- To resume playback, say *Alexa, resume*.
- To skip to the next song or track, say *Alexa, next song* or *Alexa, next track*.
- To get information about the currently playing song, say *Alexa, what song is this?*

Adding Music Accounts

You can use the Amazon Alexa app to connect your Garmin DriveSmart to your streaming music service accounts, such as Amazon Music service or Pandora® internet radio. Not all streaming music services are compatible with the Garmin DriveSmart device.

See the Amazon Alexa app documentation on the Amazon web site for more information about adding streaming music service accounts.

Muting the Microphones

You can mute the microphones to prevent the device from listening for spoken requests.

- To mute the microphones, hold the voice button ① for 2 seconds.



While the microphones are muted, a red bar appears across the bottom of the screen.

- To unmute the microphones, press the voice button.

Driver Awareness Features and Alerts

⚠ CAUTION

The driver alerts and speed limit features are for information only and do not replace your responsibility to abide by all posted speed limit signs and to use safe driving judgment at all times. Garmin is not responsible for any traffic fines or citations you receive for failing to follow all applicable traffic laws and signs.

Your device provides features that can help encourage safer driving and increase efficiency, even when you are driving in a familiar area. The device plays an audible tone or message and displays information for each alert. You can enable or disable the audible tone for some types of driver alerts. Not all alerts are available in all areas.

Schools: The device plays a tone and displays the speed limit (if available) for an upcoming school or school zone.

Speed limit exceeded: The device plays a tone and displays a red border on the speed limit icon when you exceed the posted speed limit for the current road.

Speed limit change: The device plays a tone and displays the upcoming speed limit so you can be prepared to adjust your speed.

Wrong way on a one-way street: The device plays a message and displays a full-screen warning if you travel the wrong way on a one-way street. The edges of the screen appear red and an alert remains at the top of the screen until you leave the one-way street or correct your direction of travel.

Railroad crossing: The device plays a tone to indicate an upcoming railroad crossing.

Animal crossing: The device plays a tone to indicate an upcoming animal crossing area.

Curves: The device plays a tone to indicate a curve in the road.

Slower traffic: The device plays a tone to indicate slower traffic when you approach slower traffic at a higher speed. Your device must be receiving traffic information to use this feature ([Traffic](#), page 16).

Break planning: The device plays a tone and suggests upcoming rest stops after you have been driving for a long time.

Enabling or Disabling Driver Alerts

You can enable or disable several types of driver alerts.

- 1 Select **Settings > Driver Assistance > Driver Alerts**.
- 2 Select or clear the check box next to each alert.

Red Light and Speed Cameras

NOTICE

Garmin is not responsible for the accuracy of or the consequences of using a red light or speed camera database.

NOTE: This feature is not available for all regions or product models.

Information about red light and speed camera locations is available in some areas for some product models. The device alerts you when you approach a reported speed or red light camera.

- In some areas, your device can receive live red light and speed camera data while connected to a smartphone running the Garmin Drive app.
- You can use the Garmin Express™ software (garmin.com/express) to update the camera database stored on your device. You should update your device frequently to receive the most up-to-date camera information.

Finding and Saving Locations

The maps loaded in your device contain locations, such as restaurants, hotels, auto services, and detailed street information. The Where To? menu helps you find your destination by providing several methods to browse, search, and save this information.

From the main menu, select **Where To?**.

- To quickly search all locations on your device, select **Q Search** ([Finding a Location Using the Search Bar](#), page 7).
- To find an address, select **Address** ([Finding an Address](#), page 7).
- To browse or search pre-loaded points of interest by category, select **Categories** ([Finding a Location by Category](#), page 7).
- To search near a different city or area, select **📍** next to the current search area ([Changing the Search Area](#), page 7).
- To view and edit your saved locations, select **Saved** ([Saving Locations](#), page 10).
- To view locations you have recently selected from the search results, select **Recent** ([Viewing Recently Found Locations](#), page 9).
- To browse, search, and check into Foursquare® points of interest, select **Foursquare®** ([Searching Foursquare Points of Interest](#), page 8).
- To browse and search TripAdvisor® points of interest and reviews, select **TripAdvisor** ([TripAdvisor](#), page 8).
- To find national parks and explore park maps, select **National Parks** ([Finding National Parks](#), page 8).
- To navigate to specific geographic coordinates, select **Coordinates** ([Finding a Location Using Coordinates](#), page 9).

Finding a Location Using the Search Bar

You can use the search bar to search for locations by entering a category, brand name, address, or city name.

- 1 Select **Where To?**.
- 2 Select **Search** in the search bar.
- 3 Enter all or part of the search term.
Suggested search terms appear below the search bar.
- 4 Select an option:
 - To search for a type of business, enter a category name (for example, "movie theaters").
 - To search for a business name, enter all or part of the name.
 - To search for an address near you, enter the house number and street name.
 - To search for an address in another city, enter the house number, street name, city, and state.
 - To search for a city, enter the city and state.
 - To search for coordinates, enter latitude and longitude coordinates.
- 5 Select an option:
 - To search using a suggested search term, select the term.
 - To search using the text you entered, select **Q**.
- 6 If necessary, select a location.


Finding an Address

NOTE: The order of the steps may change depending on the map data loaded on your device.

- 1 Select **Where To?**.
- 2 If necessary, select **Searching near:** to search near a different city or area.
- 3 Select **Address**.
- 4 Follow the on-screen instructions to enter address information.
- 5 Select the address.

Location Search Results

By default, the location search results appear in a list, with the nearest location at the top. You can scroll down to view more results.

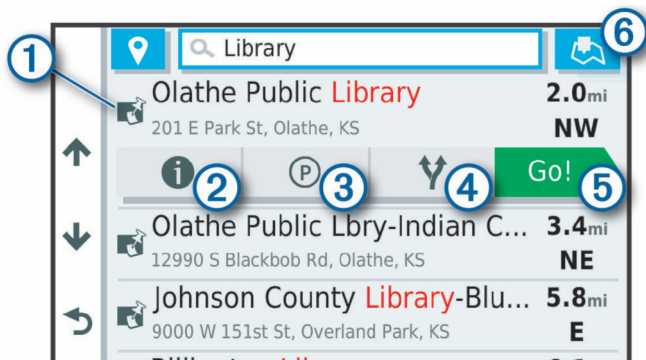

①	Select a location to view the option menu.
② ⓘ	Select to view detailed information about the selected location.
③ P	Select to find parking areas near the location.
④ Y	Select to view alternate routes to the locations.
⑤ Go!	Select to start navigating to the location using the recommended route.
⑥ 📍	Select to view the search results on the map.

Location Search Results on the Map

You can view the results of a location search on the map instead of in a list.

From the location search results, select **📍**. The nearest location appears at the center of the map, and basic information about the selected location appears at the bottom of the map.




①	Drag the map to view additional search results.
②	Additional search results. Select to view another location.
③	Selected location summary. Select to view detailed information about the selected location.
④ Go!	Select to start navigating to the location using the recommended route.
⑤ 📍	Select to view the search results in a list.

Changing the Search Area

By default, the device searches for locations near your current location. You can also search other areas, such as near your destination, near another city, or along your active route.

- 1 Select **Where To?**.
- 2 Select **📍** next to the current search area ①.

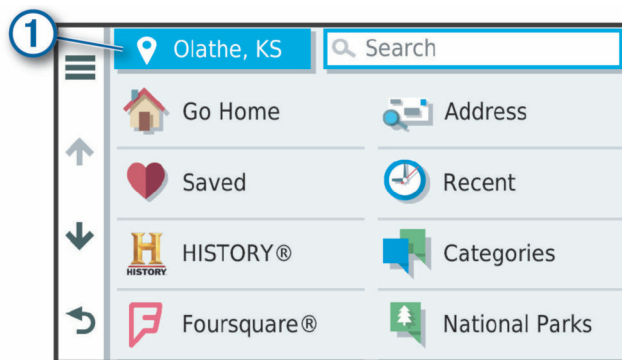

- 3 Select a search area.
- 4 If necessary, follow the on-screen instructions to select a specific location.

The selected search area appears next to **📍**. When you search for a location using any of the options in the Where To? menu, the device suggests locations near this area first.

Points of Interest

A point of interest is a place that you may find useful or interesting. Points of interest are organized by category and can include popular travel destinations such as gas stations, restaurants, hotels, and entertainment venues.

Finding a Location by Category

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.

3 If necessary, select a subcategory.

4 Select a location.

Searching Within a Category

After you have performed a search for a point of interest, certain categories may display a Quick Search list that shows the last four destinations you selected.

1 Select **Where To? > Categories**.

2 Select a category.

3 Select an option:

- Select a destination from the quick search list on the right side of the screen.
The quick search list provides a list of recently found locations in the selected category.
- Select a subcategory, if necessary, and select a destination.

Finding National Parks

Device models that include maps for North America or the United States also include detailed information for national parks in the United States. You can navigate to a national park or to a location within a national park.

1 Select **Where To? > National Parks**.

A list of national parks appears, with the nearest park at the top.

2 Select **Search**, and enter all or part of the park name to narrow the results (optional).

3 Select a national park.

A list of categories for locations of features and amenities within the park appears below the park name.

4 Select an option:

- To start navigating to the park, select **Go!**.
- To view more park information or explore the park features and amenities, select **i**.
- To quickly find a location within the park, select a category from the list below the park name, and select a location.

Exploring National Park Features and Amenities

You can explore detailed information about the features and amenities available inside a national park, and navigate to specific locations in the park. For example, you can find campgrounds, landmarks, visitor centers, and popular attractions.

1 From the location search results, select a national park, and select **i**.

2 Select **Explore this Park**.

A list of categories for park features and amenities appears.

3 Select a category.

4 Select a location, and select **Go!**.

Finding HISTORY® Points of Interest

Your device includes HISTORY points of interest, which allow you to find and learn about historically significant locations and attractions around the world, such as historic buildings, monuments, museums, and notable locations of historic events.

1 Select **Where To? > History®**.

2 Select a category.

3 Select a location.

4 Select **H** to view a photo and a short summary of the location's history.

Foursquare

Foursquare is a location-based social network. Your device includes pre-loaded Foursquare points of interest, which are indicated by the Foursquare logo in your location search results.

You can connect to your Foursquare account using the Garmin Drive app on your compatible smartphone. This allows you to view Foursquare location details, check in to a location, and search for points of interest in the online Foursquare database.

Connecting to Your Foursquare Account

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app ([Live Services, Traffic, and Smartphone Features, page 14](#)).

1 On your smartphone, open the Garmin Drive app.

2 Select **⚙ > Foursquare® > Login**.

3 Enter your Foursquare login information.

Searching Foursquare Points of Interest

You can search for Foursquare points of interest loaded on your device. While your device is connected to your Foursquare account using the Garmin Drive app, the search provides the most up-to-date results from the online Foursquare database and customized results from your Foursquare user account ([Connecting to Your Foursquare Account, page 8](#)).

Select **Where To? > Foursquare®**.

Viewing Foursquare Location Details

Before you can use this feature, your device must be connected to your Foursquare account using the Garmin Drive app ([Connecting to Your Foursquare Account, page 8](#)).

You can view detailed Foursquare location information, such as user ratings, restaurant pricing information, and hours of operation.

1 From the location search results, select a Foursquare point of interest.

2 Select **i**.

Checking in with Foursquare

Before you can use this feature, your device must be connected to your Foursquare account using the Garmin Drive app ([Connecting to Your Foursquare Account, page 8](#)).

1 Select **Where To? > Foursquare® > Check In**.

2 Select a point of interest.

3 Select **i > Check In**.

TripAdvisor

Your device includes TripAdvisor points of interest and ratings. TripAdvisor ratings appear automatically in the search results list for applicable points of interest. You can also search for nearby TripAdvisor points of interest and sort by distance or popularity.

Finding TripAdvisor Points of Interest

1 Select **Where To? > TripAdvisor**.

2 Select a category.

A list of nearby TripAdvisor points of interest for the category appears.

3 Select **Sort Results** to sort the search results by distance or popularity (optional).

Navigating to Points of Interest Within a Venue

NOTE: This feature may not be available in all areas or for all product models.

You can create a route to a point of interest (POI) within a larger venue, such as a store in a shopping mall or a specific terminal in an airport.

1 Select **Where To? > Search**.

2 Select an option:

- To search for the venue, enter the name or address of the venue, select **Q**, and go to step 3.
- To search for the POI, enter the name of the POI, select **Q**, and go to step 5.

3 Select the venue.

A list of categories appears below the venue, such as restaurants, car rentals, or terminals.

- 4 Select a category.
- 5 Select the POI, and select **Go!**.

The device creates a route to the parking area or venue entrance closest to the POI. When you arrive at the destination, a checkered flag indicates the recommended parking area. A labeled point indicates the location of the POI within the venue.

Exploring a Venue

NOTE: This feature may not be available in all areas or for all product models.

You can view a list of all points of interest located within each venue.

- 1 Select a venue.
- 2 Select  > **Explore this Venue**.

Search Tools

Search tools allow you to search for specific types of locations by responding to on-screen prompts.

Finding an Intersection

You can search for an intersection or junction between two streets, highways, or other roads.

- 1 Select **Where To? > Categories > Intersections**.
- 2 Follow the on-screen instructions to enter street information.
- 3 Select the intersection.

Finding a Location Using Coordinates

You can find a location using latitude and longitude coordinates. This can be helpful when geocaching.

- 1 Select **Where To? > Categories > Coordinates**.
- 2 If necessary, select , and change the coordinate format or datum.
- 3 Enter the latitude and longitude coordinates.
- 4 Select **View on Map**.

Parking

Your Garmin DriveSmart device includes detailed parking data, which can help you find nearby parking based on the likelihood of available parking spots, type of parking area, price, or accepted payment methods.

NOTE: Detailed parking data is not available in all areas or for all parking locations.

Finding Parking Near Your Current Location

- 1 Select **Where To? > Categories > Parking**.
- 2 Select **Filter Parking**, and select one or more categories to filter parking by availability, type, price, or payment methods (optional).

NOTE: Detailed parking data is not available in all areas or for all parking locations.

- 3 Select a parking location.
- 4 Select **Go!**.

Finding Parking Near a Specified Location

- 1 Search for a location.
- 2 From the location search results, select a location.
- 3 Select .

A list of parking areas near the selected location appears.

- 4 Select **Filter Parking**, and select one or more categories to filter parking by availability, type, price, or payment methods (optional).

NOTE: Detailed parking data is not available in all areas or for all parking locations.

- 5 Select a parking location.

- 6 Select **Go!**.

Understanding Parking Colors and Symbols

Parking locations that include detailed parking data are color-coded to show the likelihood of finding parking. Symbols indicate the type of parking available (street or lot), relative pricing information, and payment type.

You can view the legend for these colors and symbols on the device.

From the parking search results, select .

Viewing Recently Found Locations

Your device stores a history of the last 50 locations you have found.

Select **Where To? > Recent**.

Clearing the List of Recently Found Locations

Select **Where To? > Recent >  > Clear > Yes**.

Viewing Current Location Information

You can use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.

From the map, select the vehicle.

Finding Emergency Services and Fuel

You can use the Where Am I? page to find the nearest hospitals, police stations, and fuel stations.

- 1 From the map, select the vehicle.
- 2 Select **Hospitals, Police Stations, Fuel, or Roadside Assist..**

NOTE: Some service categories are not available in all areas.

A list of locations for the selected service appears, with the nearest locations at the top.

- 3 Select a location.
- 4 Select an option:
 - To navigate to the location, select **Go!**.
 - To view the phone number and other location details, select .

Getting Directions to Your Current Location

If you need to tell another person how to get to your current location, your device can give you a list of directions.

- 1 From the map, select the vehicle.
- 2 Select  > **Directions to Me**.
- 3 Select a starting location.
- 4 Select **Select**.

Adding a Shortcut

You can add shortcuts to the Where To? menu. A shortcut can point to a location, a category, or a search tool.

The Where To? menu can contain up to 36 shortcut icons.

- 1 Select **Where To? > Add Shortcut**.
- 2 Select an item.

Removing a Shortcut

- 1 Select **Where To? >  > Remove Shortcut(s)**.
- 2 Select a shortcut to remove.
- 3 Select the shortcut again to confirm.
- 4 Select **Done**.

Saving Locations

Saving a Location

- 1 Search for a location (*Finding a Location by Category*, page 7).
- 2 From the search results, select a location.
- 3 Select **i** > **Save**.
- 4 Enter a name, and select **Done**.

Saving Your Current Location

- 1 From the map, select the vehicle icon.
- 2 Select **Save**.
- 3 Enter a name, and select **Done**.
- 4 Select **OK**.

Editing a Saved Location

- 1 Select **Where To?** > **Saved**.
- 2 If necessary, select a category.
- 3 Select a location.
- 4 Select **i**.
- 5 Select **≡** > **Edit**.
- 6 Select an option:
 - Select **Name**.
 - Select **Phone Number**.
 - Select **Categories** to assign categories to the saved location.
 - Select **Change Map Symbol** to change the symbol used to mark the saved location on a map.
- 7 Edit the information.
- 8 Select **Done**.

Assigning Categories to a Saved Location

You can add custom categories to organize your saved locations.

NOTE: Categories appear in the saved locations menu after you have saved at least 12 locations.

- 1 Select **Where To?** > **Saved**.
- 2 Select a location.
- 3 Select **i**.
- 4 Select **≡** > **Edit** > **Categories**.
- 5 Enter one or more category names, separated by commas.
- 6 If necessary, select a suggested category.
- 7 Select **Done**.

Deleting a Saved Location

NOTE: Deleted locations cannot be recovered.

- 1 Select **Where To?** > **Saved**.
- 2 Select **≡** > **Delete Saved Places**.
- 3 Select the box next to the saved locations to delete, and select **Delete**.

- You can start navigating to your destination quickly using the recommended route, or you can select an alternate route (*Starting a Route*, page 10).
- If there are specific roads you need to use or avoid, you can customize the route (*Shaping Your Route*, page 11).
- You can add multiple destinations to a route (*Adding a Location to Your Route*, page 11).

Starting a Route

- 1 Select **Where To?**, and search for a location (*Finding and Saving Locations*, page 6).
- 2 Select a location.
- 3 Select an option:
 - To start navigating using the recommended route, select **Go!**.
 - To choose an alternate route, select **Y**, and select a route. Alternate routes appear to the right of the map.
 - To edit the course of the route, select **Y** > **Edit Route**, and add shaping points to the route (*Shaping Your Route*, page 11).

The device calculates a route to the location and guides you using voice prompts and information on the map (*Your Route on the Map*, page 10). A preview of the major roads in your route appears at the edge of the map for several seconds.

If you need to stop at additional destinations, you can add the locations to your route (*Adding a Location to Your Route*, page 11).

Starting a Route by Using the Map

You can start route by selecting a location from the map.

- 1 Select **View Map**.
- 2 Drag and zoom the map to display the area to search.
- 3 If necessary, select **Q** to filter the displayed points of interest by category.

Location markers (**Q** or a blue dot) appear on the map.
- 4 Select an option:
 - Select a location marker.
 - Select a point, such as a street, intersection, or address location.
- 5 Select **Go!**.

Going Home

The first time you start a route home, the device prompts you to enter your home location.

- 1 Select **Where To?** > **Go Home**.
- 2 If necessary, enter your home location.

Editing Your Home Location

- 1 Select **Where To?** > **≡** > **Set Home Location**.
- 2 Enter your home location.

Your Route on the Map


As you travel, the device guides you to your destination using voice prompts and information on the map. Instructions for your next turn or exit, or other actions appear across the top of the map.

Following a Route

Routes

A route is a path from your current location to one or more destinations.


- The device calculates a recommended route to your destination based on the preferences you set, including the route calculation mode (*Changing the Route Calculation Mode*, page 12) and avoidances (*Avoiding Delays, Tolls, and Areas*, page 12).

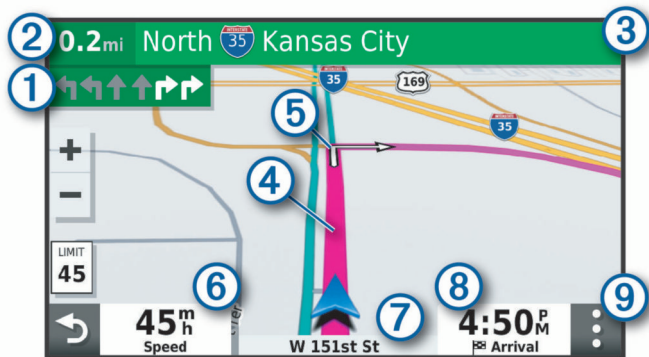

①	Next action in the route. Indicates the next turn, exit, or other action and the lane in which you should travel, if available.
②	Distance to the next action.
③	Name of the street or exit associated with the next action.
④	Route highlighted on the map.
⑤	Next action in the route. Arrows on the map indicate the location of upcoming actions.
⑥	Vehicle speed.
⑦	Name of the road on which you are traveling.
⑧	Estimated arrival time. TIP: You can touch this field to change the information it shows (Changing the Map Data Field, page 14).
⑨	Map tools. Provides tools to show you more information about your route and surroundings.

Active Lane Guidance

As you approach some turns, exits, or interchanges in your route, a detailed simulation of the road appears beside the map, if available. A colored line ① indicates the proper lane for the turn.

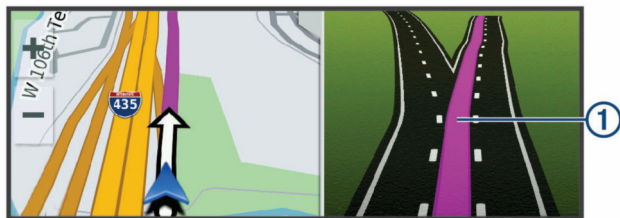

Viewing Turns and Directions

While navigating a route, you can view upcoming turns, lane changes, or other directions for your route.

- From the map, select an option:
 - To view upcoming turns and directions as you navigate, select **Turns**.
The map tool displays the next four turns or directions beside the map. The list updates automatically as you navigate the route.
 - To view the complete list of turns and directions for the entire route, select the text bar at the top of the map.
- Select a turn or direction (optional).
Detailed information appears. An image of the junction may appear for junctions on major roadways, if available.

Viewing the Entire Route on the Map

- While navigating a route, select anywhere on the map.
- Select **Map**.

Arriving at Your Destination

When you approach your destination, the device provides information to help you complete your route.

- P** indicates the location of your destination on the map, and a voice prompt announces you are approaching your destination.
- When you approach some destinations, the device automatically prompts you to search for parking. You can select **Yes** to find nearby parking areas ([Parking Near Your Destination, page 11](#)).
- When you stop at your destination, the device automatically ends the route. If the device does not detect your arrival automatically, you can select **Stop** to end your route.

Parking Near Your Destination

Your device can help you find a parking spot near your destination. When you approach some destinations, the device automatically prompts you to search for parking.

- Select an option:
 - When the device prompts you, select **Yes** to search for nearby parking.
 - If the device does not prompt you, select **Where To? > Categories > Parking**, and select **My Destination**.
- Select **Filter Parking**, and select one or more categories to filter parking by availability, type, price, or payment methods (optional).
NOTE: Detailed parking data is not available in all areas or for all parking locations.
- Select a parking location, and select **Go! > Add As Next Stop**.

The device guides you to the parking area.

Changing Your Active Route

Adding a Location to Your Route

Before you can add a location to your route, you must be navigating a route ([Starting a Route, page 10](#)).

You can add locations to the middle or end of your route. For example, you can add a fuel station as the next destination in your route.

TIP: To create complex routes with multiple destinations or scheduled stops, you can use the trip planner to plan, schedule, and save a trip ([Planning a Trip, page 17](#)).

- From the map, select **Where To?**.
- Search for a location ([Finding and Saving Locations, page 6](#)).
- Select a location.
- Select **Go!**.
- Select an option:
 - To add the location as the next destination in your route, select **Add As Next Stop**.
 - To add the location to the end of your route, select **Add As Last Stop**.
 - To add the location and edit the order of destinations in your route, select **Add to Active Route**.

The device re-calculates the route to include the added location and guides you to the destinations in order.

Shaping Your Route

Before you can shape your route, you must start a route ([Starting a Route, page 10](#)).

You can manually shape your route to change its course. This allows you to direct the route to use a certain road or go through a certain area without adding a destination to the route.

- Touch anywhere on the map.

2 Select .

The device enters route shaping mode.

3 Select a location on the map.

TIP: You can select  to zoom in on the map and select a more precise location.

The device recalculates the route to travel through the selected location.

4 If necessary, select an option:

- To add more shaping points to the route, select additional locations on the map.
- To remove a shaping point, select .

5 When you are finished shaping the route, select **Go!**.

Taking a Detour

You can take a detour for a specified distance along your route or detour around specific roads. This is useful if you encounter construction zones, closed roads, or poor road conditions.

1 From the map, select > **Edit Route**.

2 Select an option:

- To detour your route for a specific distance, select **Detour by Distance**.
- To detour around a specific road on the route, select **Detour by Road**.

Changing the Route Calculation Mode

1 Select **Settings > Navigation > Calculation Mode**.

2 Select an option:

- Select **Faster Time** to calculate routes that are faster to drive but can be longer in distance.
- Select **Off Road** to calculate point-to-point routes (without roads).
- Select **Shorter Distance** to calculate routes that are shorter in distance but can take more time to drive.

Stopping the Route

From the map, select  > **Stop**.

Using Suggested Routes

Before you can use this feature, you must save at least one location and enable the travel history feature (*Device and Privacy Settings*, page 19).

Using the myTrends™ feature, your device predicts your destination based on your travel history, the day of the week, and the time of day. After you have driven to a saved location several times, the location may appear in the navigation bar on the map, along with the estimated time of travel, and traffic information.

Select the navigation bar to view a suggested route to the location.

Avoiding Delays, Tolls, and Areas

Avoiding Traffic Delays on Your Route

Before you can avoid traffic delays, you must be receiving traffic information (*Receiving Traffic Data Using Your Smartphone*, page 16).

By default, the device optimizes your route to avoid traffic delays automatically. If you have disabled this option in the traffic settings (*Traffic Settings*, page 19), you can view and avoid traffic delays manually.

1 While navigating a route, select > **Traffic**.

2 Select **Alternate Route**, if available.

3 Select **Go!**.

Avoiding Toll Roads

Your device can avoid routing you through areas that require tolls, such as toll roads, toll bridges, or congestion areas. The device may still include a toll area in your route if no other reasonable routes are available.

1 Select **Settings > Navigation**.

2 Select an option:

NOTE: The menu changes based on your area and the map data on your device.

- Select **Toll Roads**.
- Select **Tolls and Fees > Toll Roads**.

3 Select an option:

- To be asked each time before routing through a toll area, select **Always Ask**.
- To always avoid tolls, select **Avoid**.
- To always allow tolls, select **Allow**.

4 Select **Save**.

Avoiding Toll Stickers

If the map data on your device contains detailed toll sticker information, you can avoid or allow roads that require toll stickers for each country.

NOTE: This feature is not available in all areas.

1 Select **Settings > Navigation > Tolls and Fees > Toll Stickers**.

2 Select a country.

3 Select an option:

- To be asked each time before routing through an area that requires toll stickers, select **Always Ask**.
- To always avoid roads that require toll stickers, select **Avoid**.
- To always allow roads that require toll stickers, select **Allow**.

4 Select **Save**.

Avoiding Road Features

1 Select **Settings > Navigation > Avoidances**.

2 Select the road features to avoid on your routes, and select **OK**.

Avoiding Environmental Zones

Your device can avoid areas with environmental or emissions restrictions that may apply to your vehicle.

1 Select **Settings > Navigation > Environmental Zones**.

2 Select an option:

- To be asked each time before routing through an environmental zone, select **Always Ask**.
- To always avoid environmental zones, select **Avoid**.
- To always allow environmental zones, select **Allow**.

3 Select **Save**.

Custom Avoidances

Custom avoidances allow you select specific areas or sections of road to avoid. When the device calculates a route, it avoids these areas and roads unless no other reasonable route is available.

Avoiding a Road

1 Select **Settings > Navigation > Custom Avoidances**.

2 If necessary, select **Add Avoidance**.

3 Select **Add Avoid Road**.

4 Select the starting point of the section of road to avoid, and select **Next**.

5 Select the ending point of the road section, and select **Next**.

6 Select **Done**.

Avoiding an Area

1 Select **Settings > Navigation > Custom Avoidances**.

2 If necessary, select **Add Avoidance**.

3 Select **Add Avoid Area**.

4 Select the upper-left corner of the area to avoid, and select **Next**.

5 Select the lower-right corner of the area to avoid, and select **Next**.

The selected area is shaded on the map.

6 Select **Done**.

Disabling a Custom Avoidance

You can disable a custom avoidance without deleting it.

1 Select **Settings > Navigation > Custom Avoidances**.

2 Select an avoidance.

3 Select  > **Disable**.

Deleting Custom Avoidances

1 Select **Settings > Navigation > Custom Avoidances**.

2 Select an option:

- To delete all custom avoidances, select .
- To delete one custom avoidance, select the avoidance, and select  > **Delete**.

Navigating Off Road

If you are not following roadways as you navigate, you can use Off Road mode.

1 Select **Settings > Navigation**.

2 Select **Calculation Mode > Off Road > Save**.

The next route will be calculated as a straight line to the location.

Using the Map

You can use the map to navigate a route ([Your Route on the Map, page 10](#)) or to view a map of your surroundings when no route is active.

1 Select **View Map**.

2 Touch anywhere on the map.

3 Select an option:

- Drag the map to pan left, right, up, or down.
- To zoom in or out, select  or .
- To switch between North Up and 3-D views, select .
- To filter the displayed points of interest by category, select .
- To start a route, select a location on the map, and select **Go!** ([Starting a Route by Using the Map, page 10](#)).

Map Tools

Map tools provide quick access to information and device functions while you view the map. When you activate a map tool, it appears in a panel at the edge of the map.

Stop: Stops navigation of the active route.

Edit Route: Allows you to take a detour or skip locations in your route ([Changing Your Active Route, page 11](#)).

Mute: Mutes the device audio.

NOTE: Only the navigation features are muted. The device still plays phone calls, media, and voice assistant responses at their normal volume.

Cities Ahead: Shows upcoming cities and services along your active route or along a highway ([Cities Ahead, page 14](#)).

Up Ahead: Shows upcoming locations along the route or the road on which you are traveling ([Up Ahead, page 13](#)).

Traffic: Displays traffic conditions along your route or in your area ([Viewing Upcoming Traffic, page 14](#)). This feature is not available in all areas or for all device models.

Trip Data: Displays customizable trip data, such as speed or mileage ([Viewing Trip Data from the Map, page 14](#)).

Turns: Displays a list of upcoming turns in your route ([Viewing Turns and Directions, page 11](#)).

Phone: Displays a list of recent phone calls from your connected phone, and displays in-call options while a phone call is active ([Using In-Call Options, page 16](#)).

Weather: Displays weather conditions for your area.

photoLive: Displays live traffic cameras from your photoLive subscription ([photoLive Traffic Cameras, page 18](#)).

Report Camera: Allows you to report a speed or red light camera. This tool is available only when you have speed or red light camera data on your device and you have an active connection to the Garmin Drive app ([Live Services, Traffic, and Smartphone Features, page 14](#)).

Break Planner: Displays break reminders and suggested stops.

Media Player: Displays media controls and media information.

Viewing a Map Tool

1 From the map, select .

2 Select a map tool.

The map tool appears in a panel at the edge of the map.

3 When you are done using the map tool, select .

Up Ahead

The Up Ahead tool provides information about upcoming locations along your route or the road on which you are traveling. You can view upcoming points of interest by category, such as restaurants, fuel stations, or rest areas.

You can customize three categories to show in the Up Ahead tool.

Viewing Upcoming Locations

1 From the map, select  > **Up Ahead**.

While you are traveling, the map tool shows the next location along your road or route in each of the three categories. While you are not traveling, the map tool shows the three category names.

2 Select an option:

- If the map tool shows categories, select a category to view a list of nearby locations in that category.
- If the map tool shows upcoming locations, select a location to view location details or start a route to the location.

Customizing the Up Ahead Categories

You can change the location categories that appear in the Up Ahead tool.

1 From the map, select  > **Up Ahead**.

2 Select a category.

3 Select .

4 Select an option:

- To move a category up or down in the list, select and drag the arrow next to the category name.
- To change a category, select the category.
- To create a custom category, select a category, select **Custom Search**, and enter the name of a business or category.

5 Select **Save**.

Cities Ahead

While you are traveling on a highway or navigating a route that includes a highway, the Cities Ahead tool provides information about upcoming cities along the highway. For each city, the map tool shows the distance to the highway exit and the services available, similar to the information on highway road signs.

Viewing Upcoming Cities and Exit Services

- 1 From the map, select **:**.

While you are traveling along a highway or an active route, the map tool shows information about upcoming cities and exits.

- 2 Select a city.

The device shows a list of points of interest located at the selected city exit, such as fuel stations, lodging, or restaurants.

- 3 Select a location, and select **Go!** to start navigating.

Trip Information

Viewing Trip Data from the Map


Before you can view trip data on the map, you must add the tool to the map tools menu.

From the map, select **:** > **Trip Data**.

Viewing Customized Trip Information on the Map

You can use the trip data map tool to show customized trip information on the map.

- 1 From the map, select **:** > **Trip Data**.
- 2 Select an option:

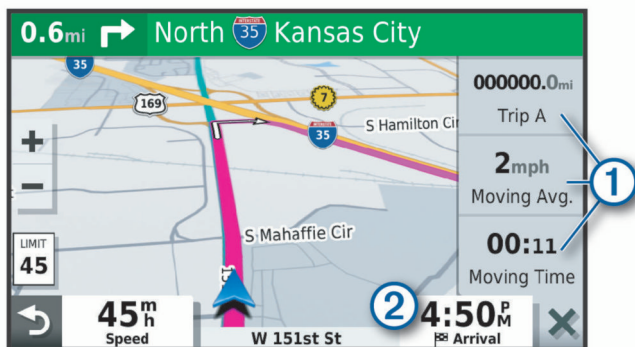

- Select a data field in the trip data tool ①, and select the information to show in the field.
- Select the customizable map data field ②, and select the information to show in the field.

Viewing the Trip Information Page

The trip information page displays your speed and provides statistics about your trip.

NOTE: If you make frequent stops, leave the device turned on, so it can accurately measure elapsed time during the trip.

From the map, select **Speed**.

Viewing the Trip Log

Your device keeps a trip log, which is a record of the path you have traveled.

- 1 Select **Settings > Map & Vehicle > Map Layers**.
- 2 Select the **Trip Log** check box.

Resetting Trip Information

- 1 From the map, select **Speed**.
- 2 Select **≡ > Reset Field(s)**.
- 3 Select an option:

- When not navigating a route, select **Select All** to reset every data field except the speedometer, on the first page.
- Select **Reset Trip Data** to reset the information on the trip computer.
- Select **Reset Max. Speed** to reset the maximum speed.
- Select **Reset Trip B** to reset the odometer.

Viewing Upcoming Traffic

Before you can use this feature, your device must be receiving traffic data ([Traffic](#), page 16).

You can view traffic incidents coming up along your route or along the road on which you are traveling.

- 1 While navigating a route, select **:** > **Traffic**.

The nearest upcoming traffic incident appears in a panel on the right side of the map.

- 2 Select the traffic incident to view additional details.

Viewing Traffic on the Map

The traffic map shows color-coded traffic flow and delays on nearby roads.

- 1 From the main menu, select **Apps > Traffic**.
- 2 If necessary, select **≡ > Legend** to view the legend for the traffic map.

Searching for Traffic Incidents

- 1 From the main menu, select **Apps > Traffic**.
- 2 Select **≡ > Incidents**.
- 3 Select an item in the list.
- 4 If there is more than one incident, use the arrows to view additional incidents.

Customizing the Map

Customizing the Map Layers

You can customize which data appear on the map, such as icons for points of interest and road conditions.

- 1 Select **Settings > Map & Vehicle > Map Layers**.
- 2 Select the check box next to each layer you want to show on the map.

Changing the Map Data Field

- 1 From the map, select a data field.
NOTE: You cannot customize Speed.
- 2 Select a type of data to display.

Changing the Map Perspective

- 1 Select **Settings > Map & Vehicle > Driving Map View**.
- 2 Select an option:
 - Select **Track Up** to display the map in two dimensions (2-D), with your direction of travel at the top.
 - Select **North Up** to display the map in 2-D with north at the top.
 - Select **3-D** to display the map in three dimensions.

Live Services, Traffic, and Smartphone Features

The Garmin Drive app allows your device to receive smart notifications and live information, such as live traffic data and weather information.

Garmin voice-activated navigation: Allows you to use voice commands to search for locations and addresses, start routes with turn-by-turn directions, place hands-free phone calls, and more ([Voice-Activated Features](#), page 4).

Amazon Alexa skills and features: Provides access to many Amazon Alexa features, such as playing music, checking the weather, or listening to the news ([Voice-Activated Features](#), page 4).

Live traffic data: Sends real-time traffic data to your device, such as traffic incidents and delays, construction zones, and road closings ([Traffic](#), page 16).

Weather information: Sends real-time weather forecasts, road conditions, and weather radar to your device ([Viewing the Weather Forecast](#), page 17).

Smart Notifications: Displays phone notifications and messages on your device. This feature is not available for all languages.

Hands-Free calling: Allows you to place and receive phone calls using your device, and allows you to use the device as a hands-free speaker phone. If the selected language supports the voice command feature, you can place calls using voice commands.

Send locations to device: Allows you to send locations from your smartphone to your navigation device.

Foursquare check in: Allows you to check in to Foursquare locations using your navigation device ([Checking in with Foursquare](#), page 8).

Showing or Hiding App Notifications (Android™)

You can use the Garmin Drive app to customize which types of smartphone notifications appear on your Garmin DriveSmart device.

- 1 On your phone, open the Garmin Drive app.
- 2 Select **⚙ > Smart Notifications**.
A list of your smartphone apps appears.
- 3 Select the toggle switch next to an app to enable or disable notifications for the app.

Showing or Hiding Notification Categories (iPhone®)

You can filter the notifications shown on your device by showing or hiding categories.

- 1 Select **Settings > Wireless Networks**.
- 2 Select **Smartphone services**.
TIP:  and  appear colored when the services are active.
- 3 Select **Smart Notifications**.
- 4 Select the check box next to each notification to show.

Smart Notifications

While your device is connected to the Garmin Drive app, you can view notifications from your smartphone on your Garmin DriveSmart device, such as text messages, incoming calls, and calendar appointments.

NOTE: You may need to wait a few minutes to receive notifications on your navigation device after it connects to the Garmin Drive app.  appears colored in the Bluetooth settings when smart notifications are connected and active ([Wireless Network Settings](#), page 19).

Receiving Notifications

WARNING

Do not read or reply to notifications while driving.

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app ([Live Services, Traffic, and Smartphone Features](#), page 14).

From most pages, a popup appears when the device receives a notification from your smartphone. If the device is moving, you must verify you are a passenger and not the driver before you can view notifications.

NOTE: If you are viewing the map, notifications appear in a map tool.

- To ignore a notification, select **OK**.
The popup closes, but the notification remains active on your phone.
- To view a notification, select **View**.
- To listen to the notification, select **View > Play**.
The device reads the notification using text-to-speech technology. This feature is not available for all languages.
- To perform additional actions, such as dismissing the notification from your phone, select **View**, and select an option.

NOTE: Additional actions are available for only some notification types and must be supported by the app generating the notification.

Receiving Notifications while Viewing the Map

WARNING

Do not read or reply to notifications while driving.

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app ([Live Services, Traffic, and Smartphone Features](#), page 14).

When you are viewing the map, new notifications appear in a map tool at the edge of the screen. If the device is moving, you must verify you are a passenger and not the driver before you can view notifications.

- To ignore a notification, select **✕**, or wait for popup to expire.
The popup closes, but the notification remains active on your phone.
- To view a notification, select the notification text.
- To listen to the notification, select **Play Message**.
The device reads the notification using text-to-speech technology. This feature is not available for all languages.
- To listen to the notification using a voice command, say **Play Message**.
NOTE: This option is available only when the selected language supports the voice command feature and  appears in the map tool.
- To perform additional actions, such as dismissing the notification from your phone, select **View**, and select an option.

NOTE: Additional actions are available for only some notification types and must be supported by the app generating the notification.

Viewing the List of Notifications

You can view a list of all active notifications.

- 1 Select **Apps > Smart Notifications**.
The list of notifications appears. Unread notifications appear black, and previously read notifications appear gray.
- 2 Select an option:
 - To view a notification, select the notification description.
 - To listen to a notification, select **▶**.
The device reads the notification using text-to-speech technology. This feature is not available for all languages.

Hands-Free Calling

NOTE: While most phones are supported and can be used, it cannot be guaranteed that a particular phone can be used. All features may not be available for your phone.

Using Bluetooth wireless technology, your device can connect to your mobile phone to become a hands-free device ([Live Services, Traffic, and Smartphone Features, page 14](#)). While connected, you can place or receive calls using your device.

Placing a Call

Dialing a Number

- 1 Select **Apps > Phone > Dial**.
- 2 Enter the number.
- 3 Select **Dial**.

Calling a Contact in Your Phone Book

Your phone book is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the phone book to be available. Some phones do not support this feature.

- 1 Select **Apps > Phone > Phone Book**.
- 2 Select a contact.
- 3 Select **Call**.

Calling a Location

- 1 Select **Apps > Phone > Browse Categories**.
- 2 Select a point of interest.
- 3 Select **Call**.

Receiving a Call

When you receive a call, select **Answer** or **Ignore**.

Using the Call History

Your call history is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the call history to be available. Some phones do not support this feature.

- 1 Select **Apps > Phone > Call History**.
- 2 Select a category.

A list of calls appears, with the most recent calls at the top.

- 3 Select a call.

Using In-Call Options

While on a call, you can select in-call options from the map.

- To transfer audio to your phone, select .

TIP: You can use this feature if you want to turn off your device and remain on the call, or if you need privacy.

- To use the dial pad, select .

TIP: You can use this feature to use automated systems, such as voice mail.

- To mute the microphone, select .
- To hang up, select .

Saving a Home Phone Number

TIP: After you save a home number, you can edit the home number by editing "Home" in your list of saved locations ([Editing a Saved Location, page 10](#)).

- 1 Select **Apps > Phone >  > Set Home Number**.
- 2 Enter your phone number.
- 3 Select **Done**.

Calling Home

Before you can call home, you must enter a phone number for your home location.

Select **Apps > Phone > Call Home**.

Disconnecting a Bluetooth Device

You can temporarily disconnect a Bluetooth device without deleting it from the paired devices list. The Bluetooth device can connect to your Garmin DriveSmart device automatically in the future.

- 1 Select **Settings > Wireless Networks**.
- 2 Select the device to disconnect.
- 3 Clear the check box next to the name of your paired device.

Deleting a Paired Phone

You can delete a paired phone to prevent it from automatically connecting to your device in the future.

- 1 Select **Settings > Wireless Networks**.
- 2 Select the phone, and select **Unpair device**.

Traffic

NOTICE

Garmin is not responsible for the accuracy or timeliness of the traffic information.

Your device can provide information about traffic on the road ahead or on your route. You can set your device to avoid traffic when calculating routes, and to find a new route to your destination if a large traffic delay occurs on your active route ([Traffic Settings, page 19](#)). The traffic map allows you to browse the map for traffic delays in your area.

To provide traffic information, your device must be receiving traffic data.

- Product models ending with MT can receive traffic data from an over-the-air broadcast signal using the built-in traffic receiver and the included vehicle power cable.
- All product models can receive subscription-free traffic data using the Garmin Drive app ([Receiving Traffic Data Using Your Smartphone, page 16](#)).

Traffic data is not available in all areas. For information about traffic coverage areas, go to garmin.com/traffic.

Receiving Traffic Data Using Your Smartphone

Your device can receive subscription-free traffic data while connected to a smartphone running the Garmin Drive app.

- 1 Connect your device to the Garmin Drive app ([Live Services, Traffic, and Smartphone Features, page 14](#)).
- 2 On your Garmin DriveSmart device, select **Settings > Traffic**, and verify the **Traffic** check box is selected.

Enabling Traffic

You can enable or disable traffic data.

- 1 Select **Settings > Traffic**.
- 2 Select the **Traffic** check box.

Viewing Traffic on the Map

The traffic map shows color-coded traffic flow and delays on nearby roads.

- 1 From the main menu, select **Apps > Traffic**.
- 2 If necessary, select  > **Legend** to view the legend for the traffic map.

Searching for Traffic Incidents

- 1 From the main menu, select **Apps > Traffic**.
- 2 Select  > **Incidents**.
- 3 Select an item in the list.

- 4 If there is more than one incident, use the arrows to view additional incidents.

Using the Apps

Viewing the Owner's Manual on Your Device

You can view the complete owner's manual on the device screen in many languages.

- 1 Select **Apps > Owner's Manual**.

The owner's manual appears in the same language as the software text (*Language and Keyboard Settings*, page 19).

- 2 Select **Q** to search the owner's manual (optional).

Viewing the Weather Forecast

Before you can use this feature, your device must be receiving weather data. You can connect your device to the Garmin Drive app to receive weather data (*Live Services, Traffic, and Smartphone Features*, page 14).

- 1 Select **Apps > Weather**.

The device shows the current weather conditions and a forecast for the next several days.

- 2 Select a day.

The detailed forecast for that day appears.

Viewing Weather Near a Different City

- 1 Select **Apps > Weather > Current Location**.

- 2 Select an option:

- To view weather for a favorite city, select a city in the list.
- To add a favorite city, select **Add City**, and enter a city name.

Viewing the Weather Radar

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app (*Live Services, Traffic, and Smartphone Features*, page 14).

- 1 Select **Apps > Weather Radar**.

- 2 Select **▶** to animate the radar map.

Viewing Weather Alerts

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app (*Live Services, Traffic, and Smartphone Features*, page 14).

NOTE: This feature is not available in all areas.

While you are traveling with your device, weather alerts may appear on the map. You can also view a map of weather alerts near your current location or near a selected city.

- 1 Select **Apps > Weather**.

- 2 If necessary, select a city.

- 3 Select **☰ > Weather Alerts**.

Checking Road Conditions

Before you can use this feature, your device must be connected to a supported phone running the Garmin Drive app (*Live Services, Traffic, and Smartphone Features*, page 14).

You can view weather-related road conditions for the roads in your area, on your route, or in another city.

- 1 Select **Apps > Weather**.

- 2 If necessary, select a city.

- 3 Select **☰ > Road Conditions**.

Trip Planner

You can use the trip planner to create and save a trip, which you can navigate later. This can be useful for planning a delivery route, a vacation, or a road trip. You can edit a saved trip to

further customize it, including reordering locations, optimizing the order of stops, adding suggested attractions, and adding shaping points.

You can also use the trip planner to edit and save your active route.

Planning a Trip

A trip can include many destinations, and it must include at least a starting location and one destination. The starting location is the location from which you plan to start your trip. If you start navigating the trip from a different location, the device gives you the option to route to your starting location first. For a round trip, the starting location and final destination can be the same.

- 1 Select **Apps > Trip Planner > New Trip**.

- 2 Select **Select Start Location**.

- 3 Choose a location for your starting point, and select **Select**.

- 4 Select **Select Destination**.

- 5 Choose a location for a destination, and select **Select**.

- 6 Select **Add Location** to add more locations (optional).

- 7 After you have added all the necessary locations, select **Next > Save**.

- 8 Enter a name, and select **Done**.

Editing and Reordering Locations in a Trip

- 1 Select **Apps > Trip Planner > Saved Trips**.

- 2 Select a saved trip.

- 3 Select a location.

- 4 Select an option:

- To move the location up or down, select **↕**, and drag the location to a new position in the trip.
- To add a new location after the selected location, select **⊕**.
- To remove the location, select **✖**.

Optimizing the Order of Destinations in a Trip

The device can automatically optimize the order of destinations in your trip to create a shorter, more efficient route. The starting location and final destination are not changed when you optimize the order.

While editing a trip, select **☰ > Optimize Order**.

Discovering Attractions Along Your Trip

The device can suggest interesting or popular attractions to add to your trip.

- 1 While editing a trip, select **☰ > Suggest Attractions**.

- 2 Select an attraction to view more information.

- 3 Select **Select** to add the attraction to your trip.

Changing Routing Options for a Trip

You can customize how the device calculates the route when you start your trip.

- 1 Select **Apps > Trip Planner > Saved Trips**.

- 2 Select a saved trip.

- 3 Select **☰**.

- 4 Select an option:

- To add shaping points to your trip, select **Shape Route**, and follow the on-screen instructions (*Shaping Your Route*, page 11).
- To change the calculation mode for the trip, select **Route Preference** (*Changing the Route Calculation Mode*, page 12).

Navigating to a Saved Trip

- 1 Select **Apps > Trip Planner > Saved Trips**.

- 2 Select a saved trip.

- 3 Select **Go!**.
- 4 Select the first location to navigate to, and select **Start**.
The device calculates a route from your current location to the selected location, and then it guides you to the remaining trip destinations in order.

Editing and Saving Your Active Route

If a route is active, you can use the trip planner to edit and save your route as a trip.

- 1 Select **Apps > Trip Planner > Saved Trips > My Active Route**.
- 2 Edit your route using any of the trip planner features.
The route recalculates each time you make a change.
- 3 Select **Save** to save your route as a trip, which you can navigate again later (optional).

photoLive Traffic Cameras

Before you can use this feature, your device must be connected to the Garmin Drive app (*Live Services, Traffic, and Smartphone Features*, page 14).

photoLive traffic cameras provide live images of traffic conditions on major roadways and intersections.

The photoLive service is not available in all areas.

Viewing and Saving photoLive Traffic Cameras

You can view live images from nearby traffic cameras. You can also save traffic cameras for areas you travel frequently.

- 1 Select **Apps > photoLive**.
- 2 Select **Touch to Add**.
- 3 Select a road.
- 4 Select a traffic camera location.
A preview of the live image from the camera appears next to a map of the camera's location. You can select the image preview to view the full-sized image.
- 5 Select **Save** to save the camera (optional).
A thumbnail image preview of the camera is added to the main screen of the photoLive app.

Viewing photoLive Traffic Cameras on the Map

The photoLive map tool shows traffic cameras from the road ahead of you.

- 1 From the map, select **: > photoLive**.
The device shows the live image from the nearest traffic camera on the road ahead, along with the distance to the camera. When you pass the camera, the device loads the live image of the next camera on the road.
- 2 If no cameras are found for the road, select **Find Cameras** to view or save nearby traffic cameras (optional).

Saving a Traffic Camera

- 1 Select **Apps > photoLive**.
- 2 Select **Touch to Add**.
- 3 Select a road.
- 4 Select an intersection.
- 5 Select **Save**.

Viewing Previous Routes and Destinations

Before you can use this feature, you must enable the travel history feature (*Device and Privacy Settings*, page 19).

You can view your previous routes and places you have stopped on the map.

Select **Apps > Where I've Been**.

Settings

Map and Vehicle Settings

Select **Settings > Map & Vehicle**.

Vehicle: Sets the vehicle icon that represents your position on the map.

Driving Map View: Sets the perspective on the map.

Map Detail: Sets the level of detail on the map. More detail may cause the map to draw slower.

Map Theme: Changes the color of the map data.

Map Layers: Sets the data that appears on the map page (*Customizing the Map Layers*, page 14).

Auto Zoom: Automatically selects the zoom level for optimal use of your map. When disabled, you must zoom in or out manually.

myMaps: Sets which installed maps the device uses.

Enabling Maps

You can enable map products installed on your device.

TIP: To purchase additional map products, go to <http://buy.garmin.com>.

- 1 Select **Settings > Map & Vehicle > myMaps**.
- 2 Select a map.

Navigation Settings

Select **Settings > Navigation**.

Route Preview: Shows a preview of the major roads in your route when you start navigation.

Calculation Mode: Sets the route calculation method.

Avoidances: Sets road features to avoid on a route.

Custom Avoidances: Allows you to avoid specific roads or areas.

Toll Roads: Sets preferences for avoiding toll roads.

Tolls and Fees: Sets preferences for avoiding toll roads and toll stickers.

NOTE: This feature is not available in all areas.

Environmental Zones: Sets the avoidance preferences for areas with environmental or emissions restrictions that may apply to your vehicle.

Restricted Mode: Disables all functions that require significant operator attention.

GPS Simulator: Stops the device from receiving a GPS signal, and saves battery power.

Calculation Mode Settings

Select **Settings > Navigation > Calculation Mode**.

The route calculation is based on road speeds and vehicle acceleration data for a given route.

Faster Time: Calculates routes that are faster to drive but can be longer in distance.

Shorter Distance: Calculates routes that are shorter in distance but can take more time to drive.

Off Road: Calculates a direct line from your location to your destination.

Setting a Simulated Location

If you are indoors or not receiving satellite signals, you can use the GPS simulator to plan routes from a simulated location.

- 1 Select **Settings > Navigation > GPS Simulator**.
- 2 From the main menu, select **View Map**.
- 3 Tap the map twice to select an area.

The address of the location appears at the bottom of the screen.

4 Select the location description.

5 Select **Set Location**.

Wireless Network Settings

The wireless network settings allow you to manage Wi-Fi® networks, paired Bluetooth devices, and Bluetooth features.

Select **Settings > Wireless Networks**.

Bluetooth: Enables Bluetooth wireless technology.

Paired Device Name: The names of paired Bluetooth devices appear in the menu. You can select a device name to change Bluetooth feature settings for that device.

Search for Devices: Searches for nearby Bluetooth devices.

Friendly Name: Allows you to enter a friendly name that identifies your device on other devices with Bluetooth wireless technology.

Wi-Fi: Enables the Wi-Fi radio.

Saved Networks: Allows you to edit or remove saved networks.

Search for Networks: Searches for nearby Wi-Fi networks (*Connecting to a Wi-Fi Network*, page 20).

Driver Assistance Settings

Select **Settings > Driver Assistance**.

Driver Alerts: Allows you to enable or disable alerts for upcoming zones or road conditions (*Driver Awareness Features and Alerts*, page 6).

Speeding Alert: Alerts you when you are exceeding the speed limit.

Break Planning: Reminds you to take a break and shows upcoming services after you drive for an extended time. You can enable or disable break reminders and upcoming service suggestions.

Proximity Alerts: Alerts you when you approach speed cameras or red light cameras.

Proximity Alerts Settings

NOTE: You must have custom points of interest (POIs) loaded for proximity points alerts to display.

NOTE: This feature is not available in all areas.

Select **Settings > Driver Assistance > Proximity Alerts**.

Audio: Sets the style of alert that plays when you approach proximity points.

Alerts: Sets the type of proximity points for which alerts are played.

Backup Camera Settings

The backup camera settings allow you to manage paired Garmin backup cameras and camera settings. This menu appears on your navigation device only when the device is connected to a wireless camera receiver cable. See the owner's manual for your backup camera for detailed information about pairing cameras and camera settings. Go to garmin.com/backupcamera to purchase a Garmin backup camera.

Select **Settings > Backup Camera**, and select a paired camera.

Unpair: Removes the paired camera. You must pair the camera again before you can view it using this device and cable.

Rename: Allows you to rename the paired camera.

Guidance Lines: Shows or hides guidance lines and allows you to adjust the position of the guidance lines.

Display Settings

Select **Settings > Display**.

Color Mode: Allows you to select day or night color mode. If you select the Auto option, the device automatically switches to day or night colors based on the time of day.

Brightness: Allows you to adjust the display brightness.

Display Timeout: Allows you to set the amount of idle time before your device enters sleep mode while using battery power.

Screenshot: Allows you to take a picture of the device screen. Screenshots are saved in the Screenshot folder of the device storage.

Traffic Settings

From the main menu, select **Settings > Traffic**.

Traffic: Enables traffic.

Current Provider: Sets the traffic provider to use for traffic data. The Auto option selects the best available traffic data automatically.

Optimize Route: Enables the device to use optimized alternate routes automatically or upon request (*Avoiding Traffic Delays on Your Route*, page 12).

Traffic Alerts: Sets the traffic delay severity for which the device displays a traffic alert.

Units and Time Settings

To open the Units and Time settings page, from the main menu, select **Settings > Units & Time**.

Current Time: Sets the device time.

Time Format: Allows you to select a 12-hour, 24-hour, or UTC display time.

Units: Sets the unit of measure used for distances.

Position Format: Sets the coordinate format and datum used for geographical coordinates.

Setting the Time

1 From the main menu, select the time.

2 Select an option:

- To set the time automatically using GPS information, select **Automatic**.
- To set the time manually, drag the numbers up or down.

Language and Keyboard Settings

To open the Language and Keyboard settings, from the main menu, select **Settings > Language & Keyboard**.

Voice Language: Sets the language for voice prompts.

Text Language: Sets all on-screen text to the selected language.

NOTE: Changing the text language does not change the language of user-entered data or map data, such as street names.

Keyboard Language: Enables keyboard languages.

Device and Privacy Settings

Select **Settings > Device**.

About: Displays the software version number, the unit ID number, and information on several other software features.

Regulatory: Displays regulatory markings and information.

EULAs: Displays the end-user license agreements.

NOTE: You need this information when you update the system software or purchase additional map data.

Device Data Reporting: Shares anonymous data to improve the device.

Travel History: Allows the device to store a record of the places you go. This allows you to view the trip log, use the Where I've been feature, and use myTrends suggested routes.

Reset: Allows you to clear your travel history, reset settings, or delete all user data.

Resetting Data and Settings

The device offers several options for deleting your user data and resetting all settings to the factory default values.

- 1 Select **Settings > Device > Reset**.
- 2 Select an option:
 - To clear your travel history, select **Clear Travel History**.
This option deletes all records of the places you have traveled. It does not delete saved locations or installed maps.
 - To reset all settings to the factory default values, select **Reset Default Settings**.
This option does not delete any user data.
 - To delete all user data and reset all settings to the factory default values, select **Delete Data and Reset Settings**.
This option deletes all user data, including your saved locations, recently found locations, and travel history. Installed maps are not deleted.

Device Information

Viewing E-label Regulatory and Compliance Information

- 1 From the settings menu, swipe to the bottom of the menu.
- 2 Select **Device > Regulatory**.

Specifications

Operating temperature range	From -20° to 55°C (from -4° to 131°F)
Charging temperature range	From 0° to 45°C (from 32° to 113°F)
Radio frequency/protocol	2.4 GHz @ 15 dBm
Power input	Vehicle power using the included vehicle power cable. AC power using an optional accessory (for home and office use only).
Battery type	Rechargeable lithium-ion

Charging the Device

NOTE: This Class III product shall be powered by an LPS power supply.

You can charge the battery in the device using any of these methods.

- Connect the device to vehicle power.
- Connect the device to an optional power adapter accessory, such as a wall power adapter.

You can purchase an approved Garmin AC-DC adapter suitable for home or office use from a Garmin dealer or www.garmin.com. The device may charge slowly when connected to a third-party adapter.

Device Maintenance

Garmin Support Center

Go to support.garmin.com for help and information, such as product manuals, frequently asked questions, videos, and customer support.

Map and Software Updates

For the best navigation experience, you should keep the maps and software on your device up to date.

Map updates provide the newest available changes to roads and locations in the maps used by your device. Keeping maps up to date helps your device find recently added locations and calculate more accurate routes. Map updates are large and may take several hours to complete.

Software updates provide changes and improvements to the device features and operation. Software updates are small and take a few minutes to complete.

You can update your device using two methods.

- You can connect the device to a Wi-Fi network to update directly on the device (recommended). This option allows you to update your device conveniently without connecting it to a computer.
- You can connect the device to a computer and update it using the Garmin Express application (garmin.com/express). This option allows you to install map data onto a memory card if the updated maps are too large to fit on the internal storage.

You can connect the device to a computer and update it using the Garmin Express application (garmin.com/express).

Connecting to a Wi-Fi Network

The first time you turn on the device, it prompts you to connect to a Wi-Fi network and register your device. You can also connect to a Wi-Fi network using the settings menu.

- 1 Select **Settings > Wireless Networks**.
- 2 If necessary, select **Wi-Fi** to enable Wi-Fi technology.
- 3 Select **Search for Networks**.
The device displays a list of nearby Wi-Fi networks.
- 4 Select a network.
- 5 If necessary, enter the password for the network, and select **Done**.

The device connects to the network, and the network is added to the list of saved networks. The device reconnects to this network automatically when it is within range.

Updating Maps and Software Using a Wi-Fi Network

NOTICE

Map and software updates may require the device to download large files. Regular data limits or charges from your Internet service provider apply. Contact your Internet service provider for more information about data limits or charges.

You can update the maps and software by connecting your device to a Wi-Fi network that provides access to the Internet. This allows you to keep your device up to date without connecting it to a computer.

- 1 Connect the device to a Wi-Fi network ([Connecting to a Wi-Fi Network, page 20](#)).

While connected to a Wi-Fi network, the device checks for available updates. When an update is available,  appears on the Settings icon in the main menu.

- 2 Select **Settings > Updates**.
The device checks for available updates. When an update is available, **Update Available** appears below Map or Software.
- 3 Select an option:
 - To install all available updates, select **Install All**.
 - To install only map updates, select **Map > Install All**.
 - To install only software updates, select **Software > Install All**.
- 4 Read the license agreements, and select **Accept All** to accept the agreements.

NOTE: If you do not agree with the license terms, you can select **Reject**. This stops the update process. You cannot install updates until you accept the license agreements.

- 5 Using the included USB cable, connect the device to external power, and select **Continue** (*Charging the Device*, page 20). For the best results, a USB wall charger that provides at least 1 A power output is recommended. Many USB power adapters for smartphones, tablets, or portable media devices may be compatible.
- 6 Keep the device connected to external power and within range of the Wi-Fi network until the update process is complete.

TIP: If a map update is interrupted or canceled before it completes, your device may be missing map data. To repair missing map data, you must update the maps again using either Wi-Fi or Garmin Express.

Updating Maps and Software with Garmin Express

You can use the Garmin Express application to download and install the latest map and software updates for your device.

 
- 1 If you do not have the Garmin Express application installed on your computer, go to garmin.com/express and follow the on-screen instructions to install it (*Installing Garmin Express*, page 21).
- 2 Open the  Garmin Express application.
- 3 Connect your device to your computer using a mini-USB cable.

The small end of the cable connects to the mini-USB port  on your Garmin DriveSmart device, and the large end connects to an available USB port on your computer.



- 4 When your Garmin DriveSmart device prompts you to enter file transfer mode, select **Yes**.
- 5 In the Garmin Express application, click **Add a Device**. The Garmin Express application searches for your device and displays the device name and serial number.
- 6 Click **Add Device**, and follow the on-screen instructions to add your device to the Garmin Express application.

When setup is complete, the Garmin Express application displays the updates available for your device.



- 7 Select an option:
 - To install all available updates, click **Install All**.
 - To install a specific update, click **View Details**, and click **Install** next to the update you want.

The Garmin Express application downloads and installs the updates onto your device. Map updates are very large, and this process may take a long time on slower internet connections.

NOTE: If a map update is too large for the internal storage of the device, the software may prompt you to install a microSD®

card in your device to add storage space (*Installing a Memory Card for Maps and Data*, page 23).

- 8 Follow the on-screen instructions during the update process to finish installing updates.

For example, during the update process, the Garmin Express application may instruct you to disconnect and reconnect your device.

Installing Garmin Express

The Garmin Express application is available for Windows® and Mac® computers.

- 1 On your computer, go to garmin.com/express.
- 2 Select an option:
 - To view the system requirements and verify the Garmin Express application is compatible with your computer, select **System Requirements**.
 - To install on a Windows computer, select **Download for Windows**.
 - To install on a Mac computer, select **Download for Mac**.
- 3 Open the downloaded file, and follow the on-screen instructions to complete the installation.

Device Care

NOTICE

Avoid dropping your device.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Never use a hard or sharp object to operate the touchscreen, or damage may result.

Do not expose the device to water.

Cleaning the Outer Casing

NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

- 1 Clean the outer casing of the device (not the touchscreen) using a cloth dampened with a mild detergent solution.
- 2 Wipe the device dry.

Cleaning the Touchscreen

- 1 Use a soft, clean, lint-free cloth.
- 2 If necessary, lightly dampen the cloth with water.
- 3 If using a dampened cloth, turn off the device and disconnect the device from power.
- 4 Gently wipe the screen with the cloth.

Avoiding Theft

- Remove the device and mount from sight when not in use.
- Remove the residue left on the windshield by the suction cup.
- Do not keep your unit in the glove compartment.
- Register your device using the Garmin Express software (garmin.com/express).

Restarting the Device

You can restart your device if it stops functioning.

Hold the power key for 12 seconds.

Removing the Device, Mount, and Suction Cup

Removing the Device from the Mount

- 1 Press the release tab or button on the mount.

- 2 Tilt the bottom of the device upward, and lift the device from the mount.

Removing the Mount from the Suction Cup

- 1 Turn the device mount to the right or left.
- 2 Apply pressure until the socket on the mount releases the ball on the suction cup.

Removing the Suction Cup from the Windshield

- 1 Flip the lever on the suction cup toward you.
- 2 Pull the tab on the suction cup toward you.

Troubleshooting

I cannot hear sound from my device

The Garmin DriveSmart device and app provide several options for audio output to accommodate different vehicles and installation methods. If you cannot hear audio from the device, verify the device settings and connections for your installation method below.

- For all installation methods, verify each of these items:
 - Verify your Garmin DriveSmart device is paired with your smartphone and connected to the Garmin Drive app ([Pairing with Your Smartphone, page 2](#)).
 - Verify the Garmin DriveSmart device volume is loud enough to hear.
You can say *OK, Garmin, increase the volume.*
 - Verify the media volume setting on your smartphone is not muted.
- If you want to connect to your vehicle or vehicle stereo using a Bluetooth connection, verify each of these items:
 - From your Garmin DriveSmart device, select **Volume > Bluetooth Audio Setup**, and verify **Vehicle** is selected for each audio type you want to send to your stereo using a Bluetooth connection.
 - Verify your smartphone is paired with your vehicle and connected using Bluetooth wireless technology.
For more information about pairing your smartphone with your vehicle, see your vehicle owner's manual.
 - Verify your vehicle stereo is set to the Bluetooth audio source.
- If you want to connect to your vehicle stereo using the Garmin DriveSmart auxiliary audio output, verify each of these items:
 - Verify that a 3.5 mm audio cable is connected to the audio output jack in the Garmin DriveSmart power cable plug and to the auxiliary input jack for your vehicle stereo ([Connecting to the Stereo Using an Auxiliary Audio Cable, page 3](#)).
 - **NOTE:** You should not use your phone's headphone jack for auxiliary output. Some types of audio cannot be played using the phone's headphone jack.
 - From your Garmin DriveSmart device, select **Volume > Bluetooth Audio Setup**, and verify **Garmin Device** is selected for each audio type.
 - Verify your vehicle stereo is set to the auxiliary input audio source.
- If you want to use the internal Garmin DriveSmart device speaker, verify each of these items:
 - From your Garmin DriveSmart device, select **Volume > Bluetooth Audio Setup**, and verify **Garmin Device** is selected for each audio type.
 - Verify no cable is connected to the audio output jack in the Garmin DriveSmart power cable plug.

My device audio has background noise when using an auxiliary audio cable

In some vehicles, you may hear a buzzing or squealing sound when using the audio cable due to noise from the electrical ground for the vehicle power port. You can connect an optional ground loop isolator to help eliminate this sound ([Connecting to the Stereo Using an Auxiliary Audio Cable, page 3](#)).

When is the Garmin DriveSmart device listening?

While the Garmin DriveSmart device is turned on and the microphones are not muted, the device continuously listens for you to say *OK, Garmin* or *Alexa* to start a request. The device itself does not record or store any audio data. After you start a voice request, the audio data of your request is sent to the Garmin Drive app or the Amazon Alexa app for processing. You can view a record of your processed *Alexa* requests in the Amazon Alexa app.

If you want to prevent the device from hearing any audio, you can mute the microphones by holding the voice key for 2 seconds ([Muting the Microphones, page 6](#)).

A skill I want to use is not available

The Garmin DriveSmart device is compatible with many Alexa skills and features. However, some skills and features are exclusive to certain devices or are not available for the Garmin DriveSmart device. Skill compatibility is determined by the skill developer and Amazon.

If a skill you want to use is not available, you can contact the skill developer to suggest adding support for the Garmin DriveSmart device.

The suction cup will not stay on my windshield

- 1 Clean the suction cup and windshield with rubbing alcohol.
- 2 Dry with a clean, dry cloth.
- 3 Mount the suction cup ([Mounting and Powering the Garmin DriveSmart Device in Your Vehicle, page 1](#)).

My device is not acquiring satellite signals

- Verify the GPS simulator is turned off ([Navigation Settings, page 18](#)).
- Take your device out of parking garages and away from tall buildings and trees.
- Remain stationary for several minutes.

My battery does not stay charged for very long

- Decrease the screen brightness ([Display Settings, page 19](#)).
- Shorten the display timeout ([Display Settings, page 19](#)).
- Decrease the volume ([Adjusting the Volume, page 3](#)).
- Turn off the wi-fi radio when it is not in use ([Wireless Network Settings, page 19](#)).
- Put the device in power saving mode when not in use ([Turning the Device On or Off, page 3](#)).
- Keep your device away from extreme temperatures.
- Do not leave your device in direct sunlight.

My device does not connect to my phone

- Select **Settings > Wireless Networks**.
The Bluetooth option must be enabled.
- Enable Bluetooth wireless technology on your phone and bring your phone within 10 m (33 ft.) of the device.

- Verify your phone is compatible.
Go to www.garmin.com/bluetooth for more information.
- Complete the pairing process again.
To repeat the pairing process, you must unpair your phone and device (*Deleting a Paired Phone*, page 16), and complete the pairing process (*Live Services, Traffic, and Smartphone Features*, page 14).

Appendix

Installing a Memory Card for Maps and Data

You can install a memory card to increase the storage space for maps and other data on your device. You can purchase memory cards from an electronics supplier, or go to www.garmin.com/maps to purchase a memory card with pre-loaded Garmin mapping software. The device supports microSD memory cards from 4 to 32 GB.

- 1 Locate the map and data memory card slot on your device (*Device Overview*, page 1).
- 2 Insert a memory card into the slot.
- 3 Press it in until it clicks.

Data Management

You can store files on your device. The device has a memory card slot for additional data storage.

NOTE: The device is compatible with Windows 7 and newer, and Mac OS 10.4 and newer.

About Memory Cards

You can purchase memory cards from an electronics supplier, or purchase pre-loaded Garmin mapping software (www.garmin.com). In addition to map and data storage, the memory card can be used to store files such as maps, images, geocaches, routes, waypoints, and custom POIs.

Connecting the Device to Your Computer

You can connect the device to your computer using a USB cable.

- 1 Plug the small end of the USB cable into the port on the device.
- 2 Plug the larger end of the USB cable into a port on your computer.
- 3 When your Garmin DriveSmart device prompts you to enter file transfer mode, select **Yes**.

A picture of your device connected to a computer appears on the device screen.

Depending on your computer operating system, the device appears as either a portable device, a removable drive, or a removable volume.

Transferring Data From Your Computer

- 1 Connect the device to your computer (*Connecting the Device to Your Computer*, page 23).

Depending on your computer operating system, the device appears as either a portable device, a removable drive, or a removable volume.

- 2 On your computer, open the file browser.
- 3 Select a file.
- 4 Select **Edit > Copy**.
- 5 Browse to a folder on the device.

NOTE: For a removable drive or volume, you should not place files in the Garmin folder.

- 6 Select **Edit > Paste**.

Disconnecting the USB Cable

If your device is connected to your computer as a removable drive or volume, you must safely disconnect your device from your computer to avoid data loss. If your device is connected to your Windows computer as a portable device, it is not necessary to safely disconnect the device.

- 1 Complete an action:
 - For Windows computers, select the **Safely Remove Hardware** icon in the system tray, and select your device.
 - For Apple computers, select the device, and select **File > Eject**.
- 2 Disconnect the cable from your computer.

Viewing GPS Signal Status

Hold  for three seconds.

Purchasing Additional Maps

- 1 Go to your device product page at garmin.com.
- 2 Click the **Maps** tab.
- 3 Follow the on-screen instructions.

Purchasing Accessories

Go to garmin.com/accessories.

Index

Symbols

2-D map view [14](#)
3-D map view [14](#)

A

accessories [23](#)
active lane guidance [11](#)
addresses, finding [4, 5, 7](#)
alerts [6](#)
 audio [19](#)
 proximity points [19](#)
Alexa skills [22](#)
answering calls [16](#)
audio, cable [22](#)
audio
 connecting [2, 3, 22](#)
 proximity points [19](#)
avoidances [12](#)
 area [12, 13](#)
 deleting [13](#)
 disabling [13](#)
 road [12](#)
 road features [12](#)
 tolls [12](#)

B

backup camera [19](#)
battery
 charging [1, 20](#)
 maximizing [22](#)
 problems [22](#)
Bluetooth technology [2, 14, 16, 22](#)
 disconnecting a device [16](#)
 pairing a phone [2](#)
 settings [19](#)
brightness [4, 5](#)
buttons [1](#)

C

calls [16](#)
 answering [16](#)
 contacts [16](#)
 dialing [16](#)
 history [16](#)
 home [16](#)
 placing [5, 16](#)
cameras
 backup [19](#)
 red light [6](#)
 speed [6](#)
changing the search area [7](#)
charging the device [1, 20](#)
cleaning the device [21](#)
cleaning the touchscreen [21](#)
computer, connecting [23](#)
connecting [20](#)
coordinates [9](#)
current location [9](#)

D

deleting
 all user data [20](#)
 paired Bluetooth device [16](#)
 trips [17](#)
destinations [18](#). See [locations](#)
 arriving [11](#)
detours [12](#)
device care [21](#)
dialing [16](#)
directions [11](#)
disconnecting, Bluetooth device [16](#)
display settings [19](#)
driver alerts [6](#)
driving directions [11](#)

E

editing, saved trips [17](#)
emergency services [9](#)

EULAs [19](#)
exit services [14](#)

F

files, transferring [23](#)
finding locations. [6–8](#) See [also](#) [locations](#)
 addresses [4, 5, 7](#)
 businesses [4](#)
 categories [7](#)
 cities [5, 14](#)
 coordinates [9](#)
 intersections [5, 9](#)
 points of interest [4](#)
Foursquare [8](#)
fuel, stations [9](#)

G

Garmin Connect [14](#)
Garmin Express [21](#)
 updating software [21](#)
geocaching [9](#)
going home [4, 10](#)
GPS [3, 23](#)

H

home
 calling [16](#)
 editing location [10](#)
 going [10](#)
 phone number [16](#)

I

icons, status bar [3](#)
ID number [19](#)
intersections, finding [9](#)

K

keyboard
 language [19](#)
 layout [19](#)

L

language
 keyboard [19](#)
 voice [19](#)
latitude and longitude [9](#)
location [9](#)
locations [7, 18](#)
 calling [16](#)
 current [9, 10](#)
 recently found [9](#)
 saving [10](#)
 searching for [6, 9](#)
 simulated [18](#)
 venues [9](#)

M

map layers, customizing [14](#)
map view
 2-D [14](#)
 3-D [14](#)
maps [10, 13, 14, 18](#)
 data field [10, 14](#)
 detail level [18](#)
 layers [14](#)
 purchasing [23](#)
 symbols [10](#)
 theme [18](#)
 tools [13](#)
 updating [20, 21](#)
 viewing routes [10, 11](#)
memory card [23](#)
 installing [23](#)
microphone [1](#)
 muting [6, 22](#)
microSD card [23](#)
mount, removing [22](#)
mounting, windshield [1](#)
mounting the device
 automobile [1](#)
 removing from mount [21](#)

suction cup [1, 22](#)
music
 playing [5](#)
 streaming [6](#)
myTrends, routes [12](#)

N

national parks [8](#)
navigation [4, 8, 10, 11](#)
 off-road [13](#)
 settings [18](#)
next turn [10](#)
notifications [15](#)

O

off-road navigation [13](#)
on-screen buttons [3](#)
owner's manual [17](#)

P

pairing
 disconnecting [16](#)
 phone [2, 22](#)
parking [7, 9, 11](#)
phone
 disconnecting [16](#)
 pairing [2, 22](#)
phone book [16](#)
phone calls [16](#)
 answering [16](#)
 dialing [16](#)
 muting [16](#)
 voice dial [16](#)
photoLive [18](#)
playing, music [5](#)
points of interest, finding [4](#)
points of interest (POI) [7, 8](#)
 HISTORY [8](#)
 venues [9](#)
power [1](#)
power cables [1, 20](#)
 vehicle [1](#)
power key [3](#)
privacy [22](#)
product support [17](#)
proximity points alerts, settings [19](#)

Q

Quick Search [8](#)

R

recently found locations [9](#)
red light cameras [6](#)
removing mount [22](#)
resetting
 device [21](#)
 trip data [14](#)
resetting the device [20](#)
road conditions, weather [17](#)
routes [10](#)
 adding a point [11, 18](#)
 calculating [12](#)
 calculation mode [17, 18](#)
 myTrends [12](#)
 shaping [11](#)
 starting [7, 10](#)
 stopping [5, 12](#)
 suggested [12](#)
 viewing on the map [10, 11](#)

S

satellite signals
 acquiring [3](#)
 viewing [23](#)
saved locations [4, 17](#)
 categories [10](#)
 deleting [10](#)
 editing [10](#)
saving, current location [10](#)
screen, brightness [4](#)
screenshots [19](#)

- search bar 7
- settings 18, 19
 - sound 4
- shaping a route 11
- shortcuts
 - adding 9
 - deleting 9
- simulated locations 18
- skills 5, 22
 - enabling 5
- sleep mode 3
- smartphone features 15
 - connecting 2
- software
 - updating 20, 21
 - version 19, 21
- speaking commands 4, 5
- specifications 20
- speed cameras 6
- suction cup 22

T

- theft, avoiding 21
- time settings 19
- tolls, avoiding 12
- tools, maps 13
- traffic 14, 16, 19
 - alternate route 12
 - cameras 18
 - incidents 14, 16
 - map 14, 16
 - searching for delays 14, 16
- traffic cameras, viewing 18
- travel history 19
- trip information 14
 - resetting 14
 - viewing 14
- trip log, viewing 14
- trip planner 17, 18
 - editing a trip 17
 - shaping points 17
- TripAdvisor 8
- troubleshooting 22
- turn list 11

U

- unit ID 19
- up ahead 13, 14
 - customizing 13
- updating
 - maps 20, 21
 - software 20, 21
- USB, disconnecting 23

V

- vehicle power cable 1
- venues 9
- voice command 4, 5
 - activating 4
 - tips 4
- volume, adjusting 3–5

W

- weather 5, 17
 - radar 17
 - road conditions 17
- Where Am I? 9, 10
- Wi-Fi 19, 20
- wireless camera 19

support.garmin.com



June 2019
190-02489-00_0B