

USER MANUAL

AGARO Electric Rice Cooker



Model: Regal



Note

- Please read the instruction of manual before using
- This product is only used for family, unsuitable for other places
- Must use wall plug with earth, plug thoroughly and make sure it is tight, don't use universal socket and other appliance electrical at the same time
- When plug the socket, make sure is tight, or the components will be burned, as bad contact cause it too heat
- Don't put plug into the jack when doesn't use
- Product should be away from children, and never let children use it on their own
- Please put and use on stable table, and away from tinder
- Only the original inner pot can be used, other inner pot can't replace, avoiding any trouble and danger
- Don't operate before the inner pot hasn't be put in or it's empty
- Inner pot can't be heated on stove, or it will be out of shape
- Don't put any food or water in when inner pot hasn't been put in host
- When the rice cooker is working ,don't move the inner pot away, avoiding cause any danger
- High temperature and steam will be produce when using. Hand and face please keep away from the steam outlet avoiding be scald
- Don't put rag or other things cover the steam outlet when using, in case cause the lid out of shape or stoppage
- Don't use in wet and heat place
- Don't wash rice in the inner pot, should use other container to wash rice and pull into the inner pot after finish washing, in case make the pot out of shape or destroy the coating
- Stop using when the inner pot is out of shape, please contact with our after-sale service personal to buy a new one
- Please check if anything dregs or rice on the heating plate and bottom of inner pot before using, and clean it up before using
- After putting the inner pot into body, please turn around in order to make sure there is close between inner pot and heating plate
- Do cleaning after unplug the power cord and when the body is completely cold
- Don't put the product into water or under faucet when cleaning.
- Wash the cover plate and steam lid timely avoiding the rice cause bad smells

- Nonuse for a long time, please put out the plug and put at aeration-drying place for store
- Stop using when found the power line or plug is broken, should use special cord or special accessory which by in specified maintenance department or other supplier
- If produce is out of order, switch off the power, pull out the plug from the socket, Stop using and contact our service center for repairing, don't use the unoriginal parts to replace and don't repair by yourself

Usage

- Read the instruction manual carefully and do it according to the indication of IM.
- Plug in and make sure the voltage of home socket is match with this product.
- Please take out all parts, such as non-stick inner pot, steam outlet, detachable inner lid to wash when in the first time to use.
- Please make sure there is no any impurities in the bottom of inner pot. And you need to make left and right rotation of the inner pot, to make sure the inner pot is completely fit closely with the heating plate.

Product Specifications

Model:	Regal
Voltage:	230V~50Hz
Power:	500W
Capacity:	3 Litres
Suitable number of people	1-5

Operation Panel Diagram



Function Details 1

Function	Function Details
White/ Brown rice	Press the “white rice” or “brown rice” buttons to activate the cooking program. A countdown will appear in the last 10 minutes.
Short grain	Press the “short grain” button to activate the cooking program. A countdown will appear in the last 10 minutes.
Preset timer	The “Preset” function allows you to set a timer for delayed cooking of up to 24 hours. Beware of setting this for too long in the future if there are perishable foods among the contents of the dish you are cooking. You know the timer is set as the “Preset” button lights up.
Power/Cancel	Press once to turn the rice cooker on. The white lights will cycle through the functions telling you Rice is ready. Press twice in quick succession to cancel a selected program during cooking. Press once when a function is selected to turn off.
Keep warm	If the unit is in stand-by mode (i.e.no program keep is in use) pressing the button 'KEEP WARM' activates KEEP WARM mode (5 second delay) and the “KEEP WARM” button lights up. A count-up clock appears for your reference and the 'KEEP WARM' button stays lit.
Preset timer	The “Preset” function allows you to set a timer for delayed cooking of up to 24 hours. Beware of setting this for too long in the future if there are perishable foods among the contents of the dish you are cooking. You know the timer is set as the “Preset” button lights up.

Porridge/Steam /Slow cook	Press the 'porridge'(rice or oat), 'steam' or 'slow cook' buttons to activate the respective cooking programs. Adjust the time with the + or - buttons. A countdown clock appears and counts down the whole cooking cycle.
Low carb/ White brown	Press the 'white rice' or 'brown rice' LOWCARB button to activate the cooking program for low carb rice.
Low carb/ White brown	For adjusting the cooking times for non-rice cooking menu settings. Pressing one of these buttons when a program has been selected allows you to adjust the cooking time from the default. Default cooking times are listed under the specific manual sections for different programs. (You can press and hold these buttons to skip the time on faster)

Tips: After a function is selected, a light flashes above the button and after 5 seconds the cooking cycle will begin, a chasing lines pattern appears on the display and the light will stay on.

Function Details 2

Function	Default time	Optional time	Stepping	Whether to support 24-hour appointment
White rice	None	None	None	None
Brown rice	None	None	None	None
White rice (Steamed rice)	0:25	5 min-1 hr	5 min	Yes
Brown rice (Steamed rice)	0:40	5 min-1 hr	5 min	Yes

Function	Default time	Optional time	Stepping	Whether to support 24-hour appointment
Pearl rice	None	None	None	Yes
Porridge	1:30	1 hr-3 hrs	5 min	Yes
Steam	0:10	5 min-1hr 30 min	5 min	Yes
Slow cook	2:00	2 hrs-8 hrs	5 min	Yes

Sensor Fault Protection

When the temperature sensor is faulty, the digital tube displays an error code and beeps 10 times. The rice cooker cannot perform any work and does not respond to any buttons. Once in the protection state, even if the hardware is trouble-shooting, it cannot respond to any buttons. The system must be powered back on after the fault has been removed before the system can be reset.

- Bottom sensor open circuit----E1
- Bottom sensor short circuit----E3

LCD	Error Condition	Wrong Reason		Solution
E1	Stop action Do not accept button operations	Defective parts	Bottom sensor open circuit	Connect the thermistor correctly (or return to normal temperature) and reboot.
E2	Stop action Do not accept button operations.		Bottom sensor short circuit	Connect the thermistor correctly (or return to normal temperature) and reboot.

LIMITED ONE YEAR WARRANTY

WARRANTY CARD

Product Name : Electric Rice Cooker

Model : Regal

Name, Address & Contact no of customer :

Name, Address & Contact no of dealer :

Date of Purchase :

Warranty Valid upto :

Scan - For Warranty Registration



or visit: www.agarollifestyle.com/product-registration

(Must register within 30 days from date of purchase to avail 6 MONTHS EXTENDED WARRANTY)

- Please scan the **QR CODE** for product registration and avail “**6 MONTHS EXTENDED WARRANTY**” on product
- Please preserve the invoice for product warranty claim. Customer purchasing from online platforms needs to produce the Online Partner's Invoice copy to claim the warranty

Scan - To File Complaint



or visit: www.agarollifestyle.com/service

(Fill & submit the form if you are facing any product related issues)

For any feedback or complain, you can also connect us at:

UNIVERSAL CORPORATION LIMITED, 4/1 Middleton Street,

Sikkim Commerce House, Kolkata-700071

Email Address : info@uclindia.com

Customer Care No: 9821486487

.....
Dealer's Stamp & Signature

To checkout wide range of AGARO products,
please visit www.agarolifestyle.com



Oven Toaster Griller



Hand Blender
With Chopper



Nutri Blender



Knife Set



Sandwich Maker



Slow Juicer



Multi Kettle



Vacuum Cleaner



Hand Massager

& much more...