 


INSTRUCTION MANUAL

Rev03

**SLIM24B/SLIM24T/
SLIM24BU**

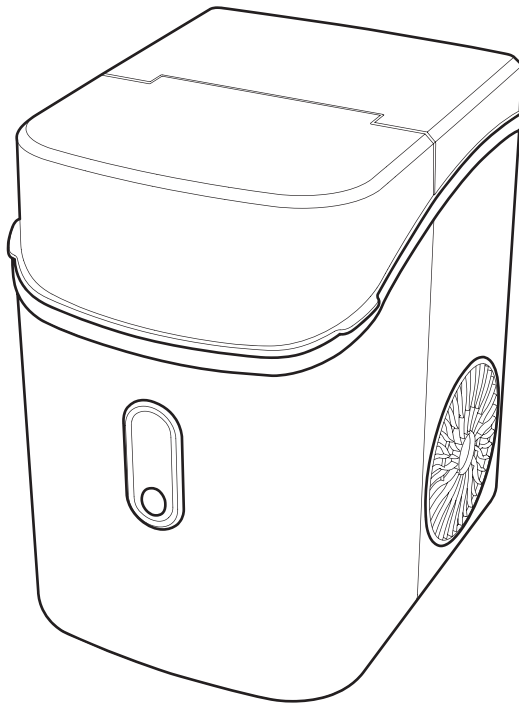

Ice Maker

✉ help_service_center@outlook.com

☎ 877-201-4016

PAGE CONTENTS

IMPORTANT SAFETY INFORMATION 01

PRODUCT INTRODUCTION 03

CONTROL PANEL INTRODUCTION 04

USING YOUR ICE MAKER 05

CLEANING AND MAINTENANCE 07

PRODUCT SPECIFICATIONS 08

TROUBLESHOOTING 09

WARRANTY INFORMATION 10

IMPORTANT SAFETY INFORMATION

To reduce the risk of injury or property damage, please follow these safety precautions.

WARNING



- Voltage power from outlet must match specifications on appliance nameplate.



- This appliance **must be** grounded.



- Using an extension cord may cause overheating and increase the risk of fire.

If an extension cord **MUST** be used:

- 1) **Only use an** extension cord with grounding plug.
- 2) The marked rating of an extension cord **must be** equal to or greater than the rating of this appliance.

- **Do not** operate if any component, including the cord or plug, is damaged.
- Unplug the unit before cleaning by hand.



- Only responsible and capable adults should operate the ice maker.
- **Do not** place the power cord where it could be pulled by children or pose a tripping hazard.
- Children should not be left unattended near the ice maker during operation.



- **Do not** use water that is micro-biologically unsafe or of unknown quality.



- **Do not** remove any safety, warning, or product information labels from the unit.



- **Do not** touch the evaporator with your hands while the ice maker is operating.
- **Do not** plug in or unplug the unit with wet hands.



- The unit **must be** placed and set up according to installation instructions before use. The unit is for indoor household use only.



- **Do not** store or use flammable vapors or liquids near the unit.
- **Do not** immerse any part of the unit in water.



- **Do not** attempt to disassemble, repair, modify or replace any part of the ice maker unless permitted by the manufacturer.

WARNING



FIRE OR EXPLOSION HAZARD Flammable Refrigerant

This unit contains an isobutane refrigerant, also known as R600a, a natural gas with high environmental compatibility. However, it is also combustible. Adhere to the warnings below to reduce the risk of injury or property damage.



1. When handling, installing, and operating the unit, care should be taken to avoid damage to the refrigerant tubing.



2. Only dispose of the unit according to Federal and Local Regulations. Contact your local authorities for the environmentally safe disposal of the unit.



3. Keep ventilation openings around the unit's enclosure clear of obstruction.



4. **Do not** place the unit near heat sources such as an oven.



 
5. Ensure a minimum of three inches of clearance around the side and back walls of the unit for proper air circulation.



6. **Do not** place the unit in direct sunlight.

PRODUCT INTRODUCTION


Tip: To remove the cover, place your fingers in the small opening under the left side and carefully pull up.

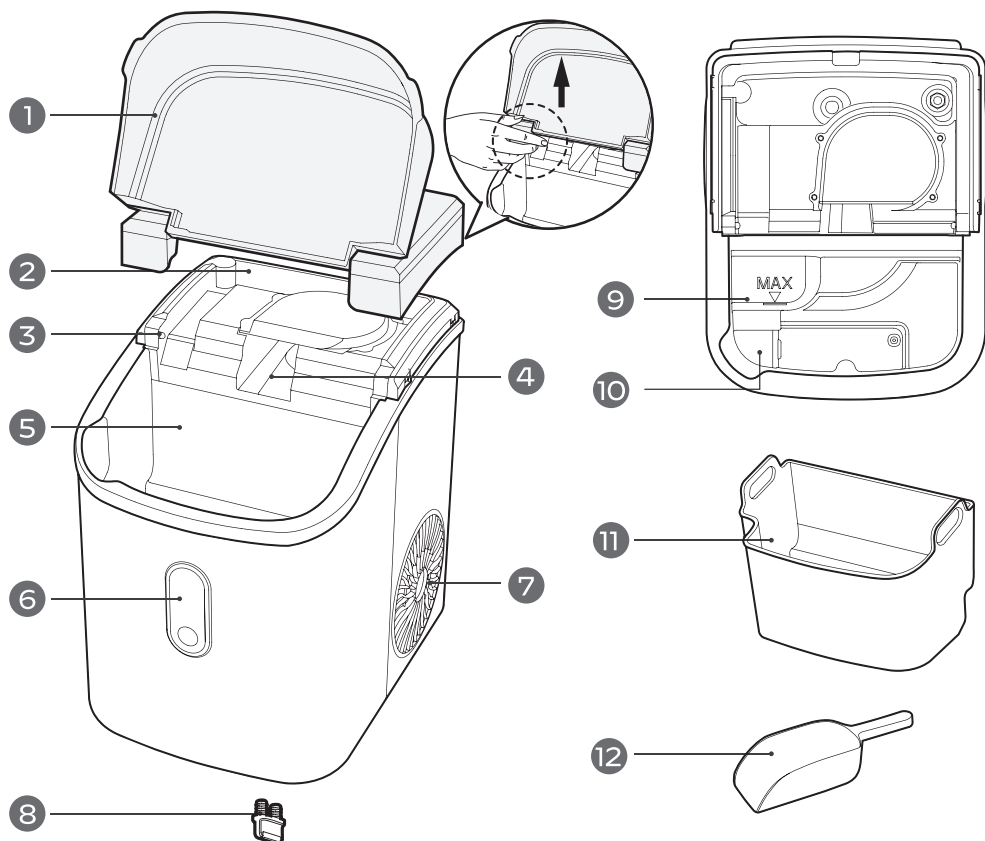

- 1. Removable Top Cover
- 2. Secondary Water Reservoir
- 3. Ice Full Sensor
- 4. Ice Outlet
- 5. Water Reservoir
- 6. Control Panel

- 7. Air Exhaust Fan
- 8. Drain Plug
- 9. Maximum Water Fill Line
- 10. Filter
- 11. Ice Basket
- 12. Ice Scoop

 CONTROL PANEL INTRODUCTION

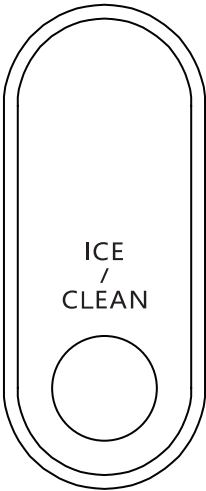

Function	Operation
MAKING ICE	When powering on or off, the ring indicator light will flash white 3 times, then turn off. Short press the ICE/CLEAN button to start making ice. The ring indicator light will turn white.
SELF-CLEANING	After the ring indicator light flashes white 3 times, the ice maker enters standby mode. In standby mode, press and hold the ICE/CLEAN button for 3 seconds and the ice maker will switch to self-cleaning mode. The ring indicator light will turn blue.
ICE FULL	The ring indicator light turns green when the ice basket is full.
ADD WATER	The ring indicator light turns red when the water reservoir is low.

 
USING YOUR ICE MAKER

BEFORE FIRST USE

- 1.**
Stand upright for 24hrs. Check for accessories.



24hrs

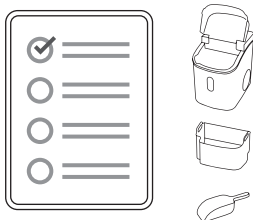


Missing parts?
Contact us.




Customer Service

 - 2.**
Clean the ice maker thoroughly before first use.

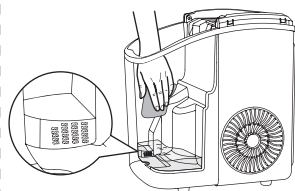

Use in locations
50°F ~ 90°F.

 

50°F ~ 90°F
(10°C ~ 32°C)

 
Perfect ice shape.




More Cycles = Perfect Shape

3. What Not To Do!


Unstable base.

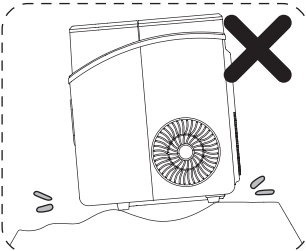

No other liquids
(Drinking water only).

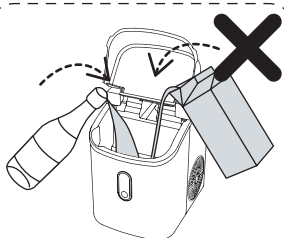 


Do not use in
high or low temps.

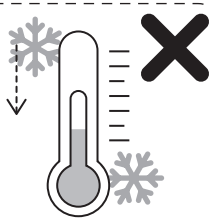 


lower than 41°F/5°C

 Do not put your fingers into the ice outlet. The ice maker will detect ice is full and stop working. Wait 3 mins before further operation.

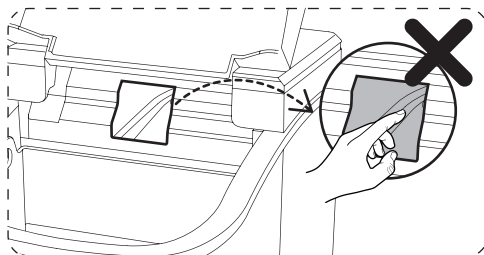


HOW TO USE YOUR ICE MAKER

 
Open cover and remove basket.

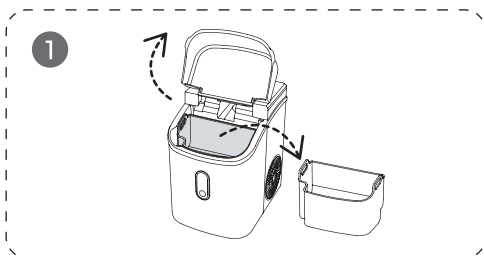

 
Pour water, do not exceed the "MAX" water mark.

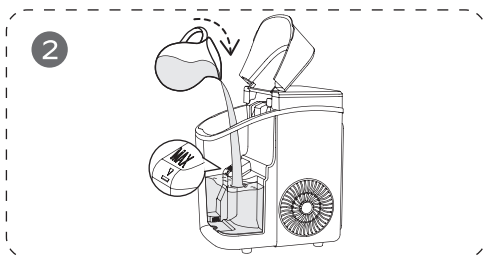


Press the **ICE/CLEAN** button.

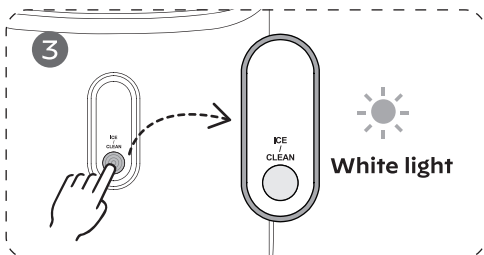 


Wait 6min-8min.

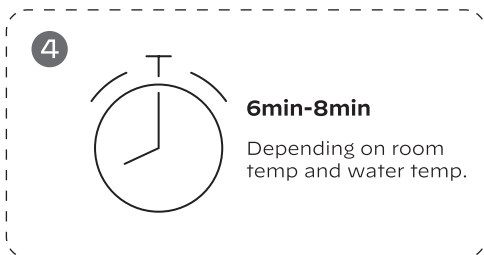 

 
The ring indicator light turns green when ice basket is full.

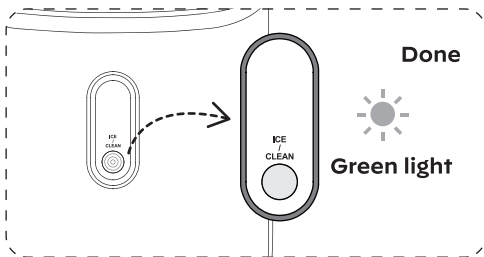

 When ring indicator light turns red, add water and press **ICE/CLEAN** button to restart.

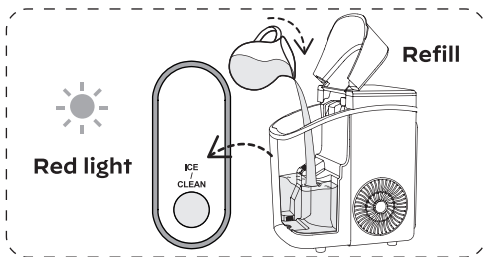

 Take ice cubes out in time to avoid melting.

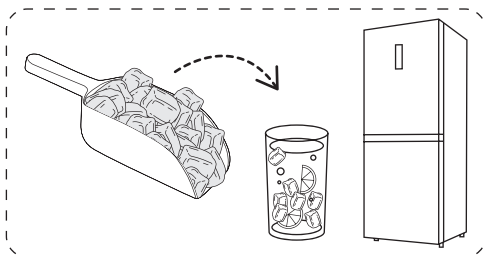


CLEANING AND MAINTENANCE

To keep your ice tasting fresh and the unit looking great, we recommend cleaning the unit once per week.

SELF-CLEANING (15-MIN PROCESS)


1

 Remove the basket and add water up to the "MAX" water level.

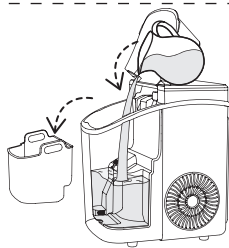


2

 In Standby Mode:
Hold for 3 sec to start self-cleaning.

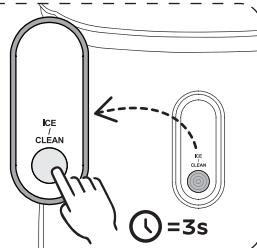


3

 Drain Plug

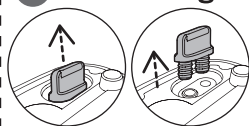

Drain excess water over sink.

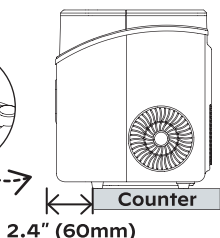 

4

Clean exterior with cloth and mild dishwashing soap.

 


MANUAL CLEANING

Turn off the unit and disconnect from power outlet before cleaning.


Remove the top cover and basket.


1

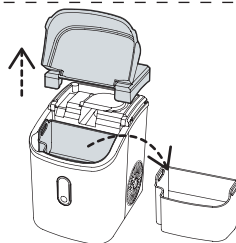

Clean the water filter, ice outlet and both water reservoirs using a soft cloth dampened with warm water and vinegar, then rinse with clean water.

  2

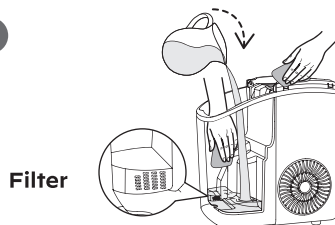

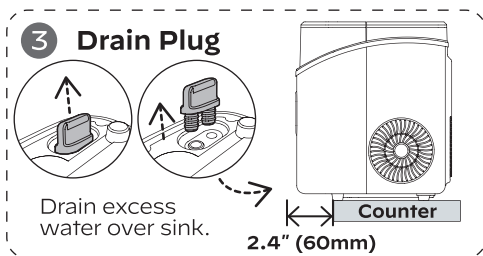

⚠ DO's & DON'Ts while cleaning and maintaining

- **Do not** use organic solvent, boiled water, detergent, strong acid and strong alkali etc. for cleaning.
- When the unit is not to be used for a long duration, **drain** the water completely & dry the interior.
- **Store** in a well-ventilated area.

PRODUCT SPECIFICATIONS

Model	SLIM24B/SLIM24BU	SLIM24T
Voltage/Frequency	115V/60Hz	115V/60Hz
Ice-Making Current	2.7A	2.7A
Water Reservoir	0.29 gal (1.1L)	0.29 gal (1.1L)
Ice Basket Capacity	1.76 lbs (0.8kg)	1.76 lbs (0.8kg)
Ice-Making Rate	33 lbs per Day	33 lbs per Day
Ice Shape	Nugget	Nugget
Material	ABS, PP	ABS, PP, Stainless Steel
Net Weight	17.6 lbs (8kg)	17.6 lbs (8kg)
Product Size	11.3 x 8.9 x 12.91 inch (287 x 226 x 328 mm)	11.3 x 8.9 x 12.91 inch (287 x 226 x 328 mm)

TROUBLESHOOTING

Problem	Possible Causes	Solution
The ring indicator light turns red.	Low water level or not enough water.	Stop making ice, refill water, press ICE/CLEAN button, then restart and try again.
The ring indicator light turns green.	There is too much ice.	Remove some ice.
	If there are no ice cubes, there may be an obstruction or the inner wall needs cleaning.	Remove the obstruction inside or clean the inner wall of the ice storage.
The ring indicator light flashes in red.	The ambient temperature or the water temperature in the inner tank is too high.	Please run the ice maker when the ambient temperature is below 90°F and pour colder water into the tank.
	Refrigerant liquid leakage.	Press the ICE/CLEAN button twice to restart the ice-making program. If this problem shows up again, please contact customer service.
	The cover motor is broken.	
	The pipe in the cooling system is blocked.	
Making Ice too slowly.	Hot air outlet has been blocked by something.	Hot air outlet must be guaranteed to have more than 6 inches of ventilation distance.
	The water temperature in the inner tank is too high.	Water temperature requirement between 45°F - 90°F.
	Refrigeration system malfunctions.	Please contact customer service.

Problem	Possible Causes	Solution
Water leakage.	The drain plug is not in place.	Put the drain plug in place.
	Pipe joints in the appliance may be loose.	Please contact customer service.
	The seal has reached the end of its service life.	

WARRANTY INFORMATION

30-DAY LIMITED WARRANTY

To provide customers with a quality shopping and user experience, the unit can be replaced or returned for a full refund within the 30-day period from the date of purchase.

30-DAY TO 1-YEAR LIMITED WARRANTY

After the 30-day warranty has expired, a 1-year warranty from the date of purchase that covers product replacement is automatically activated. Please note that proof of purchase is required for all warranty claims.

30-DAY TO 1-YEAR WARRANTY LIMITATIONS

- This warranty does not cover:
- Any condition resulting from incorrect or inadequate maintenance or care.
 - Damage resulting from misuse, abuse, negligence, accidents, or shipping damage.
 - Dissatisfaction due to buyer’s remorse.
 - Normal wear and tear.
 - Damages incurred after initial transportation.