ARCTIC ARTOWER+

Evaporative Air Cooling Tower,

Product Guide SAVE THESE INSTRUCTIONS

READ ENTIRE MANUAL BEFORE USE

Congratulations!

Thanks for buying Arctic Air® Tower + – the powerful room cooler that pulls in hot air through its evaporative air-cooling filter and turns it into cool, refreshing air... instantly!

Experience the cooling comfort of Arctic Air® Tower +.


If you have any questions or problems, go to:

www.ArcticAirTowerFAQ.com

If you can't find the answer or do not have access to the internet, call our customer service line Monday-Friday 9am to 6pm EST:

1-888-611-6750

WHAT'S INCLUDED:

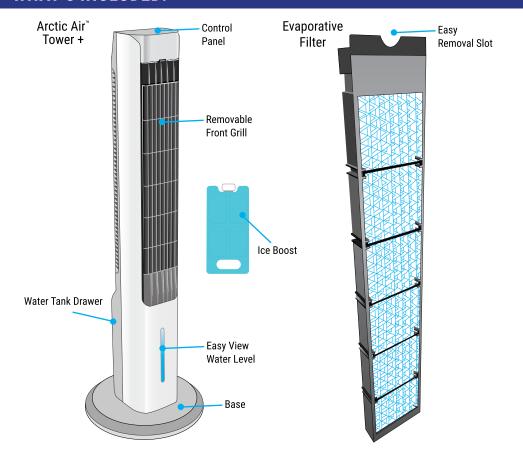


ASSEMBLY


 Place Arctic Air® Tower + down so that the front grill is facing up while base is being assembled.




2. Assemble the two Base halves by inserting the tabs on one half into the slots on the other half.

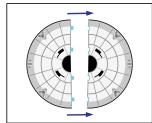

3. Align the assembled Base with the Arctic Air® Tower+. Pull the Power Cord through the hole in the center of the assembled Base.

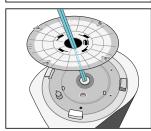

4. Insert Tower Pegs (C) into Base Slots (D) and turn the Base clockwise (towards to the LOCK symbol) until it locks in place.

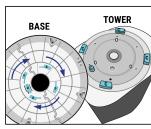

5. Pull the excess slack of the Power Cord through the hole. Plug the cord into a wall-outlet.




USAGE:

USING ICE BOOST:



 Unscrew top from ice pack and place aside.
 Fill with cold water and place in freezer until frozen.

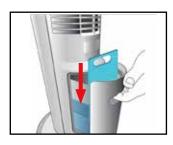

- When Ice Boost is frozen, open the drawer and slide into the slot as shown.
- **3.** Repeat as needed when Ice Boost is no longer cold.

For Best Results, We recommend freezing and placing Ice Boost in water tank prior to filling to avoid overfilling and spilling. This will also help cool your water down quicker, for faster, better results.

FILLING THE TANK



Pull out the drawer on the backside of the unit. Using a pitcher or other container, fill until MAX line. Be sure to at least fill until over MIN line or water pump will not function properly.

For Best Results, use cold water and/or ice boost.

USAGE (CONT.):

FAN SPEED



 
Arctic Air® Tower + has 4 fan speeds - Low, Medium, High and Turbo. To set desired speed, press the solution on the top control panel.

COOLING CONTROL



Press the button to activate COOLING control. You can choose HIGH cooling mode, LOW cooling mode or keep it turned off.

LIGHT SETTINGS



Light brightness can be adjusted to be dimmer or brighter based on your preference. Lights default to high brightness, & when button is pressed, brightness can be adjusted to half-brightness, or off.

TIMER




You can set an auto-off timer for 2, 6, 8, or 12 hours. Simply press the button until your duration is selected. To cancel, press until no longer lit.

OSCILLATION



Arctic Air® Tower + also has wide-coverage oscillation built-in. Press the button once for continuous oscillation, or press again to stop the unit where it is currently is.

MAINTENANCE:

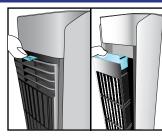


FILTER

To access filter remove front grill by pressing tab on the top of the grill – place aside. Using the finger cut-out on the top of the filter, pull the filter towards you and remove.

We recommend weekly cleaning of your Arctic Air® Tower + and filter to keep in best working condition, and replacing the filter every 3-6 months.

HAND WASH: Hand wash gently with warm water & soap. Shake out excess water and let air dry.

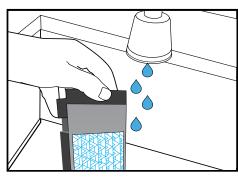


IMPORTANT: If you see mold on the filter or notice a musty smell, stop and clean the filter before further use. Soak the cartridge with equal parts clean water and white vinegar – allow to sit for 45-60 minutes. Rinse with warm water, wring out and let air dry.

UNIT CLEANING

- To prepare for cleaning, run Arctic Air® Tower + until all water has emptied from the water tank, or hold Arctic Air® Tower + over a sink and carefully dump out to avoid splashing or spilling.
- If you notice water tank is dirty, use a small, bendable brush (i.e. toothbrush, bottle brush, etc) and carefully clean the inside of the tank until clean. Rinse clean with warm water.

 To Order A New Filter or Customer Service:



Call: 1-888-611-6750

Email: ArcticAirTower@rephelpdesk.com

WARNINGS:

- Do not carry Arctic Air® Tower + when filled with water. Some water may remain in unit even if tank is empty.
- · Use only clean water. If needed, use distilled water.
- · Please read and follow regular maintenance as recommended in "Maintenance" section of this guide.
- Arctic Air® Tower + works best in non-polluted areas. Large dust/dirt particles may reduce lifetime of unit.
- We recommend use only in dry locations. If using in a moist area or environment, take care not to get water on external
 areas of the product.
- If a leak or spill occurs on the surface of device, unplug Arctic Air® Tower + and let it dry for 24 hours. Then, use
 as normal.
- · Do not place in direct sunlight for extended periods of time.
- Before not using Arctic Air® Tower + for extended periods of time, empty the water tank, turn unit on, and set to highest fan speed for at least 4 hours. This will dry out then filter and inside of your unit.
- · Only use the original power adapter and cord supplied in package.
- Do not touch the power supply or power cord with wet hands.
- Unplug Arctic Air® Tower + when cleaning, removing/replacing filter, or moving the device.
- For best results, place Arctic Air® Tower + on a higher surface like a table or countertop.
- Do not place Arctic Air® Tower + near a heater or any electrical equipment.
- Do not place the device in passageways or high traffic areas where there is a possibility of tripping or knocking it over.
- Do not allow any foreign objects inside Arctic Air® Tower +.
- Do not place items on top Arctic Air® Tower +.
- Do not block the front and back grills of the device.
- Do not turn the device upside down.
- Do not submerge the Arctic Air® Tower + under water or other liquids.
- Do not place Arctic Air® Tower + near open flames or fire sources.
- People with limited physical, visual or mental abilities or lacking proper experience and/or knowledge should never use
 the device without supervision of those responsible for their safety or those capable of assistance in using the device.
- The device can be switched off completely only when disconnected from the power supply.
- The manufacturer does not bear any responsibility for any damage from failure to comply with this product guide.
- A replaceable water filter is designed specifically for this product. If your cartridge has been broken or damaged, you can purchase a replacement.

ONTEL® ASSUMES NO RESPONSIBILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF THE PRODUCT. IN PURCHASING AND USING THIS PRODUCT, YOU ASSUME ALL RESPONSIBILITY FOR CLEANING THE PRODUCT AND MONITORING THE PRODUCT FOR MOLD. ADDITIONALLY, ONTEL® SPECIFICALLY DISCLAIMS ALL EXPRESSED WARRANTIES NOT OTHERWISE SET FORTH HEREIN AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THE FACE HEREOF.

FOR BEST RESULTS:



To **ACTIVATE COOLING**, soak your filter under running cold water.



Fill and Freeze Ice Boost pack prior to use. Place in water tank prior to filling to avoid overfilling.



Place on flat surface & fill tank from a water pitcher.



Control cooling output by pressing statuton. You can choose HIGH cooling mode or LOW cooling mode.

See Product Guide for Care & Cleaning instructions.

DO NOT USE ARCTIC AIR® TOWER + WITHOUT FILTER.
WATER MAY LEAK OUT ONTO FLOOR.

Please Note: You may notice some condensation forming on the front grill. This is normal.

FOR HOUSEHOLD USE ONLY



©2022 Ontel Products Corp. Fairfield, NJ 07004 All Rights Reserved. Made In China
U.S. Pat No. D948009
U.S. Pat No. D948680
AATP-IM-01-1022-200

Model Number: 0S5-800 120VAC, 60Hz, 60W 1122.0101