

Cord Plus Cordless Steam Iron





USER MANUAL

WELCOME

Congratulations!

Dear Customer.

You are now the proud owner of the GS206 Cord Plus Cordless 1250W Steam Iron. Our Cord Plus Cordless Iron is innovatively designed with safety features and technology, and has been manufactured under stringent quality control norms to provide you with a world-class product that offers years of trouble-free operation.

This manual has been created to answer all your queries and doubts. We have provided a detailed description of your GS206 Cord Plus Cordless 1250W Steam Iron, as well as precise instructions for installation, operation, and maintenance. We recommend reading this instruction manual carefully before using the product and keeping it for future reference.

We promise you happiness with GS206 Cord Plus Cordless 1250W Steam Iron.

PART IDENTIFICATION

The product has many functions such as Temperature Regulating, Spraying., Dry Ironing. Steam, Strong steam, Self-Cleaning Function, etc., and with characteristics: luxury shape, high heat efficiency, easy use, good ironing result, work saving and time-saving, and so on.



- 1. Steam Regulating Knob.
- 2. Burst Steam Button.
- 3. Spraying Button.
- 4. Indicator Bulb.
- 5.360-degree Swivel Cord.
- 6. Temperature Regulating Knob.

- 7. Water Tank.
- 8. Soleplate.
- 9. Spraying Mouth.
- 10. Cover of the water filler.
- 11. Self-clean Button.

READ INSTRUCTIONS BEFORE USE

- 1. Before use, check if the voltage of the product is compatible with your home's voltage.
- 2. When using the steam iron, it is recommended to use only distilled water.
- 3. The operator must not leave the iron electrified, and children must never be allowed to touch the iron
- **4.** Remove the plug from the socket outlet before filling the water reservoir with water
- **5.** When filling or emptying the water, make sure to pull out the worn cord plug first.
- 6. Never leave the iron unattended while it is connected to the supply mains.
- 7. After use, turn off the steam knob, turn the temperature regulating knob to "0", pull out the plug, and place the iron on a smooth and stable surface vertically.
- **8.** If the supply cord is damaged, it must only be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid any potential hazard.
- 9. Always use the iron on a stable surface.
- 10. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- 11. Do not use the iron if it has been dropped, shows visible signs of damage, or is leaking.
- 12. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- 13. Always supervise children to ensure that they do not play with the appliance.



It is important to read all the instructions before using the iron to ensure proper and safe use. This appliance is intended for household use only.

- 1. Only use the iron for its intended purpose, which is for ironing fabrics on an ironing board.
- 2. To prevent injury or burns, do not iron or steam fabrics while they are worn on a person/animal.
- **3.** Always turn the iron "OFF" before plugging or unplugging it from the outlet. Never pull the cord to disconnect it from the outlet. Instead, grab the plug and pull to disconnect.
- **4.** Do not allow the cord to touch a hot surface. Allow the iron to cool completely before storing it.
- **5.** Always disconnect the iron from the electrical outlet when filling or emptying water and when not in use.
- **6.** To avoid the risk of electric shock, do not operate the iron with a damaged cord or if it has been dropped or damaged. Take it to an authorized service center for repair.
- 7. Close supervision is necessary when children are using the appliance or when it is used near them. Never leave the iron unattended while it is connected or on an ironing board.
- **8.** Burns can occur from touching hot metal parts, hot water, or steam. Use caution when filling the iron with water or turning it upside down.
- 9. To prevent burns or injury, do not direct steam toward the skin while ironing.
- 10. The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

HOW TO FILL AN IRON WITH WATER: STEP-BY-STEP GUIDE

- 1. Before filling the iron with water, set the 'Variable' steam knob to the '0' position.
- 2. Open the 'Water Fill' Opening and fill the tank with water up to the 'MAX' line on the tank.
- **3.** You can easily observe the water level through the transparent part of the tank. In the case of a low water level, refill the tank using the same procedure as described in steps 1 to 3 above.
- 4. After use, pour out any remaining water.

Note:

To fill the iron with water, it is important to first turn off the iron and unplug the power cord from the electrical outlet.

Note:

It is important to note that most tap water can be used in this iron. However, do not use water additives or substitute water, such as linen or scented water, in the steam iron as they can stain fabrics or damage the iron. Also, do not fill the water more than the 'MAX' position.

USING A DRY IRON

- 1. Stand the iron upright.
- 2. Plug it in.
- 3. Turn the Temperature Control Dial to the 'MIN' position.
- 4. Wait for the indicator light to go out. Now you can begin dry ironing.

Using the Spray Feature

Before using the spray, it's important to check the fabric label for ironing instructions. This is because some fabrics may get stained or spotted with moisture.

The spray feature comes in handy when dealing with stubborn wrinkles and when extra dampening is needed. You can use the spray with steam or dry ironing. Simply pump the Spray Mist knob whenever you need to use the spray.

USING A STEAM IRON

Fill the iron as described in 'How to fill with water'.

- 1. Position the iron vertically and turn the Temperature Control Dial to the steam position.
- 2. Plug the Cord into the electrical outlet.
- **3.** Set the Temperature Control Dial to the steam position. Steam Ironing is only possible when at higher temperature settings indicated with 'MAX' mark; otherwise the water will leak from the soleplate.
- **4.** Preheat the iron until the indicator light goes out. The light will turn off when the indicated setting reaches the correct temperature.
- **5.** Turn the Variable Steam Control Knob to the required setting for different types of fabric. Now steam ironing can begin.

USING THE STEAM BURST FEATURE

The burst of steam feature is designed to provide additional steam for removing stubborn wrinkles. It can be used with both steam and dry ironing. To release the surge of steam, simply press the Power Steam button. You may need to press the button several times to prime the surge system. Wait a few seconds for the steam to penetrate the fabric before pressing the button again for more steam.

Note:

To ensure optimum steam quality, do not apply more than three successive shots after the indicator light goes off.

AFTER EACH USE

- 1. Turn the iron off and unplug it.
- 2. Empty the iron immediately after use. Do not store the iron with water in it.
- 3. Wait until the iron has cooled before storing it. Always set it on the heel rest to protect the soleplate from scratches, corrosion, or stains.
- 4. After the iron has completely cooled down, store it vertically in a safe place.

HOW TO CLEAN THE OUTSIDE SURFACE AND SOLEPLATE

Outside surface:

After unplugging and allowing the iron to cool, simply wipe it off with a damp cloth. If necessary, you can use a mild detergent, but never use any harsh cleaners

Soleplate:

Starch and other residue can be easily removed from the soleplate with a damp cloth. To avoid scratching the finish, never use a metallic pad to clean the soleplate, and never place the iron on a rough surface. If synthetics are ironed at too high a temperature, not only is the fabric usually ruined, but the iron soleplate is often covered with the melted remains of the synthetic fabric. The best way to remove synthetic residue from the soleplate is to heat the iron and iron over an old cotton rag.

WARNING

Never use steam iron cleaners in the iron, as they may damage the working parts of the iron.

MAINTENANCE

10

- 1. Fill the water tank up to half with water.
- 2. Position the iron on its rear heel.
- 3. Select the temperature control dial to "MAX".
- 4. Plug in the iron.
- 5. Allow the iron to heat up until the indicator light first goes out.
- 6. Unplug the iron from the electrical outlet.
- 7. Keep the iron horizontally over the sink.
- **8.** Set the variable steam knob to the maximum position. Boiling water and steam will now emit from the holes in the soleplate.
- **9.** Move the iron forward and backward while this happens: continue letting steam and water escape until the water tank is virtually empty.
- 10. Turn the variable steam knob to the '0' position.
- 11. Plug in the iron.
- 12. Set the temperature dial to the 'MAX' position. Let the iron heat up again. The remainder of the water inside the steam chamber will now vaporize and leave the iron through the soleplate. During this process of dry steaming, it is advised to use it over an old piece of cloth.

IMPORTANT: Your iron will give the best ironing results and last longest if you apply the self-cleaning feature once a month, or more depending upon usage.

MAINTENANCE

If found defective, the unit shall be delivered at the nearest authorised service centre. The usage of the unit should be avoided until it has been fully repaired. Following the repair, the user must adhere strictly to the usage instructions provided by the service centre to prevent any potential mishaps in the future.

The product will be repaired free of cost under warrant period. Warranty covers any defects arising due to the defects in material or workmanship.

Wipro and its authorized service centres will make every effort to ensure prompt repairs are carried out, resulting in a fully functional unit that is free of any malfunctions.



For repair, please contact
Wipro Elato Customer Care on 1800-425-1969

For more information please visit: www.wiproappliances.com