




**Acer Wireless Mouse
(Model OMR266)**



User Manual

Product Interface

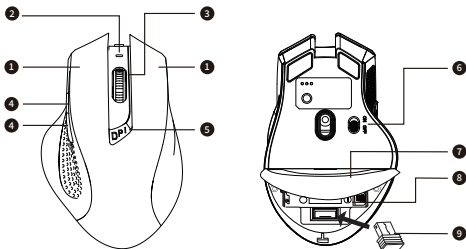

When returning, please put the receiver in the battery compartment and return it together with the mouse.

1. Left & Right Buttons
2. DPI & Battery Indicator
3. Scroll Wheel
4. Forward & Backward Buttons
5. DPI Button
6. ON/OFF Slider Switch
7. Battery Cover Release
8. 2×AAA Battery Storage (Batteries NOT Included)
9. USB Receiver Storage

Product Specifications

Material: ABS

Compatible Systems: Windows/Linux/macOS/Android

Product Weight: 85g/3oz

Product Size: 130*82*42mm/5.1*3.2*1.6 in

Report rate: 125Hz

Resolution/DPI: 800-1200-1600

FAQ

Q1: Why is my wireless mouse not working?

A1: 1. Check if the USB receiver of the mouse is properly connected.
2. Try to plug the receiver into a different USB-A port.
3. Restart the computer to make sure the system recognizes the mouse correctly.

Q2: What should I do if I can't find the mouse's USB receiver?

A2: 1. Open the back panel: Turn over the mouse, find the cover with "Receiver Inside" printed on the bottom of the mouse, and open it.
2. Take out the receiver: The USB receiver is stored inside the cover, take out the receiver.
3. Connect the device: Plug the USB receiver into your computer's USB port.
4. Close the back panel: Close the back panel of the mouse.

Q3: Why is the DPI adjusted but not working?

A3: 1. Make sure you press the DPI adjustment button and confirm whether there is a change in the indicator light (such as a flashing red light) to confirm whether the DPI is switched successfully.
2. Acer wireless mouse is compatible with a variety of surfaces (such as A4 white paper, wood grain board, black cloth pad, colored cloth pad, black leather, brown leather). Try using it on different surfaces to eliminate the influence of the surface on DPI adjustment.

Q4: How can I confirm the DPI of the mouse?

A4: The DPI indicator light will light up when the DPI is switched. The red light of the first gear DPI (800) will turn off after it turns red once, the red light of the second gear DPI (1200) will turn off after it turns red twice, and the red light of the third gear DPI (1600) will turn off after it turns red three times. Easily switch between 800-1200-1600.

Q5: Will there be a prompt when the mouse is low on power?

A5: Yes, when the power is less than 10%, the power indicator light will slowly flash red until the mouse is completely out of power.

Q6: Does this mouse require a driver to be installed?

A6: No additional driver installation is required, it supports plug and play, and can be used immediately after connecting to the computer.

Q7: What is the effective use distance of this wireless mouse?

A7: The effective wireless connection distance of the mouse can reach 8 meters, ensuring a stable and reliable operating experience.

After-Sale Services

If you are not sure how to get your Acer product working properly, please contact our friendly support team at your free time for a quick solution.

E-mail: NE_hub.service@acergadget.com

Customer Services: (978) 230-8895(US)

Mon-Fri: 9am-6pm (EST)

CAN ICES(B)/NMB(B)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this product.

CE declaration of Conformity

Hereby, Acer Gadget Inc. declares that this Acer wireless mouse is in compliance with the essential requirements and the other relevant provisions of the Radio Equipment Directive 2014/53/EU and RoHS directive 2011/65/EU.

Disposal of Waste Equipment by Users in Private Households in the European Union

This symbol on the product or its packaging indicates that this product must not be disposed of with other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the store or the shop where you purchased the product.

