

HEPA Air Purifier

P260



Read this manual completely and carefully before using this product, keep this manual in a safe location for future reference.

CONTENT

1. Important Safety Instructions	2	7. Care, Maintenance And Disposal	8
2. Getting To Know Your Instrument	5	8. Troubleshooting Guide	9
3. Package Contents	5	9. Technical Specifications	9
4. Parts And Controls	6	10. FCC Compliance Information	10
5. To Set Up	7	11. Warranty	11
6. To Use	7		

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Thank you for choosing one of our products.
Please read these instructions for use carefully and keep them for later use.

1. Important Safety Instructions

Signs And Symbols

Whenever used, the following signs identify safety and property damage messages and designate a level of hazard or seriousness.

Read this entire manual, the safety section and all instructions and warnings completely and carefully before using this product. Follow all safety instructions and warnings to avoid hazardous situations and to make correct use of this product.

	This is the safety alert symbol. It alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
 WARNING	Indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation, which if not avoided, may result in minor/moderate injury.
NOTICE	Addresses practices not related to personal injury, such as product and/or property damage.



WARNING To reduce the risk of fire, electric shock, or serious personal injury:

As with every electrical device, use this air purifier carefully and cautiously in order to avoid hazards due to electric shock. Read the notes carefully! Non-observance of the following information may result in personal injury or product/property damage.

- Keep packaging material away from children to avoid danger of suffocation.
- Do not operate the device at voltages other than those indicated on the device (the rating plate is located on the bottom of the device), if it or its accessories show visible signs of damage, or during a thunderstorm.
- In the event of defects or operational faults, switch the device off immediately and disconnect it from the electrical outlet. Do not pull on the power cord or on the device to disconnect the plug from the socket. Never hold or carry the device by the power cord. Keep the power cord away from hot surfaces.
- Always switch off the device before disconnecting it from the electrical outlet.
- Never disconnect the power cord with wet or damp hands.
- Keep the device away from sources of heat as the housing could melt and trigger a fire.
- Ensure that the openings of the device and the power cord do not come into contact with water, steam, or other liquids.

- Do not place the product directly under the air conditioner to prevent condensation from dripping into the product.
- Never reach for a device that has been submerged in water. Disconnect it from the electrical outlet immediately.
- Do not use the device if it or its accessories are visibly damaged.
- Only authorized personnel may perform repairs on electrical devices. Improper repairs may subject users to considerable danger. For repairs, please contact Customer Service.
- Do not open the fan unit.
- Never use underneath a cover such as a blanket, pillow, etc.
- Never use near gasoline or other highly flammable substances.
- Never put the cord under rugs, near heat registers, radiator, stoves or heaters.
- Do not immerse the device in water or other liquids.
- Do not spray any combustible materials such as insecticides or perfumes around the product.
- Protect the unit from strong impacts.
- Do not insert your fingers or objects into the air vent or air inlet.
- Do not block the air inlet and vent, for example, do not place objects on the air vent or in front of the air inlet port.
- Burning the filter may cause irreversible damage to humans or other organisms. Do not use the filter as a fuel or similar.



CAUTION - To reduce the risk of personal injury or product/property damage:

- Route the power cable so that it does not pose a trip hazard.
- Place the device only on a firm, flat surface.
- Do not insert any objects into openings in the device. Ensure that moving parts can move freely at all times.
- Do not place any objects on the device.
- Do not expose the device to high temperatures or direct sunlight.
- The device must be switched off and disconnected from the mains after every use and before cleaning.

- Do not use this product in a room with a large temperature change to avoid condensation inside the product.
- Do not use the product in a humid or high temperature environment (eg. bathroom, toilet, etc.).
- Use an original filter designed specifically for this product. Do not use any other filters.
- This product does not remove carbon monoxide (CO) or helium (Rn), so it cannot be used as a safety device in the event of a burning or hazardous chemical accident.

NOTICE

- This product is not a substitute for normal ventilation, daily vacuuming, or range hoods used during cooking.
- If the electrical outlet to the AC adapter is not properly connected, the plug of the adapter may become hot.
- Make sure the filter is properly installed before the product is in normal use.

2. Getting To Know Your Instrument

People spend a considerable amount of time indoors. The air indoors is often polluted with dust particles, pollen and animal hair. This air purifier cleans the ambient air using an HEPA filter to remove up to 99.97% of ambient material such as pollen and dust.


Other features include:

- Operates quietly with three output levels
- Has a timer function (two, four, or eight hours)
- Filter replacement reminder
- Children's lock

3. Package Contents

1 x HEPA Air Purifier
 1 x Filter System Assembly (pre-filter, activated carbon filter, HEPA filter)
 1 x Power Adapter
 1 x Instruction manual

4. Parts And Controls

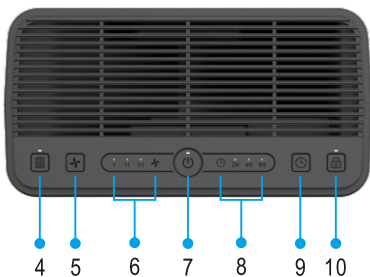

1. Control Panel
2. Air Vent
3. Air Inlet
4. Filter Reset Button
5. Fan Speed Button
6. Fan Speed Indicator
7. Power Button
8. Run Time Indicator
9. Timer Button
10. Child Lock Button

5. To Set Up

1. After taking the Air Purifier out of its packaging, then remove the front panel, remove the filter, tear off the film on the filter, reinstall the filter. Also remove the AC Adapter above the filter, and fasten the front panel.
2. Place the Air Purifier onto a flat, level, stable, steady surface in a place where it cannot be easily knocked over. Make sure the Air Purifier has at least 2 inches (5 cm) of clearance on all sides and 7.87 inches (20 cm) above the product that the air inlet and air vent are not blocked.
3. Connect the AC Adapter to a standard electrical outlet and to the AC Power Jack on the side of the Base; the Power Button will illuminate in red. Route the power cord so that it does not pose a trip hazard.

6. To Use

1. Plug in the power and the power indicator light will turn red. Gently touch the power button and the red indicator light will disappear. The purifier will turn on and operate at II (Medium) fan speed setting.
2. To change fan speed, touch the Fan Speed Button. The fan has three speed settings, I (Low), II (Medium), and III (High).
3. Use the Timer Button to activate the Timer function as desired. Touch once to set a two-hour timer, twice to set a four-hour timer, and three times to set an eight-hour timer. The corresponding setting is indicated by the LEDs above the Timer Button. Touch once more to shut the Timer function off and enable continuous operation.
4. Short press the child lock button to lock the control panel, long press the child lock button for 3 seconds to unlock the control panel.

If filter reset button illuminates in red while the air purifier is powered on, you must replace the filter; See the **7. Care, Maintenance And Disposal** for instructions. After replacing the filter, touch and hold Filter Reset Button for three seconds to reset the filter change timer.

7. Care, Maintenance And Disposal

Air Filter Replacement

1. Shut the air purifier off and disconnect the power cord from the electrical outlet.
2. Remove the front panel.
3. Remove the filter from the air purifier and discard the filter.
4. Remove a new filter and tear off the bag, insert the new air filter into the chamber, then snap on the front panel.
5. Reconnect the power cord to an electrical outlet and touch and hold filter reset button for about three seconds to reset the filter change timer.

Cleaning

Clean the housing of the air purifier with a damp cloth and a mild detergent solution. Do not use any solvents or other aggressive or abrasive cleaning agents, as the surface may become damaged.

Storage

If you do not plan to use the device for an extended period, clean it and store it in the original packaging in a dry environment away from direct sunlight.

Disposal

Observe the local regulations for material disposal. Dispose of the device in accordance with local regulations. If you have any questions, please contact the local authorities responsible for waste disposal.

8. Troubleshooting Guide

Problem	Cause	Solution
The air cleaner will not switch on.	Power Cord is not getting power.	Power cord is connected to a working electrical outlet.
Airflow is diminished.	Filter is dirty or air inlet is blocked.	Replace filter and ensure air inlets are unobstructed.
Air Purifier is very loud.	Air Inlet partially blocked or filter is clogged or not inserted properly. Air Purifier may be positioned on an uneven surface.	Reposition Air Purifier onto a flat, stable, level surface. Check air inlet for obstructions. Replace the filter.

9. Technical Specifications

Dimensions (L x W x H)	12.0*6.1*15.4 inches (305*156*390 mm)
Power Supply	Input: AC 100-240V~50-60Hz Output: DC24V 1A
Output Wattage	24W Max
Operating Conditions	41~104°F (5~40°C)
CADR	260 m³/h (153cfm)
Noise Level	<53 dB
Net Weight	2.8 kg

10. FCC Compliance Information

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

11. Warranty

Within two years after the date of purchase, you will receive a free warranty for any damage caused by manufacturing processes or components that have been confirmed by the company's authorized service station personnel.

This free service does not include purifier filters, auxiliary equipment, transportation costs and on-site service fees that need to be replaced from time to time.

Users please keep this link.

Please bring along this card and the original invoice when repairing. This certificate will be void if it is altered.

Warranty is a guarantee of free repairs within the specified time limit and conditions and does not limit the legal rights of consumers.

Free services will not be available in the following cases:

1. Man-made damage caused by improper use, such as improper power supply, improper use of accessories, improper installation, use without instructions, misuse or negligence.
2. Damage caused by transportation and other accidents.
3. Repairs and modifications not approved by the company.
4. Other damage caused by force majeure (such as natural disasters, voltage anomalies, etc.).
5. Damage caused by general use outside the home (eg industrial, commercial).
6. Aging, abrasion, etc. of the product caused by normal use, but does not affect the normal use of the product.

