 
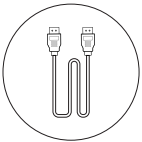 



Instruction Manual

ELECTCOM PRO

2.0 CH HDMI DVD PLAYER

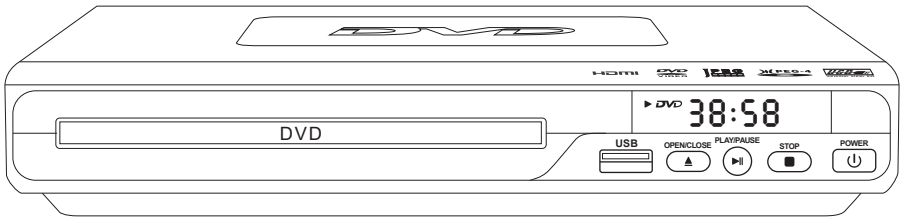

 
HDMI
Cable

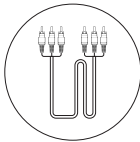


RCA
Cable



 Remote
Control

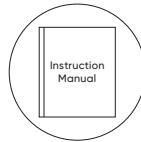

Instruction
Manual

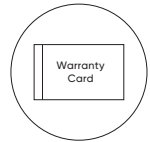 

Warranty
Card


Important safety instructions: read carefully and keep for future reference.

CONTENTS

01	Product Overview	01
	Front Panel & Rear panel	01
<hr/>		
02	Using the Remote Control	02
	How to Use the Remote Control	02
<hr/>		
03	Connecting the DVD Player	04
	Video system connection	04
	Audio connection system	05
<hr/>		
04	Setting the DVD Player	06
	System Setup	06
	Language Setup	07
	Audio Setup	07
	Video Setup	08
	Speaker Setup	08
	Digital Setup	08
<hr/>		
05	Playing the DVD Player	09
	Playable file format	09
	Play Picture CD Disc	10
	Play MP3 Disc	10
	USB Operations	10
	CD Ripping	10
	Options	11
	Tracks	11
	Note	11
<hr/>		
06	Safety information	12
<hr/>		
07	Troubleshooting	14
<hr/>		
08	Warranty	16


Product Overview

 Front Panel

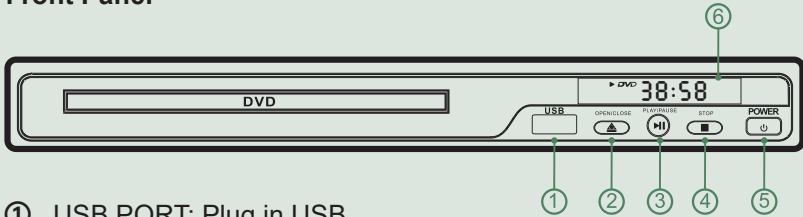


- ① USB PORT: Plug in USB
- ② OPEN/CLOSE BUTTON: Open/close tray
- ③ PLAY/PAUSE BUTTON: Play start/play pause
- ④ STOP BUTTON: Return to the beginning of playback
- ⑤ POWER: Power on/off
- ⑥ LED DISPLAY: Displays the playing time

 Rear Panel

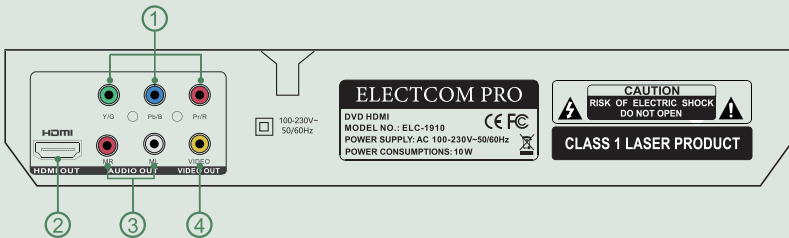

- ① COMPONENT VIDEO(Y.Pb/Cb. Pr/Cr) OUTPUT: Video signal output interface
- ② HDMI DIGITAL OUTPUT: HD Video signal output interface
- ③ L/R CHANNEL OUTPUT: Audio output interface
- ④ VIDEO OUTPUT: Video output interface

 Using the Remote Control

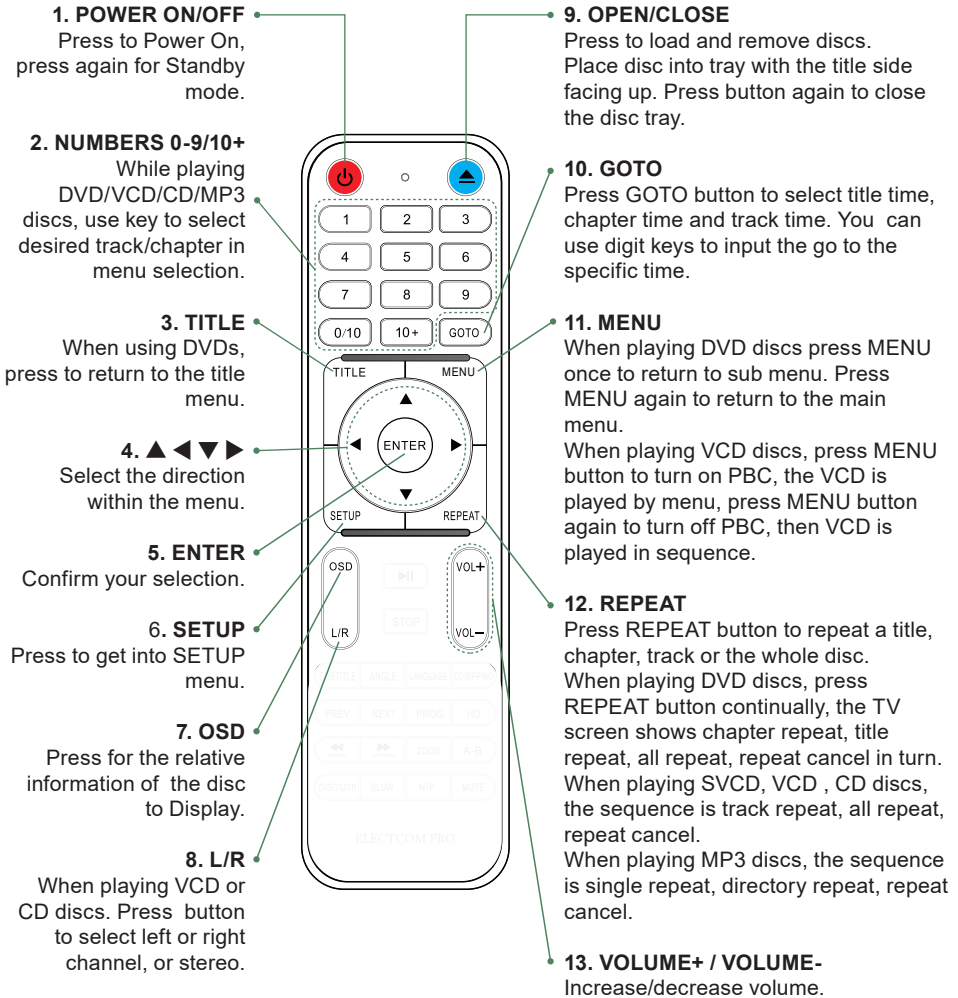

Remote control operation

- Insert the batteries into the battery compartment. Point the remote at the remote sensor in front of the player. Make sure that there are no obstacles in the way between the remote and the player.
- Take the batteries out of the remote control if it is not going to be used for a long time.

-
- 14. PLAY/PAUSE**
Press once to pause, press again to play.
- 15. STOP**
Press to stop media. Press the Play/Pause button to resume.
- 16. SUBTITLE**
When playing the DVD discs with multi-subtitles, press SUBTITLE continually to get to the language you desire.
- 17. ANGLE**
Change angle in DVD mode.
- 18. PREV (PREVIOUS, I<<)**
In DVD mode, press to go to previous chapter. With SVCD, VCD, CD, MP3 discs, press to go to previous track.
- 19. NEXT (NEXT, >>I)**
In DVD mode, press to go to next chapter. With SVCD, VCD, CD, MP3 discs, press to go to next track.
- 20. REWIND(◀◀)**
Press this button for quick rewind search.
- 21. FORWARD(▶▶)**
Press this button for quick forward search.
- 22. DISC/USB**
Press this button to switch the play between DISC and USB.
- 23. SLOW**
Press to select slow speed playing.
- 24. LANGUAGE**
When playing DVD with more than one audio stream, press LANGUAGE to select what you desired.
- 25. CD RIPPING**
Press the button to use the CD ripping function.
- 26. PROG**
If the disc is with 2 or more tracks, chapters or titles, set up the playing order as your reference. Press this button to enter program menu. Press digit key to input the number of the track, title or chapter, If the programmed tracks are over ten press 10+ to go on programming. (Maximum 16 programmable items) use the up / down / left / right key to move the cursor to the PLAY. Press ENTER to start Program play.
- 27. HD**
Press the button to choose the following resolution levels from the HDMI output.
- 28. A-B**
Press to repeat certain sections. Press button on start point (A) and the end point (B) to select section. Cancel by pressing button a third time.
- 29. ZOOM**
Press to zoom in, press again to zoom out. Use arrow keys to move picture.
- 30. MUTE**
Mute the sound during playing.
- 31. N/P**
Press to switch the TV system between NTSC and PAL.

Connecting the DVD Player

Video system connection

Composite Video

Use the AV cable (yellow terminal) to connect composite video output of this unit to the TV/monitor video input.

Component Video


Use 3-core AV cable to connect the component output terminals of this unit to the corresponding TV/monitor input.


HDMI Output

Use a HDMI cable to connect the HDMI output to the HDMI input terminal.

Note!!!:

  - Which connection to use depends on the TV/monitor input terminal.
- Do not use all the connections at one time, otherwise the picture will be affected.
- Only the physical connection conforms to the video setting can produce the normal picture. (Please refer to the Video Setup in System Setup)

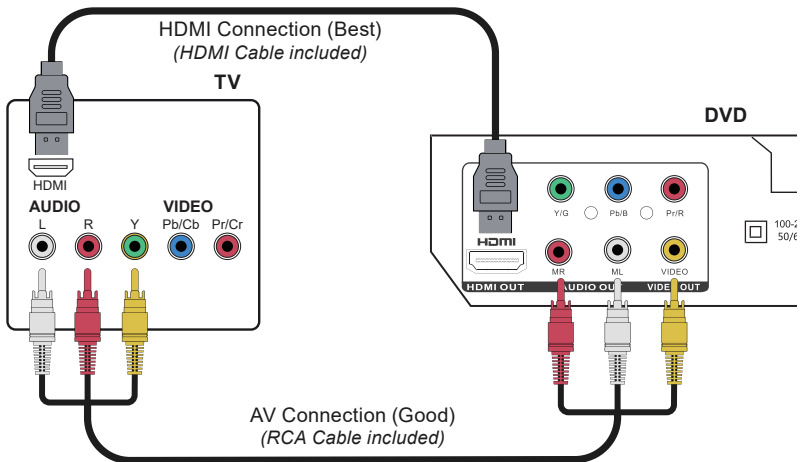

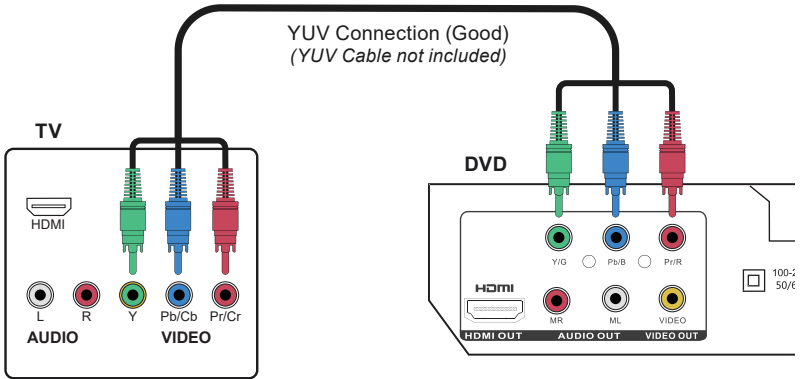


Audio connection system

Stereo Audio

Use a pair of AV cables (red for right/white for left) to connect the stereo audio output of this unit to the TV if you want to have sound from the TV.

Note!!!:

 - The physical connection should match with audio output setup of this unit. Please refer to Audio Setup in System Setup.

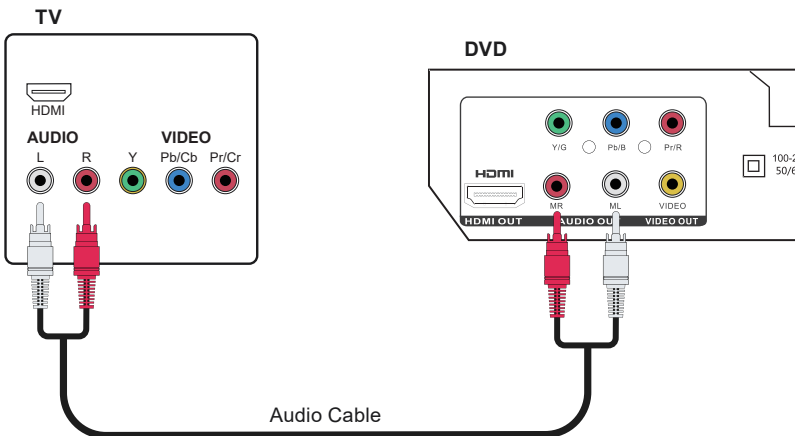

Setting the DVD Player

Basic Operation

Press **SETUP** on the remote control unit to setup the initial setting, select related[SETUP PAGE] with the directional buttons.

Menu Operations

You can setup the mode of audio and video output, initial setup, parental control level, etc. You can also select the aspect ratio of the playback picture to your TV screen. Press **SETUP** to display the setup menu and the system will automatically stop play.

1.System Setup

Press **SETUP** and select system setup page.

- **TV SYSTEM:** Use ▲ ▼ arrow buttons to make TV system selection. There are four TV output systems to choose from: NTSC, PAL, PAL-M and AUTO.
- **HD OUTPUT:** Use ▲ ▼ arrow buttons to set video resolution, there are three resolution(720P, 1080I, 1080P).
- **VIDEO:** There are different video output modes to choose from:
 - INTERLACE-YUV: Use Y Cb Cr terminals to output signals.
 - P-SCAN YPBPR: Use Y Cb Cr terminals to output signals and convert to progressive output.
 - TV TYPE: Using ◀ ▶ arrow button to select TV aspect ratio.

- ◆ 4:3/PS:

Pan & Scan video output for a normal TV set. The screen displays the wide picture on the wide screen with a left and right portion automatically cut Off.

- ◆ 4:3/LB:

Letter Box video output for a normal TV set. The screen displays the wide picture with bands displayed on the upper and lower portions of the Screen.

- ◆ 16:9:

Wide screen video output for a wide screen TV set.

- **PASSWORD**

The initial setting of this item is under locked status. You can not set the rating and also can not change password . Input initial password: 0000 **0/10** and press **ENTER** to confirm and then you can set rating and change password.

- **RATING**

Playing some DVD discs can be limited depending on the age of the users. The parental control function allows playback limitation level to be set by the parent from level 1 to level 8. The level is from high to low. Level 1 is the lowest level and level 8 is the highest lever. This function is only valid for some DVD discs that have the limit level. And you should set the password first and make sure the password lock is locked.

- **DEFAULT**

Use the ► arrow button to select [RESTORE] and press **ENTER** to return all the settings of the system to the original settings.

2.Language Setup

- **OSD LANGUAGE**

- **AUDIO LANGUAGE**

- **SUBTITLE LANGUAGE**

- **MENU LANGUAGE**

Use ▲ ▼ arrow buttons to select desired language and press **ENTER** to confirm.

If the selection is invalid, it means that the language is not available for this disc.

3.Audio Setup

- **AUDIO OUT:**

Use ► arrow button to select the audio output way.This is the way for you to select SPDIF/OFF, SPDIF/RAW, SPDIF/PCM.

- **KEY:**

Press ▲ ▼ to adjust the tone level.

4.Video Setup

- **BRIGHTNESS**
- **CONTRAST**
- **HUE**
- **SATURATION**
- **SHARPNESS**

Use ▲ ▼ to adjust the corresponding value of the video output.

5.Speaker Setup

- **DOWN MIX LT/RT:** When you play a disc that has logic effect, you can choose LT/RT output.The disc information will be decoded and show better effect.
- **STEREO:** When 2ch output is selected, normal stereo signals may be played from the L&R output socket.

6.Digital Setup

- **OP MODE**

LINE OUT: The input signals are linear compressed and the volume is lower. You should rather choose LINE OUT setting at night.

RF REMOD: The volume is higher and adapt to daytime use.

- **DYNAMIC RANGE**

When you choose LINE OUT mode, select DYNAMIC RANGE to adjust the compression ratio and you can get different effects. When you adjust to FULL, the compression ratio will be set to the lowest level. When adjust is OFF, the compression ratio will be set to the lowest level.

- **DUAL MONO:**

You can set the audio output mode for Left or Right channel. There are four modes: STEREO, MONO L, MONO R, and MIX MONO.

Playing the DVD Player

Playable file format

Supported discs format:

DVD, DVD+RW, DVD-RW, DVD+R, DVD-R, HDCD, VCD, CD, CD+R, CD-R, MP3 Music CD, Super VCD, CD-R/-RW

DVD Video	DVD-Video format
DVD-R	DVD-Video format
DVD-RW	DVD-Video format
CD-Audio	CD-DA, Video CD, Super Video CD
CD-R	CD-DA, JPEG, MP3
CD-RW	Video CD, Super Video CD
USB	MP3, JPG

Note!!!:

- It may not be able to play all the media discs in some cases due to the type of discs (Especially for those DVD±R/RW discs), of which the method or device of the recording and how these files were created would distort the original contents and format.
- This unit does not guarantee the connection with all the USB devices.
- The USB port does not support USB charging.
- FAT and FAT32 files systems are supported.

Play Picture CD Disc

Press ▲▼◀▶ to select the desired picture.

Play MP3 Disc

- When playing a MP3 disc, there is a menu screen on TV press the [▲] or [▼] button to shift the cursor to select the track or folder and press the **ENTER** button to play the selected track or folder (it needs to enter the sub-folder to select the track and press the **ENTER** button to play for some MP3 discs).
- Also use the digit button to select the track.

USB Operations

- Remove the DVD/CD disc from the tray, insert the USB drive into the USB jack. The player will automatically detect the readable files in the USB drive. Use remote control to select the files for playback. (USB file unreadable means no supported file in USB.)

CD Ripping

The product has CD ripping functions.

- Put a CD into the disc tray and then plug in an USB drive.
- Press **CD RIPPING** key on the remote. A CD rip menu will be shown on the TV screen.

RIP CD - TO MP3	
	ENCODER OPTIONS
	SPEED 1X
	BITRATE 128KBPS
	FILE OPTIONS
	CREATE ID3 TAG <input checked="" type="checkbox"/>
	CREATE PLAYLIST <input checked="" type="checkbox"/>
	STORAGE OPTIONS
	STORAGE USB
▶ OPTIONS	
TRACKS	
START	
QUIT	

Options

- First, select the copying SPEED normal or fast when normal is selected, you can listen to the music while copying is in process. When fast is selected you will only see the copy process in the TV screen.
- Second, select the BITRATE. Usually, 128K rate is used.
- Third, CREATE ID3 TAG. If the CD music files have the song name or singer name, you can build the ID3 information.

Tracks

- Move the cursor to right hand side. Select the song that you want to record. When it is selected, a Tick will be shown. If you move the cursor down to choose Select All, all the songs on the list will be copied. If selected none is chosen, any selected songs will be canceled. Move the cursor to the left side to select Start, press **ENTER** key to confirm. Then the copying will start.
- You will see the next menu page which shows the copying is in process. Move the cursor to the left side to select QUIT, press **ENTER** key.
- Exit RIPPING function.
- Play MP3 songs, press the **CD RIPPING** button, put MP3 songs directly copied to the USB device.
- MP4 video playback, in the stop state, press the **CD RIPPING** button, video to MP4 directly copied to the USB device.

Note

1. Make sure the USB drive has enough memory space for the music files.
2. The copied files are in MP3 format only.

Safety information

Important Notes:

- Please read through the manual carefully before connecting and operation. Do not open the cover or touch any internal components for non-professional. Turn off the power when the unit is not being used. (Unplug the power cord if the unit is not used for a long time.)
- Do not expose the unit to direct sunlight.
- Keep away the heating sources or equipment.
- Do not expose the unit to moisture.
- Place the unit on a horizontal level. Keep the unit ventilated. Don't block the heat hole. Overheat may cause malfunction.
- Clean the cabinet with soft cloth Detergent or alcohol is forbidden.
- This book is only a guide for user's operation not a criterion for configuration. This apparatus shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on the apparatus.



The lightning flash is intended to alert the user to the presence of dangerous voltages within the product's enclosure, and touching the inner parts may result in a risk of electric shock to persons.



The exclamation mark is intended to alert the user to the presence of important operating instructions.



To reduce the risk of electric shock or fire, do not open the cover. Refer servicing to qualified service personnel.



This mark indicates that this unit contains a class 1 laser product. The laser beam may produce harmful radiation if it directly touches the human body.

Specification

Power supply	AC~100-230V 50/60HZ
Power consumption	Less than $\leq 15W$
TV system	PAL/PAL-M/NTSC/AUTO
Laser wavelength	650nm,780nm
Audio frequency range	DVD: 20Hz-20KHz(48KHzPCM) 20Hz~44KHz(96KHz PCM) CD: 20Hz~20KHz
S/N ratio	≥ 60 dB
Audio dynamic range	≥ 60 dB
Operating conditions	Temperature: 5-40°C, operation flat, horizontal
Video output	1.0V(P-P).75 Ω
Audio output(analog audio)	2.0V(rms)

Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs.

Category	Symptom	Cause(s)	Measures	
Connection	There is no power	The power cord is not connected	Make sure that both the TV and the DVD player are powered on	
		Audio cable does not connect well	Connect the cable properly	
Sound	There is no sound	Power off the connected equipment	Turn on power	
		Audio setup is not correct	Select the suitable audio setup	
		In fast forward/rewind playback mode	Stop fast forward/rewind playback mode	
	The volume is low	Volume down	Press "VOL+" on the remote control to increase the volume or increase the TV volume	
		System is in LINE OUT setting	Press the SETUP button on the remote control to set the mode. SETUP—Digital Setup—OP MODE—RF REMOD	
Picture	There is no picture	TV video setup is not correct	Select the TV suitable setup	
		Video cable does not connect well	Connect the cable properly	
	The picture is distorted	No signal connection	Make signal connection settings for TV	
		Dirty disc	Clean the disc	
	Brightness or picture instability	Anti-copy circuit influence	In fast forward or fast rewind mode	Stop fast forward/rewind playback mode. Sometimes, the tiny distortion appears. It is normal
				Connect the DVD unit to TV directly

Category	Symptom	Cause(s)	Measures
Play	I can't play the disc	Disc format not supported	Blu-ray discs are not supported, you can check the disc formats supported by P9
		Without disc	Put in the disc
		Disc is put upside down	Put the disc properly
		The disc is dirty or bad	Clean or replace the disc
		There is menu on TV screen	Use SETUP to turn off menu
Device	The button not working	Parental control is working	Set up parental off or change the setup
		Power wave or other sialic interference	Turn on/off the power and try again
		Disk tray injects and ejects repeatedly	Power off. Unplug the power cable and wait for 30 seconds. Plug in the power cable and try again
Remote control	The disc tray doesn't work	Disk tray does not open	1. Power off. Unplug the power cable and wait for 30 seconds. Plug in the power cable and try again 2. Press 'POWER' and 'EJECT' in the same time
		Remote control is not pointed at the sensor	Point the remote control at the sensor
		Remote control is too far from DVD unit	Operate the remote control within 7m and make sure no obstacles in between
		Batteries are exhausted	Replace the batteries

Warranty

Register Your Product



Returns and Replacement

Easy returns and free replacements after the return window expires!



Customized Support

Get assistance quickly with your information on hand.



News and Offers

Stay up-to-date with product updates and offers.



Scan the QR code to get it!

Customer Service

Need help with:

- Connecting your devices
- Product setup
- Return & Replacement
- Technical support
- More information



Email Support



Live Chat



Amazon Message

Email: SUPPORT@ELECTCOM.CO

