 


WonderBuddy User Guide

Know the Product

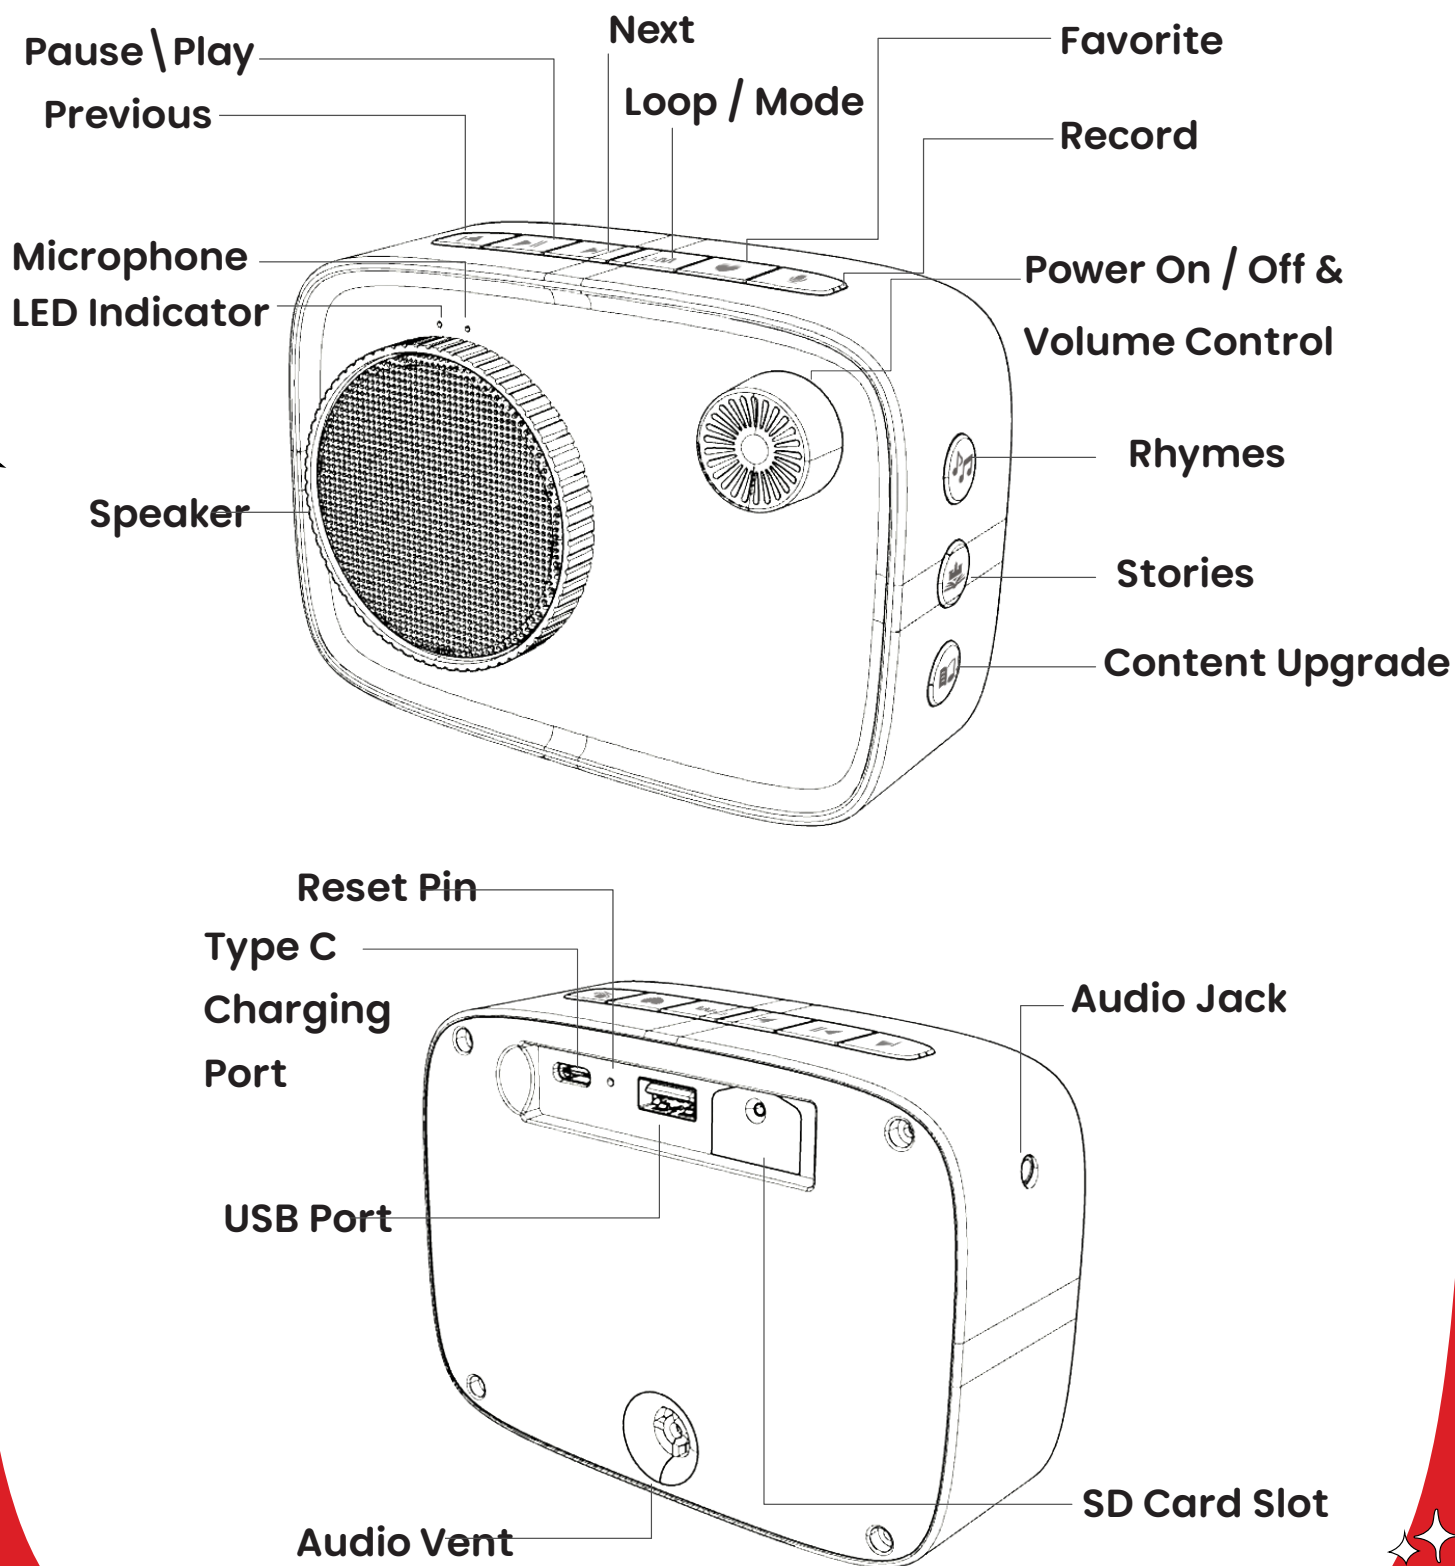



Key Functions



Rhymes

Enter Rhymes Playlist: Press the button briefly.

Next Playlist: Press the button briefly.

Previous Playlist: Press the button twice.



Stories

Enter Stories Playlist: Press the button briefly.

Next Playlist: Press the button briefly.

Previous Playlist: Press the button twice.



Content Upgrade

Enter Personal Playlist: Press the button briefly.

Next Playlist: Press the button briefly.

Previous Playlist: Press the button twice.

Note:

Users can add their preferred content to their Personal Playlist.





Functions



Power ON/OFF & Volume Control



Power ON / Volume Increase: Rotate the knob clockwise.

Power OFF / Volume Decrease: Rotate the knob counter-clockwise.

Playback Controls



Previous Track: Press the button briefly.

Skip 5 Previous Tracks: Press and hold the button.



Pause: Press the button briefly.

Play: Press the button briefly again.



Next Track: Press the button briefly.

Skip Next 5 Tracks: Press and hold the button.



Loop and Mode Settings

Loop ON/OFF: Press the button briefly.

Mode Change (Bluetooth & USB Modes): Press and hold the button.



Favorite Function

Add Track to Favorite Playlist: Press and hold the button.

Play Tracks from Favorite Playlist: Press the button briefly.

Delete Track from Favorite Playlist: Press the button twice during playback.





Recording Function

Start Recording: Press and hold the button.

Stop Recording: Press the button briefly.

Play a Recorded File: Press the button briefly.


Delete a Recorded File: Press the button twice during playback.

NOTE:

If USB is inserted in the device while recording, the recorded tracks will get saved on the USB in a separate folder titled 'RECORDING'.

LED Light Indicator

● Blue flash for 2 seconds	Power ON
● LED off	Playback
● Fast blinking blue	Recording
● Red and blue flashing	Bluetooth Connecting
● Solid blue	Bluetooth Connected
● Solid red	Charging

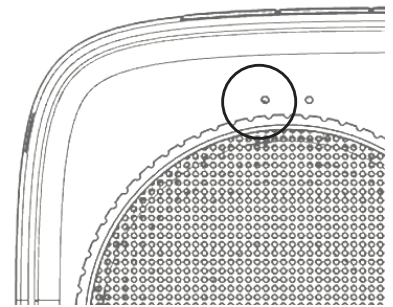 

Device Pairing

- Long press the Mode key to enter Bluetooth mode.
- The LED will blink red and blue. ●
- Turn on Bluetooth on your smartphone/laptop.
- Select "WonderBuddy W11" from the list.
- Enter password 0000 if prompted.





Content Playlist

500+ Stories & Rhymes curated across 10 magical playlists.

Stories Playlist:

- Fantastic Fairy Tales
- Fabulous Fables
- Tales from Around the World
- Adventure Tales
- Spellbinding Stories
- Spooktacular Stories
- Sci-Fi Thrillers

Music Playlist:

- All Time Favorites
- Sing Along Rhymes
- Learn Along Rhymes



How to Update Content

1. Connect your device to the computer using a Type-C USB data transfer cable.
2. Open the WonderBuddy memory drive under "My Computer."
3. You will see multiple folder categories as below





3. You will see multiple folder categories as below

 MUSIC_1

 STORY_1

 MUSIC_2

 STORY_2

 MUSIC_3

 STORY_3

 UNIQUE_1

 STORY_4

 UNIQUE_2

 STORY_5

 UNIQUE_3

 STORY_6

 RECORDING

 STORY_7

4. Open the Unique folder _1, Unique _2, Unique _3

5. By default, these Unique folders are empty for you to update with your own content.

6. Please do not change any of the folder names.

7. Add new tracks by selecting any Unique folders per space availability.

8. Alternatively, you can drag and drop your content directly into any of the Unique folders.

9. Close the WonderBuddy Drive on your computer and disconnect the data cable to start playing content on your WonderBuddy device normally.





Note

Use a Type-C USB cable with data transfer capability.

The device should be in Power On mode during data transfer.

A voice message "Data Transfer Mode" will confirm a successful connection.

Caution

- Always supervise children aged 3 and under while using the product.
- The battery charger should be handled by adults or under adult supervision.
- Regularly check the charger for damage.
- Do not use a damaged charger.
- Do not rename folders on the SD Card: Music, Stories, Recording, and Personal.
- Avoid charging for more than 4 hours continuously.
The device will auto-shutdown when the battery is nearly depleted.
- Ensure the power switch is off before charging.
- Clean the product with a soft cloth. Avoid water exposure as the product is not waterproof.
- Keep the product away from direct sunlight and extreme temperatures.





Limited Warranty

The manufacturer warrants that the Audio Storybox will be free from defects in workmanship and materials for 6 months from the date of retail purchase.

During this period, repairs will be provided free of charge for both parts and labor.

Visit www.wonderbuddyworld.com for more details.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.





 
This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.



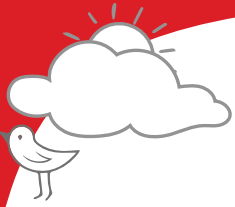

www.wonderbuddyworld.com

Vikaa Innovationns Private Limited

1501, 15th Floor, Lodha Supremus, Saki Vihar Road, Saki Naka,
Andheri East, Mumbai-400072, Maharashtra, India.

Consumer Complaints & Feedback:

Contact our Support Buddy at the Marketer's address or
email at - help@wonderbuddyworld.com.

Designed by ViKaa Innovations Private Limited



Model Number: W11
FCC ID: 2BKAX-W11

