

heysong

**HEYSONG BUBBLE
SPEAKER**

TAKE HEYSONG! GET MORE FUN!

THANKS NOTE

Dear Sir or Madam

Thank you for choosing HEYSONG BUBBLE!

We are committed to becoming a world-class brand, enabling more people to enjoy higher quality music at a lower price. We can not achieve the goal without your support. For us, you are not only a user, but also a designer who can make the product better. If you have any problems while using, you please consult our customer service team, we will solve the problem for you as soon as possible! We will try our best to improve the product and your using experience. Thank you again.

Best Wishes

To make the most of the features of the speaker, we recommend you take a brief look at this instruction manual before using.

SPECIFICATION

Dimensions: L 102 * W 93 * H 43 mm

Wireless Working Frequency: 2.402-2.480 GHZ

Wireless Transmission Distance: Up to 10m

Weight: 175g

Charging: 5V, 600mA

PACKAGE CONTENTS



1. Bluetooth Speaker

2. USB Charging
Cable

3. User Manual

4. Carabiner

WATERPROOF

HEYSONG BUBBLE is rated IP67, which means the speaker can be heavily splashed with water, it can even submerge into water of one meter depth for 30 minutes. If the speaker gets wet, you better dry up the speaker before using it again.

Note: Please ensure that the silicone case cover is closed and secure when using the speaker in a wet environment.

IMPORTANT SAFETY PRECAUTIONS

When using your Speaker, You should follow some basic safety precautions:



1. Keep this product and its charging cable away from excessive heat.



2. Do not charge this speaker with a damaged charge cable. Please try to use the original charging cable in the package to charge the speaker.



3. Do not disassemble your device.


CHARGING YOUR SPEAKER

1. Connect one end of the included USB Charging Cable to the Charging Port on your speaker, plug the other end of the USB Charging Cable into a suitable USB port on your computer to recharge your speaker's internal rechargeable battery.
2. When charging, a red LED light will illuminate to indicate that your speaker is charging. The red light will turn off when your unit is fully charged.

Tips:

1. You will hear a low battery prompt when battery is low and needs to be recharged.
2. To protect the battery's durability, fully charge the speaker if it is not used for a long time.
3. The internal battery of your speaker takes approximately 2~3 hours to be fully charged.

OPERATION GUIDE

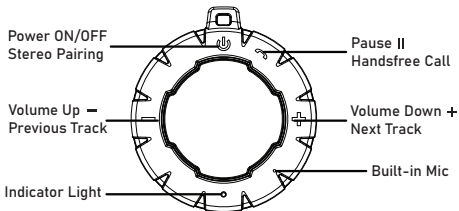

- 1. Power ON/OFF**
Press and hold the "  " for power on
Press and hold the "  " again for power off
Short Press the "  " while the power is on to enable the True Wireless Stereo pairing.
- 2. Previous:** Press and hold "  " to access the previous track in playlist.
Short Press "  " to lower the volume.
- 3. Next:** Press and hold "  " to access the next track in playlist.
Short Press "  " to increase the volume.
- 4. Press "  " to play or pause a track.**
You can also press this button to pick up the call.
- 5. Light Button** 
Long press  "and"  " to cycle light mode.
- 6. Please stay close to the microphone jack when speaking, preferably less than 0.5m away.**

Pair HEYSONG BUBBLE with Your Bluetooth Device

To pair your Bluetooth audio device to your Bluetooth Speaker for the first time. Please follow the steps below :

1. Make sure your Bluetooth device is held within three meters of your speaker.
2. Press and hold the  button for 3 seconds to turn on your speaker. It will go into pairing mode, and the blue indicator will keep flashing.
3. Activate Bluetooth on your device and search for other devices. Once you have found "HEYSONG BUBBLE" on your Bluetooth device, click it for pairing.

Note:

1. This speaker will pair with the last connected device when that device is in range.
2. The speaker will be turned off if no device has been paired for more than 10 minutes.

TWS FUNCTION

If you have two of HEYSONG BUBBLE, you can use the following steps to achieve wireless stereo pairing.

1. Power on both speaker and make sure your speakers are not connected to other devices yet.
2. Press "  " button on one of the speakers, the two speakers will connect automatically with indicated tone. You will see a blue LED blinks quickly on one unit and solid blue LED on the other one.
3. Search Bluetooth device on your audio source and select  HEYSONG BUBBLE.
4. When your speaker is successfully paired with the audio source, the indicator light will remain solid blue.
5. Long press the "  " button on one of the speakers to disconnect the TWS connection.
6. Long press the "  " button again on one of the speakers to disconnect the Bluetooth from the device.

TROUBLESHOOTING

Frequently Asked Questions	Solution
A prompt " low battery " heard every few seconds	Speaker needs to be charged.
Bluetooth connection distance cannot reach to 10m.	The signal is blocked by obstacles such as multiple walls, avoid operating the Bluetooth speaker in areas with strong electromagnetic interference, such as induction cookers, high-power fans, motors, etc. Move the speaker close to the Bluetooth device, fully charge the speaker and try again.
The speaker will not power on	Speaker needs to be charged.
The speaker doesn't control tracks/ volume	Speaker needs to be in Bluetooth mode for full control.