



User Manual of Product 1:

Summer Infant Pop 'N Jump with Canopy


to store (continued):

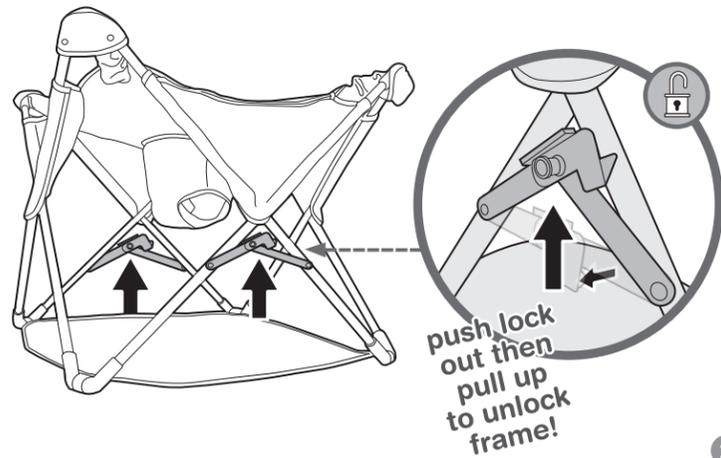

2

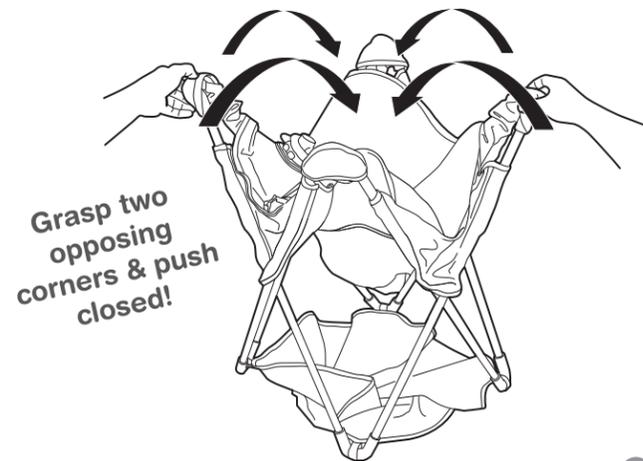


3

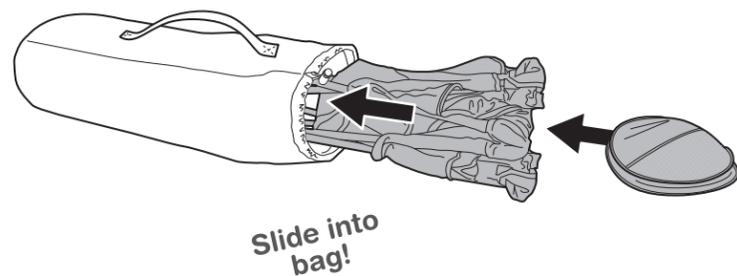

4

remove seat pad:

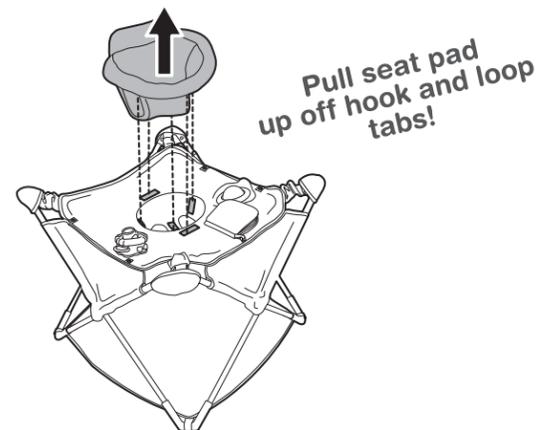

cleaning and maintenance:

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts, or sharp edges. **DO NOT** use if any parts are missing or broken.

- Never use this product if there are any loose or missing fasteners, loose joints, broken parts or torn mesh/fabric. Check product before assembly and periodically during use. **Contact Summer Infant if any of these conditions are observed.**
- Wipe clean with a damp cloth or sponge, using mild soap and warm water to clean. Towel or air dry.
- Removable Seat: machine wash with like colors using mild soap. Tumble dry low.



visit us at www.summerinfant.com

Summer Infant stands behind all of its products. If you are not completely satisfied or have any questions, please contact our Consumer Relations Team at 1-800-268-6237 or www.summerinfant.com/contact


(For Europe call +44 (0)144 250 5000 or customerserviceuk@summerinfant.com)

Summer Infant, Inc.
1275 Park East Drive
Woonsocket, RI 02895 USA
1-800-268-6237
© 2015 Summer Infant, Inc.

Summer Infant Europe, Ltd.
First Floor, North Wing
Focus 31, Cleveland Road
Hemel Hempstead, HP2 7BW UK
+44 (0) 144 250 5000

Please retain information
for future reference.
Colors and styles may vary.
MADE IN CHINA.
9/15

summer
infant®

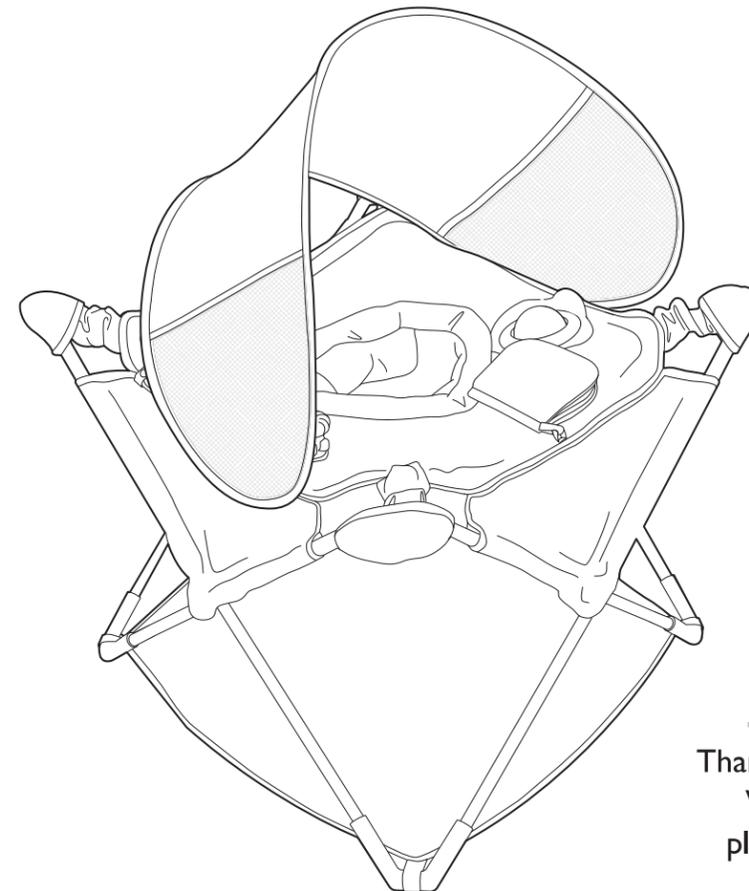

Please read the following instructions and warnings carefully before assembly and each use.

KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE.

No tools required.

For technical support, contact us at 1-800-268-6237 or www.summerinfant.com/contact

For use with children from 6 - 12 months.

USE ONLY FOR A CHILD:

- Who is able to hold head and neck upright unassisted.
 - Who is not able to walk or climb out of product.
 - Who weighs less than 25 lbs. (11.3 kg) and is less than 30 inches (76 cm) in height.
- Adult assembly required.

Pop 'n Jump

INSTRUCTION MANUAL


Thank you for purchasing Pop 'n Jump by Summer Infant. With a lightweight folding frame, jumping feature and playful toys, Pop 'n Jump is sure to keep your little one entertained, indoors or out, at home or on the go.

⚠ WARNING: IMPORTANT! KEEP FOR FUTURE REFERENCE!




⚠ WARNING: TO PREVENT SERIOUS INJURY OR DEATH:

- Use only for a child who is able to hold head and neck upright unassisted and who is not able to walk or climb out of the product.
- NEVER leave child unattended. ALWAYS keep child in view while in the product.
- To avoid tip over, place product on a flat, level surface.
- Strings can cause strangulation! DO NOT place items with a string around child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over product or attach strings to toys.
- NEVER use near stairs, ovens, space heaters, fireplaces, swimming pools or any other object which may injure your child.
- NEVER lift and or carry child in product.
- NEVER try to spin child in fabric seat.
- ALWAYS ensure both locks are secure before placing child in product and check security of both locks before each use.
- ALWAYS install fabric seat insert prior to placing child in product. Secure the hook and loop strips securely to keep the fabric seat in place.
- NEVER adjust seat while child is in product.
- DO NOT attempt to remove fabric floor.
- DO NOT use the product if it is damaged or broken.

components:

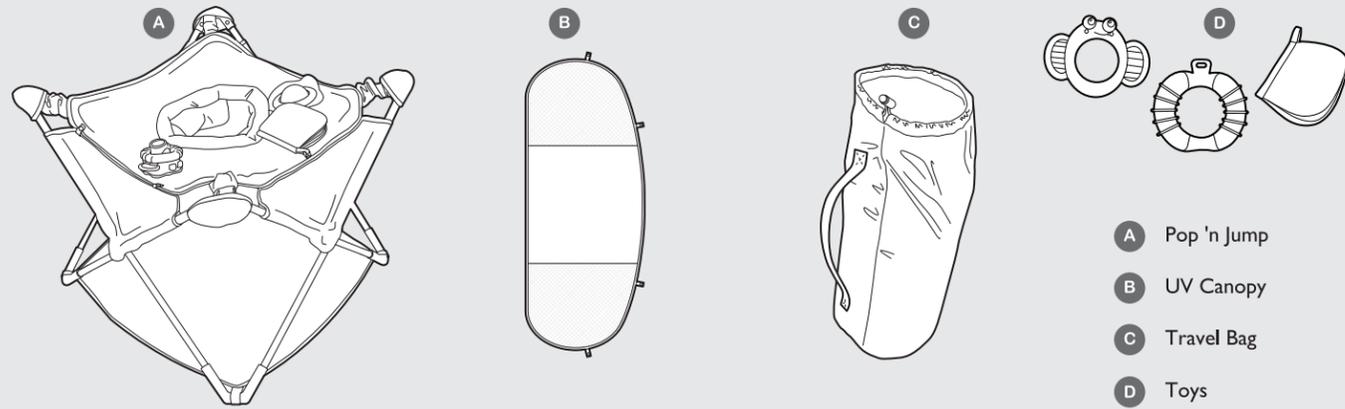


assembly:

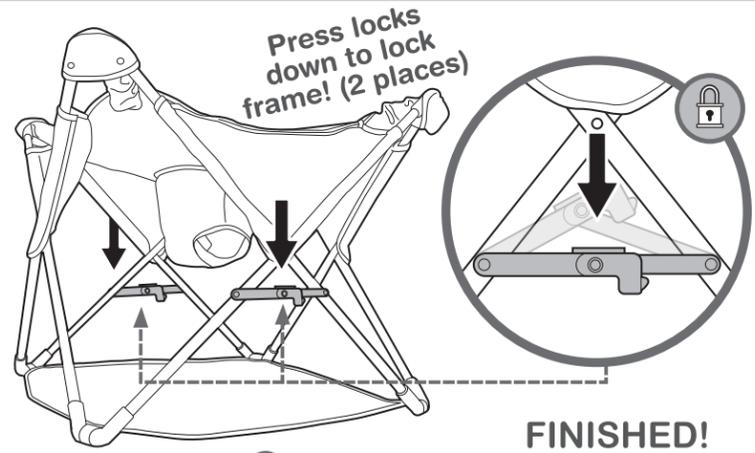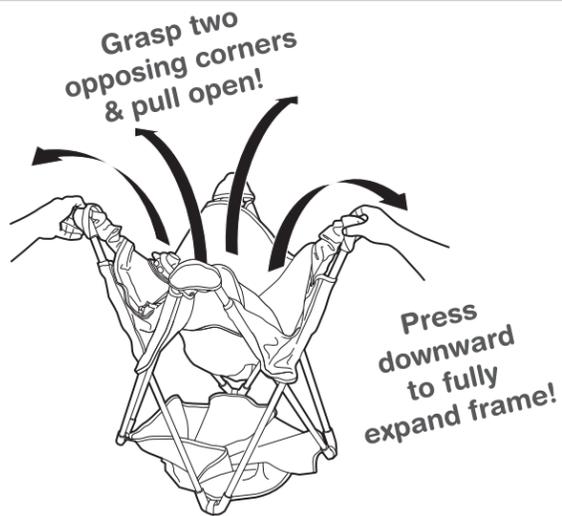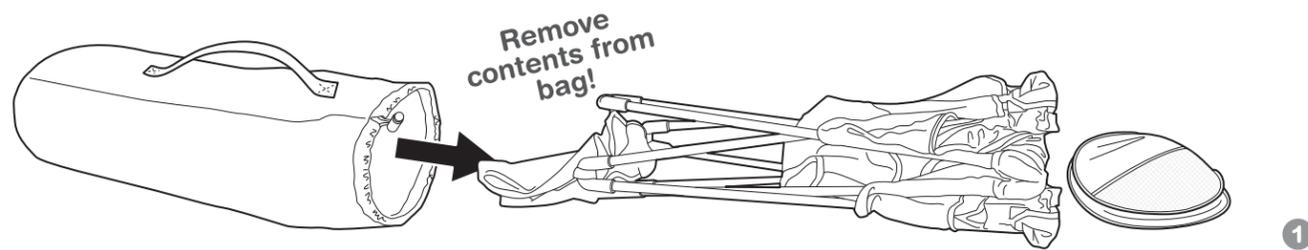


IMPORTANT: Check security of both locks before each use.

attach canopy:

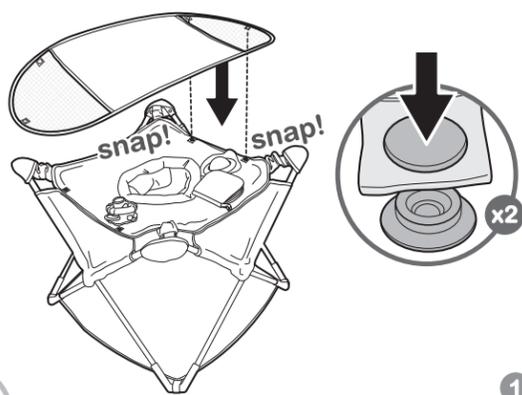


Hint: Adjust canopy for maximum coverage by gently pulling top of canopy forward so top/sides are fully extended!

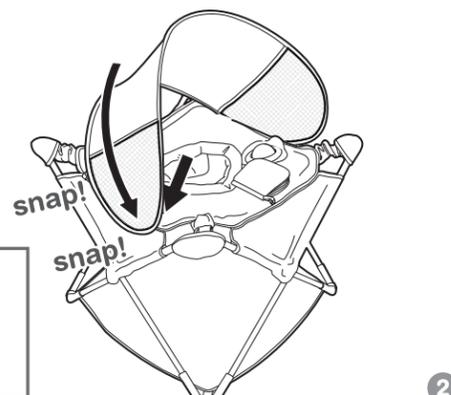


adjust seat height:

WARNING:
NEVER adjust seat while child is in product.


1 Initial setting out of package is to the lowest position. Place child in seat. Check distance between child's feet and floor. Child's toes should touch floor (without bouncing). If child is standing flat footed or toes are not touching floor, adjust height to any of the three positions (low for smallest child and high for tallest child).

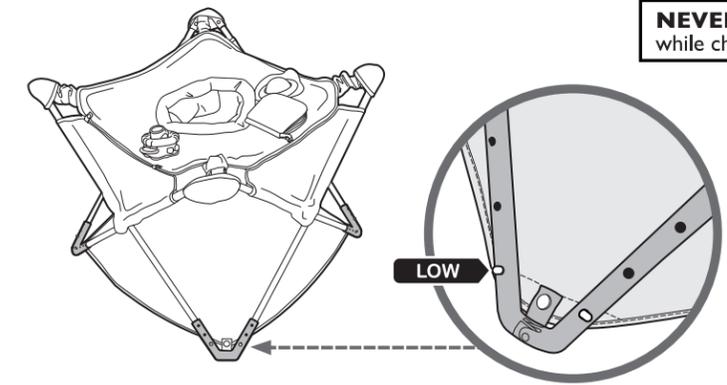

2 Remove child from seat before adjusting height! Unlock 2 places, turn product upside down, and rest on floor for easy adjustment.

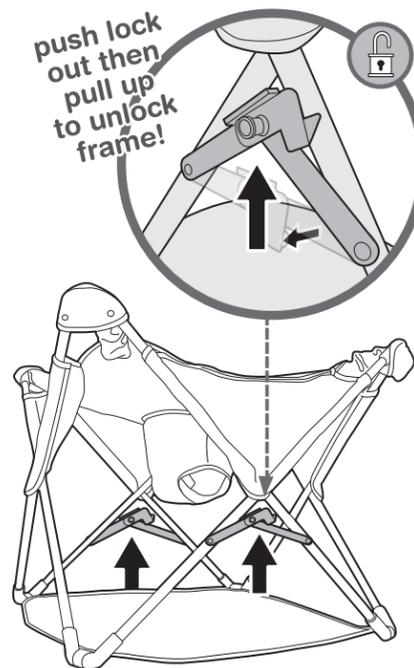

3 Before adjusting height, release snaps on corners of fabric floor (snaps only needed in low position)!

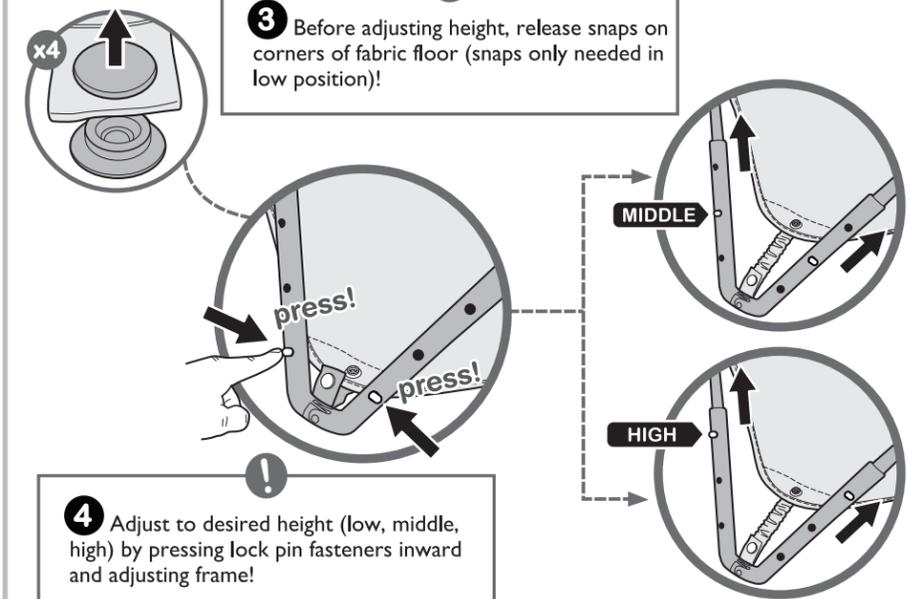

4 Adjust to desired height (low, middle, high) by pressing lock pin fasteners inward and adjusting frame!

IMPORTANT: Ensure lock pin fasteners are properly engaged (8 places). All fasteners must be adjusted to the same position. Relock frame (2 places).

IMPORTANT: Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts, or sharp edges. **DO NOT** use if any parts are missing or broken.

to store:

