

SAMEAT

Towel Warmer

User Manual



TW-ST1912

Ideal Size for Two Extra-large Bath Towels
with Fragrant Holde

IMPORTANT SAFETY INSTRUCTIONS

- READ ALL INSTRUCTIONS BEFORE USE
- ALL OF THE SAFETY AND OPERATING INSTRUCTIONS SHOULD BE READ
- ADHERED TO AND FOLLOWED BEFORE THE UNIT IS OPERATED
- FOR HOUSEHOLD USE ONLY
- SAVE THESE INSTRUCTIONS

CAUTION



DO NOT USE WHILE EMPTY. The red “Hot Surface” led indicator will turn on to indicate the inside surfaces of the Towel Warmer are hot to the touch. Handle the Towel Warmer carefully when the red “Hot Surface” led indicator is on. The “Hot Surface” led indicator light will turn off when the Towel Warmer has safely cooled down.



BURN HAZARD CAUTION: avoid direct contact with not inner surface when taking items in and out. Touching the surface while hot may cause burns. Allow the unit to cool down before moving or storing it.



TO REDUCE THE RISK OF ELECTRIC SHOCK:

Do not remove cover there are no serviceable parts inside.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK:

Do not expose this unit to rain or moisture

WARNING

- Always unplug the unit from the electrical outlet immediately after using.
- Do not use this appliance for anything other than its intended use.
- Do not place or store the unit where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for a unit that has fallen into water. Unplug it immediately.
- Care should be taken so that objects do not fall into and liquids are not spilled onto the unit.
- This unit should never be left unattended when plugged in.
- Close supervision is necessary when this unit is used near children or disabled persons.
- Use this unit only for its intended use as described in this manual.
- Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged or dropped in water.
- Keep cords away from heated surfaces. Do not wrap the cord around the exterior of the appliance or let the cord hang over table or counter edge.
- Do not use outdoors.
- Do not alter the safety plug or use an extension cord with this device.
- Do not operate with a voltage converter.
- Do not touch hot surfaces.
- Do not use accessory attachments not recommended by the manufacturer as this may cause injuries.

NOTE: Towel warmer has a 3-prong grounding to reduce the risk of electric shock. Do not attempt to defeat this safety feature.

CAUTION: To provide continued protection against the risk of electric shock, plug the power cord into an easily accessible, properly grounded standard 120V electrical outlet.

LOCATION OF PARTS AND CONTROL



1. Work Led Indicator

2. Work Button (Hold Off)

3. Timer Button

4. 0.5-Hour heat preservation timer led indicator

5. 1-Hour heat preservation timer led indicator

6. 2-Hour heat preservation timer led indicator

7. 4-Hour heat preservation timer led indicator

8. Hot Surface Caution led indicator

USING THE TOWEL WARMER

The Towel & Blanket Warmer can comfortably warm up two large cotton bath towels or a personal throw blanket.

1. Insert power cord into an electrical outlet.
2. Open the LID and place ONLY DRY towels.

SAMEAT

***NOTE:** Placing damp or wet towels inside the towel warmer can damage the unit and pose serious safety risks. Only pure cotton or other material of clothing with a temperature resistance of 140°C/284°F or more can be heated.

3. Press the work button the work led indicator turns on, Start heating, When led indicator light 30 is on, automatically enter the 30 minute heat preservation working mode, and finally shut down.
4. Press the work button 2 seconds to turn the towel warmer off if you would like to power off the unit sooner.
5. The "Hot Surface" LED is on, Which means it is unsafe to touch. Please wait for it to cool down.

SELECTING THE TIMER

1. When the Towel Warmer is powered on, It will automatically to heating for 25 minutes and default then heat preservation for 30 minutes.
2. Press the timer button to select either 1-Hour, 2-Hour, or 4-Hour heat preservation.

FREQUENTLY ASKED QUESTIONS

Question: Why won't my Towel Warmer turn on?

Answer: Make sure the Towel Warmer is properly plugged into a wall outlet then press and hold the work button to turn on the unit.

Question: Why is my Towel Warmer taking a long time to reach optimal heating temperature?

Answer: Be sure to only use dry towels; loosely pile one towel into the Towel & Blanket Warmer. Tightly rolled or folded towels will take longer to heat thoroughly.

CARE AND MAINTENANCE

- Remove the power cord from the electrical outlet before cleaning. Wipe with a dry cloth.
- Do not use chemical agents as they may discolor the inner tub.

FRAGRANT DISC INSTRUCTIONS

This fragrance disc additionally design is for some users who like to use aromatherapy tablets or essential oils when warming towels

PS: Aromatherapy tablets, fragrance disc or essential oils are not included with the product

- 1.Remove the Fragrance Disc from its sealed plastic bag.
- 2.Slide it into the Fragrance Disc Holder located on the underside of the lid.



- The Fragrance Disc is an innovative air freshener for your home, which also effectively eliminates odors.
- Fragrant is a breakthrough in the home fragrance world! Prepare fragrant disc and use with this product will bring you better enjoy experience.

SAMEAT



The diameter: 10 inches
the height : 16.9 inches.

It can heat 2pcs towels of
40*70 inches or more small
towels at the same time.



For the fastest heating effect,
it is recommended that the towels
be folded and put in as follows to
keep them as fluffy as possible

TIPS FOR BEST RESULTS

1. Use only pure cotton or other material of clothing with a temperature resistance of 140°C/284°F or more.
 2. For fast and even heating, loosely pile one towel into the Towel & Blanket Warmer. Tightly rolled or folded towels will take longer to heat thoroughly. Two towels will take longer to heat than one.
 3. Use only with DRY fabrics. **Note: DO NOT** use with damp or wet articles
 4. Avoid using delicate fabrics that cannot withstand high heat. Any fabric indicating that a cool iron must be used may not be able to withstand the heat of the Towel & Blanket Warmer, resulting in damage to the fabric and the product.
 5. Once the heating cycle has begun, keep the lid closed. This will prevent heat from escaping. Opening the lid mid-cycle may result in slower heating times.
- Note:** Condensation on the lid and interior of the product is normal.
6. When used with the Towel & Blanket Warmer, the Fragrance Disc Holder may warp over time.
 7. The Fragrance Disc Holder can last for up to two years at room temperature.

The longevity of the scent will decrease when exposed to heat from the Towel & Blanket Warmer. Replace the disc when you no longer smell the scent.

PRODUCT SPECIFICATIONS

Rated Voltage : 120V AC

Frequency: 60Hz

Wattage Max: 450W

Weight: Approx 7.5 lbs.

Dimensions: 12.48" L x 12.2"W x 18.93"H

FCC INFORMATION: This device complies with Part 15 of the FCC Rules.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

SAMEAT

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.

WARRANTY

ONE YEAR LIMITED WARRANTY

Congratulations on your purchase of the Towel Warmer. This product is warranted to be free from defects in material and workmanship under normal use and service for a period of one year from the date of purchase with original receipt. The manufacturer's obligation shall be limited to replacing with same or like product, FOB NY, the product that is defective. Such warranty shall not apply to damages from accidents, abuse, misuse, normal wear and tear or damage due to abusive handling. This warranty is valid only for first quality goods purchased from SAMEAT inc.

Catalogue

1 PAGE: IMPORTANT SAFETY INSTRUCTIONS
CAUTION

2 PAGE: WARNING

3 PAGE: LOCATION OF PARTS AND CONTROL
USING THE TOWEL WARMER

4 PAGE: SELECTING THE TIMER
FREQUENTLY ASKED QUESTIONS
CARE AND MAINTENANCE

5 PAGE: FRAGRANT DISC INSTRUCTIONS

6 PAGE: TIPS FOR BEST RESULTS

8 PAGE: PRODUCT SPECIFICATIONS

9 PAGE: WARRANTY

Thanks for purchasing our Towel warmer, the heating barrel handle (barrel lid) is made of natural wood and cannot guarantee a consistent color. It's not a quality issue. Please tell your friends and family if you are satisfied. If you have any comments please contact us through the listing We will respond within 24 hours. The product has 30 days return and 12 month replacement service.