HUANUO

Electric Standing Desk

Instruction Manual

HNESD17B / HNESD17V / HNESD17N HNESD18B / HNESD18V / HNESD18N HNESD19B / HNESD19V / HNESD19N HNESD20B / HNESD20V / HNESD20N

Rev00





1-800-556-0533 (US/CA) Mon-Fri, 8am-8pm (CST) 44-808-196-3874 (UK) Mon-Fri, 2pm-10pm (UTC)



support@huanuo.com



www.huanuo.com

Tools Needed (Not Included)







Drill

Phillips Screwdriver

Specifications

Height Adjustment Range 27.9"-46.8" (71-119cm)



Power Input 100V-240V



Max. Speed 10mm/s



Operating Noise < 55dB




Max. Load 110 lbs / 50 kg

Step

Supplied Parts and Hardware

x 10

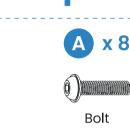

M6 x 30mm



M6 x 10mm









D x 1

Allen Wrench 5/32" (4mm)





Left Desk Leg

x 1





Right Desk Leg



Crossbar



08) x 1








Side Plate

Transmission Rod

Rod Coupler

Wrench



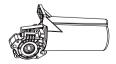

Motor

Step 2 |

Supplied Parts and Hardware















Desktop Panel Connector Cable Management Bracket **NOTE:** An extra wood dowel pin is provided for the longer 55" / 63" desk.





Wood Dowel Pin

X 5 (for 40" / 48")

X 6 (for 55" / 63")

Screw ST5 x 14mm









ST3.9 x 13mm

Screw





x 1

Desktop

Step 3

Supplied Parts and Hardware



(II) x 14







Screw ST5 x 14mm





Storage Hook



Controller

Step

Supplied Parts and Hardware










AC Adapter


Cable Clip

Step 1 Assembling the Frame


Attach the motor.

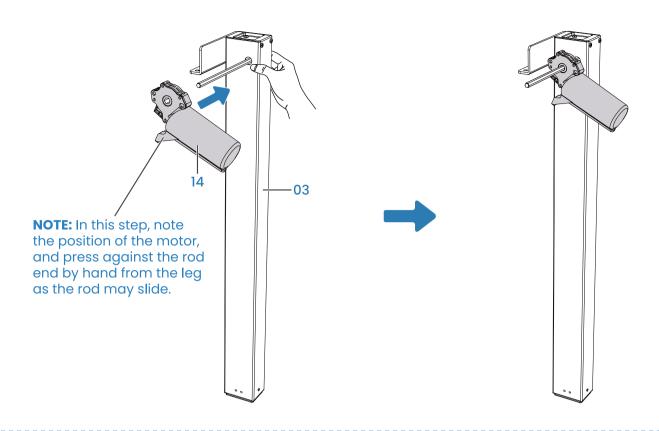



Secure the motor.

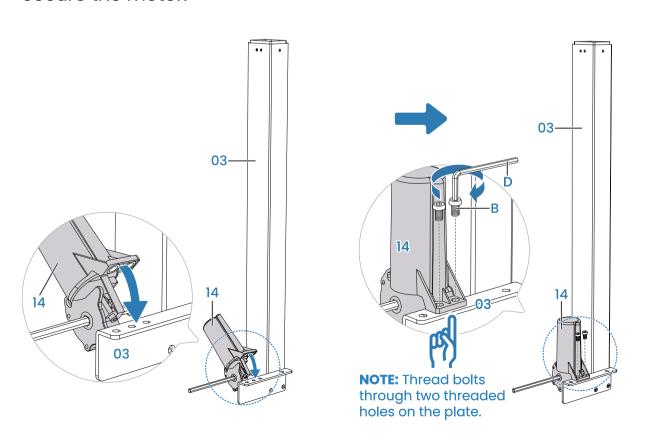


Attach the right desk leg to the crossbar.

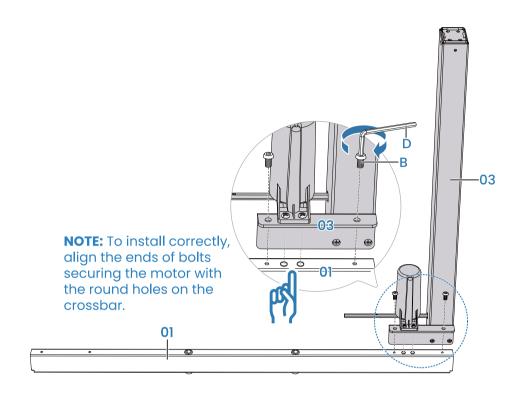

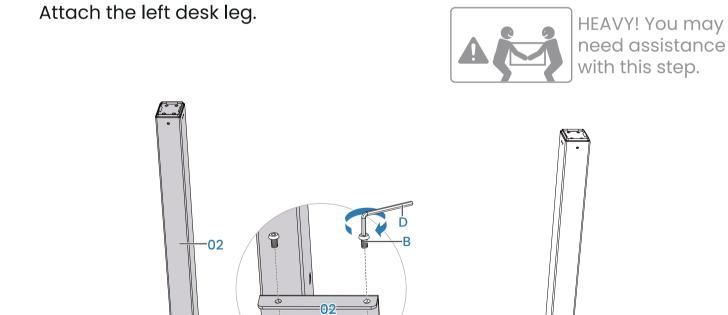


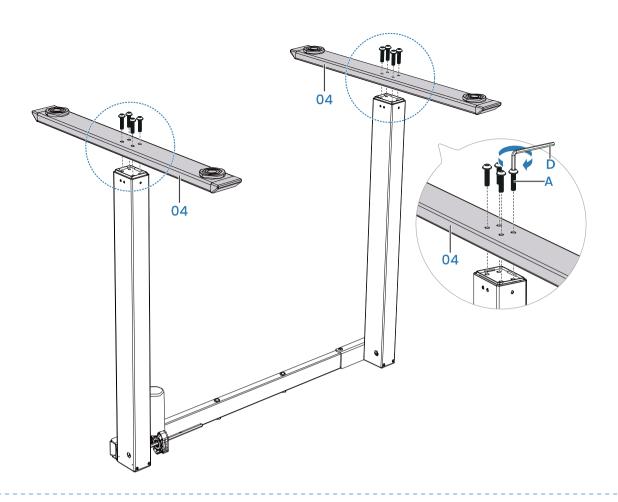

Attach the side plates.

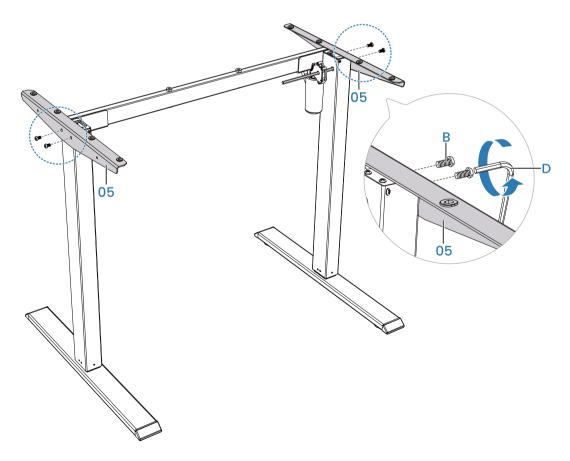


Slide the rod coupler onto the end of the motor drive shaft on the right leg.

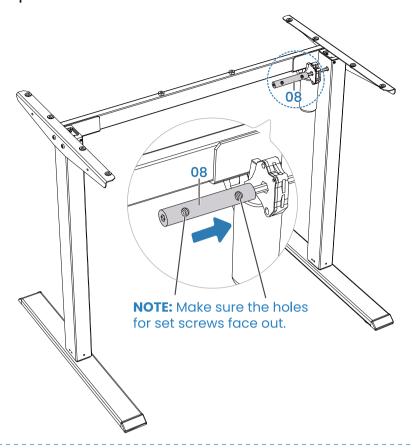


Adjust uneven desk legs:

Before attaching the transmission rod, measure the heights of the two desk legs to see if they are set at the same level.


If not, insert the transmission rod into the hole in the left leg. Turn the rod, using the wrench, to adjust the left leg so it's level with the right leg. Turn the rod clockwise to raise the left leg or anti-clockwise to lower it.

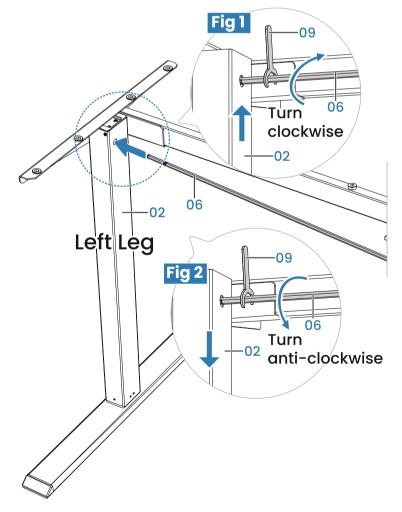


Ensure the transmission rod is properly inserted into the hole in the left leg. Slide the rod coupler to the left to connect with the other end of the transmission rod.

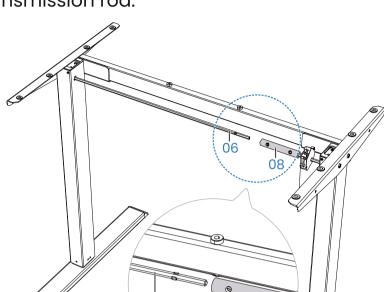


NOTE: If the transmission rod doesn't fit smoothly into the hole of rod coupler, fine-tune fit with the wrench.

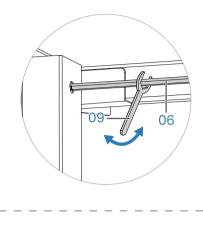

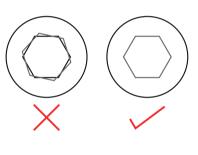


Use the set screws to secure the rod coupler.

06

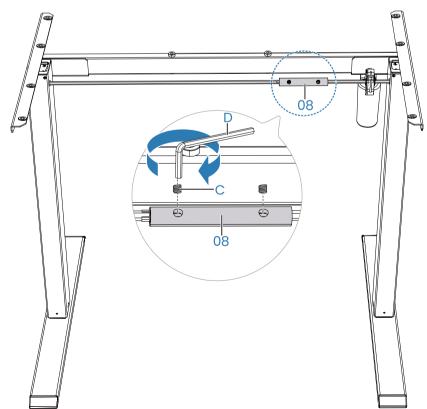


Ensure the rubber pads are attached to the frame. If any have fallen off, reattach them or use the spare rubber pads.

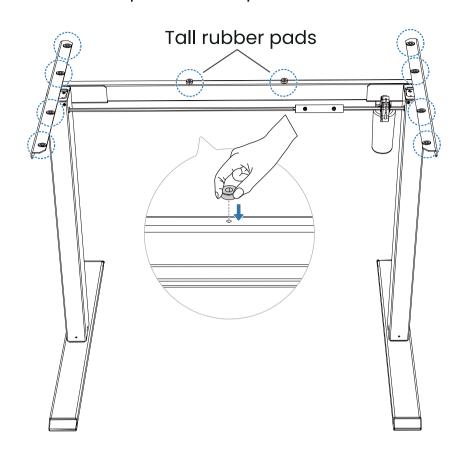


Step 2 Assembling the Desktop

For the 40'' / 48'' long desk, use the five wood dowel pins to join the two desktop panels together.

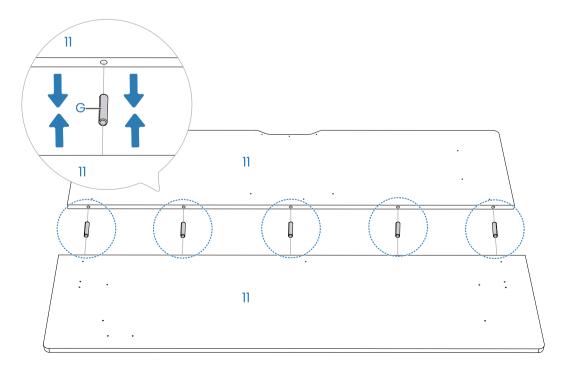

For the 55'' / 63'' long desk, use the six wood dowel pins to join the two desktop panels together.

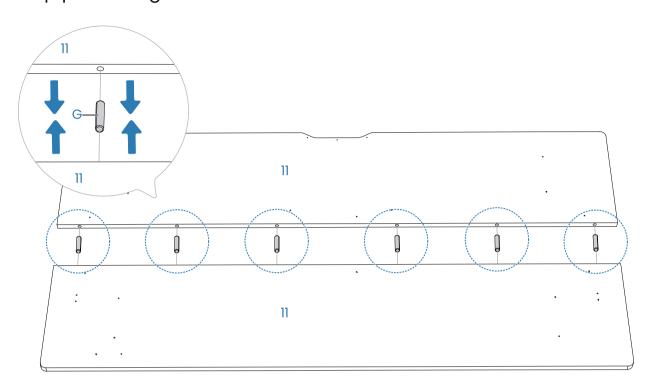


Secure the desktop panels with the connectors, then attach the cable management bracket to the desktop.


OR Phillips Screwdriver (not included)

You can use a drill (with suitable torque and speed) or a Phillips screwdriver.

Step 3 Attaching the Desktop

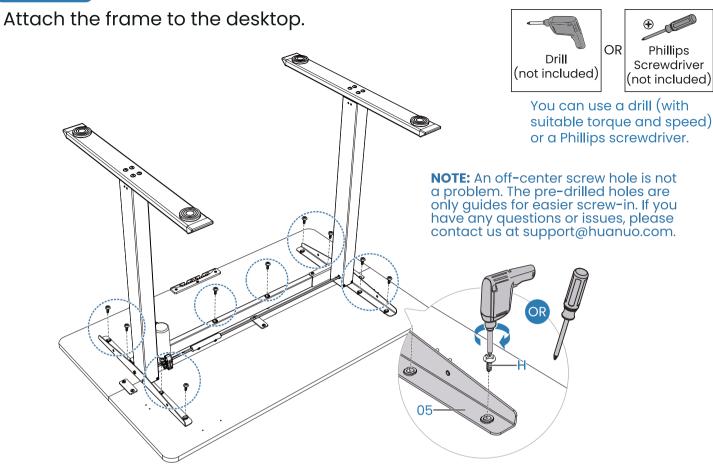


Attach the storage hook and controller to the desktop.

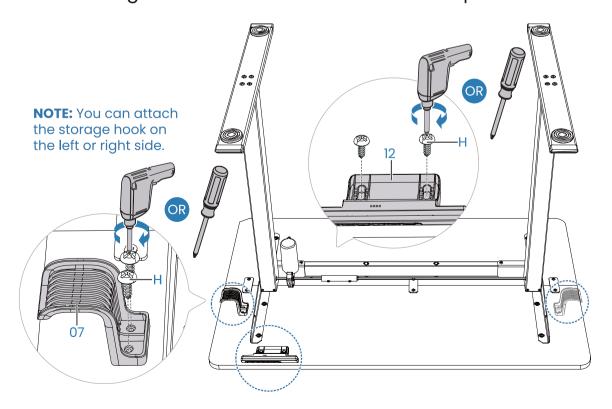


Step 4 Connecting the Cables

NOTE: An example of a cable clip layout is indicated below. However, the cable clips can be arranged according to your needs.

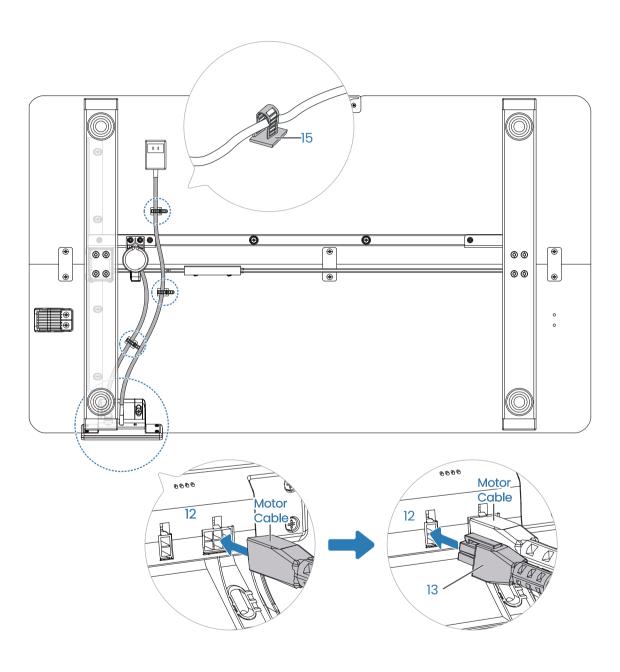

Using the Controller

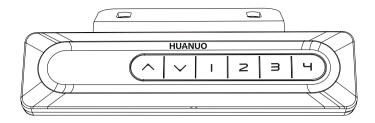

Note: Ensure that there are no obstacles when using the desk, that the desktop is not right next to the wall, and that all cables are long enough for the desk to move up and down freely. When the controller screen is off (power-saving mode), press any button to wake it before operating the desk.

Suggestion: Set the most comfortable height when you sit down to 1 and the most comfortable height when you stand up to 2. The other two presets can be set for another user or to other heights you want to use.

Raise the Desk

Press the \(\triangle \) button to raise the desk continuously until it reaches the highest position of 46.8" (119cm) or the button is released.

Lower the Desk

Press the \bigvee button to lower the desk continuously until it reaches the lowest position of 27.9" (71cm) or the button is released.

Save Height Settings

Four heights can be stored. Press and hold the 1/2/3/4 button for 3 seconds. The digital number will flash three times and the current height will be stored to that button.

Select Height Setting 1

Press the 1 button, and the desk will move to the height that was previously set for that button. Press any button to stop the desk.

Select Height Setting 2

Press the 2 button, and the desk will move to the height that was previously set for that button. Press any button to stop the desk.

Select Height Setting 3

Press the 3 button, and the desk will move to the height that was previously set for that button. Press any button to stop the desk.

Select Height Setting 4

Press the 4 button, and the desk will move to the height that was previously set for that button. Press any button to stop the desk.

Settings	
Reset	 Press and hold the button until the desk goes down to its lowest level, and then release the button. Press and hold the button for 5 seconds until the screen displays 'RST,' and then release the button with 'RST' flashing. Press and hold it again until the desk goes down to its lowest level and comes back up slightly. The screen will display current height again, and reset is complete.
Lock/Unlock	Press and hold 1 and 2 buttons together for 3 seconds to turn the lock on. The screen will display 'LOC' and the buttons will be disabled. Repeat to turn the lock off again.
Change Display Height Units	Press and hold 1 and 3 buttons together for 3 seconds to switch the display height unit. The default unit is imperial.
Change Collision Detection Sensitivity	 Press and hold 1 and 4 buttons together for 3 seconds, and 'S02' will flash on the screen. The last digit displayed is the current sensitivity level, and the value range is 0-3 (0: off; 1-3: highest to lowest). Select other levels by pressing △ or ∨ button, and then press and hold 1 and 4 buttons together for 3 seconds. The digits will stop flashing, and the screen will display current height again.
Set/Clear Lowest Limit	 To set the lowest height limit, press and hold and buttons together for 3 seconds, and the screen will display '-dO.' Whenever the desk reaches the lowest limit, the screen will display '-LO.' To clear the lowest height limit, move the desk down to the lowest height (screen displays '-LO') and press and buttons together for 3 seconds. '-dO' will flash on the screen, and the limit will be cleared.
Set/Clear Highest Limit	1. To set the highest height limit, press and hold and buttons together for 3 seconds, and the screen will display '-UP.' Whenever the desk reaches the highest limit, the screen will display '-HI.' 2. To clear the highest height limit, move the desk up to the highest height (screen displays '-HI') and press and buttons together for 3 seconds. '-UP' will flash on the screen and the limit will be cleared.

Troubleshooting

- 1. Please try resetting the desk if you have any issues like the following:
- Abnormal operation.
- The controller screen displays 'RST' (reset).
- The controller screen displays error message E07 or E08, but the motor cable is connected correctly.
- 2. If the controller screen displays 'HOT,' please wait 20 minutes for the motor to cool down before making any further height adjustment.

Exceeding Expectations in Office Comfort & Productivity

Thank you for choosing this HUANUO product. At HUANUO we strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.

1-800-556-0533 (US/CA) 44-808-196-3874 (UK)

Mon-Fri, 8am-8pm (CST) Mon-Fri, 2pm-10pm (UTC)

support@huanuo.com

www.huanuo.com