

SECTOR EXPANDER

Grazie per la fiducia accordataci scegliendo il marchio SECTOR EXPANDER. Per poter utilizzare l'orologio nel migliore dei modi, le raccomandiamo di leggere attentamente le istruzioni riportate in questo manuale.

MANUALE UTENTE

STREET - OROLOGIO DIGITALE

Cronografo 1/100 sec dual time con tempi parziali e intermedi, water resistant 100 mt

R3251172315 - R3251172125



PULSANTI - Per usare i pulsanti fare riferimento alle lettere riportate nell'illustrazione.



A - Azzeramento/Arresto
B - Modalità
C - Retroilluminazione
D - Avvio / tempo di giro



QUADRANTE

SELEZIONE DELLA MODALITÀ

Premere "B" per passare da una modalità a un'altra nella sequenza qui di seguito riportata: Modalità orario - Modalità cronometro - Modalità dati - Modalità conto alla rovescia - Modalità allarme - Modalità doppio fuso orario

 
A - ORARIO

- Formato 12/24 ore;
- Ore, Minuti, Secondi, Giorno della settimana, Data;
- Calendario per 100 anni (2000-2099)




B - CRONOMETRO

- 1/100 di secondo;
- 150 memorie tempi di giro;
- Intervallo di misurazione: 00'00"00 ~ 9:59'59"




C - DATI

 - 150 memorie tempi di giro & parziali.



D - CONTO ALLA ROVESCIA

 - Intervallo conto alla rovescia: 23:59'59" ~ 0'00"00



E - ALLARME

- 5 Allarmi;
- Segnale orario;
- L'allarme suona a una data ora ogni giorno.



F - DOPPIO FUSO ORARIO

- L'ora di un'altra zona di fuso orario.



A - ORARIO

Calendario

- In modalità orario, tenere premuto "D" per visualizzare: Anno, Mese, Data.



Impostazione dell'ora

1 - In modalità orario, tenere premuto "A" finché non lampeggiano i secondi (lampeggio indicato in modalità impostazione dati - set);



2 - Premere "C" o "D" per reimpostare i secondi;



3 - Premere "B" per passare alla selezione successiva;

 


4 - Premere "D" per aumentare il numero, tenere premuto per procedere a velocità elevata; Premere "C" per far scalare il numero, tenere premuto per scalare a velocità elevata;



5 - Ripetere i passaggi 3 e 4, effettuando la selezione secondo la seguente sequenza: Secondi - Ora - Minuti - Anno - Mese - Data - Formato 12/24 ore

6 - Premere "A" per uscire dallo stato di impostazione dei dati una volta conclusa l'impostazione. (Il giorno della settimana viene mostrato in automatico in base all'anno, al mese e alla data impostati).



B - CRONOMETRO

A Tempo di giro

1 - In modalità cronometro, premere "D" per avviare il cronometro;



2 - Premere "A" per arrestare il cronometro;



3 - Per azzerare il cronometro premere nuovamente "A".



Tempo parziale

1 - In modalità cronometro, premere "D" per avviare il cronometro;



2 - Premere "D" per mostrare il tempo parziale, passaggio automatico allo Stato corsa dopo 2 secondi;



3 - Ripetere il passaggio 2, possibilità di misurare il tempo parziale multiplo;



4 - Premere "A" per fermare il cronometro.



C - DATI

Lap

1 - In modalità dati, l'orologio riporta il tempo del primo GIRO;



2 - Premere "D" per passare a un tempo successivo;



3 - Premere "C" per ritornare a un tempo precedente;



Tempo parziale

4 - In modalità dati, premere "A" per visualizzare sull'orologio il tempo del primo parziale;



5 - Premere "D" per passare a un tempo successivo;



6 - Premere "C" per ritornare a un tempo precedente;



7 - Premere "A" per avviare la modalità cronometro nello stato scorrimento tempo parziale.



D - CONTO ALLA ROVESCIA

Quando il conto alla rovescia raggiunge lo zero, l'allarme suona per 60 secondi circa, premere un qualsiasi pulsante per interromperlo.

Impostazione del tempo per il conto alla rovescia

1 - In modalità conto alla rovescia, tenere premuto "A" finché non lampeggeranno le ore (lampeggio indicato in modalità impostazione dati - set);



2 - Premere "D" per aumentare l'ora, tenere premuto il pulsante per procedere ad alta velocità; Premere "C" per diminuire l'ora, tenere premuto il pulsante per scalare ad alta velocità;



3 - Premere "B" per passare alla selezione successiva;



4 - Premere "D" per aumentare il numero, tenere premuto per procedere a velocità elevata; Premere "C" per far scalare il numero, tenere premuto per scalare a velocità elevata;



5 - Ripetere i passaggi 3 e 4, effettuando la selezione secondo la seguente sequenza: Ora - Minuti - Secondi;



6 - Premere "A" per uscire dallo stato di impostazione dei dati una volta conclusa l'impostazione.



Impiego funzione conto alla rovescia

1 - Premere "D" per avviare la funzione conto alla rovescia;



2 - Premere "A" per mettere in pausa la funzione conto alla rovescia.



E - ALLARME

L'allarme suona all'ora prestabilita ogni giorno per circa 60 secondi, premere un qualsiasi pulsante per interromperlo.

Allarme e suoneria

- In modalità allarme, premere "A" per selezionare la suoneria, Allarme 1 - Allarme 5.



- Nello stato suoneria, premere "D" per attivare/disattivare la suoneria.



- Nello stato Allarme 1 - 5, premere "D" per attivare/disattivare l'allarme.



Impostazione Allarme 1

1 - In modalità allarme, tenere premuto "A" fino a che l'ora non lampeggia e appare l'indicatore "«•»" (lampeggio indicato in modalità impostazione dati - set);



2 - Premere "D" per accrescere l'ora, tenere premuto il pulsante per procedere a velocità elevata; Premere "C" per diminuire l'ora, tenere premuto il pulsante per scalare a velocità elevata;



3 - Premere "B" per selezionare i minuti;



4 - Premere "D" per accrescere i minuti, tenere premuto il pulsante per procedere a velocità elevata; Premere "C" per diminuire i minuti, tenere premuto il pulsante per scalare a velocità elevata;



5 - Premere "A" per uscire dallo stato impostazione dati, una volta che i dati sono stati impostati.

- L'impostazione e il funzionamento degli Allarmi 1 - 5 sono le stesse.



F - DOPPIO FUSO ORARIO

Impostazione del doppio fuso orario

1 - In modalità doppio fuso orario, tenere premuto "A" finché non lampeggerà l'ora (lampeggio indicato in modalità impostazione dati - set);



2 - Premere "D" per incrementare l'ora, tenere premuto per procedere a velocità elevata; Premere "C" per diminuire l'ora, tenere premuto per scalare a velocità elevata;



3 - Premere "B" per la selezione dei minuti;



4 - Premere "C" o "D" per modificare i minuti (premere una volta per un cambiamento di 30 minuti);



5 - Premere "A" per uscire dallo stato impostazione dati, una volta che si è proceduto all'impostazione.

RETROILLUMINAZIONE

La retroilluminazione illumina il display per una migliore lettura delle ore al buio.

Impiego della retroilluminazione

- In qualsiasi modalità, premere "C" per illuminare il display per 3 secondi circa.



ATTENZIONE:

- Non cercare in nessun caso di aprire la cassa o rimuovere il coperchio posteriore.
- Non utilizzare i pulsanti sottocassa.
- Se dell'umidità dovesse comparire all'interno dell'orologio, portarlo immediatamente presso il punto vendita d'acquisto per un controllo. Altrimenti si può verificare un'erosione delle parti metalliche dell'orologio.
- Sebbene l'orologio sia progettato per resistere a un normale utilizzo, si deve evitare che prenda colpi o cada a terra.
- Evitare di esporre l'orologio a temperature estreme.
- Pulire l'orologio solo con un panno asciutto e soffice. Evitare un contatto diretto con materiali chimici, che potrebbe determinare un deterioramento delle parti in plastica dell'orologio.
- Evitare di indossare l'orologio in presenza di campi elettromagnetici.

GARANZIA

La garanzia è valida per due anni dalla data di acquisto ed è onorata in tutto il mondo in caso di difetti di conformità debitamente accertati dai Centri Assistenza autorizzati. Per beneficiare della garanzia è indispensabile presentare ad un Concessionario o a un Centro di Assistenza Tecnico autorizzato l'International Warranty card debitamente compilata, timbrata e datata da parte del Concessionario al momento dell'acquisto. Sono tassativamente esclusi dalla garanzia i difetti derivanti da: incidenti (urto, schiacciamento etc.), utilizzo improprio, impiego di pile non prescritte, pile scariche lasciate all'interno dell'orologio, alterazioni, riparazioni e/o manipolazioni non autorizzate. Sono altresì escluse dalla garanzia: pile, vetri, scolorimento della placcatura o colore, conseguenze dell'usura e dell'invecchiamento normali dell'orologio. Gli interventi in garanzia devono essere effettuati presso i Centri di Assistenza Tecnica autorizzati. Stessa cosa dicasi per gli interventi di sostituzione delle pile a fronte dei quali i Centri di Assistenza Tecnica autorizzati rilasceranno ai clienti le certificazioni della prova di impermeabilità effettuata. L'indicazione water resistant è valida solo per gli orologi nuovi di fabbrica. Gli influenti esterni possono agire sull'impermeabilità all'acqua. Cassa a tenuta stagna ai sensi di DIN 8310.

Indicazione sul fondo cassa	Lavaggio Pigioggia Spruzzi	Doccia	Bagno	Nuoto	Immersione
Water resistant 3 bar	SI	SI	NO	NO	NO
Water resistant 5 bar	SI	SI	SI	SI	NO
Water resistant 10 bar	SI	SI	SI	SI	SI
Water resistant 20 bar	SI	SI	SI	SI	SI

WORLD SERVICE CENTER

Per il centro assistenza più vicino consultare il sito www.watchservicecenter.it
Morellato S.p.A. - Via Commerciale, 29 - 35010 - Santa Giustina in Colle (PD)
www.sectornolimits.eu



 
We thank you for the confidence that you have shown in us by choosing the SECTOR EXPANDER brand. To enable you to use your watch to the best advantage, we recommend that you carefully read the instructions in this leaflet.

USER'S GUIDE

STREET - DIGITAL WATCH

1/100 sec. Chronograph dual time with add-time split-time, water resistant 100 mt

R3251172315 - R3251172125

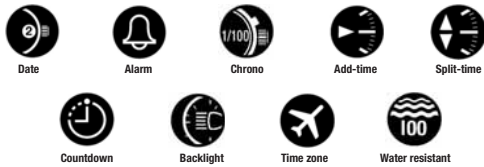

BUTTONS - Button operation are indicated using the letters shown in the illustration.



A - Reset/Stop
B - Mode
C - EL backlight
D - Star/Lap

DISPLAY

MODE SELECTION

Press "B" to change mode to mode in the following sequence: Timekeeping Mode – Stopwatch Mode – Data mode – Countdown Mode – Alarm Mode – Dual Time Mode.

 
A – TIMEKEEPING

- 12/24H Format;
- Hours, Minutes, Seconds, Day of Week, Date;
- 100 years Calendar (2000-2099).



B – STOPWATCH

- 1/100 second unit;
- 150 LAP;
- Measuring range: 00'00"00 – 9:59'59".




C – DATA

- 150 LAP & SPL data.




D – COUNTDOWN

 - Countdown range: 23:59'59" – 0'00"00



E – ALARM

 - 5 Alarms;
- Hourly time signal;
- The alarm sounds at the present time each day.



F – DUAL TIME

- The time for other time zone.



A – TIMEKEEPING

Calendar

- In the timekeeping mode, press and hold "D" to display: Year, Month, Date.



Time Setting

1 – In the timekeeping mode, press and hold "A" until the seconds to flash (flashing indicated in set mode);



2 – Press "C" or "D" to reset the seconds;



3 – Press "B" change to the next selection;



4 – Press "D" to increase the number, press and hold to increase at high speed. Press "C" to decrease the number, press and hold to decrease at high speed;



5 – Repeat step 3 and 4, the selection in the following sequence: Seconds – Hour – Minutes – Year – Month – Date – 12/24H format;

6 – Press "A" to exit the set state, after you set (the day of the week is automatically displayed in accordance with year, month and date setting).



B – STOPWATCH

A Lap Time

1 – In the stopwatch mode, press "D" to start to the stopwatch;



2 – Press "A" to stop the stopwatch;



3 – To reset the stopwatch by pressing "A" again.



Split Time

1 – In the stopwatch mode, press "D" to start the stopwatch;



2 – Press "D" to display the split time, auto change to running State after 2 seconds;



3 – Repeat step 2, you can measure the multi split time;



4 – "A" to stop the stopwatch.



C – DATA

Lap

1 – In the date mode, the watch display the time of first LAP;



2 – Press "D" to forward browse the time for another;



3 – Press "C" to backward browse the time for another;



Split

4 – In the data mode, Press "A" the watch display the time of first SPL;



5 – Press "D" to forward browse the time for another;



6 – Press "C" to backward browse the time for another;



7 – Press "A" to enter the stopwatch mode in the browse split time state.



D – COUNTDOWN

When the countdown reaches zero, the alarm sounds for about 60 seconds and press any button to break it.

Countdown Time Setting

1 – In the countdown mode, press and hold "A" the hours to flash (flashing indicated in set mode);



2 – Press "D" to increase the hour, press and hold to increase at high speed. Press "C" to decrease the hour, press and hold to decrease at high speed;



3 – Press "B" change to the next selection;

4 – Press "D" to increase the number, press and hold to increase at high speed. Press "C" to decrease the number, press and hold to decrease at high speed;



5 – Repeat step 3 and 4, the selection in the following sequence: Hour – Minutes – Seconds;



6 – Press "A" to exit the set state, after you set.



Use Countdown Timer

1 – Press "D" to start the countdown timer;



2 – Press "A" to Pause the countdown timer.



E – ALARM

The alarm sounds at the present time each day for about 60 seconds, press any button to break it.

Alarm and Chime

- In the alarm mode, press "A" to select chime, Alarm 1 – Alarm 5.



- In the chime state, press "D" to on/off the chime.



- In the Alarm 1 – Alarm 5 state, press "D" to on/off the alarm.



Alarm 1 Setting

1 – In the alarm mode, press and hold "A" the hour to flash, the indicator «•» appear (flashing indicated in set mode);



2 – Press "D" to increase the hour, press and hold to increase at high speed. Press "C" to decrease the hour, press and hold to decrease at high speed;



3 – Press "B" to select the minutes;



4 – Press "D" to increase the minutes, press and hold to increase at high speed. Press "C" to decrease the minutes, press and hold to decrease at high speed;



5 – Press "A" to exit the set state, after you set.

- Setting and operation of the Alarm 1 – Alarm 5 are the same.



F – DUAL TIME

Dual Time Setting

1 – In the dual time mode, press and hold "A" the hour to flash (flashing indicated in set mode);



2 – Press "D" to increase the hour, press and hold to increase at high speed. Press "C" to decrease the hour, press and hold to decrease at high speed;



3 – Press "B" to select the minutes;



4 – Press "C" or "D" to change the minutes (press once change 30 minutes);



5 – Press "A" to exit the set state, after you set.

BACKLIGHT

- The backlight that uses an EL (electroluminescent) cause the display to glow for easy reading in the dark.

Use EL Backlight

- In any mode, press "C" to illuminate the display about 3 seconds.



ATTENTION:

- 1: Never try to open the case or remove its back cover
- 2: Do not operate buttons underwater
- 3: Should moisture appear inside the watch, have it checked immediately by your dealer. Otherwise it can cause erosion of the metal parts of the watch
- 4: Though the watch is designed to withstand normal use, you should avoid rough use or dropping the watch
- 5: Avoid exposing the watch to temperature extremes
- 6: Wipe the watch with dry, soft cloth only. Avoid allowing to come into direct contact with chemical materials, which can cause deterioration of the plastic parts of the watch
- 7: Avoid to wear the watch in electromagnetic static conditions

WARRANTY: The warranty is valid for two years from date of purchase: it is honored all over the world in the case of conformity defects, duly confirmed by authorized Service Centers. To benefit from the warranty it is essential to present to a Dealer or a Technical Service Center the International Warranty card duly compiled, stamped and dated by the Dealer at the time of purchase. Defects deriving from accidents (knocks, crushing, etc.), improper use, the use of non-prescribed batteries, dead batteries left inside the watch, alterations, repairs and/or unauthorized tampering are strictly excluded from the warranty. Batteries, glass, discoloration of the plating or color, and the consequences of normal wear and tear and aging of the watch are also excluded from the warranty. Interventions under warranty must be carried out at authorized Technical Service Centers. The same goes for interventions for replacing the batteries. For these, the authorized Technical Service Centers will issue clients with certifications of water resistance tests carried out. The indication water resistant is valid for newly-manufactured watches only. External influences may have an effect on waterproofing. Watchcase and water-resistance according to DIN 8310.

Indication	Watchcase	Washing, rain, sprays	Shower	Bath	Swimming	Immersion without equipment
Water resistant 3 bar	YES	YES	NO	NO	NO	NO
Water resistant 5 bar	YES	YES	YES	YES	YES	NO
Water resistant 10 bar	YES	YES	YES	YES	YES	YES
Water resistant 20 bar	YES	YES	YES	YES	YES	YES

FOR USA MARKET ONLY

LIMITED WARRANTY Morellato S.p.A.
What this warranty covers. Morellato S.p.A. ("MORELLATO"), the licensed distributor for SECTOR® brand watches, warrants that Sector® watches sold in the U.S.A. ("Watches") shall be free from defects in material and workmanship, subject to the conditions and exceptions stated below. In addition, Morellato warrants that, at time of first purchase at retail, Watches will meet the water-resistant standard of ISO 2281.
Who is covered by this warranty. This warranty extends only to the first purchaser at retail in the U.S.A. ("Purchaser") and is not transferable. **How long the warranty lasts.** Coverage under this warranty lasts for a period of two years from the date of original retail purchase. **What Morellato will do.** Morellato will, at its sole discretion either (i) replace a defective Watch free of charge, or (ii) replace the Watch with an equivalent Watch, such equivalence to be determined at Morellato's sole discretion. In either case, the Purchaser must comply with the Claims Procedure described below. **Claims Procedure.** The Purchaser must notify Morellato of defects in the Watch in writing by registered or certified mail, return receipt requested, within thirty (30) days after the discovery thereof, but no later than two years from date of purchase. The notice must include the defective Watch and proof of purchase, sent to the following address: Universal Watch Repair 177 S. Old Woodward Ave. Birmingham, MI 48009 or J&J Watch Repair 33 Walt Whitman Road Suite 133 Huntington Station, NY 11746. Morellato will not be responsible for shipping charges for Watches shipped to Morellato for replacement or repair. However, Morellato will be responsible for shipping charges for replacement or repaired Watches shipped to the Purchaser. In any case, Morellato will not be responsible for any risk of loss that will be borne by the Purchaser. **Limitations.** This warranty shall not apply to defects or damage (latent or otherwise) caused by the use or effect of using batteries other than those of the technical specification and quality prescribed by Morellato or by leaving dead batteries in the watch; defects arising from accidents, mishandling or improper or abusive use (such as knocks, dents, crushes, or scratches); or alterations, repairs or tampering. Also excluded are the batteries, glass and discoloration of the plating or color, and the effects of normal wear and tear, and aging of the watch. Because external conditions which are beyond Morellato's control may affect water-resistance, Morellato will not be responsible for the effects of such conditions. Morellato's warranty of water-resistance only applies to new Watches purchased at an authorized retailer. **Sole and exclusive warranty.** THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, TO THE EXTENT ALLOWED BY LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ANY OTHER OBLIGATION ON THE PART OF Morellato, INCLUDING WITHOUT LIMITATION ANY OBLIGATIONS WITH RESPECT TO INCIDENTAL, CONSEQUENTIAL AND SPECIAL DAMAGES). **How state law applies.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Also, some states do not allow the exclusion or limitation of incidental, special or consequential damages so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

WORLD SERVICE CENTER

To find the nearest Wsc, visit the contacts section at www.watchservicecenter.it

Morellato S.p.A. - Via Commerciale, 29 - 35010 - Santa Giustina in Colle (PD)
www.sectornolimits.eu