

Quick Start Guide

Surgeboom 3

SOWO

TWS Connect

Setp1: Select any one as the master and the other as the auxiliary




What's In The Box


- QUICK START GUIDE x1
- TYPE-C Charging Cable x1
- AUX IN Cable x1




Waterproof IPX7

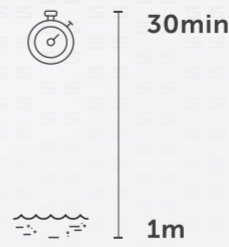


Charging

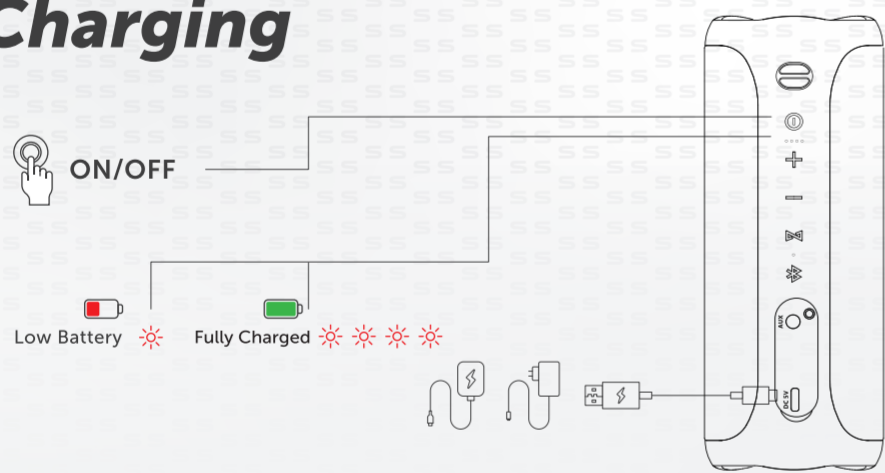

Warning

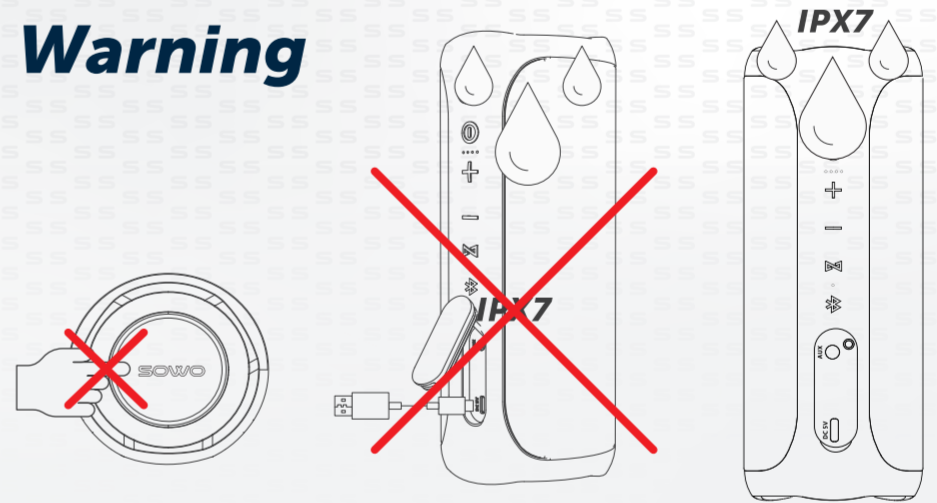

Led Disco Light

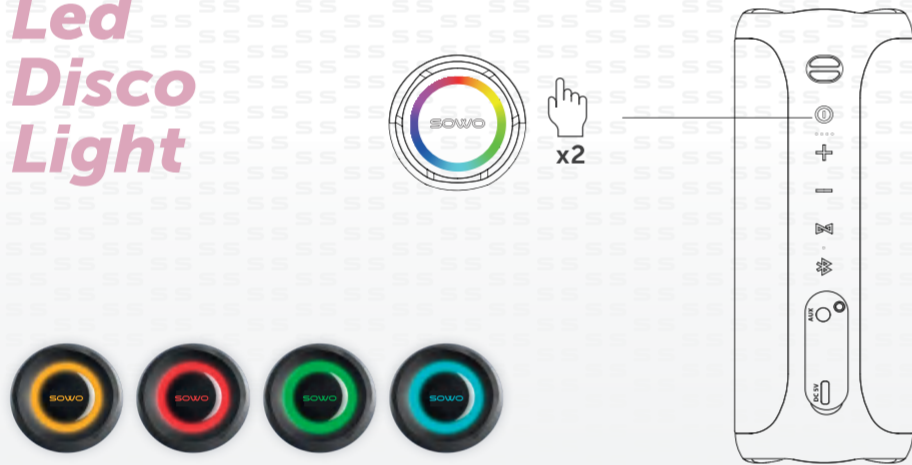

Specification:

Bluetooth Version	V5.0
Maximum Output	35W
Battery Capacity	2500mAh
SNR	75dB
Wireless Working Frequency	80HZ-20KHZ
Wireless Transmission Distance	up to 33 ft (10M)
Charging Time	about 3 hours
Playback Time	10H Playtime (50% volume)
Charging	DC 5 V±0.5/2A
Size	(Dia.) 88mm*(H) 220mm

What's in your box:

- 1x Surgeboom 3 Speaker
- 1x TYPE-C Charging Cable
- 1x AUX IN Cable
- 1x User Guide


Bluetooth Connection



Specification:


- This logo means that no naked flames, such as a candle can be placed on or near the device.
- The electrical and electronic equipment are part of a separate collection. Do not throw electrical or electronic equipment away with unsorted municipal waste, but ensure that it is collected separately. Collection systems and locations (sorting centres, rubbish dumps) are provided for your by local councils and retailers. By entrusting your end-of-life product to the proper recycling process, you can helping to protect the environment and your health.
- Use this device in temperate climates only.
- This device may be used by children aged 8 years or older any by those with reduced physical, sensory or mental abilities, or those lacking experience or knowledge, provided they are correctly supervised, or if the instructions related to the use of the device have been adequately given and if the risks involved have been understood. Children must not play with this device. Children should not clean or maintain the device without supervision.

Connectors

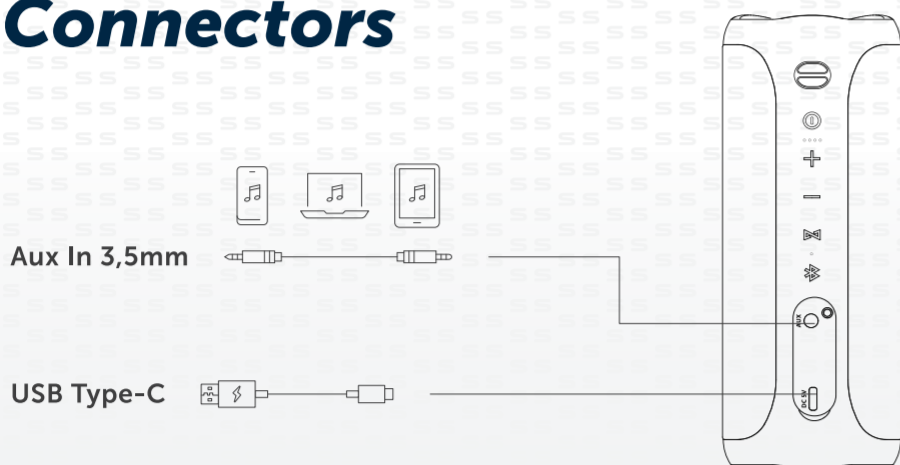

- The electrical socket must remain easily accessible if it serves as the means of disconnection.
- Always unplug the device before cleaning it.
- Clean the device with a soft dry cloth only. Never use solvents.
- Attention should be drawn to the environmental aspects of battery disposal.
- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Use the apparatus in moderate climate only.

Buttons

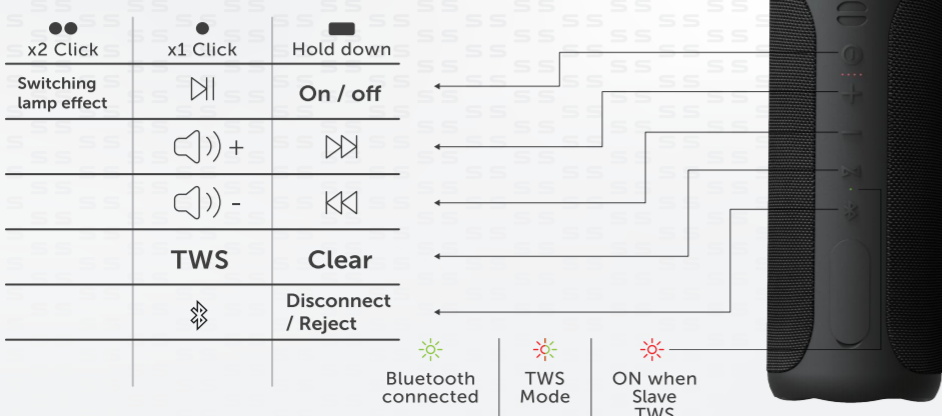

Copyright 2020 SOWO Inc. All rights reserved. Bluetooth is a registered trademarks of Bluetooth SIG, Inc. SOWO products are registered trademark of SOWO in the US.

Service contact: service@sowosound.com

Official website: www.sowosound.com



FCC ID: 2APCP-Q28