 



# MAGNETIC SCREEN DOOR



**26 MAGNETS**

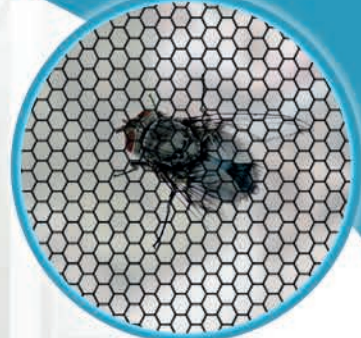

 **KEEPS BUGS OUT**

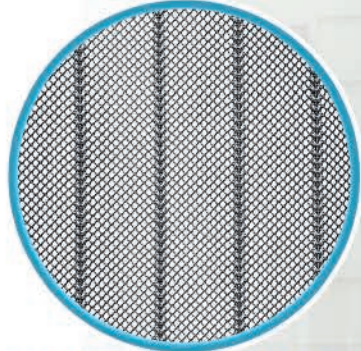

**HEAVY DUTY MESH**



**HANDS FREE ENTRY**



**QUICK & EASY  
TO INSTALL**



**PET-FRIENDLY**



**LIFETIME  
REPLACEMENT**

# INSTRUCTIONS FOR MOUNTING TO A WOODEN DOOR FRAME

## What you'll need:

- 1 Hammer
- 2 Stool or chair to stand on (optional, to help reach top of door frame)
- 3 A second person to assist is recommended

## Steps:

1

Remove the screen door from the package and unfold it on the floor or table. Connect all the magnets together so the screen door is completely shut. Note: the front of the screen door has the polyester border; the back has the hook-and-loop border.



FRONT

 


BACK

## Adjust the size of the screen door

2

- A Hold the top of the screen door on your door frame:

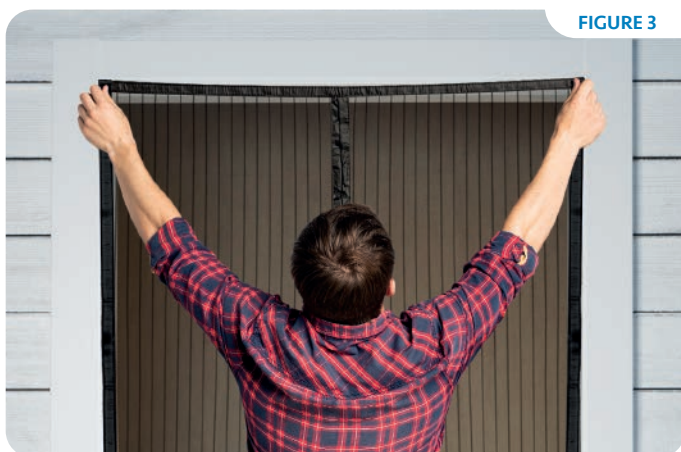

- B When holding the screen to the top of your door frame, the bottom should hang about 1/4 inch off the floor. If the screen door is dragging on the ground as in Figure 5, then you will need to "hem" it at the top or side, but don't worry that is very easy!



YES



NO

- C Determine if the length or width or both need to be adjusted. If no adjustment is needed, continue to step 4.

**A** Hemming the screen door length

- 1 As you're holding the screen door up to the door frame, find the point at the top seam of the screen door where it sits about a ¼ inch off the ground. Place your finger at that point.
- 2 Fold the screen door at that point. The fold should be from the front to back so that the velcro is not exposed.
- 3 Take a thumbtack and push it through both seams to secure the hem. Do this for the entire top of the screen door, making sure the hem width is the same across the top.



FIGURE 6



FIGURE 7



FIGURE 8

**B** Hemming the screen door width

- 1 As you're holding the screen door to the door frame, find the point at the top seam where it sits about 2" inset of the corner along the frame. Place your finger at that point.
- 2 Fold the screen door into that point. The fold should be from front to back so that the velcro is not exposed. More than one fold may be necessary.
- 3 Take a thumbtack and push it through both seams to secure the hem. Then continue the fold all the way down each side of the screen door.

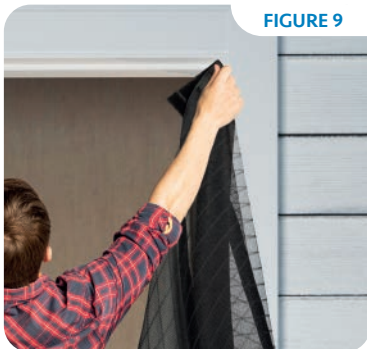 


FIGURE 9



FIGURE 10



FIGURE 11

**C** Hemming the screen door length and width

- 1 First follow the steps in 3a to hem the length, then follow the steps in 3b to hem the width.

### A Mounting the top seam of the screen door

- 1 Secure the screen door to the top of the door frame by gently hammering the thumbtacks into the door frame. It is best to hammer in 2 thumbtacks (1 on the left side and 1 on the right side) as shown below so you can make sure the screen door is centered in the middle of the door frame and that it fits appropriately.
- 2 Insert thumbtacks across the top seam about 5-6 inches apart. Make sure that there are two thumbtacks at the top middle of the screen door just above where the magnets connect. See Figure 13.  
**Note:** You want to make sure that the screen door is not mounted too tightly on the sides or it will keep the magnets from being able to close properly.
- 3 When inserting the thumbtacks along the top seam, always check to make sure that the bottom of the screen door is still about a  $\frac{1}{4}$  inch off the ground. The top seam should look like Figure 13 once completed.



FIGURE 12



FIGURE 13

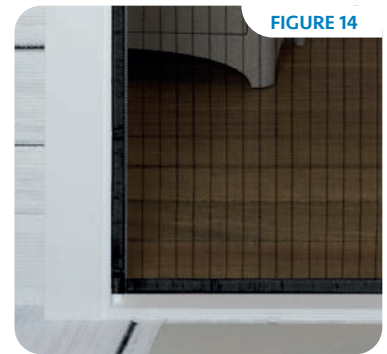 


FIGURE 14

### B Mounting the side seams of the screen door

- 1 Insert thumbtacks down each side of the screen door along the polyester seam. Note: The spacing of each thumbtack should be about 1 ft apart. For added security and durability, reduce spacing to about 6 inches. And, if the side fold is too thick for the thumbtacks to go thru, widen the fold to use less fabric.
- 2 Insert the thumbtacks 1 level at a time about 5-6" inches apart (1 thumbtack on the left side and 1 thumbtack at the same level on the right side). See Figure 15.



FIGURE 15

- 3 While inserting the thumbtacks on each side, always check to make sure that the screen door is not attached too tightly and test to make sure the magnets can close easily. Also, make sure the screen door is still about a  $\frac{1}{4}$  inch off the ground.

**Pro Tip:** Keep magnets closed throughout the installation.



FINAL INSTALLATION

# INSTRUCTIONS FOR MOUNTING TO A METAL OR ALUMINUM DOOR FRAME

## What you'll need:

- 1 Stool or chair to stand on (optional, to help reach top of door frame)
- 2 A second person to assist is recommended
- 3 Scissors
- 4 Paper towels
- 5 Any type of cleaning detergent and isopropyl rubbing alcohol
- 6 If "hemming" is necessary, you can use staples or any type of clip. Mini binder clips are ideal and you can remove the metal clips after installing.

## Steps:

1

Clean entire door frame with any type of cleaning detergent and then thoroughly wipe down the door frame with isopropyl alcohol so that the hook-and-loop tape adheres to the frame.

2

Follow Steps 1 and 2 for Instructions for Mounting to Wooden Door Frame.

3

Once you find the point where you need to mount the top seam of the screen door on your door frame, take the hook-and-loop backing tape that came in the package and cut so that it is the same length as the top seam of the screen door. Remove the white film on the back of the hook-and-loop backing tape and attach it to the top of the door frame.



FIGURE 16

4

## If your screen door requires hemming

- A The only difference for hemming in Step 3 for Instructions for Mounting to Wooden Door Frame, is that you need to expose the Velcro strip so that it can be properly mounted to the backing tape. Only one more fold is required to do this.



FIGURE 17



FIGURE 18

- B** In order to secure the hem points, you can use a stapler or mini binder clips. If you use binder clips, once the clip is fastened to the mesh, you can remove the metal pieces.



FIGURE 19



FIGURE 20



FIGURE 21

5

Follow Step 4 for Instructions Mounting to Wooden Door Frame but instead of using thumbtacks, use 4-5" pieces of the hook-and-loop backing tape to secure the sides of the screen door to the door frame.



FIGURE 22



FIGURE 23

## HAVE AN ISSUE WITH YOUR MAGNETIC SCREEN DOOR?

Enjoy hassle-free replacements: if your magnetic screen door is defective or damaged, we will ship you a new one **ABSOLUTELY FREE**.

For fast and knowledgeable service, get in touch with one of our customer service experts right now!

**Contact Upper Echelon Products directly through Amazon for any assistance. We're here to help!**

1. Go to product listing on Amazon and select Upper Echelon Products.
2. Select the "Ask a Question" button.
3. Write your message and send! We'll reply in less than 24 hours.
4. Or just simply click the button below!

Ask a question