

# Installation Guide & User Manual

Scan to view on YouTube  
**Installation Video**



# •THORBOLT•

Smart Fingerprint Door Knob with Keypad

## MK1



# Hello!

Thank you for choosing MK1 Fingerprint Door Knob with Keypad!

MK1 takes indoor room security to the next level. The robust and stylish body is constructed by rigorously selected Aluminum and Zinc Alloy materials. Unlike any traditional door knob, MK1 enables you to manage up to 100 passcodes and 100 fingerprints, opening up multiple possibilities for various use cases.

MK1 works with Apple Home over the future-proof wireless technology, Thread. It is faster, more reliable, and more secure. With your Thread-enabled apple home hub, you can lock/unlock your door and check the status using Siri or your iOS device at anytime, from anywhere. Our Sleekpoint app provides a ton of exclusive features for your day-to-day use: access management, activity feed and useful settings, etc. With our power-saving technologies, 4 AA batteries are able to provide up to 1 year of battery life. You may finally be able to put your keys away and use them as backup.

For now, please be sure to explore all of its features outlined in this manual. If you have any questions, feel free to just drop us an email anytime. We'd love to assist you to get the most out of it!

## Customer Support

---




 
 
 

 
[support@thorbolt.co](mailto:support@thorbolt.co)



[www.thorbolt.co](http://www.thorbolt.co)

# What's in the Box

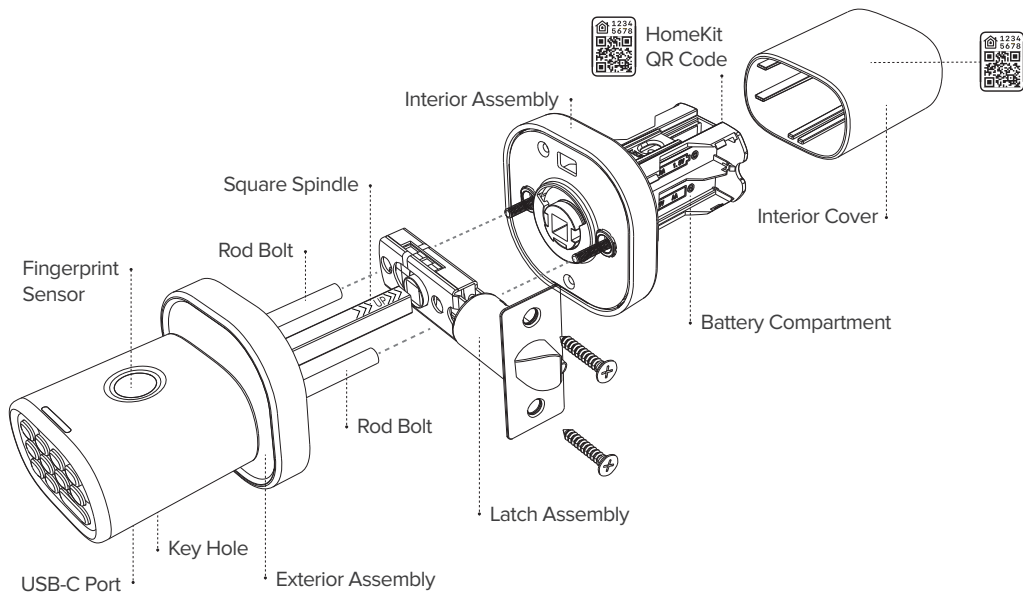
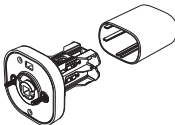
| Tools                                                                                                                                                                                                                     | Additional                                                                                                                                                                                        |                                                                                                     |                                                                                                                                                    |                                                                                                           |                                                                                                                                  |                                                                                                                                                                                                          |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>Phillips Screwdriver                                                                                                                 | <br>Drill                                                                                                        | <br>Hole Saw Drill | <br>Chisel                                                        | <br>Hammer              | <br>Tape Measure                              | <br>Pencil                                                                                                            |
| Parts                                                                                                                                                                                                                     | <br>Exterior Assembly                                                                                            |                                                                                                     | <br>Interior Assembly                                             |                                                                                                           | <br>Latch Assembly                            |                                                                                                                                                                                                          |
|                                                                                                                                                                                                                           |                                                                                                                                                                                                   |                                                                                                     |                                                                                                                                                    |                                                                                                           | <br>Key x 2                                   | <br><br>Strike Plate<br>Strike Box |
| <br>M4 Screw x 3<br>1-2/5" (35mm)<br><b>For door thickness</b><br>1-3/8" - 1-3/4" ( <b>35 - 45mm</b> )<br>[*2 on door knob set, 1 spare] |                                                                                                                                                                                                   |                                                                                                     | <br>M3 Screws x 2<br>1/4" (6mm)<br>[*1 on door knob set, 1 spare] |                                                                                                           | <br>Strike Plate<br>Screws x 4<br>4/5" (20mm) |                                                                                                                                                                                                          |
| Optional Parts                                                                                                                                                                                                            | <b>For door thickness</b><br>1-3/4" - 2-1/4" ( <b>46 - 58mm</b> )<br> 2-3/4" ( <b>70mm</b> ) backset is required |                                                                                                     |                                                                                                                                                    | <br>Long Square Spindle |                                                                                                                                  | <br>M4 Screws x 3<br>1-3/4" (45mm)                                                                                    |
| (Contact Customer Service if needed)                                                                                                                                                                                      |                                                                                                                                                                                                   |                                                                                                     |                                                                                                                                                    |                                                                                                           |                                                                                                                                  |                                                                                                                                                                                                          |


# Prepare the door and check dimensions

- For installation on new doors


1

## 1. Prepare door and jamb

- Take out the 'Door Marking Template' (Figure 1a).
- Fold template and place on door 36" (915mm) from the ground as marked (Figure 1b).

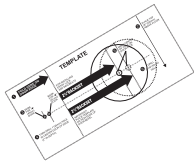


-1a-

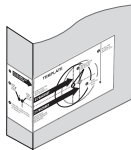

-1b-

## 2. Mark the door for drilling

- Mark center hole on door edge through guide on template for 1" (25mm) latch bolt (Figure 2a).
- Mark center hole on door face through guide on template for 2-3/8" (60mm) or 2-3/4" (70mm) backset (Figure 2b).

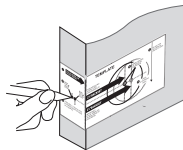


-2a-



-2b-

### 3. Drill and chisel door

- Drill 2-1/8" (54mm) hole through door face as marked for lock set (Figure 3a).
- Drill 1" (25mm) hole in center of door edge for Latch Assembly (Figure 3b).
- Insert Latch Assembly in hole keeping it parallel to face of door. Mark outline and remove latch (Figure 3c).
- Chisel 1/8" (3mm) deep or until latch face is flush with door edge (Figure 3d).

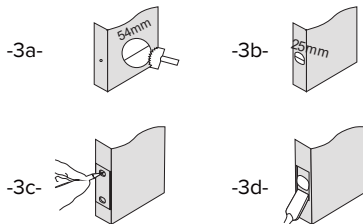


#### NOTE:

For drive in Latch, drill hole size indicated on template and press until it is flush with door edge.







### 4. Mark and drill door jamb






- Mark center hole on edge of jamb even with the center of the Latch Bolt on door edge (Figure 4a).
- Drill a hole in door jamb on center mark. Check if the strike box measure can perfectly fits in (Figure 4b).
- Outline outside edges of Strike Plate (Figure 4c).
- Chisel 1/8" (3mm) deep for Strike Plate or until flush (Figure 4d).
- Install Strike Plate using two 4/5" (20mm) screws provided (Figure 4e).

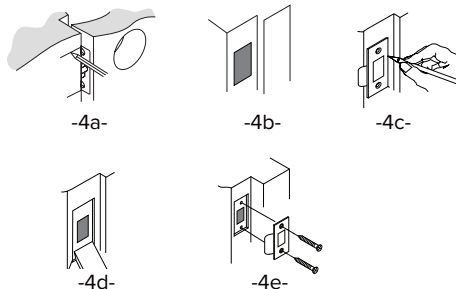

For installation on doors with pre-drilled holes


**1. Check door compatibility / Remove existing door knob (if applicable)**

 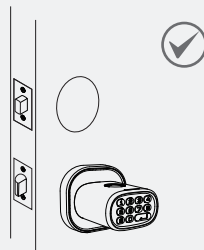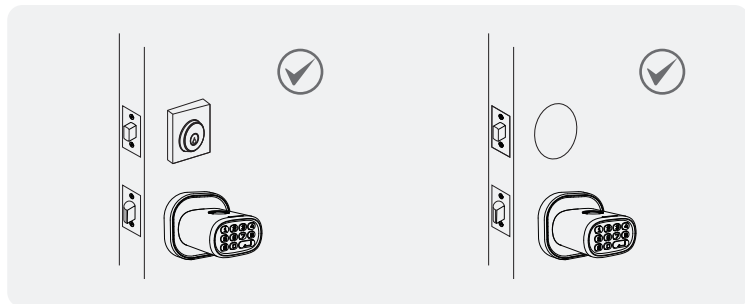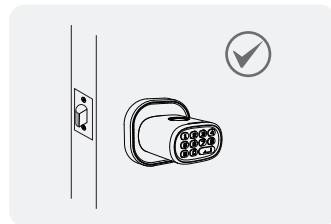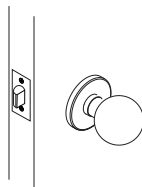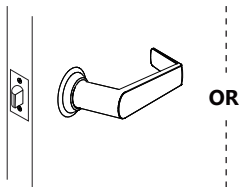

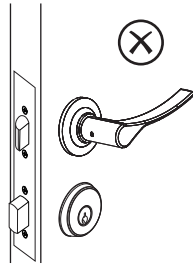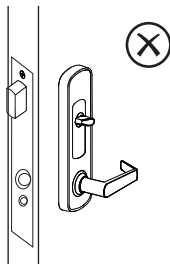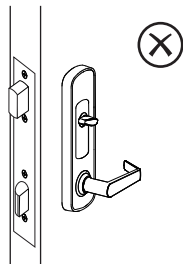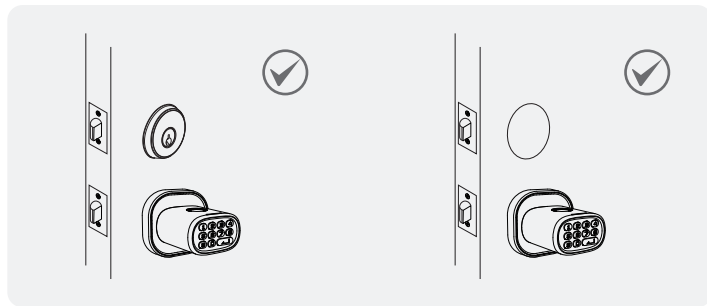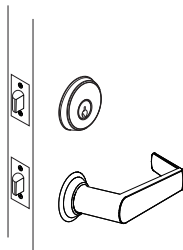


## 2. Double check door dimensions


- 1 Backset: measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70mm).

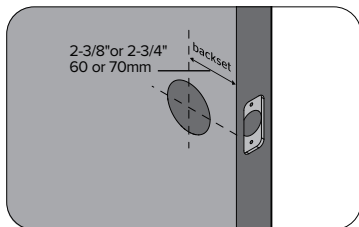


- 2 Thickness: measure to confirm that the door is between 1-1/4" to 2-1/4" (35mm to 58mm) thick.

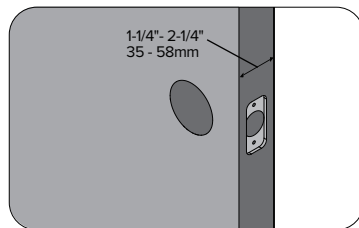

- 3 Hole in the door: measure to confirm that the hole in the door is 2-1/8" (54mm).

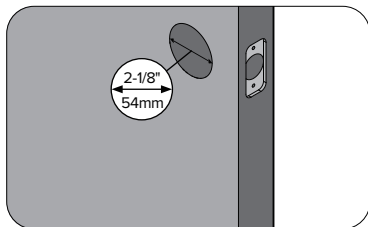

- 4 Hole in the door edge: measure to confirm that the hole in the door edge is 1" (25mm).

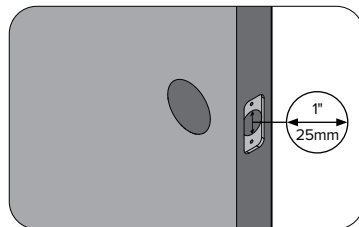



**DO NOT** use an electric screwdriver, only hand tighten screws with Phillips screwdriver.

**DO NOT** over-tighten screws.

**DO NOT** install this product if your door thickness is out of range.

**DO NOT** mix new batteries with used batteries when the product is in use. Use brand new batteries from a single brand.

**DO NOT** keep your keys inside.

### **Batteries**

This lock requires 4 AA Alkaline batteries **from a single brand** (Duracell or Energizer recommended) to be **purchased separately**. **For best result**, 1.2V rechargeable batteries are NOT recommended. When all 4 batteries are installed in the correct position, you will hear a long beep and the indicator lights will illuminate.





**DO NOT mix new batteries with used batteries when the product is in use. Use brand new batteries from a single brand.**



## Install the Latch and Strike Plate


2

Hold the latch in front of the door hole, with the latch face flush against the door edge. Make sure the square-shaped hole is centered.

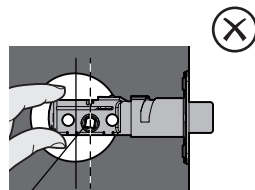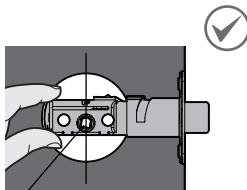


For 2-3/4" (70mm) backset, pull to extend the latch in order to center the squared-shaped hole.

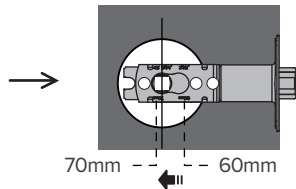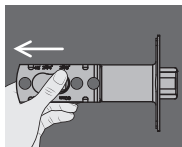

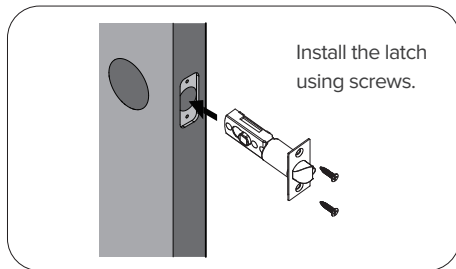


In most cases, the existing strike plate is ready to be used. You may store the strike plate in box for future use.

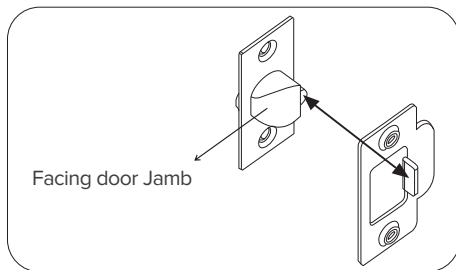


If not, please make sure the bolt is aligned correctly with the strike plate.

## Install the Exterior Assembly

3

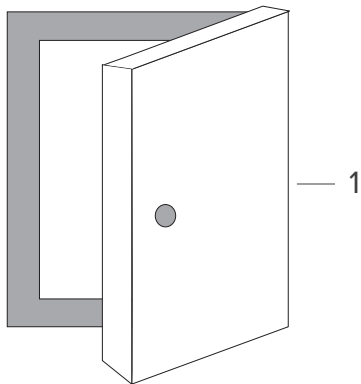


Make sure the door is open.

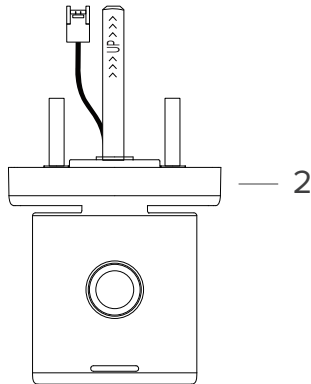


Make sure the fingerprint sensor and indicator light face upward.

Insert the Exterior Assembly onto the door with the rod bolts going through the round holes on the latch, the square spindle going through the center hole on the latch and the control wire going through the door hole below the latch.

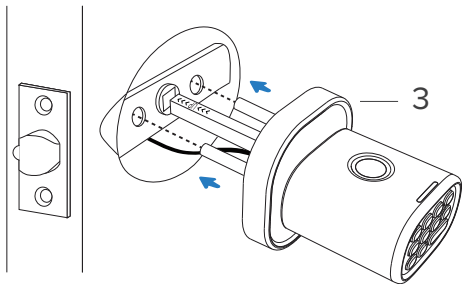


The “UP” mark on the spindle should face upward

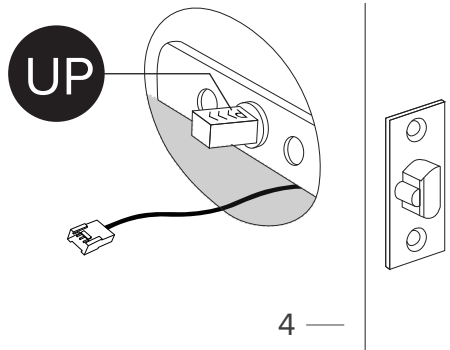


Forcing the control wire into any other place than specified above will damage the connector, making the door knob unusable.

## Install the Interior Assembly

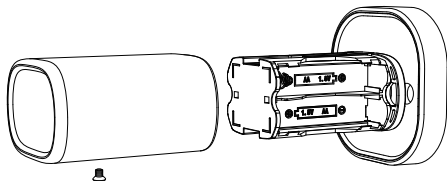




- 1 Remove the screw located at the bottom and then pull out the cover.

- 2 Connect the control wire male connector with the female connector from the exterior assembly.

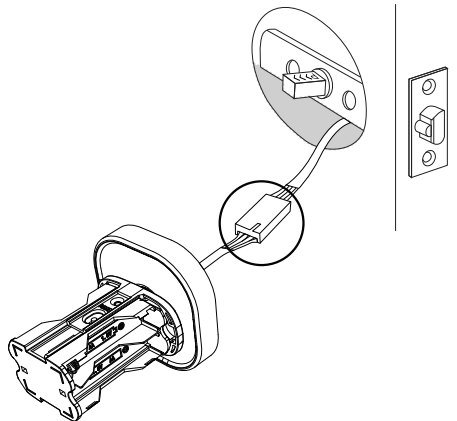

4

- 3 Secure both exterior and interior knobs to the door using the 1-2/5" (35mm) screws. Tighten them with a Phillips Screwdriver (**DO NOT over-tighten**).
- 4 Install the batteries into the compartment.
- 5 Press and hold the reset button until you hear a long beep.
- 6 Install and then secure the cover with the screw.

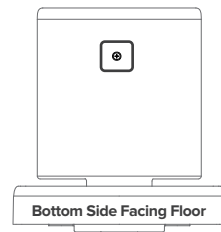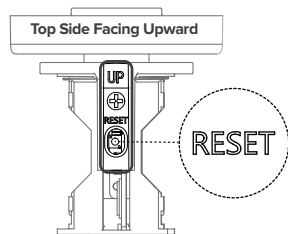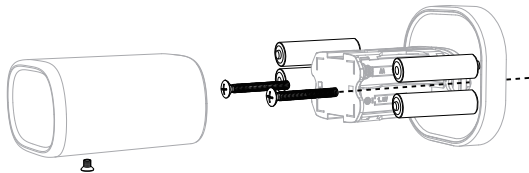

Make sure the side with the screw faces toward the floor, or the opposite side with the reset button faces up.


## Testing door knob

5

- Always test with door open.
- Make sure both the interior and exterior knobs are not slanted.
- Use keys to test the exterior knob. Insert the key and then turn it counter-clockwise 90°. And then
- When you turn the knob either way, the bolt should smoothly move in and out.
- Test the interior knob. The bolt should move smoothly in and out.
- Close the door to make sure the bolt fits in the hole on jamb.



**Congratulations!**  
**MK1 is ready for use.**

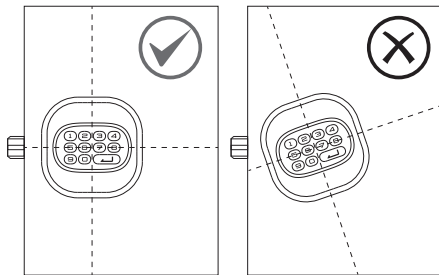


### **Note:**

- Make sure the door knob has been reset successfully.
- If you forget your passcode and your fingerprint is not recognized nor setup, the only way to unlock is to use backup keys.
- If you happen to lose your backup keys at the same time, please immediately contact a locksmith for assistance.


## Using door knob

6

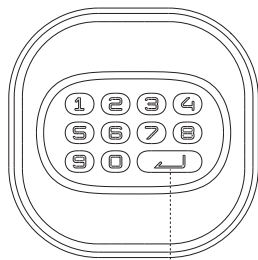


Enter button

Fingerprint Sensor

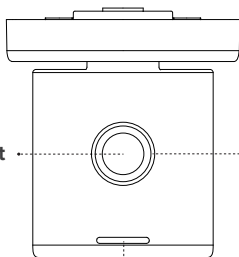

USB-C Port  
Key Hole

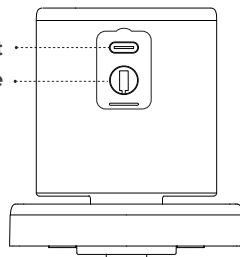

Fingerprint Ring light

### Green

- Fingerprint read successfully

### Red

- Fingerprint reading failed

### Blue

- Reading Fingerprint

### White

- Initializing fingerprint sensor

Status Indicator light

### Green

- Indicates a setting is successful and activated
- Unlocking successful

### Red

- Indicates a setting is unsuccessful and deactivated
- Low-battery warning

# Pairing your door knob to your iOS device

7



## Compatibility

- iPhone/iPad with the latest version of iOS strongly recommended.

- ★ **Requires a Thread-enabled Apple Home hub to use Thread network.**
- ★ **Make sure to pair your door knob within 10 minutes after resetting. Otherwise you will need to factory reset your door knob again to enter Pairing Mode.**

For best result, the door knob should be within 30 feet of one of the Thread-enabled Apple Home hubs, or a router node (Full Thread Device) for remote capability.



Firmware  
Update



Manage  
Access



Lock /  
Unlock



Lock  
Activity



# Recording fingerprint ID

8



## Important Tips

Lift and rest your finger on the fingerprint sensor repeatedly for **6** times.

For best results, it is highly recommended to scan the five fingerprint areas and follow the **6-step** sequence demonstrated on the left when you add and scan a fingerprint.

## Batteries

This lock requires 4 AA Alkaline batteries **from a single brand** (Duracell or Energizer recommended) to be **purchased separately**. **For best result**, 1.2V rechargeable batteries are NOT recommended. When all 4 batteries are installed in the correct position, you will hear a long beep and the indicator lights will illuminate.



If the batteries die due to long idle time, use type-C cable with a power source such as a power bank for emergency power. As soon as unlocking is successful, immediately replace with new batteries.

## Buzzer and Status Indicator

| Action                                 | Buzzer        | Indicator               |
|----------------------------------------|---------------|-------------------------|
| Power on                               | Long beep     | Stays green for a while |
| Press a button                         | Beeps once    | Blinks green once       |
| Unlocking successful                   | Long beep     | Stays green for a while |
| Locking successful                     | Long beep     | Stays green for a while |
| Silent mode on                         | Silent        | Stays green for a while |
| Silent mode off                        | Long beep     | Stays green for a while |
| Auto-Lock completed                    | Silent        | Off                     |
| Immediate Lock completed               | Long beep     | Stays green for a while |
| Resetting successful                   | Long beep     | Stays green for a while |
| Press a button when keys are locked up | Beeps twice   | Blinks red twice        |
| Operation failed                       | Beeps twice   | Blinks red twice        |
| Low batteries warning                  | Beeps 5 times | Blinks red 5 times      |

## Access management



To setup HomeKit Guest Access, please go to the Home app.  
For full management options, please go to the Sleekpoint app.

## Settings

### Resetting the Door Knob/ Entering Pairing Mode

Remove the screw and cover from the interior assembly.  
Press and hold the Reset Button until you hear a long beep sound along with the green light, and then the door knob will reboot itself until you hear another long beep sound along with green light, indicating the reset is successful. Meanwhile, the pairing mode is activated for adding the device to HomeKit. Make sure to pair your door knob within 10 minutes after resetting. Otherwise you will need to factory reset your door knob again to enter Pairing Mode.

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Anti-Peep</b>         | The Anti-Peep technology is used for protecting your passcode from prying eyes. You may enter up to 20 digits including your passcode to unlock the door knob.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Auto-Lock</b>         | <p>Turn on Auto-Lock:  &gt; unlimited passcode &gt;  &gt; 4 &gt; </p> <p>Turn off Auto-Lock:  &gt; unlimited passcode &gt;  &gt; 5 &gt; </p> <p>In-app Auto-Lock Settings: The door knob will automatically lock after set time in the Sleekpoint app.</p> |
| <b>Silent Mode</b>       | <p>Turn on/off Silent Mode (Buzzer)</p> <p> &gt; unlimited passcode &gt;  &gt; 6 &gt; </p> <p>You may turn on silent mode to deactivate the buzzer.</p>                                                                                                                                                                                                                                                                                                                                                            |
| <b>Immediate locking</b> | Press  to lock immediately.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |



**SAVE THESE IMPORTANT INSTRUCTIONS FOR EASY REFERENCE.**

## Troubleshooting

**No indicator nor sound response from pressing a button**

1. Remove the cover from the interior assembly and then check if the cable wire is securely attached. If not, remove the connector and then plug in again.
2. Make sure the batteries are inserted properly (correct polarity).
3. Make sure the batteries have enough power.
4. Check if the door knob is in Silent Mode.

**If you are stuck outside and not able to access battery compartment, use USB-C emergency power to power on the door knob.**

**Latch will not extend or retract completely when closed**

1. Check the size of the hole in the door edge and adjust according to installation guide.
2. Check if the latch is installed properly according to the backset length.
3. Make sure the thinner edge of both the interior and exterior knobs heads downward and vertically to the floor.

|                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Bolt is not able to go through the strike plate</b></p>             | <ol style="list-style-type: none"> <li>1. Make sure the bolt aligns with the strike plate.</li> <li>2. Make sure the bolt edge can slide into the strike plate.</li> <li>3. Make sure depth of the hole in door jamb fits the bolt.</li> </ol>                                                                                                                                                         |
| <p><b>Failed to unlock</b></p>                                            | <ol style="list-style-type: none"> <li>1. Go to access management in app and double-check if the passcode entered is correct or fingerprint ID is properly recorded.</li> <li>2. Check if the buttons work properly: Turn off Silent Mode, and then press each button. You should hear the buzzer every time.</li> <li>3. Reset the door knob, pair it to the network and then setup again.</li> </ol> |
| <p><b>Failed to lock or unlock/<br/>Failed to fully turn the knob</b></p> | <ol style="list-style-type: none"> <li>1. Check if the screws are overtightened when installing the interior piece.</li> <li>2. Check if both knobs are slanted from the door edge.</li> <li>3. Make sure the battery level is high and no mixing of new batteries with the old ones.</li> </ol>                                                                                                       |

## Important safeguard

9

- If a fingerprint or passcode is no longer needed, please promptly remove it. If you are uncertain about the fingerprints recorded in the past, it is recommended to delete all fingerprints or reset this lock.
- When sending a user code, always double-check that you are sending it to the correct recipient.
- Dispose of used batteries according to local laws and regulations.
- Always have access to your lock's standard key.
- Prevent water and liquids from getting into the lock's electric parts or battery compartment.
- Replace batteries immediately as soon as you are warned.

### **CAUTION:**

Prevent unauthorized entry. Since anyone with access to the interior assembly can factory reset the door knob, routinely check the administrator code to ensure they have not been altered without your knowledge.

### **WARNING:**

This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.

# FCC WARNINGS

10

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by ThorBolt may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Contains FCC ID: 2A6C1-BB840FS