



# HANDHELD STEAM CLEANER

USER GUIDE



# USER'S GUIDE

|                                             |       |
|---------------------------------------------|-------|
| Catalog.....                                | 1     |
| FAQ.....                                    | 3-4   |
| Quick Start Guide.....                      | 5-7   |
| Technical Specification & Product View..... | 8     |
| How to Install Accessories.....             | 9-10  |
| Window Wiper Installation.....              | 11    |
| Disclaimer.....                             | 12-13 |
| Warranty.....                               | 14    |

# mosCHE

Visit MOSCHE Youtube Vedio Guide



## FAQ

### Question 1: What's the highest temperature that this steam cleaner can achieve?

The internal temperature of our steam cleaner can reach 230°F(110℃) and the steam comes out at a temperature of 212°F-221°F(100-105℃).For the sake of safety, the designed temperature of the steam cleaner can only reach 230°F (110℃) to avoid damage in high temperature. Deep cleaning is not recommended because the cleaning at the designed temperature of 230°F (110℃) can secure personal safety when eliminating the stains.



**Note:** For better using experience, it is recommended that the cleaner is always plugged in when using.

### Question 2: Why can't I open the lid after use?

After use, the temperature of the residual steam inside the tank is still too high, please:



1. Unplug first.



2. Fully discharge the residual steam and wait red spot sinks down.



3. Open the lid.



4. Add water into the steam cleaner.

## FAQ

### Question 3: How to add water?

1. Fill clean water into the measurement cup up to the marking no more than 9.46OZ(280ML)
2. Fill in the water into the boiler with the funnel without exceeding 9.46OZ(280ML) of water.
3. Plug the safety cap firmly by clockwise rotating.

### Question 4: Why did the accessories parts fall off during cleaning after being stuck in?

1. Please let the alignment of accessories focus to the product bayonet.
2. Push in the accessories part you need to clean.
3. Twist it to the left side.
4. After, you can enjoy your steam cleaner with accessories fully twisted in.

### Question 5: Does the steam cleaner not stressful enough when using?

First of all, please check whether the safety cap is tight, if it is not tight, it may cause insufficient pressure. And we do not recommend customer using the steam cleaner without tightening or it may get burned.

### Question 6: After attach the accessories and add water into the water tank and heat up to use, the steam cleaner is air leak, why this happen?

In this case, please press the "ON/OFF" Button firstly, after pressing once, the air leak issue will disappear so it can be used. If you still have this situation after pressing, please contact our after sale customer service E-mail: [info@gomosche.com](mailto:info@gomosche.com), we will help you solve the problem.

## Quick Start Guide



**1**

Unplug the safety cap.



**2**

Add about 250ML of water with a funnel and measuring cup.



**3**

Plug the safety cap.

## Quick Start Guide



Install the accessories.



Plug the power cord and wait 3-4 minutes to warm up.

## Quick Start Guide



**6**

When the red LED has changed to disappear, you can use the steam cleaner.



**7**

You can use to clean places where necessary.

## Technical Specifications

|                      |                      |                 |              |
|----------------------|----------------------|-----------------|--------------|
| Model:               | WHL-603              | Heating Time:   | 3-4 minutes  |
| Voltage/Frequency:   | AC 110-120V,50/60 Hz | Usage Time:     | 5-8 minutes  |
| Rated Power:         | 1200W                | Flow Rate:      | 28 g/min     |
| Water Tank Capacity: | 350ML                | Steam Pressure: | 0.26-0.32Mpa |

## Product View



## How to Install Accessories

- 1** Attach Faric-Cleaning Accessory/Use to Clean Faric&Clothes or Other Places.



**Twist it**



- 2** Attach Glass-Cleaning Accessory/Use to Clean Windows or Other Places.



- 3** Attach Round Brushes/Use to Clean Sofa, Bed or Other Places.



**Twist it**



## How to Install Accessories

- 4** Attach Cone-Shaped Nozzle/Use to Clean Kitchen Furniture or Other Places.



- 5** Attach Bent Nozzle/Use to Clean Toilet or Other Places.



- 6** Attach Extension Hose/Use to Clean Floor Gap & Wall Cracks or Other Places.



# Window Wiper Installation

The window wiper can be used to clean windows, flat and smooth flooring.



(Window Wiper/Steam Iron/Assembled)



**Installation:** First, hook the lower mounting clips of the **window wiper (A)** onto the lower edge of the steam iron and then clip the **upper mounting clip (B)** into the upper edge of the steam iron.

**Removal:** Push the upper **window wiper clip (B)** forwards and pull the wiper away from the steam iron. Unfasten the **lower clips (A)** and remove the window wiper.

## Disclaimer

Our steam cleaner is corded electric product, please be aware of the following.

- \* It is forbidden to leave the product for a long time when it is under the working condition. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.
- \* When using the steam cleaning machine, you should always follow the basic precautions to reduce fire, electric shock and other hazards include: the plug must be inserted into the 110V-120V circuit. Do not use if there is no matching circuit. You can consult an electrician before using the product if you are unsure whether the circuitry in your home meets this specification. In case of violation of this specification may lead to fire, overheating, malfunction and other hazards. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.
- \* Do not use extension wires, arresters, timers, circuit breakers or use the same socket as other appliances in violation of this specification. In case of violation of this specification may lead to fire, overheating, malfunction and other hazards. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.
- \* When the steam cleaning machine is not operated, please be sure to unplug the power supply before leaving. In case of violation of this specification may lead to fire, overheating, malfunction and other hazards. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.
- \* Do not use under quilt, mattress or cushion when using steam cleaning machine. In case of violation of this specification may lead to fire, overheating, malfunction and other hazards. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.

## Disclaimer

- \* The elderly and children must be very careful when using and must used with adult guidance. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.
- \* Do not place the steam cleaner near the bathtub or other water container. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.
- \* The power cord of the steam cleaner should be kept away from other equipment or channels without tripping. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.
- \* Please keep the plug dry, do not plug the cable in when the socket has water stains. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.
- \* Steam cleaning devices can only be used in the operating environment in accordance with this manual. Fire and electric shock hazards may occur in any other use or place. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.
- \* Do not attempt to repair, modify or disassemble this product. The seller does not take any responsibility for any damage arising from failure to comply with this product guide.
- \* Do not use it in high temperature or it will cause explosion. Do not approach the fire source. Do not use it if there is a problem with the cable after receiving the goods, or it will cause explosion.
- \* Please use the product according to the instructions, the seller does not take any responsibility for any damage arising from failure to comply with this product guide.

## Warranty-MOSCHE Steam Cleaner

The warranty offers you specific legal rights. And you also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have any questions regarding what it may cover, please contact our Consumer Services by E-mail, as described below.

**Dclaration-Product is Corded Electric/ Battery Powered.**

### Limited 24 Months Warranty

Subject to the **EXCEPTIONS AND EXCLUSIONS** identified below, upon receipt of the product will repair or replace (with new re-manufactured components or products), at our option, free of charge from the date of purchase of the original purchaser. We offer a Warranty of one year for any defective or malfunctioning part.

See information below on "If your MOSCHE product should require service.

This warranty does not apply to fans or routine maintenance components such as filers, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

If you need infonnation about repairs or replacement parts, or if you have questions about you warranty, contact MOSCHE Consumer Services.

 [info@gomosche.com](mailto:info@gomosche.com)



**24 Months**

Warranty  
Extension



**60 Days**

Free Return  
Shipping

