


# AIRHUG

## User Manual (EN)

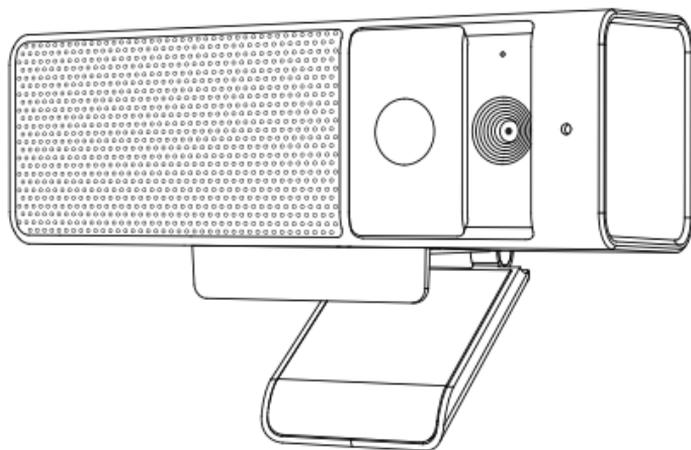

**AIRHUG 16**

# Contents

<b>1. Welcome</b>	1
1.1 AIRHUG 16 Features	1
1.2 Safety Information	1
1.3 Disclaimer	2
1.4 Disposal	2
<b>2. AIRHUG 16 Overview</b>	3
2.1 Package included	3
2.2 Know Your AIRHUG 16	3
<b>3. Connecting to Computer</b>	5
<b>4. Setting Up the AIRHUG 16</b>	6
<b>5. Specifications</b>	8
<b>6. Support</b>	9
6.1 How to care for your AIRHUG 16	9
6.2 FAQ	9

## 1. Welcome

Thank you for placing your trust in us and for purchasing the AIRHUG 16 All-in-one Video Conferencing Camera. For the best results, we would like to give you an introduction into how to use AIRHUG 16.

### 1.1 AIRHUG 16 Features

---

- 📷 76° wide-angle distortionless camera captures all meeting participants clearly.
- 📺 1080P@30fps Full HD video call.
- 🎧 1-Element omnidirectional microphones array picks up voices with HD quality.
- 🔊 High quality, full range built-in speaker is optimized for human voice.
- 🔄 Up to 6 ft voice pickup radius and uninterrupted full-duplex two-way communication.
- 🔊 AI noise-suppression, echo-cancellation, and competent under various acoustic environments.
- 🔌 Plug & Play, connect to host device via USB.

### 1.2 Safety Information

---

General information

- READ this user manual.
- KEEP this user manual.
- FOLLOW the operating and safety instructions listed there.

### 1.3 Disclaimer

---

The company Feifan Innovation E-commerce (Shenzhen) Co., Ltd. accepts no liability for damage to the product or injury to persons caused by careless, improper, incorrect use of the product, or use for purposes not specified by the manufacturer.

### 1.4 Disposal

---

This symbol on the product, in the user manual or on the packaging means that your electrical and electronic devices should be disposed of separate from household waste at the end of their life cycle. There are separate collection systems for recycling in the EU.



## 2. AIRHUG 16 Overview

### 2.1 Package included


---



USB C to USB A ×1



User Manual ×1

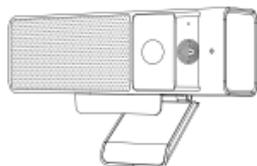


AIRHUG 16 All-in-one Video Conferencing Camera ×1

### 2.2 Know Your AIRHUG 16




---

Privacy cover covered  
(Slide to the left)

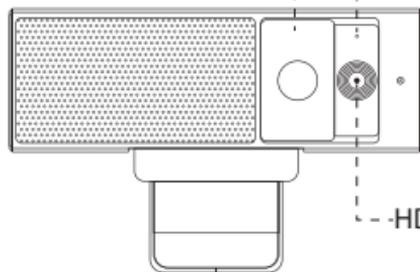

-LED activity light

-HD lens

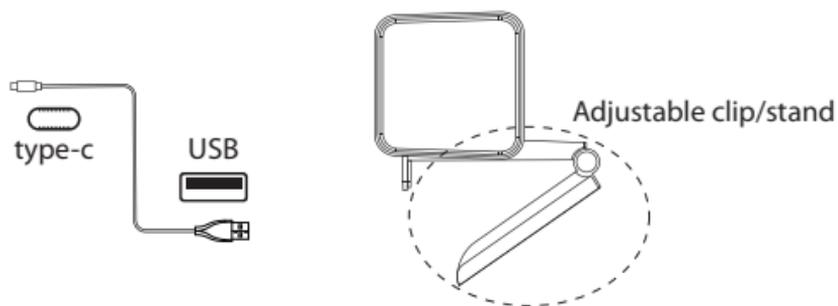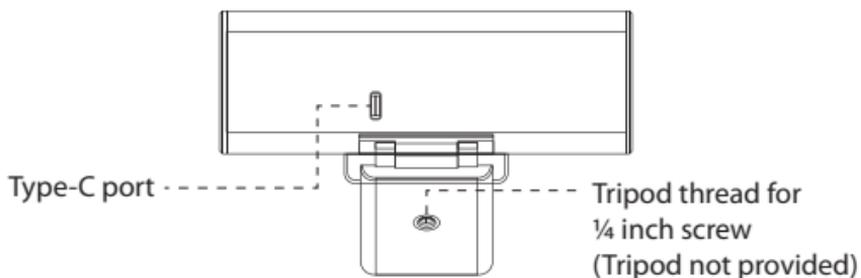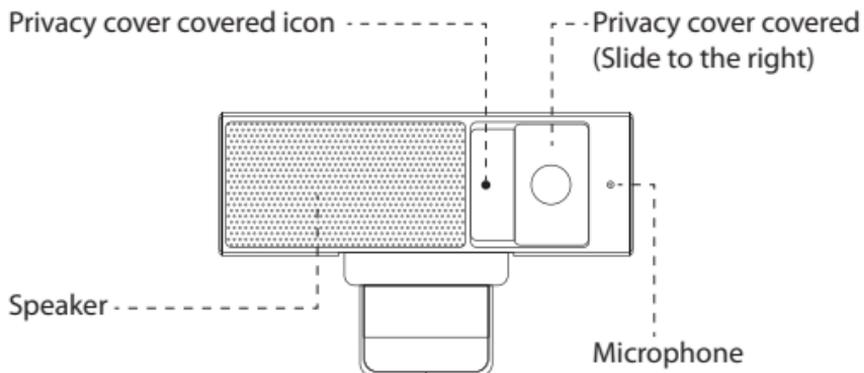

### 3. Connecting to Computer

---

1. Plug the USB-A connector into the USB-A port on your computer.


\* Plug-and-play support will let your computer instantly recognize AIRHUG 16.

\* If your computer does not instantly recognize AIRHUG 16, try plugging into a different USB port or restart the computer.

2. Open the app you want to use with AIRHUG 16.

\* LED activity light will light up when AIRHUG 16 is in use by an app.

(You may need to select this webcam in the settings of the specific app you're using.)

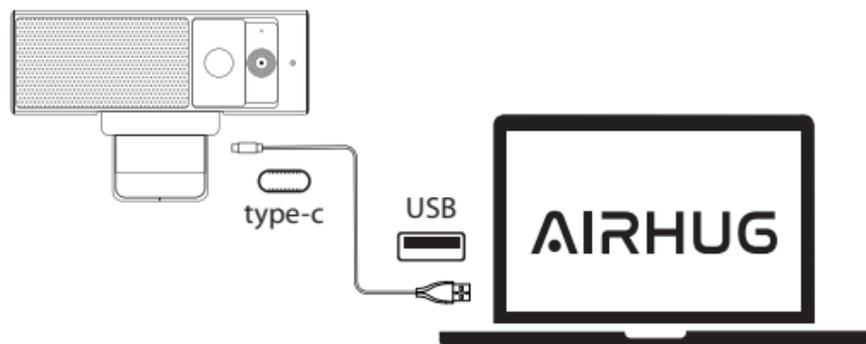


## 4. Setting Up the AIRHUG 16

---



### Option A:

Place AIRHUG 16 on a conference table.

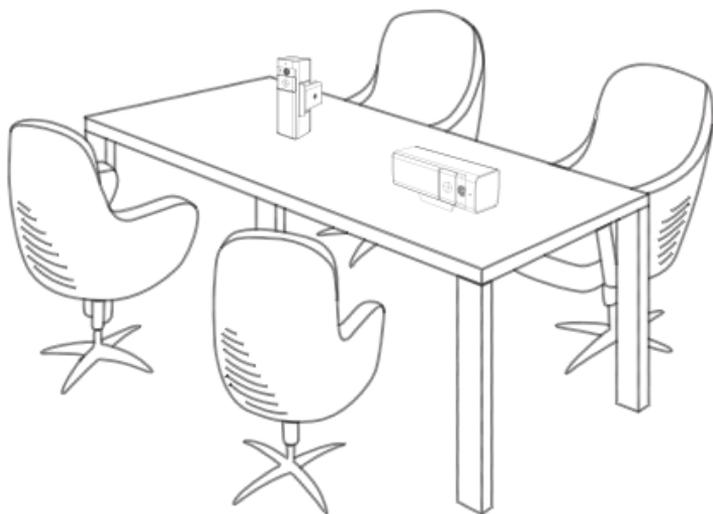


## Option B:

1. Place your webcam on a computer, laptop or monitor at a position or angle you desire.
2. Adjust the webcam to make sure the end on the universal mounting clip is flush with the back of your device.
3. Manually adjust the webcam up/down to the best position to frame yourself.

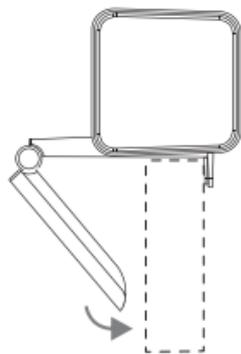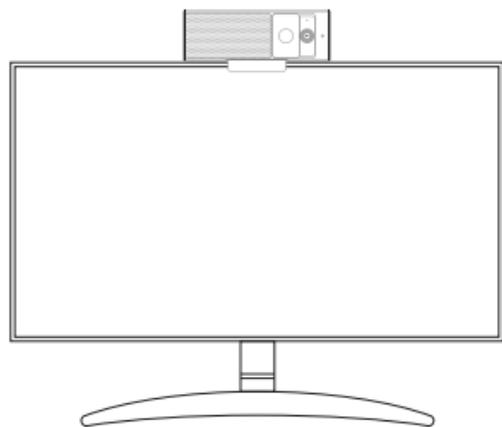

## Option C:

With the clip folded in, mount the webcam onto a tripod (not provided) with the 1/4 inch thread.

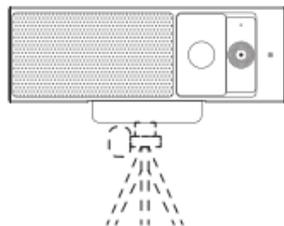

## 5. Specifications

---

Specifications are subject to change without notice.

<b>Charge input</b> 5V $\overline{\text{---}}$ 500mA	<b>Focus type</b> Fixed Focus
<b>Charging port</b> Type - C	<b>Field of view (FOV)</b> 76°
<b>Speaker parameters</b> 4 $\Omega$ 5W	<b>Image Sensor</b> 1/3'
<b>Audio Specs</b> 1-element Omnidirectional	<b>Video codec</b> MJPG
<b>Signal-Noise Ratio</b> 65dB	<b>Maximum video frame rate</b> 30fps(MJPG1920 x 1080)
<b>Pickup distance</b> 6 ft	<b>Resolution</b> 1920x1080    1280x720
<b>Cable Length</b>	6.5ft
<b>Weight</b>	5.85 oz (166g)
<b>Dimensions</b>	5.5 - 2.9 - 2.3in (139 - 73 - 59mm)
<b>Supported Operating Systems or Software</b>	Windows 7 - 8 - 10 - 11 MAC OS X

## 6. Support

### 6.1 How to care for your AIRHUG 16

---

- Always store the device with the power off and safely protected.
- Avoid storage at extreme temperatures (above 70°C/158°F or below -20°C/-4°F).
- Never place objects filled with liquids (e.g. vases or drinking glasses) on the device. Liquid in the devices can cause a short circuit.
- ***Do not attempt to open the device. Leave all servicing to AIRHUG support team only.***

### 6.2 FAQ

---

AIRHUG provides 24 hours customer support service.

If you have any questions about using AIRHUG 16, please email us or contact us through our support web page. AIRHUG support team will solve the problem for you in 12 hours.

View the FAQs or for additional support, please visit us at ***[www.airhugshop.com/support](http://www.airhugshop.com/support)***



24/7 Support Web Page  
<http://airhugshop.com/support/>



24/7 Support Email  
[airhug.sale1@gmail.com](mailto:airhug.sale1@gmail.com)

Manufactured by/ Hergestellt von/ 製：  
Feifan Innovation E-commerce Shenzhen Limited  
Baoyunda Logistics Center Building 3-602  
Fuhua Community, Xixiang Street, Baoan District  
Shenzhen, Guangdong, China 518000  
Email:airhug.sale1@gmail.com  
Phone / Telefon/ 電話：0086-13810899914

Name: Zhile Tehnoloogia OÜ  
Address: Narva mnt 5, Tallinn, Harjumaa, Estonia, 10117  
E-mail: info@zhile-tech.com  
Tel: +852 51787554  
Contact Person: FEI WEI



Name: ZHILE TECHNOLOGY LIMITED  
Address: 61 Nightingale Way, Westfield, Radstock,  
England, United Kingdom, BA3 4NL  
E-mail: info@zhile-tech.com  
Tel: +852 5178 7554



Made in China

In China hergestellt

中国製