

TOOLCY® ELECTRIC PRESSURE WASHER MANUAL (TPWUB Series)

SPECIFICATIONS

Maximum Pounds per Square Inch: 2335 PSI

Maximum Gallons per Minute: 1.6 GPM

Rated Pounds per Square Inch: 1668 PSI

Rated Gallons per Minute: 1.3 GPM

Electrical Requirements: 120V~60 Hz

Water Supply: Cold Water Only

INTENDED APPLICATION


This pressure washer is designed for cleaning cars, motorcycles, decks, driveways, grills, house siding, patios and outdoor furniture.

SETUP GUIDE


1. Connect a 3/4" GHT standard "Garden Hose" (not included) to the rear water inlet of pressure washer.
- 2*. Attach the "Leak-Proof Adapter" to the front outlet. (*This is an optional step, as some batches may come with the adapter pre-assembled on the outlet.)
3. Connect the "High Pressure Hose" to the front water outlet of pressure washer.
- 4*. Attach the "Extension Wand" to the "Spray Gun". (*This is an optional step, as some models may not include "Extension Wand".)
- 5*. For Foaming: Pour the "Wash Soap" (not included) into the "Foam Cannon", and then attach the "Foam Cannon" and to the "Spray Gun"/"Extension Wand". (*This is an optional step, as some models may not include "Extension Wand" or "Foam Cannon".)
6. For Rinsing: Select a "Nozzle" and attach it to the "Spray Gun"/"Extension Wand". (*Some models may not include "Extension Wand". NOTE: Each nozzle has a different spray pattern. Determine the best nozzle for the job before starting a cleaning job.)
7. Connect the "Spray Gun" to the "High Pressure Hose".
8. Turn on the "Water Supply" and run cold water source through the machine to purge any trapped air. (NOTE: Make sure that all the connections are tight and have no leakage before operation.)
9. Plug the "Power Cord" into the electrical outlet.
10. Turn the switch to the "I" position to turn the machine on.
11. Your pressure washer is now ready for use.

GROUND FAULT INTERRUPTER PROTECTION

1. This pressure washer is equipped with a Ground-Fault Circuit Interrupter (GFCI) built into the plug of the power cord. This device provides additional protection against the risk of electric shock. If the plug or cord needs to be replaced, use only identical replacement parts that include GFCI protection.
2. Test Ground-Fault Circuit-Interrupter (GFCI) Before Each Use.

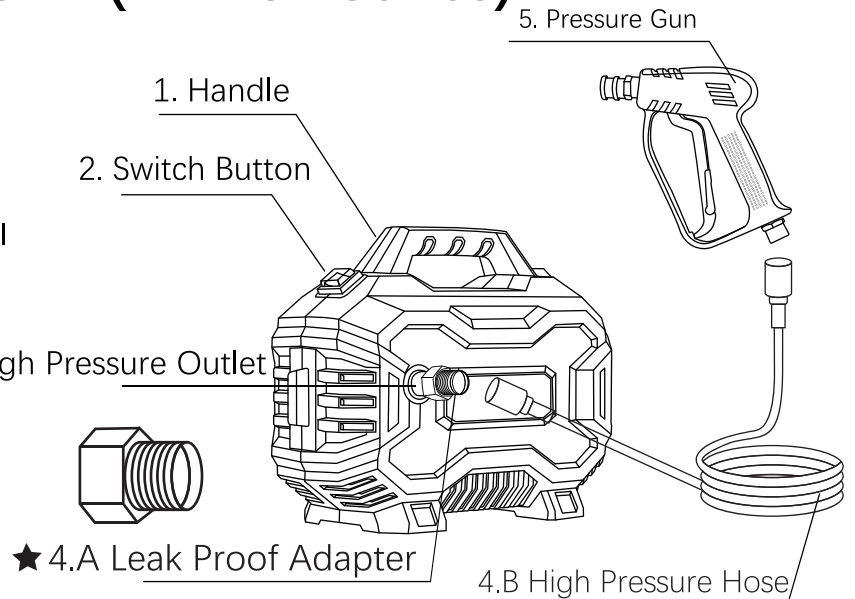

FRONT OVERVIEW

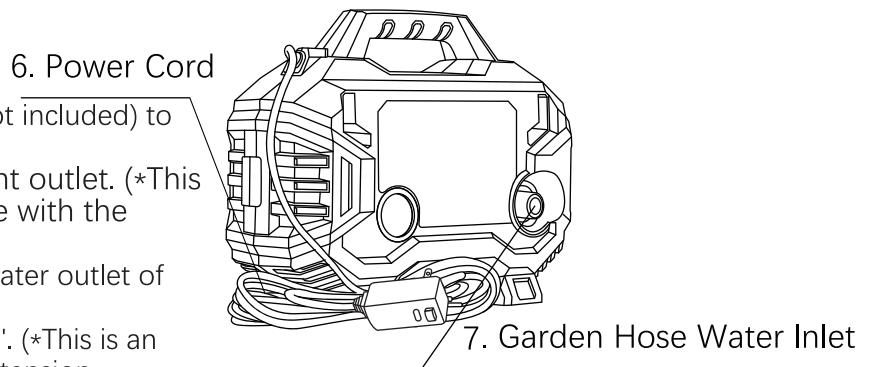

BACK OVERVIEW



CAUTION

Before starting the machine:

1. Turn the water supply on.
2. Pull the trigger of the gun to release air pressure.
3. When a steady stream of water comes out of the gun, release the gun trigger.



WARNING

1. The water supply must come from the water main.
2. Do not use hot water.
3. Do not use water from ponds or lakes.



IMPORTANT SAFETY INSTRUCTIONS

1. DO NOT allow children to come into contact with the tool.
2. To reduce the risk of injury, close supervision is required when a product is used near children.
3. Supervision is required when inexperienced operators use this tool.

WARNING

1. To reduce the risk of serious personal injury, disconnect the pressure washer from power source before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.
2. Do not operate the product when fatigued or under the influence of alcohol or drugs.
3. Do not touch plug or outlet with wet hands.
4. Never direct water spray at any electrical wiring or directly at the pressure washer itself as it may result in a fatal electric shock.
5. Move the switch on the machine to the OFF position before plugging or unplugging power cord to prevent accidental startup.
6. Wear safety goggles when operating. Wear protective clothing and footwear to protect against accidental spraying.
7. Do not touch nozzle or water spray during operation. Never place hands in front of nozzle.
8. Stay alert – watch what you are doing.
9. Keep operating area clear of all people and animals.
10. Disconnect the power plug when not in use and before disconnecting the high pressure hose.
11. Do not stand on unstable surfaces. Maintain good footing and balance at all times.

CAUTION

1. Never carry your pressure washer by the cord. Do not pull on the cord to disconnect from the outlet.
 2. To prevent damage, the cord should not be crushed, placed next to sharp objects or near a heat source.
 3. Check power cords before using. Damaged cords can reduce performance of pressure washer or cause a fatal electrical shock.
 4. The pressure washer should not be used in areas where gas vapors may be present.
- An electric spark could cause an explosion or fire.
5. Use only hoses and accessories rated for pressure higher than your pressure washer's psi.
 6. Always store your pressure washer in a location where the temperature will not fall below 4 °C.
- Freeze damage is not covered by the warranty.

TROUBLESHOOTING GUIDE

 Disconnect the unit from the power source before making any repairs.

Problem	Possible Cause	Action	Problem	Possible Cause	Action
Motor does not start.	Power cord not plugged in.	Plug in the power cord.	No Detergent.	Detergent is too thick.	Dilute detergent.
	ON/OFF switch is in the "OFF" position.	Turn switch to the "ON" position.		A wrong pressure nozzle is attached.	Make sure the nozzle is the Soap Nozzle.
	Gun trigger is not being squeezed.	Squeeze the trigger of gun with switch in "ON" position.		Spray Nozzle is obstructed.	Blow out or remove debris.
	Thermal Overload.	Switch off pressure washer. Open again until the unit temperature drops normally.	Garden hose connection leaks.	Loose fittings.	Tighten fittings.
Does not reach high pressure.	Faucet not turned all on.	Open water source to full.	Pump is too noisy.	Rubber washer is missing or worn.	Replace the rubber washer in hose adapter.
	Water inlet filter is clogged.	Water inlet filter is clogged. Remove filter and rinse to clean.		Pump sucks in air.	Check that hoses and fittings are air tight. Turn OFF machine and purge pump by squeezing trigger gun until a steady flow of water emerges from the nozzle.
	Diameter of garden hose is too small.	Replace with a 5/8 inch (16mm) or larger garden hose.	Other issues.		If the symptom you are experiencing is not listed above, or if the solutions provided do not solve your problem, contact TOOLCY Customer Service for help on Amazon.
	Water supply is restricted.	Check water hose for kinks, leaks and blockage.			
	Nozzle worn.	Replace with a new nozzle.			