Highres

ELECTRIC SPIN SCRUBBER

7 in 1



13



Fiber brush



Products utilize high-performance lithium batteries and a 390-strong magneto, featuring two speeds. They come equipped with seven brush heads for convenient replacement based on various needs. The devices support USB charging through an international standard TYPE-C charging line, providing a quick 3-hour charge. The circuit design includes charge and discharge protection functions, blocking protection, low power reminders, charging instructions, and a five-section LED power display. Additionally, the product conforms to safety certification and environmental standards applicable in all countries worldwide, ensuring a reliable and eco-friendly experience.

Features



Connect Head

Buckle structure design allows interchange of different brush heads.

 
Power button

Long press for 2S to turn on/off the machine (default is high speed when starting up)/short press to switch to high/low speed.

TYPE-C charging port

Supports 5V/1A charging (soft rubber waterproof protection).

Power display



Charging Guide



As shown in the picture, the last battery bar flashes when battery is low.



Please use a 5V/1A or above adapter to charge. When charging, the 5-bar light flashes like a horse race. After being fully charged, the indicator light will light for 5 mins and then turn off.

NOTE:

This product does not support use while being charged.

Brush Head Assembly Method



O1 When replacing the brush head, please turn off the machine.



02 Gently swing the brush head and pull it out vertically.



O3 The groove of the brush head orresponds to the convex groove of the connecting bracket and snaps in vertically.

 


04 4 pieces need to be installed on the magic sticky base to use.

Handle Assembly Method



O1 The rod with the threaded end is rotated and tightened with the machine head.



02 Rotate and tighten the two pole sections as shown in the picture.



O3 Rotate the indicator arrow to align with "ON" to unlock, and adjust the extension rod to the length you need.



04 Rotate the indicator arrow to align with "OFF" to lock and secure the extension rod.



Purpose of Accessories





Sharp brush: Suitable for the corners, seams, car wheels of a home kitchen, bathroom or fume machine, as well as for cleaning areas that are not easily accessible.





Small flat brush head: Suitable for cleaning small flat areas such as hand wash basin, kitchen sink, furniture etc.





Big flat brush head: Suitable for cleaning oil and dirt in bathroom, kitchen, living room, toilet, window, glass etc.





Towed cloth: Mainly suitable for living room floor, glass, tea table, car surface cleaning, polishing and other purposes.





Fiber brush: Mainly used in kitchen, stove, range hood and other places that are particularly difficult to clear.





Imitation wool brush: Mainly used for polishing, waxing or decontamination of high-grade house hold. electrical appliances and automobile surfaces.





Sponge brush: Mainly used for washing car paint surfaces, glass, etc., without causing surface scratches.

Wall-mounted Usage



01 Stick the hook on flat wall.



02 Squeeze the pole into position from the front.

Warning

- Please check the accessories carefully before use.
- Do not place the charger in wet conditions.
- Make sure the charging hole is sealed when cleaning.
- Dry the surface in time after cleaning to ensure the product is dry.
- This product must not be used by individuals (including children) who are not physically, mentally, or emotionally capable or lack the relevant experience and knowledge, unless there are responsible persons supervising or directing their use of the product. Children should be supervised to ensure that they do not play with these products.
- Do not use hot water when cleaning too avoid the risk of being scalded.
- Please make sure to use the standard charger for this product.
- Do not touch the rotating parts with your hands when it's working.

Cleaning and Maintenance

- Please check if the charging port is covered when cleaning.
- Do not use metal such as steel wire or abrasive cleaner or corrosive liquid (e.g. gasoline or acetone) to clean brush heads and fuselage surfaces.
- You can wash the brush under tap or use machine.

Please note: The main body of spin scrubber can not be immersed in water.

- After the cleaning is finished, it is necessary to shake off the moisture from the product and wipe it with a dry cloth.

Product Parameters

Product name: Electric Spin Scrubber

Product model: A10

Gear speed: 420R/min / 330R/min

Decibel value: ≤70DB
Input voltage: 5V/1A
Battery capacity: 2500mAh

Battery life: 80min at high speed, 100min at low speed

Charging time: About 180 minutes

Waterproof level: IPX7

FCC Statement

Any changes or modifications not expressly. Approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

WEEE Compliance 🕱

Correct Disposal of This Product (Waste Electrical & Electronic Equipment) (Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic ture indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human, health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product and its electronic accessories should not be mixed with other commercial wastes for disposal.





















Manufacturer: Dongguan Yipin Cheng Technology Co., Ltd. Address: Building C, 4th Floor, Donghui Industrial, Wulian Keyan Second Road, Fenggang Town, Dongguan City.









Made in China