

Seemagic

Electric Nail Clipper Instruction



Qingdao Meiyike Technology Co., Ltd.
E-mail: support@seemagic.cc
Address: Room 2405, D2 Building, Qingdao International Innovation Park,
No.169 Songling Road, Laoshan District, Qingdao, Shandong Province

Please read the instruction carefully before you use this product.

SAFETY INSTRUCTIONS

WARNING

- ⚠ Prohibited to use for children under 12 years old.
- ⚠ Be sure to place it properly and avoid children touching and playing with it to avoid danger.
- ⚠ Do not touch any part of the body other than your fingernails to the alloy cutter head to avoid danger.
- Do not put clothing, accessories or anything else other than your fingernails near the cutter head while the device is in continuous operation, otherwise the cutter head may be damaged or the foreign object may be rolled into the cutter head and cause the cutter head to malfunction.


ATTENTION

- Please charge the device for at least 1 hour for the first time to ensure that the internal battery of the device is charged, and please charge every three months when not in use for a long time.
- This product is not suitable for trimming body parts other than nails.
- Do not use this product for trimming when there is problematic skin such as wounds around the nails.
- Keep out of the reach of children.
- It is recommended not to use the product while it is being charged.

PROHIBITION

- ⊘ Do not immerse the product in water or any other liquid.
- ⊘ This product has a built-in rechargeable battery. Do not use or leave it in a fire or in a hot place for charging.
- ⊘ Do not knock or drop the product. If the product is damaged as a result of knocking or dropping, please stop using it.
- ⊘ Do not modify, disassemble or repair the product yourself.

APPEARANCE

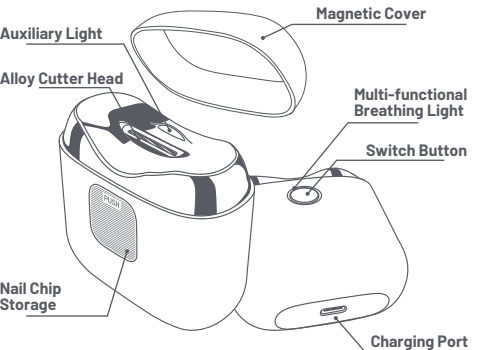

Product Name : Electric Nail Clipper (alloy model)
Power Rate : 5V ~ 0.6A
External Dimensions: 64x64x32mm
Product Model : SMPH - ZJD02S
Product Weight : 175g
Charging Port: Type - C
Standard : GB4706.1-2005

USE OF TEACHING

POWER ON

- Press and hold the on/off button for about 6 seconds (the indicator light breathes three times).

GEAR SWITCHING AND POWER OFF:

- After powering on, press the on/off button briefly and the unit cycles between three states: 1st gear (high speed), 2nd gear (low speed) and off.

TURN OFF THE AUXILIARY LIGHT.

- When the power is on, the auxiliary light is lit by default, press the on/off button for 2 seconds to turn off the light.

MOTOR REVERSAL:

- Double-click the button in the off state, the motor will be reversed once, each time about 1~3mm. If there is a foreign body stuck in the head, you can try to slowly exit the foreign body by reversing.

USAGE

- Remove the front cover of the appliance and make sure that the side of the appliance with the working light is facing upwards (the side with the nail chip storage is facing downwards).
- Place the fingernails to be trimmed in the cutter head opening and push the nail slightly towards the cutter head while moving the nail or the appliance slowly (not too fast or too hard) to ensure that the entire nail is rounded off.

TIPS:

- Do not stay on the same part for a long time to avoid excessive trimming.
- This product is designed to be used as an integral part of the grinding and cutting process. It is normal to produce a slight dusty nail chip when using the machine. To protect the motor, the machine will automatically switch off after 20 minutes of continuous operation.

CLEANING UP




- Turn the device off, press the side of the nail chip storage cover marked "PUSH" with a little pressure, open the cover, and clean the nail chip storage with a small brush (do not clean the nail chip storage while the device is powered on).

CHARGING

- When using the appliance for the first time.
- When the appliance is in operation, the operating light flashes continuously.
- When the on/off button is pressed, the device does not start and the indicator light flashes for three seconds and then goes out.

Please use the Type-C charging cable supplied with the device and the charger (5V output) to charge the device. During normal charging, the yellow indicator light flashes and turns off when charging is complete, it takes about 1.5 hours to fully charge.

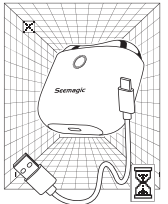

TIPS:

- The correct way to hold the electric nail clipper is with the indicator light facing upwards. If the nail chip storage is facing upwards, the nail will be rough and uneven.

INDICATOR LIGHT EXPLANATION OF FUNCTIONS

- WORK INDICATOR: WHITE LIGHT ON THE FRONT
- CHARGE INDICATOR: YELLOW LIGHT ON THE FRONT
- AUXILIARY LIGHT: WHITE LIGHT ON THE CUTTER HEAD

Indicator Light Status	Function Explanation
Light on	The device is working normally.
Light keeps flashing	The device is working normally, but the battery is low, please charge it as soon as possible.
Light flashes three times and then goes out	The battery is out of power, please use it after fully charging.
Yellow light keeps flashing	Charging, the yellow light will go out automatically when charging is complete.
Auxiliary light flashes three times and then goes out	There is a foreign object inside the cutter head, the cutter head is not turning normally, please try to clean the foreign object inside the cutter head slowly.

AFTER-SALES SERVICE GUARANTEE

Purchase Date	Services
Within 7 days	Returns, exchanges
Note: If the retailer has additional commitments, these are the responsibility of the retailer.	

The warranty does not cover any of the following cases.

- Absence of a purchase receipt and voucher or unclear or altered handwriting on the purchase receipt and voucher.
- Failure caused by the user not operating in accordance with the requirements of the operating instructions.
- Damage caused by the user's storage, maintenance, improper use, etc.
- Failures that occur after the user disassembles or disassembles, modifies or installs other functions.
- Damage caused by irresistible factors (such as lightning, fire, earthquake, flood and other natural disasters).
- Products purchased from retailers not authorised by the Company.

PRODUCT EQUIPMENT

- Electric Nail Clipper *1
- Type-C Charging Cable *1
- Cleaning Brush *1
- Instruction Manual *1

