
Nilight LED Light Bar User Guide



Please read this instruction carefully before installation. If you have any questions or concerns, please feel free to contact us via e-mail: customerservice@nilight.com

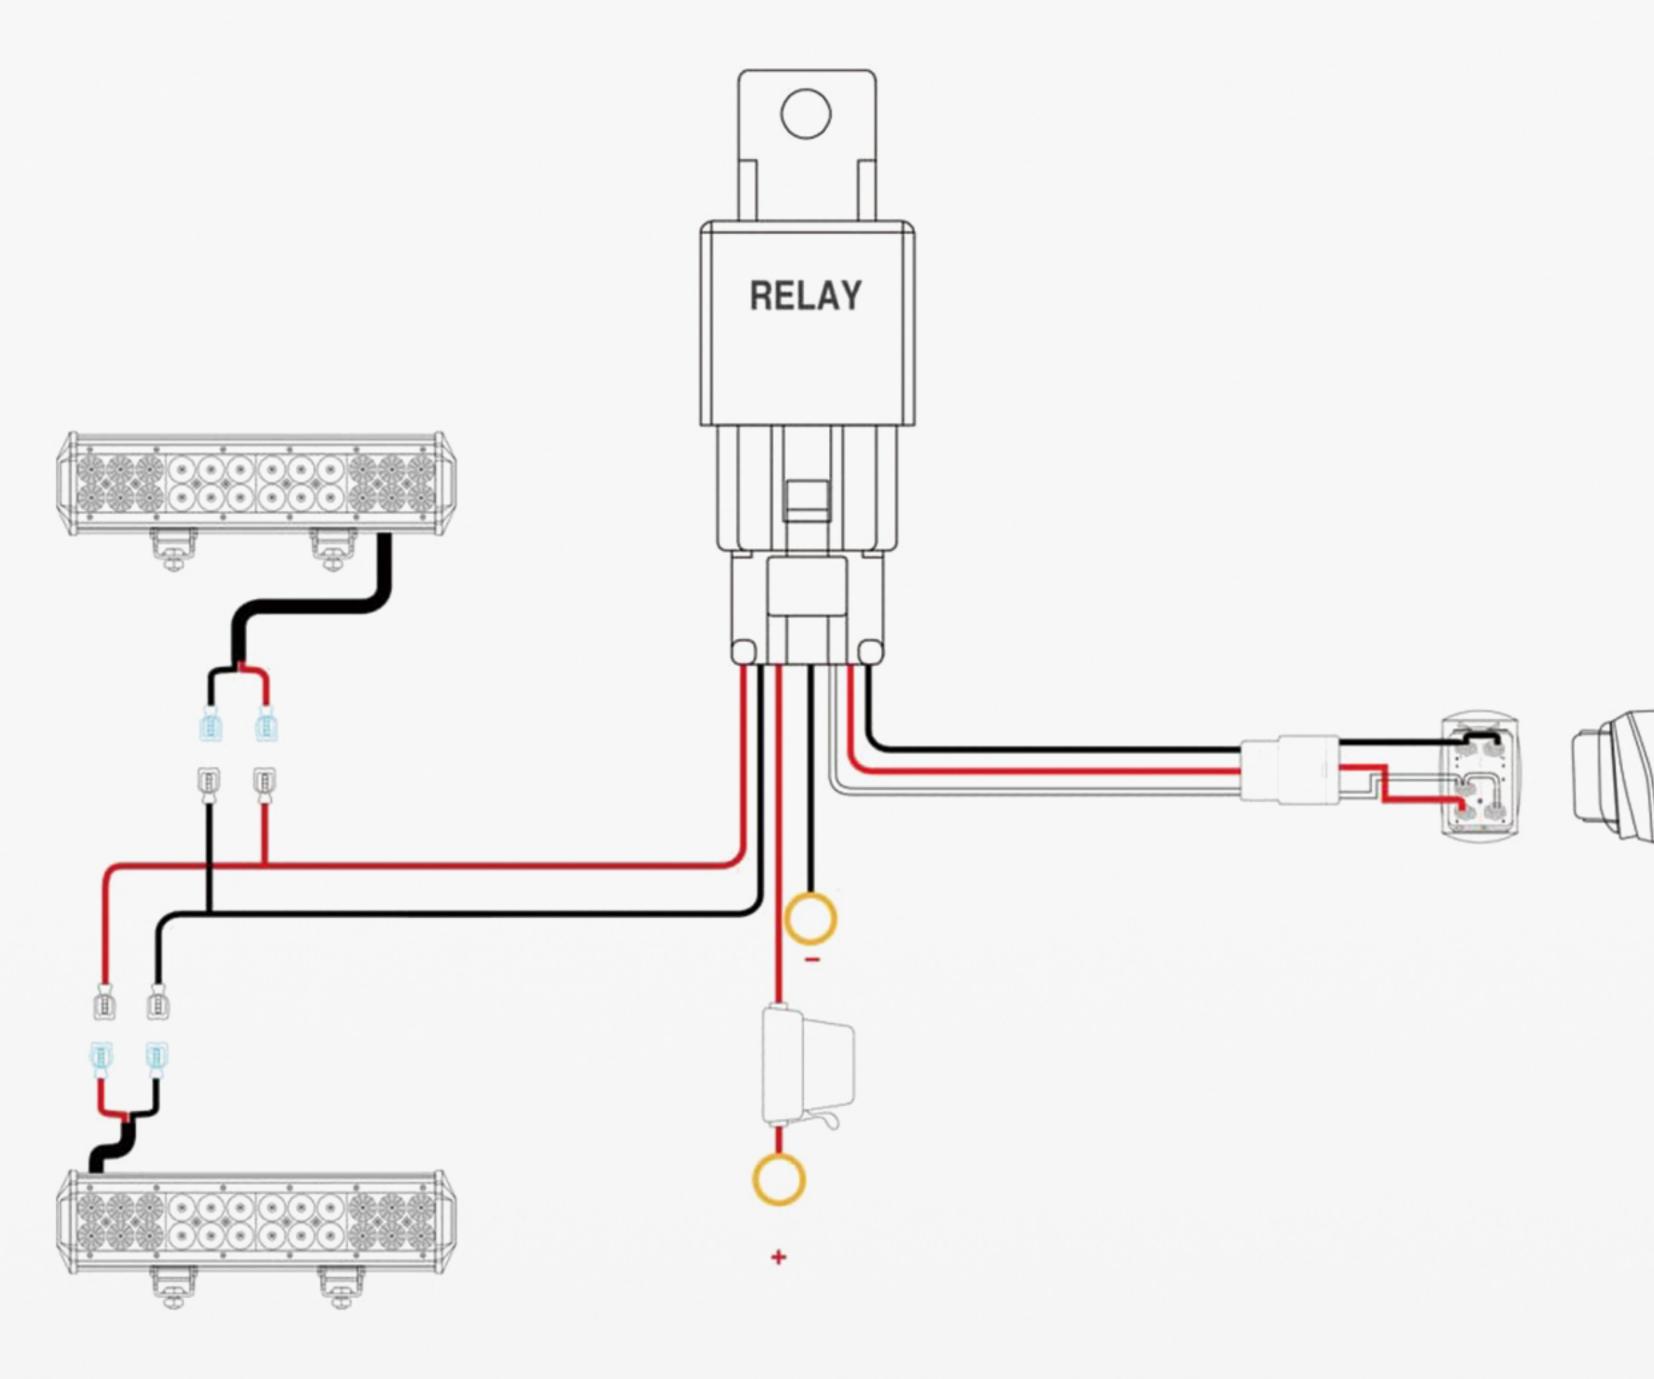

Installation:

- 1.Testing the light bar to the power (12V DC) directly,
 Red line contact to positive of power, black line contact to
 power negative.
- 2. Splice light bar wires to the blue male terminals, and then connect to the wiring harness female terminals (black to black, red to red).
- 3. Connect the red wire (with fuse) to battery positive terminal, while the black wire from relay to battery negative terminal.
- 4. Flip the switch On/Off to test the LED light bar.

FAQ

DOES IT FIT MY VEHICLE?

Our led light bars fit most vehicles(Off-road vehicle, Special vehicle, Engineering vehicles). But you need to measure the place where you want to install the light bar so that you can choose the correct size.

I FOUND CONDENSATION INSIDE THE LIGHT BAR. WHAT SHOULD I DO?

Firstly, remove the breather or 2 side lids

Secondly, turn on the light bar

Thirdly, after 1-2 hours lighting, the vapour will be out.

HOW TO CLAIM THE WARRANTY?

- Step 1. Contacting Nilight Customer Service via E-mail (customerservice@nilight.com) for the item's issue.
- Step 2. Please provide the following information:
 - a. screenshot of your order information b. pictures of the defective item
- Step 3. After the inspection and confirmation of the issue, we will provide you with a replacement free of charge.