


# Kids Camera Instruction Manual

((For reference only))

## Product Description

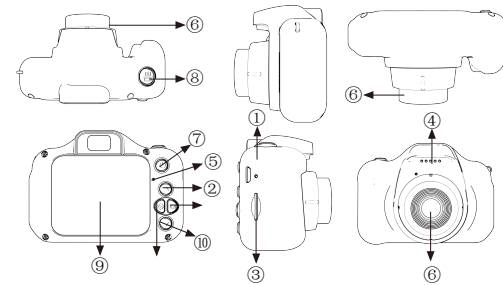

- |                       |                                      |
|-----------------------|--------------------------------------|
| 1. USB interface      | 7. Power switch                      |
| 2. UP                 | 8. Shutter button / "Confirm" button |
| 3. SD card slot       | 9. Screen Display                    |
| 4. Speakers           | 10. Screen reduction button          |
| 5. Charging indicator | 11. Camera switching                 |
| 6. Front Camera       | 12. Timer shooting button            |

## Button Functions

- With USB interface
  - ①Connects to PC and transfers data.
  - ②Connect an external power source to charge the battery or provide operating power.
- Zoom-in function
  - ①In take photo mode, press and hold this button to zoom in of the screen. Press briefly to select the filter type. Select 'up' of the button in the menu options.
- SD card slot
  - It supports different capacity of sd card.
- Speakers
  - It is equipped with high quality speakers.
- Charging indicator
  - When charging, the light will turn red.
- Front Camera
- Power switch
  - ①Turns the power on and off.
  - ②Exit button in menu mode
- Shutter button / "Confirm" button
  - ①In video mode, press this button to start recording. Press again to stop recording. (Note: The video recording function is available when an SD card is inserted.)
  - ②Press this button in photo mode to take a picture.
  - ③In Menu mode, this is the "Confirm" button.
- Display Screen
  - HD Display

- Screen reduction button
  - ①In take picture mode, press and hold this button to change the screen magnification. Short press this button to select a filter type.
  - ②In menu options, this is the function button to select down.
- Switch camera button (right)
  - ①This is the function button to select to the right in the menu options.
  - ②In shooting mode, short press this button to switch between the front-camera and rear camera.
- Timer taking button (left)
  - ①This is the function button selected to the left in the menu options.
  - ②In shooting mode, press this button briefly to shoot with a timer.

## Operation Explanation

- Power ON/OFF  
Press and hold the power switch for about 3 seconds, the screen will turn on. Press and hold this button again for about 3 seconds to turn off the indicator light and turn off the main menu.
- Mode setting  
Short press on the "Up, Down, Right, Left" button selects the corresponding mode.
- Video Recording Mode  
Short press on the "shutter button" starts recording. Short press again will stop recording.
- Picture taking mode  
Short press on the "shutter release button" takes a picture.
- Game Mode  
After selecting a game with the "Left/Right" buttons, press the "Shutter" button briefly to enter the game. Short press the "Power Switch" to exit the game.

## How to use the battery:

Refer to the figure below for an indication of the battery status.



Full Power High Battery Low Battery Empty

- USB mode  
Connect the cable to a computer to read and save videos and photos.
- There are three ways to charge the battery. During charging, the indicator light turns red. After the light goes out, the charge is complete.
  - ①Charge the battery with the power adapter.
  - ②Charging via PC-USB
  - ③Charging with the vehicle power supply.

Caution: When using this product, improper operation may cause a crash phenomenon, so first turn off the product, then turn it on again to get back to normal.

## Product Specifications

Model No.	GC0308
Features	Photo, Video, Games
Display	2.0 inches
Lens	1080P
Languages	Russian, English, Simplified Chinese, Traditional Chinese, Korean, Japanese, etc.
Expanded memory	SD card, can support up to 32G
Photo Format	JPEG
Shooting Format	AVI
Photo Resolution	20M, 12M, 8M, 5M, 3M
Shooting Resolution	1080P: 1440*1080 720P: 1280*720
Battery Capacity	600mAh
Charging Time	2 hours
Charging Voltage	DC-5V
Games	five available
Main unit weight	57.8G

## Warranty Card

Thank you for purchasing our products, please fill in the following contents when purchasing and save this card properly.

### User profile

Contact	
contact number	
Order ID	
Address	
Remarks	

Feel free to reach out to us for any inquiries.

Email: [anesky\\_support@yeah.net](mailto:anesky_support@yeah.net)  
Email: [17386401023@163.com](mailto:17386401023@163.com)