
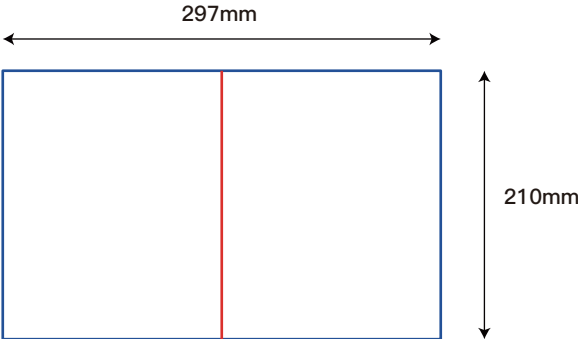
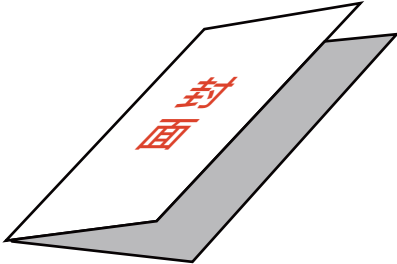


	1	2	3	4
	注：此页为技术说明，非印刷内容			
A	刀模线：  内折线： 			
B	展开尺寸图： 			
C	折页效果图： 			
E	技术要求： 1、材质：105g 铜板纸 2、展开尺寸：A4，如图所示折叠成型为A5，4P 3、颜色：单色 4、印刷：印刷图档见后续页，双面印刷 5、装订方式：折页			
符号标识  版本变更  关键尺寸 XXXX  参考尺寸 (.XXX)			名 称 AMPJ04-Manual-XF 图 号	PLM 号 860-00152-00 投影法 第一角投影法 
	除 非 另 有 说 明	标 记 设 计 绘 图 审 批	处 数 PM KK 日期	ECO# 2022/03/03 日期
	0-30 ±1 30-150 ±2 150-300 ±3 300-450 ±4 >450 ±5	材 料 规 格	共 1 页 第 1 页	深 圳 市 倍 思 奇 创 新 科 技 有 限 公 司
	1	2	3	4

Inflatable Projection Screen Instruction Manual

(A)

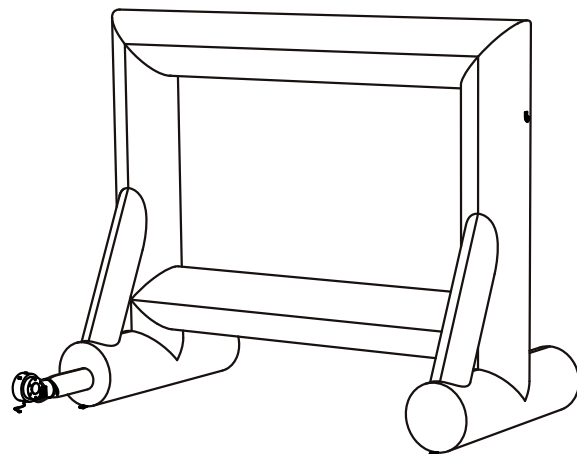

Model: AMPJ04

Thank you for choosing this AMADA product! At AMADA, we strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.

support@amadahome.com

IMPORTANT — PLEASE READ ALL INSTRUCTIONS

- If you do not understand the instructions or have any questions or concerns, please contact customer service at support@amadahome.com.
- Please review the basic precautions listed below before using this product.

SAFETY INSTRUCTIONS

1. This product is not intended for permanent installation or use.
2. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
3. Do not secure the product wiring with staples or nails or place it on sharp hooks.
4. Do not leave the product unattended when plugged into a power source.
5. This is an electrical product, not a toy. To avoid the risk of fire, burns, personal injury, and electrical shock, keep blower and wiring away from children and pets.
6. Do not use this product for anything other than its intended purpose.
7. Do not hang ornaments or other objects from cord.
8. Do not remove or modify the extension cord.
9. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
10. Inspect the product carefully before each use. Do not use any products with cut, damaged, cracked, frayed, or loose wiring and/or connections.

USE AND CARE INSTRUCTIONS

1. When moving the product, be careful to avoid trees, branches, bushes, or any undue strain or stress that may damage the product including connections and wires.
2. When not in use, store neatly in a cool, dry location protected from sunlight.
3. The air motor may not operate in temperatures below 10°F (-14°C).


WARNING: Protect the electric fan and power cord from direct exposure to water. This precaution will reduce the risk of electrical shock.

WARNING: Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

WARNING: This product is to be assembled by adults only.

CAUTION: Do not attempt to inflate the product during strong winds. If it becomes too windy for safe operation, allow the product to deflate and wait for better conditions before re-inflating.

Supplied Parts and Hardware

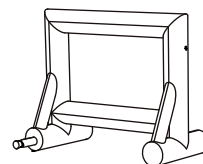


Inflatable Frame

01 x1



Movie Screen

02 x1

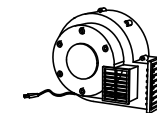

Air Blower

03 x1



Nylon Tether

04 x6



Ground Stake

05 x6



Small Storage Bag

06 x1




Big Storage Bag

07 x1

Step 1


- 1-1 Fully unfold the Movie Screen and Inflatable Frame on a clear and flat area. Ensure the clips are facing up.
- 1-2 Align the clips from Movie Screen to Inflatable Frame, then connect the clips one by one.

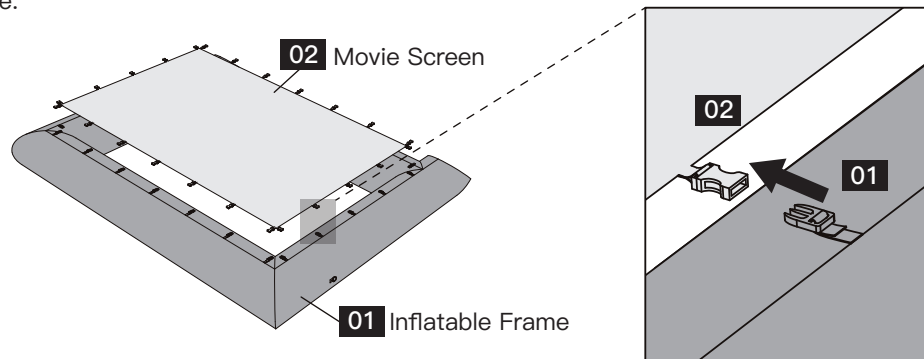



Step 2

- 2-1 Attach the air inlet at the bottom of the Inflatable Frame [01] to the Air Blower [03].

NOTE: Ensure the ropes on the air inlet is tied firmly on the air blower.

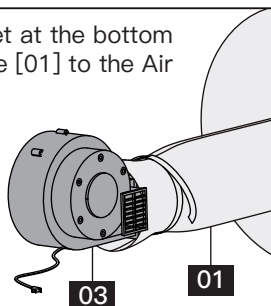


- 2-2 Plug cord into the receptacle or other outlet device to inflate your Inflatable Frame [01].

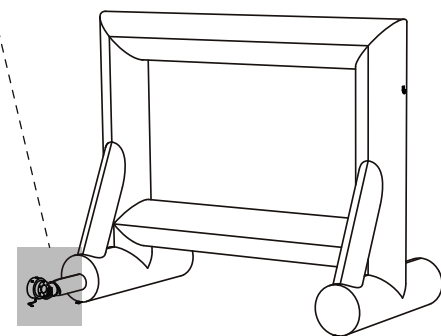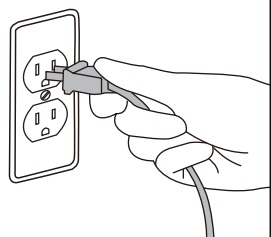

NOTE: This inflation process may take a few minutes. Make sure the air intake is clear of fabric or other obstruction.


NOTE:

- To prevent air leakage, do not detach the HOOK & LOOP when inflating.
- You can detach the HOOK & LOOP for quick deflation when deflating.

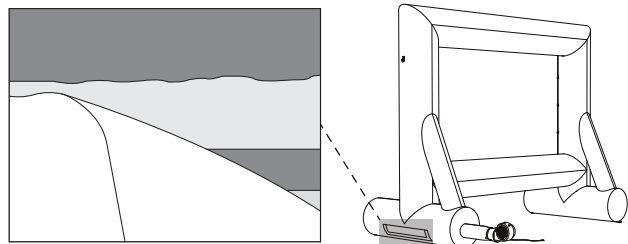


Step 3


- Tie the Nylon Tether [04] through the loop on the Inflatable Frame [01].

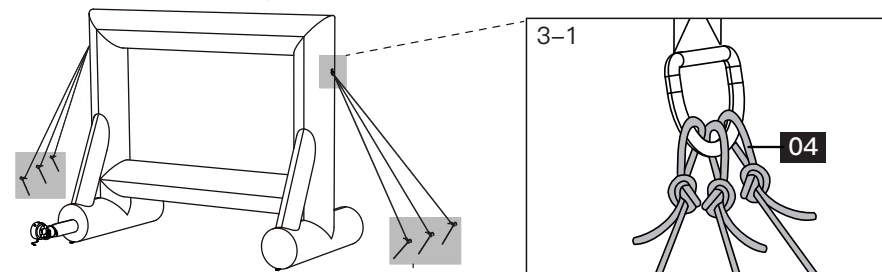



- 3-2 Insert the Ground Stakes [05] into the Nylon Tether [04].

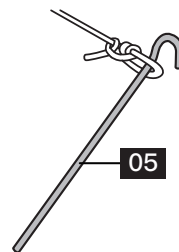

- 3-3 Stretch the Nylon Tether [04] until taut, then hammer the Ground Stakes [05] into the ground at an angle of 45-60 degrees.

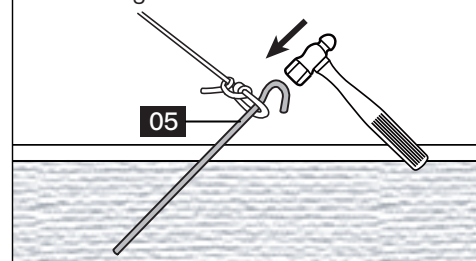

Fold for Storage

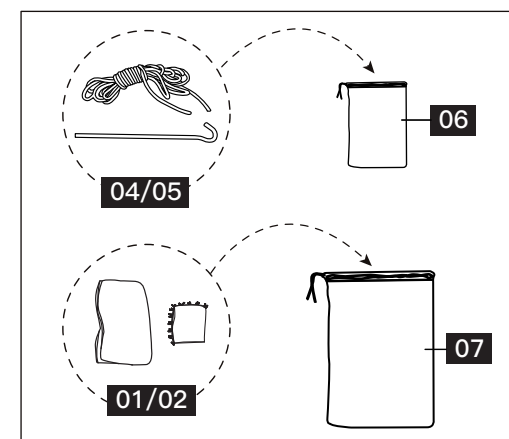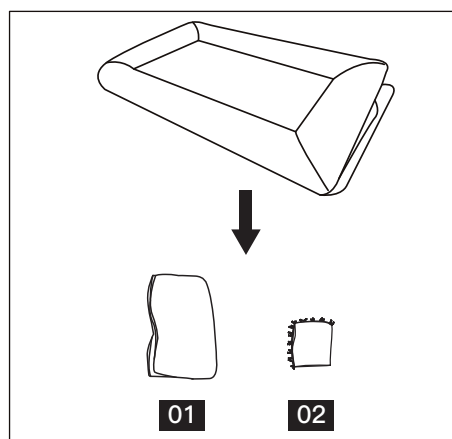

TROUBLESHOOTING CHECKLIST:

- If the product is not inflating, the problem may be:
- The power source is disabled or the cord may be unplugged.
 - Debris may be obstructing airflow to the motor.
 - Please inspect the product carefully for rips or tears.