 


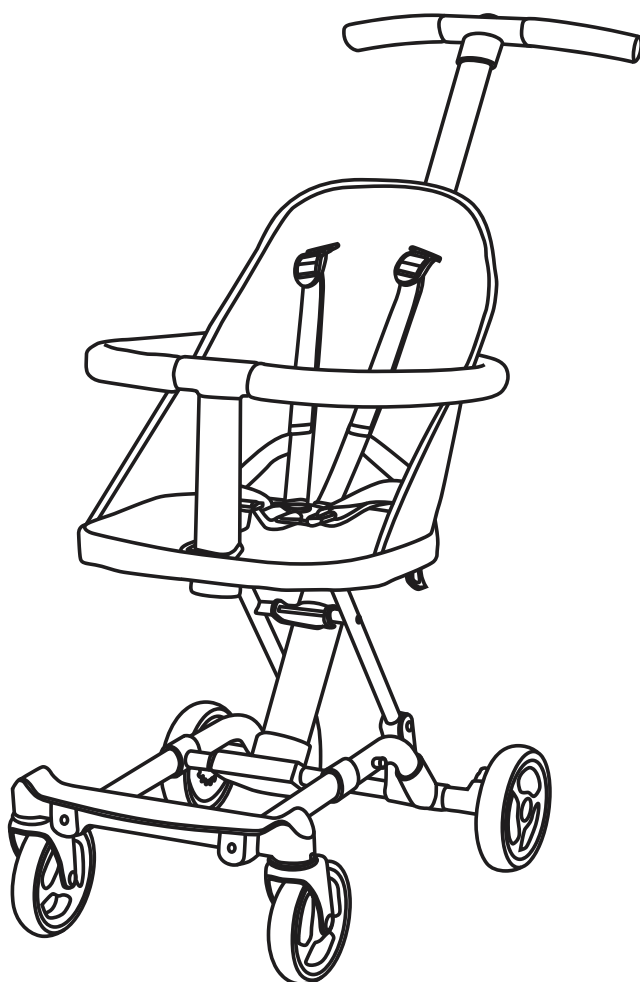

Coast Rider Instruction Manual Item# 365

English - Page 2
Español - Página 16
Français - Page 31



Scan the QR code to register your product
<https://dreamonme.com/customer-care/registration/>



Important: Keep these instructions for future reference.
This product is designed to comply with USA Standard: ASTM F833

Safety • Cozy • Fashion

WARNING

IMPORTANT!

Failure to follow these warnings and the assembly instructions could result in serious injury or death. PLEASE SAVE INSTRUCTION MANUAL FOR FUTURE USE.

 
 
WARNING

- **ADULT ASSEMBLY REQUIRED.**
- **NEVER LEAVE CHILD UNATTENDED.** Always keep child in view while in stroller.
- **AVOID SERIOUS INJURY** from falling or sliding out. Always use seat belt. After fastening buckles, adjust belts to get a snug fit around your child.
- **AVOID FINGER ENTRAPMENT:** Use care when folding and unfolding the stroller. Be certain the stroller is fully erected and latched before allowing your child near the stroller.
- **NEVER USE STROLLER ON STAIRS** or escalators. You may suddenly lose control of the stroller or your child may fall out. Also, use extra care when going up or down a step or curb.
- **AVOID STRANGULATION.**
- **DO NOT** place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.
- **USE OF THE STROLLER** with a child weighing more than 45 lb (20.5 kg) or taller than 37.8 in (96cm) will cause excessive wear and stress on the stroller. Use the stroller with only one child at a time.
- **TO PREVENT A HAZARDOUS, UNSTABLE CONDITION,** never place purses, shopping bags, parcels or accessory items on the handle (other than approved stroller bags). Never place anything on the canopy.
- **TO PREVENT A HAZARDOUS, UNSTABLE CONDITION,** do not place more than 10 lb (4.5 kg) total in the storage basket including the 2 lb (1 kg) in the basket pocket.(if supplied)
- **TO AVOID BURNS,** never put hot liquids in the cup holders.(if supplied)
- **TO PREVENT TIPPING,** do not place more than 3 lb (1.36 kg) total in the cupholders/snack tray.
- **DO NOT** use storage basket as a child carrier.
- **DO NOT ALLOW** your child to stand on the basket. It may collapse and cause injury.
- **NEVER PLACE** child in the stroller with head toward footrest.
- **NEVER ALLOW YOUR STROLLER** to be used as a toy.
- **DISCONTINUE USING YOUR STROLLER** should it become damaged or broken.
- **STROLLER TO BE USED** only at walking speed product not intended for use while jogging, skating, etc.
- **CAREGIVER MUST** always help child get into and out of the stroller.
- Never leave your child unattended in the Stroller/Rider. Five point safety harness should be kept on at all times when a baby/child is in the stroller/Rider. Never hang a shopping bag, purse, diaper bag or any other bag to the handle of the Stroller/Rider. Additional weight on the handle could tip the stroller or a baby/child could get entangled by a strap causing suffocation or injury. Please follow all safety protocols while using this product.

WARNING


THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.







- WITH YOUR HAND THROUGH THE WRIST TETHER STRAP LOOP, PUSH THE STROLLER HOLDING BOTH HANDLES.
- THE FRONT WHEELS MAY WOBBLE OR OSCILLATE WHEN WALKING FAST.
- THE STROLLER CAN BE TAKEN UP CURB BY EITHER PRESSING DOWN ON THE HANDLES AND RAISING THE FRONT WHEELS AND MOUNTING THE CURB OR TURNING THE STROLLER AROUND AND PULLING THE STROLLER UP THE CURB.
- CAUTION IS REQUIRED WHEN PUSHING THE STROLLER ACROSS STEEP SLOPES OR UNEVEN SURFACES THIS MAY CAUSE STROLLER TO BECOME UNSTABLE AND FALL OVER. ALWAYS HOLD THE HANDLES FIRMLY.
- DO NOT RUN WITH THE STROLLER.
- WHENEVER YOU STOP, ALWAYS APPLY THE BRAKES BEFORE YOU LEAVE THE STROLLER.
- DO NOT HANG BAGS OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.
- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR A CHILD UNDER 6 MONTHS OLD.

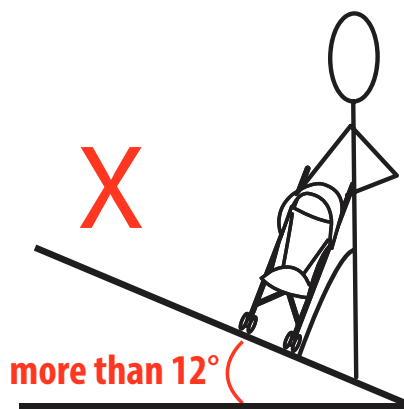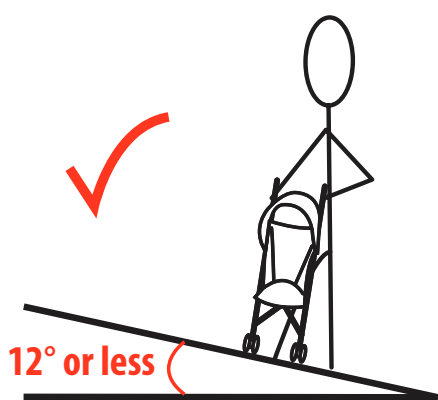

PARTS LIST

       Please check to make sure that all of the following parts listed are included in the box when opened. If there are any missing parts, please contact Dream On Me before using the product.




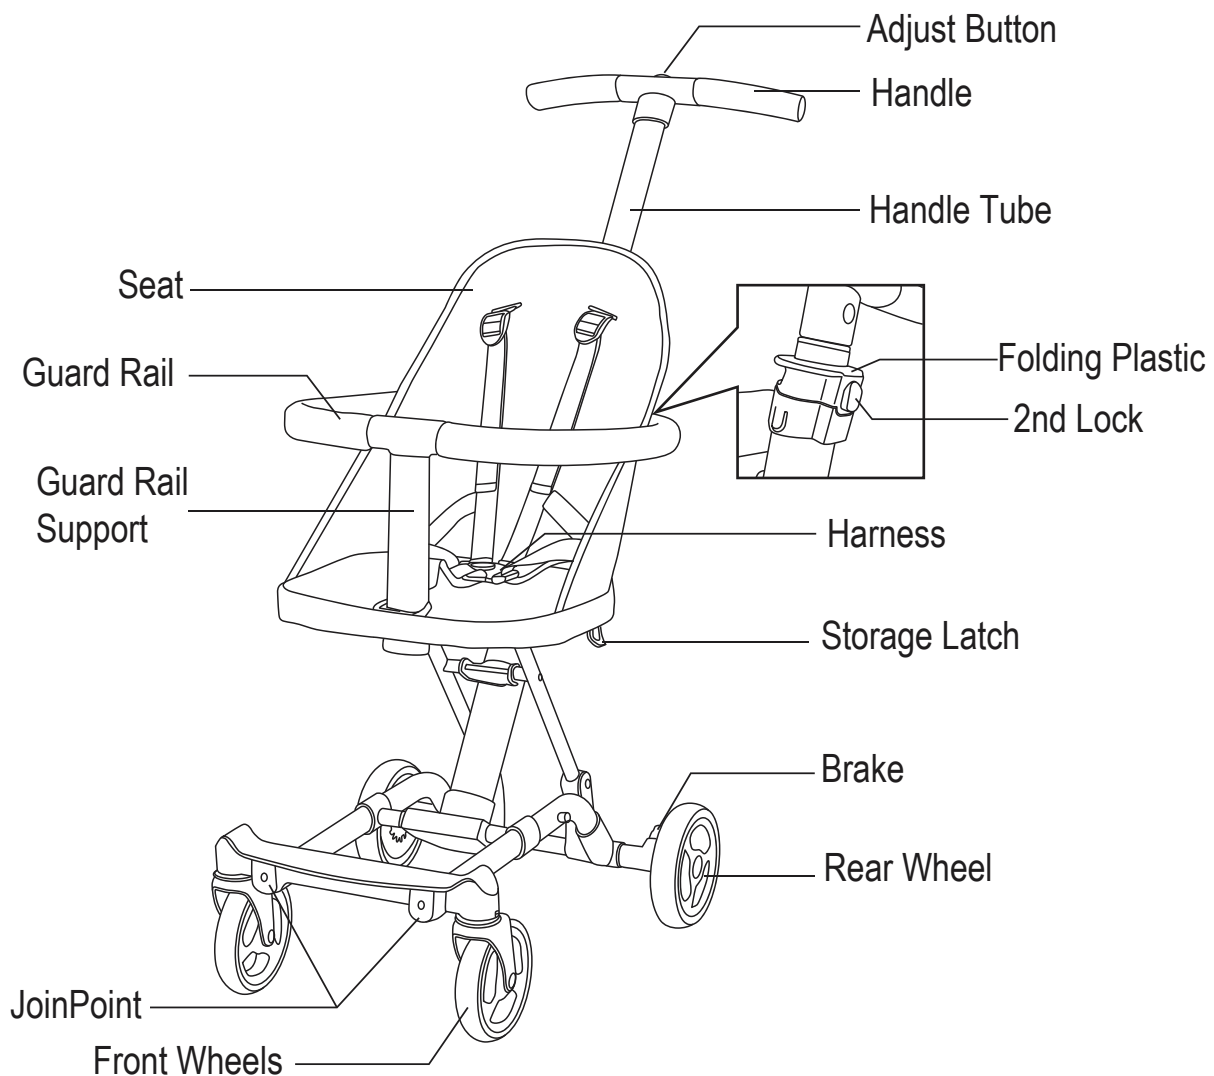


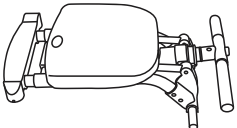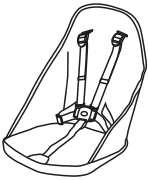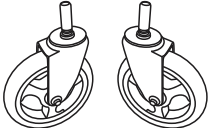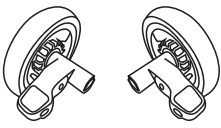 Frame	 Seat	 Simple Seat	 Guard Rail	 T-Bar
 Front Wheel L & R	 Rear Wheel L & R	Sold Separately  Canopy	Sold Separately  Connector	

1. ASSEMBLING THE RIDER

(1) Open the storage latch and lift up the handle of the stroller (figures A and B).

 
 
 
 
(2) Lift up the handle of the stroller until it clicks into place. Before continuing with the rest of the steps, make sure that the stroller handle is locked into place (figures C and D).

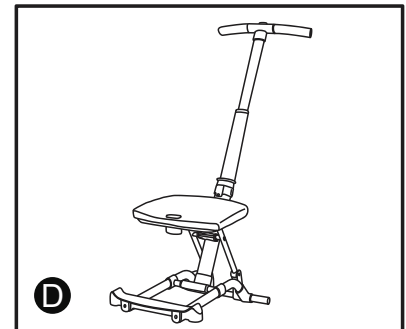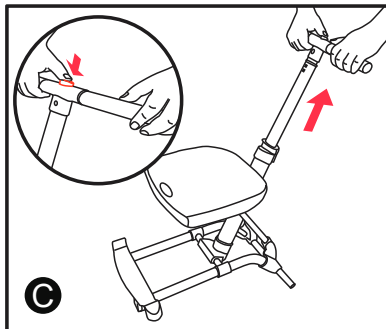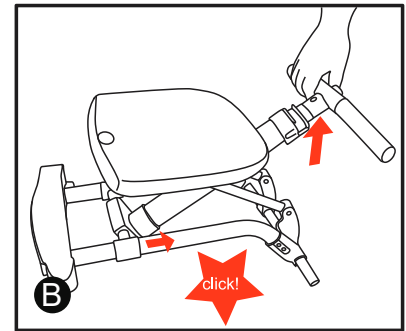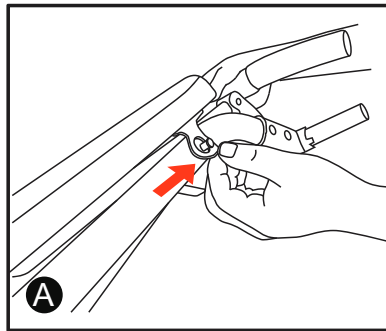

(3) Front Wheels

Slide each Front wheel into the mounting post in the front of the stroller until they click into place (figure E and F). Make sure that the wheel is secure and locked into place by tugging on it (figure E).

    
For easy transport or storage, push the wheel release tab on the side of the stroller frame and pull the wheel off of the stroller (figure F).

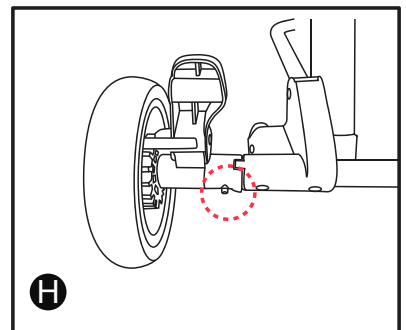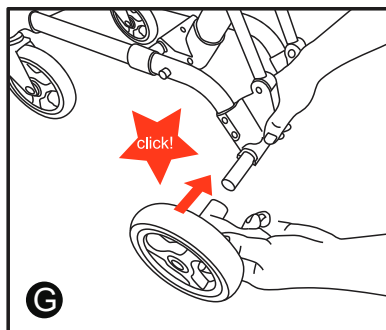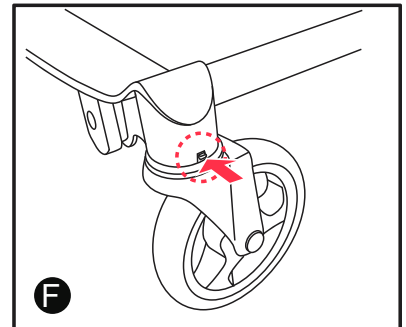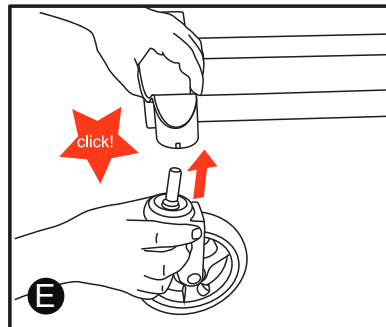

(4) Rear Wheels


Attach the rear wheels as shown in figure I.

 For easy transport or storage, push the pin lock mechanism and remove the rear wheels.


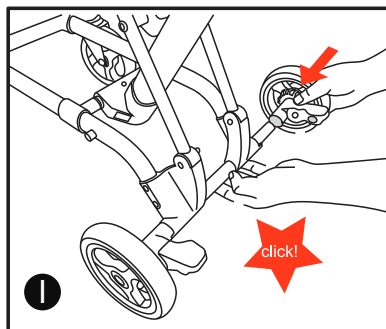


2. ASSEMBLING THE SEAT


 
(5) Insert the guard rail support through the hole in the seat as shown in figure A. Make sure that the back of the guard rail support is wrapped around behind the back of the seat.

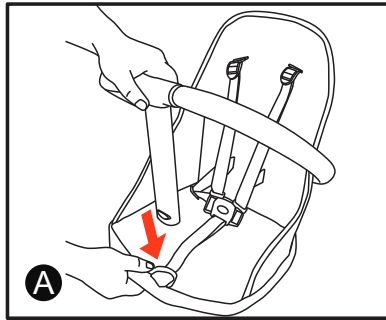

 
 
Buckle the backrest to guard rail using the two buckles as shown in figure B and C.

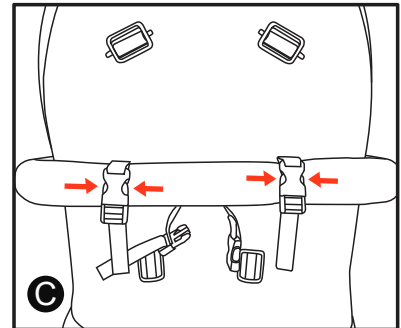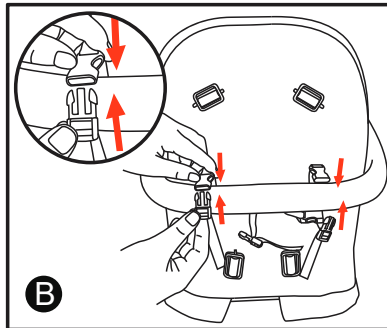

 
 
(6) With the seat fully assembled, place it onto the rider. Attach it by clicking the guard rail support into the front of rider as shown in figure E.

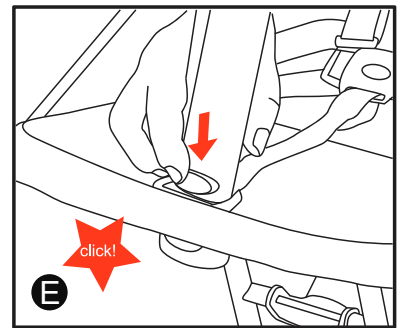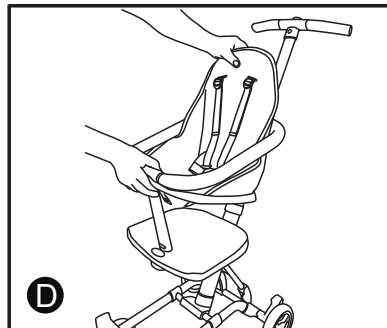

  (7) Attach the seat onto the rider by wrapping the loops around the holders underneath the rider as shown in figure F. There are a total of 6 loops that need to be attached.

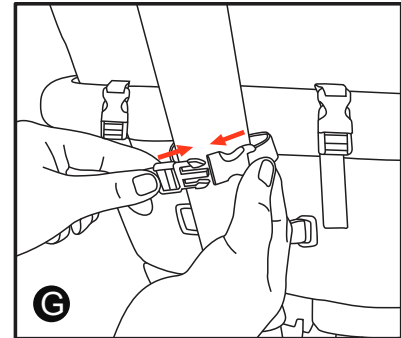
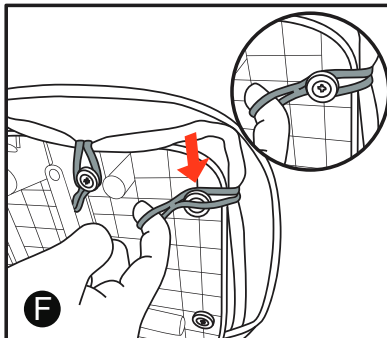


  (8) Attach the back of the seat onto the handle of the rider using the buckle as shown in figure G and H.

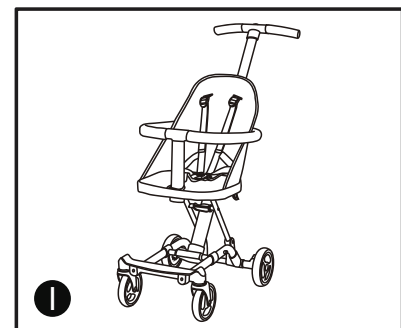
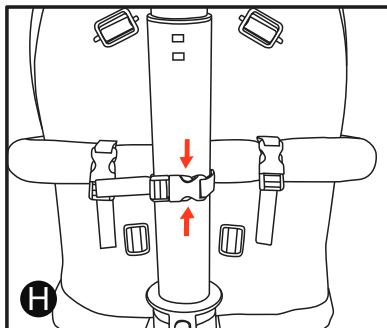


3. FOLDING THE RIDER

 
 
(9) Press the guard rail support button to remove it the guard rail support.

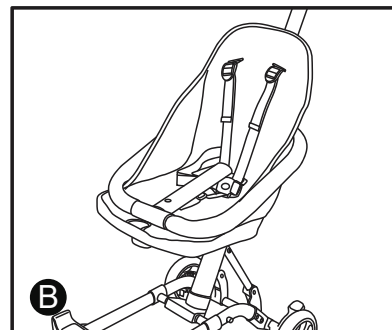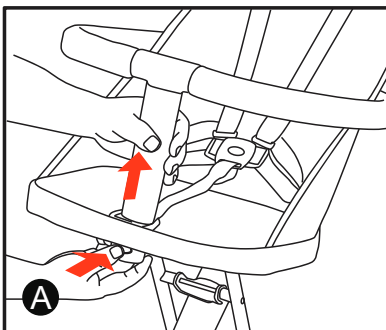

 
 
(10) Open the buckle behind the back of the seat. see figures C and D

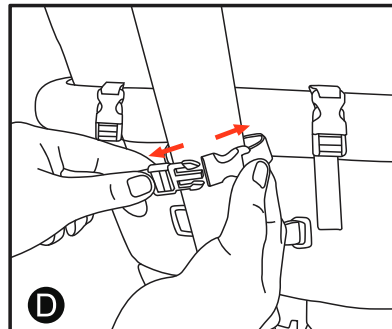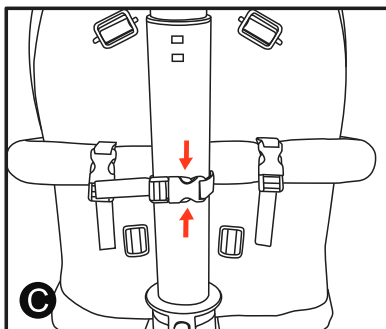

 
 
(11) Press the handle adjust button and push the handle downward as shown in figures E and F.

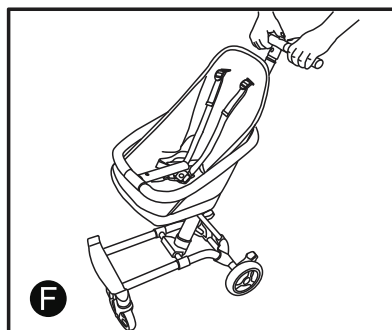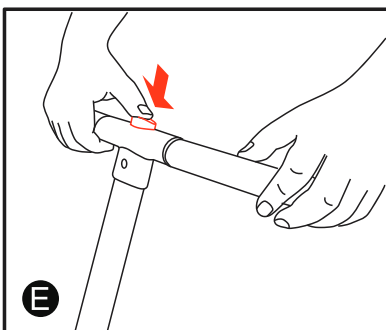

  (12) Press the 2nd lock and pull up on the 3rd lock as shown in figures G and H.

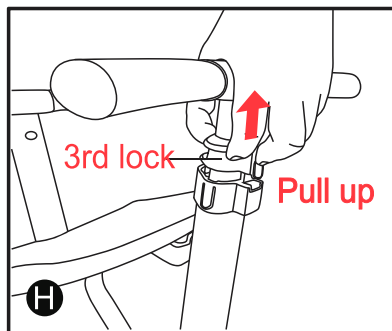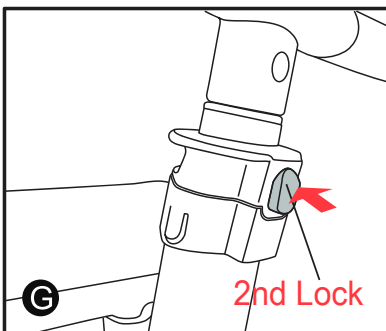

  (13) Hold the 3rd lock up in place in order to lower the seat to a folding position as shown in figures I and J.

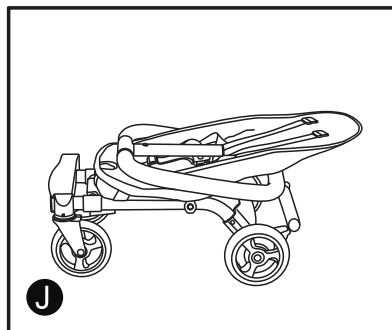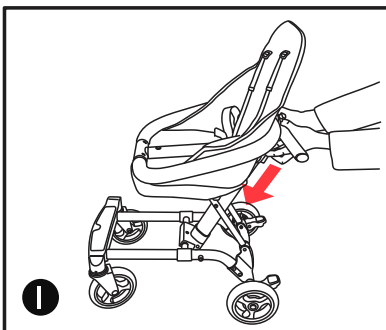


4. SECURING YOUR CHILD TO HARNESS


⚠ WARNING: USE THE HARNESS AT ALL TIMES.
When not in use, disconnect shoulder straps from the waist strap and buckle to prevent strangulation.

A five point harness is provided to restrain your child. Buckle tongues separate for added safety. To reconnect buckle tongues and to secure the child in the harness, please follow the steps below carefully.

 
(14) Slide the shoulder strap tongue (1) into the top of the waist buckle tongue (2) on both sides.

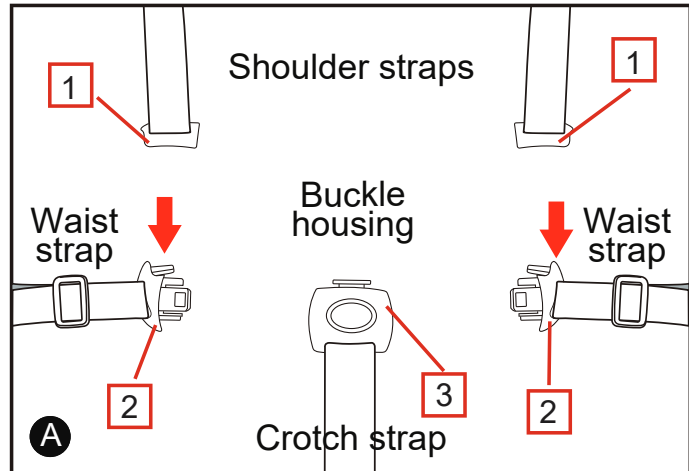

 (15) Push both buckle tongues (1+2) into the buckle housing (3) until the buckle tongues click into place.


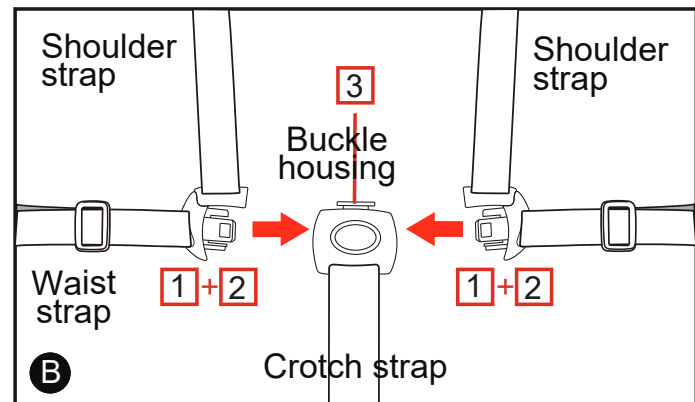


 (16) You can tighten or loosen the crotch straps by sliding the bar sliders. The waist strap and harness needs to fit firmly around the child.

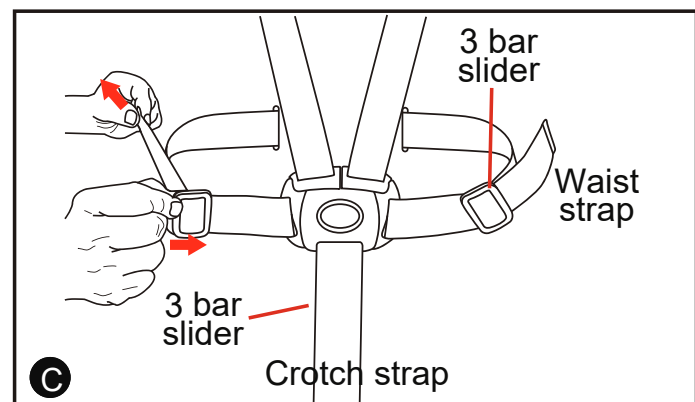

5. SECURING YOUR CHILD TO HARNESS

  
- (17) To tighten or loosen the shoulder strap, hold and lift the slider and then pull the harness strap, to adjust to the desired fit. The waist strap and harness needs to fit firmly around child.
- (18) To release the buckle from the buckle housing, squeeze the button on the buckle housing (Fig. E).

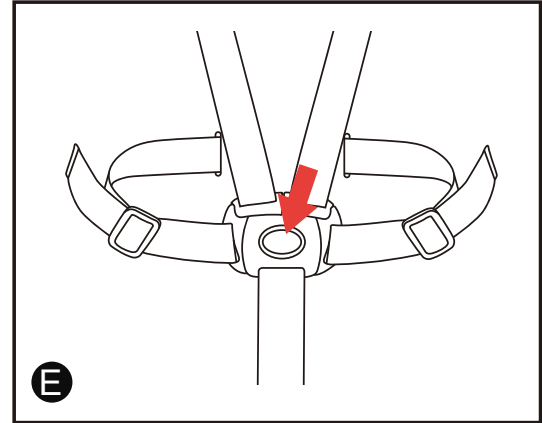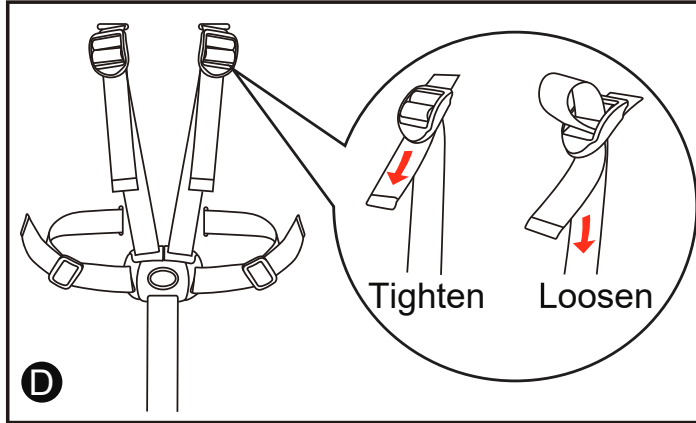

6. USING THE BRAKES

- (19) Push the brake rail down to park the stroller. Lift the brakes rail up to release the brakes as shown in figure A.

 
⚠ WARNING: ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.

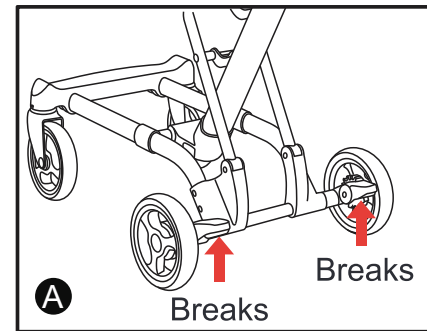

7. USE GUARD RAIL ONLY


FOR KIDS MORE THAN 3 YEARS OLD, YOU MAY USE T-BAR OR GUARD RAIL WITHOUT SEAT.

 - (20) Detach the seat unit from frame add insert the guard rail into the frame.

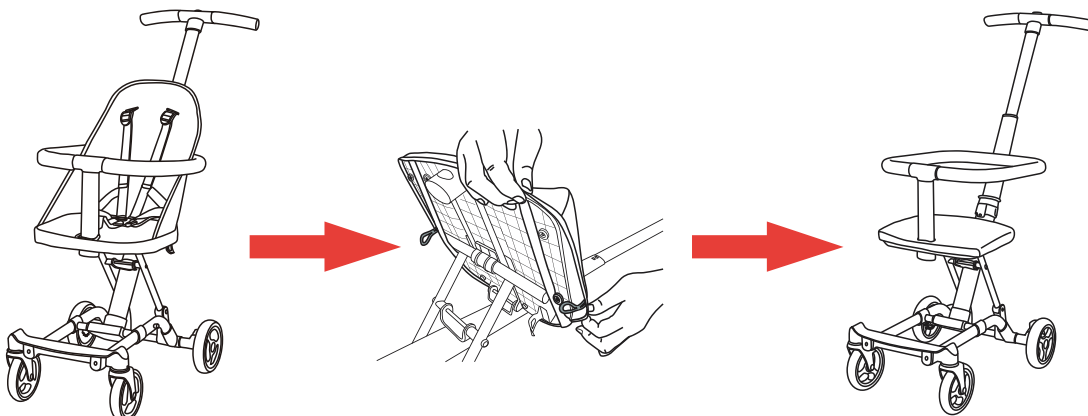


8. USE T-Bar GUARD RAIL ONLY

 (21) Detach the Guard Rail from Guard Rail Support Tube as shown in figure A.

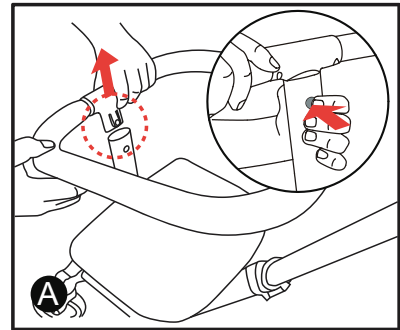


 (22) Press the T-Bar quick release button and insert the T-Bar into Guard Rail Support Tube as shown in figure B.

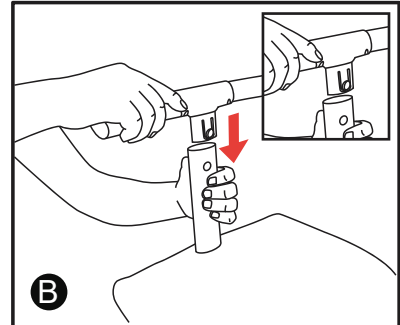

WARNING:

 This using position is **ONLY** for child older than 36 months!

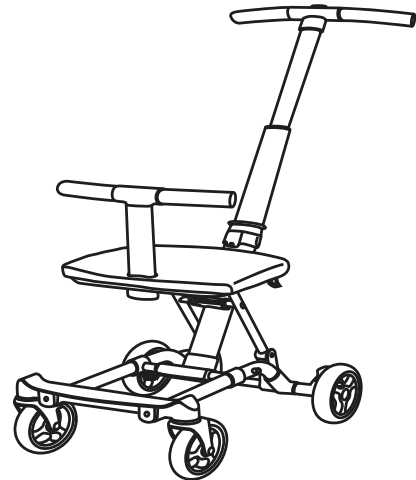


9. TO USE AS A SCOOTER

Detach the guard rail, fold the Coast Rider (as shown on page 7) and ensure that the storage latch is engaged. Next, insert the handle for the T-Bar into the seat. The Coast Rider should look like the figure below.



USING THE CANOPY (sold separately)

 PARTS LIST

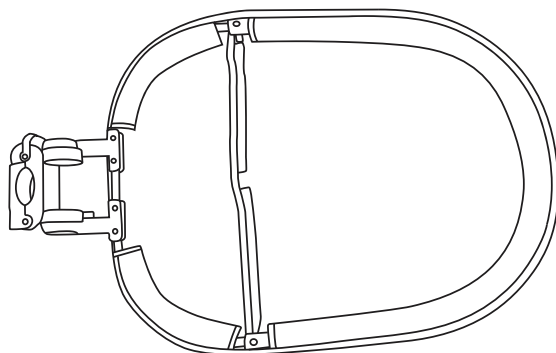



Canopy






Support Bar

ASSEMBLY

 
 
1. Insert the support bar into the fabric cover.

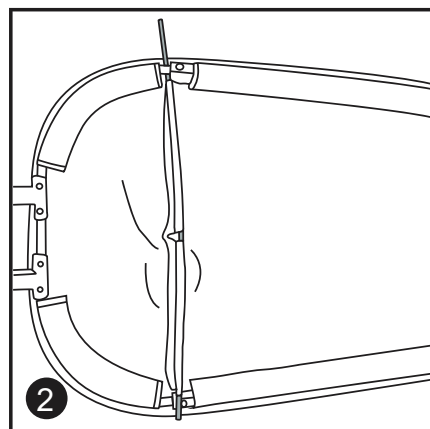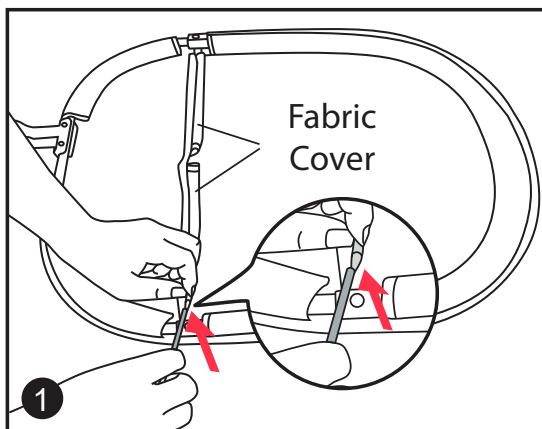

 
 
 
2. Hold the support bar from the back of the connector (Fig 3), then put the end of the support bar into the connector with another hand (Fig 4 & 5).

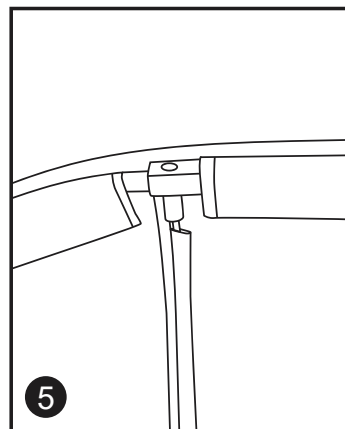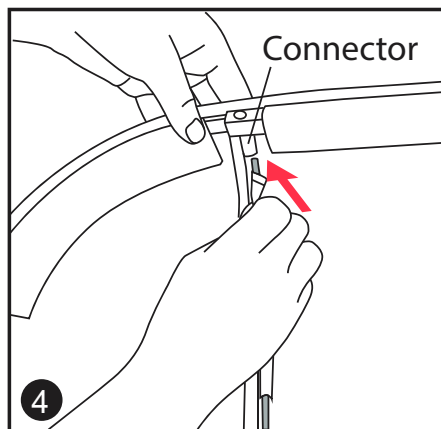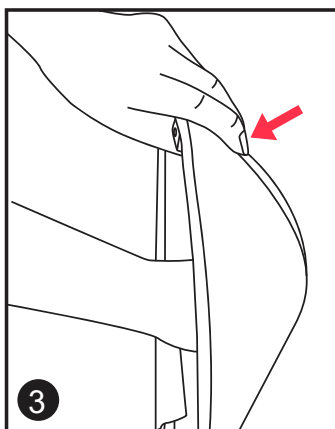

 
 
3. For the other side, pull out the center of the support bar slightly and insert the support bar into the connector (Fig 6);
4. Adjust the support bar into place (Fig. 7).

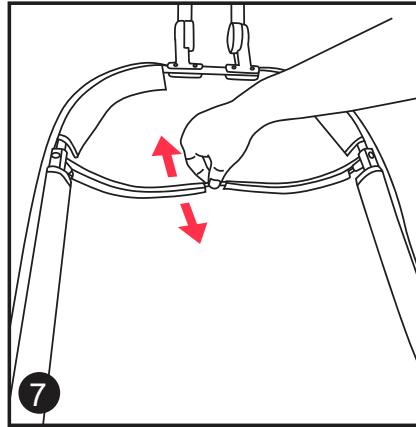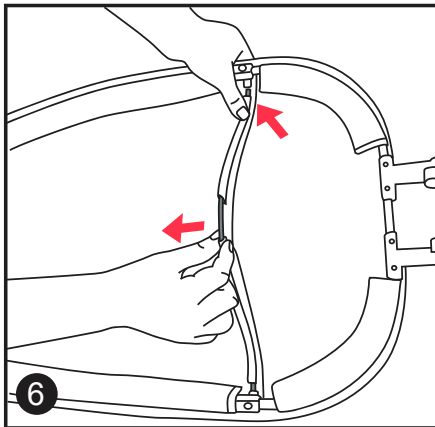

5. Attach the holder to the handle bar connector. The cylinder on the handle bar should be aligned with the hole in the bracket (Fig 8).
6. Firmly fasten the fixing buckle to the left until completely ejected (Fig 9).
Try to shake and do not fall off to indicate that it is in place.
7. When disassembling the canopy, press the button and lift the fixing buckle toward the side to open (Fig 10).

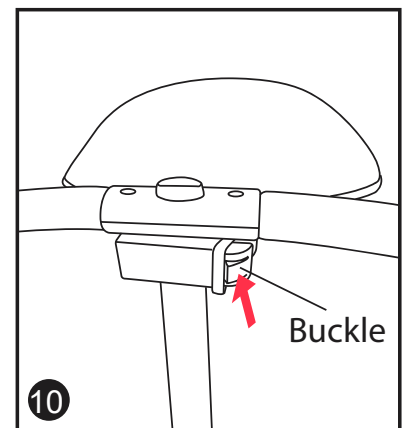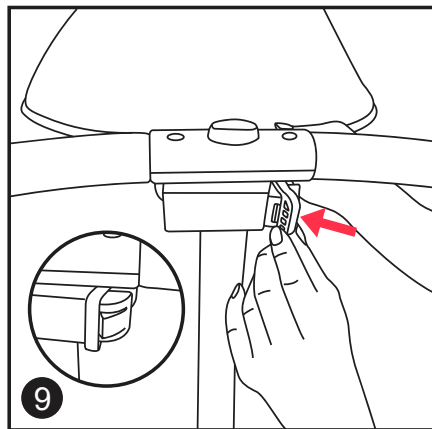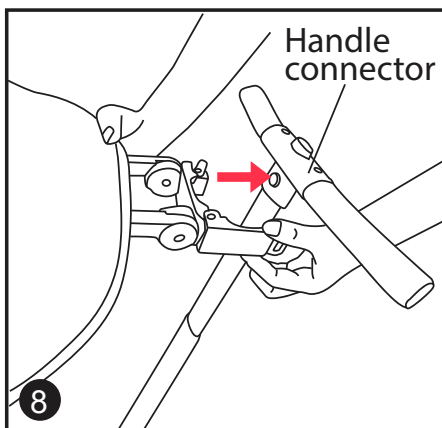   



 
 
8. Press the metal pin inward to adjust the height (Fig11 & 12).

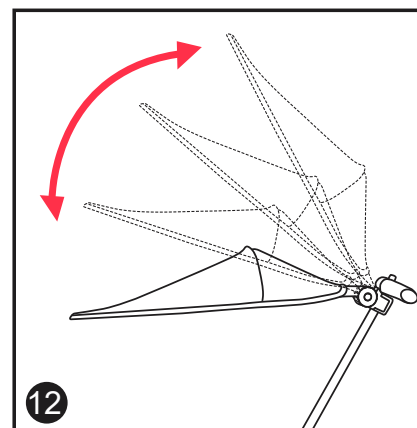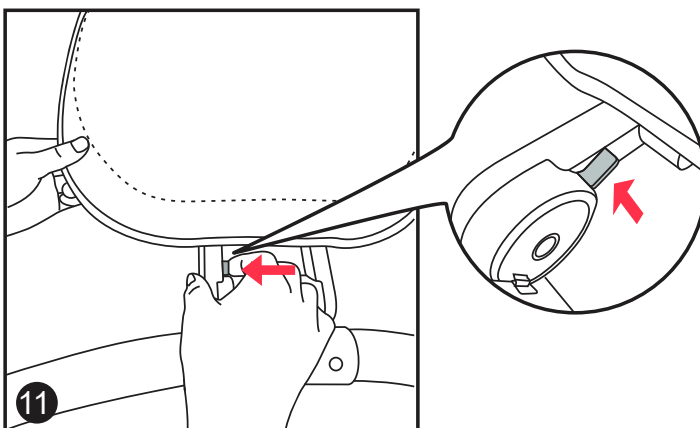



USING THE STROLLER CONNECTOR Sold separately) ASSEMBLY

The connector can be used for most compact baby strollers.

    (1) Press the quick release button on the connector to connect it to the rider as shown in figure A/B/C. To detach the connector, press the quick release button to remove it.

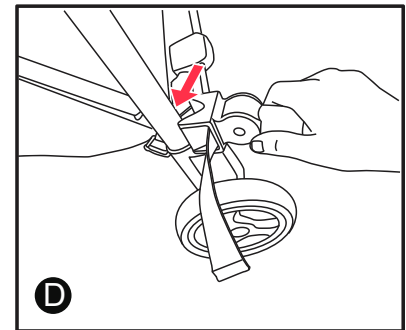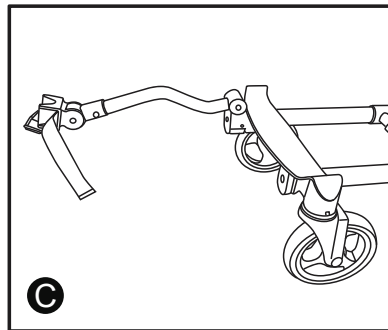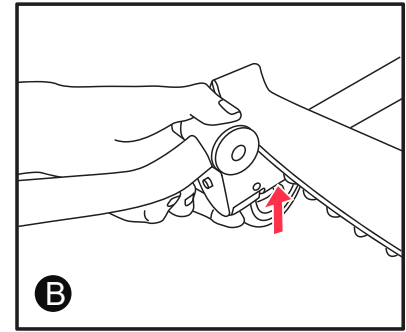
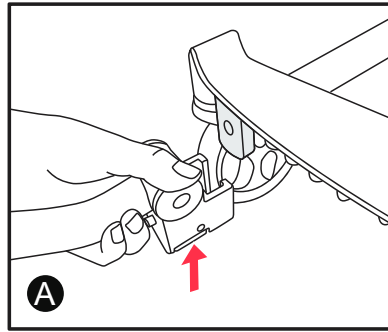


  (2) To attach the connector to rear leg of your baby stroller, use the strap located on the other end of the connector. Make sure that the strap is tight enough to velcro it as shown in figures D/E/F.

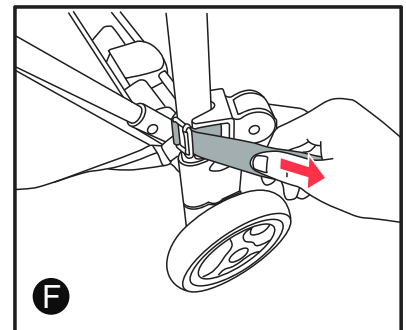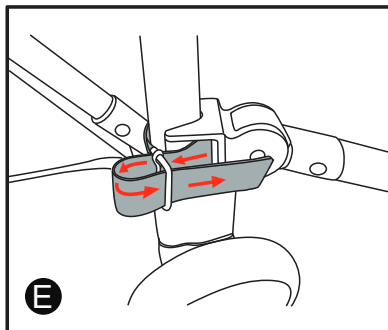

ATTENTION:

  When using the connector on the left rear leg of your baby stroller, connect it to the right front leg of your Coast Rider, and vice versa. Refer to Figures G/H.

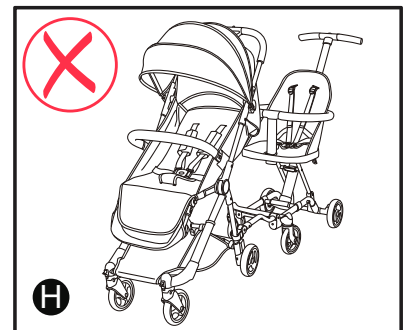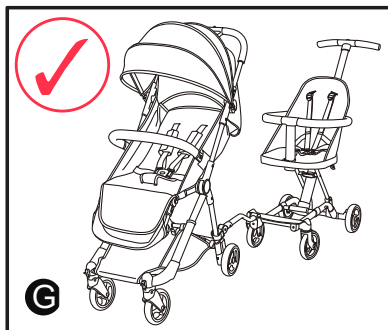



CARE AND MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mold and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet.

Always store the product in a well ventilated area.

- When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.
- If there are compression marks on the wheels - Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the wheels and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts, and other fasteners. Tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

IMPORTED BY:

DREAM ON ME INC.

1532 SOUTH WASHINGTON AVE PISCATAWAY TWP, NJ 00854 USA.

**For customer service, warranty information or replacement parts,
please call us at: 732-366-1788**

or visit us online at: www.dreamonme.com

MADE IN CHINA