

User Manual

Coffee Percolator

Model No.SR-CP50C/100C



EAD CAREFULLY THIS INSTRUCTION BEFORE USE
AND SAVE FOR FUTURE REFERENCE



HOW TO USE

1. Always use the coffee urn on a flat level surface.
2. Remove all packages before use. There is cleaning oil residue before the first use. (To clean and protect the urn, manufacturer used food grade cleaning oil) It is recommended you clean your urn before the first use.
Full the urn with water to "MAX" level, boil, discard the water, and then rinse. Repeat the procedure several times to remove any dust, residues, etc., from the urn.
3. Turn the lid anti clockwise to open .
4. Open the lid and pour in water. DO NOT use soft water,soft water may cause the filter basket to flood. Make sure the water is below the "MAX "level.
5. Connect the plug and the socket. Place the percolator tube and the filter basket in the tank and put the desired amount of coffee on the basket. Make sure that the percolator tube is fitted inside the Coffee Urn. Otherwise, it will not work properly.
6. Use regular electric perk medium to coarse ground coffee ,do not use a finely ,powder-like ground coffee.
7. Switch ON. The heating indicator will light up and the water starts to heat up, the water will spout from the tube, fall down to the coffee powder. It works in this way again and again until the heating indicator goes out and the keep warm lights up, showing that the proper amount of water has been sprayed well and the appliance is in the state of preserving heat.
8. Use the tap to dispense coffee.
9. When about 3 cups of coffee is remaining in the tank, turn the appliance off and unplug it from the electric outlet.
10. Always make sure at least three cups of water are remaining in the tank to prevent a boil-dry accident.
11. The urns can be very heavy when filled with water or coffee. Urns should not be carried or moved when full of water as the weight and unsteady load can cause injury or strain. Urns should be placed in their position of use and filled through the use of a portable hose or several trips with a smaller, manageable container (e.g. a jug).
12. Remove coffee basket and grounds as soon as brewing is completed.

- a. This also helps maintain coffee flavor.
 - b. The urn's lid can be used as a carrying tray when disposing of wet coffee grounds.
13. Before brewing a second time, allow urn to cool and rinse it out.
 14. Please clean the coffee stain in a timely manner. Citric acid is recommended.

COFFEE MEASURING GUIDE

Water Level	Measure of Ground Coffee	(5 oz/cup)
100 cups	6 ¼ cups	
80 cups	5 cups	
60 cups	4 cups	
40 cups	2 ½ cups	
20 cups	1 ½ cups	

Do not make less than 20 or more than 100 cups of coffee at one time.

Remark:The above proportion is just for reference. It can be adjustable according to personal taste.

SAFETY CUT OUT

Urns feature a boil dry protection system, which will switch off the element if the water level is too low. To reset the safety cut out, switch off and unplug the urn and allow it to cool. Refill with cold water and switch the urn back on again. The urn will automatically reboil.

IMPORTANT SAFETY INFORMATION

- Do not touch metal parts of the urn as they become hot during use.
- Be mindful of hot steam coming from the lid vents
- Do not leave electrical appliances unattended when in use
- Always put the urn on a clean, level surface that can withstand the weight of the urn - including water.
- Always switch off and disconnect the urn from the mains supply before cleaning or when not in use.
- NEVER attempt to move the urn when it is full of hot (or cold) water.
- Do not allow the urn to be immersed in liquid.
- Do not attempt to disassemble the urn – there are no user serviceable parts inside.
- ALWAYS disconnect from the mains supply and allow the water to cool completely before attempting to clean or descale the urn.
- NEVER OVERFILL THE URN
- Do not allow cold water to sit in the urn for more than 2 days as it could stagnate, which is very unhygienic. Empty the water out completely and refill if the urn has been stood idle over the weekend.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities,

or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a dedicated person who has been trained and qualified.


- Children should be supervised to ensure that they do not play with the appliance.

DO NOT POSITION THE URN SO THAT THE TAP HANGS OVER THE COUNTER EDGE. IT IS NOT DESIGNED TO BE USED THIS WAY AND COULD LEAD TO SERIOUS SCALDS SHOULD THE TAP BE SWITCHED ON BY MISTAKE.

POWER SUPPLY

- If the unit uses a mains supply, ensure that the plug is securely inserted into the mains socket and it is easily accessible.
- Protect the power lead from sharp objects, excessive heat and damp or wet locations.
- Check the power lead periodically, and replace if damaged.
- Check that the voltage on the rating plate of your product corresponds with your local electricity supply which must be A.C. (Alternating Current).
- Any repairs should only be carried out by a fully qualified electrician or an authorised service agent.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ELECTRIC CIRCUIT DIAGRAM

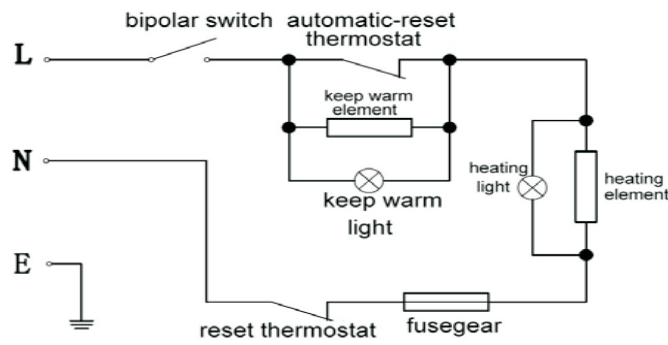

Coffee Percolator Troubleshooting

TROUBLE	RELATED PARTS	POSSIBLE CAUSE	SOLUTION
Leakage between the connection of tap and the urn body	Faucet	Faucet screw is loose	Tighten the faucet screw
Faucet leakage or no water out	Faucet	The drawbar of faucet is damaged or deformed	Replace a new drawbar
Can't turn on Light is out, no electricity, not heating	Switch	Switch failure due to excessive external current	Replace switch or check circuit
Light is out, can heat up	Indicator light	Lamp failure	Replace a new indicator light
Keeping boiling	Thermostat	Internal metal sheet damaged, thermostat is out working/ high altitude	Replace a new thermostat
Not percolating	Percolating stem	Percolator stem did not fit into the bottom heating element hole.	Put stem into the heating element hole
Filter blocked	Filter basket	Coffee grind is too fine	Medium to coarse grind is suggested. Clean well after use with citric acid
Rusty stains	Urn body	Did not clean well after use	Clean well after use, and clean with citric acid if it's rust