 




#67002

#67102

4'x6' BACK FOLDING METAL HOCKEY GOAL

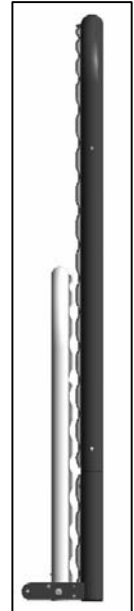

No.	Sketch	Description	Part #	Qty
1		Front End Swedged Top Rail	5038551 301	1
2		Front End Plain Top Rail	5038551 302	1
3		Left Upper Front corner	5038551 303	1
4		Right Upper Front corner	5038551 307	1
5		Red Folding Leg White Folding Leg	5038551 304 5038551 305	2
6		Left Rear Corner Plain End	5038551 306	1
7		Right Rear Corner With Swedge	5038551 308	1
8		Upper Back Support With Holes	5038551 311	1
9		Lower Back Support With Pin	5038551 309	1
10		Top Shelf Right Corner	5038551 310	1
11		Top Shelf Left Corner	5038551 312	1
12		White Lacing Rope	9141	3
13		Hockey Net 4'x6'	69114	1

Installation Instructions

Please read instructions
COMPLETELY
before assembly.



**DO NOT RETURN
PRODUCT TO THE
STORE**

Missing Parts,
Need Replacements, or
Help With Assembly

Please Contact
Customer Service:

203 933 4442

West Haven, CT 06516

 


NOTE: Precision connection will fit snugly, use a rubber mallet or block of wood if needed.

1. Begin assembly at the base of the goal and work upwards. Follow the diagram. Note: Pull pins from both folding legs and unfold. Reinsert pins to lock position prior to assembly.

2. Drape Hockey net over goal frame. Align the red tab in the center of the top and the green tab with the bottom back. Secure the six corners to align the net.

3. Starting at the red tab on top. Tie off one end of the rope to the welded wire. Lace only one loop through each square box of the goal net. Tie off with a good knots.


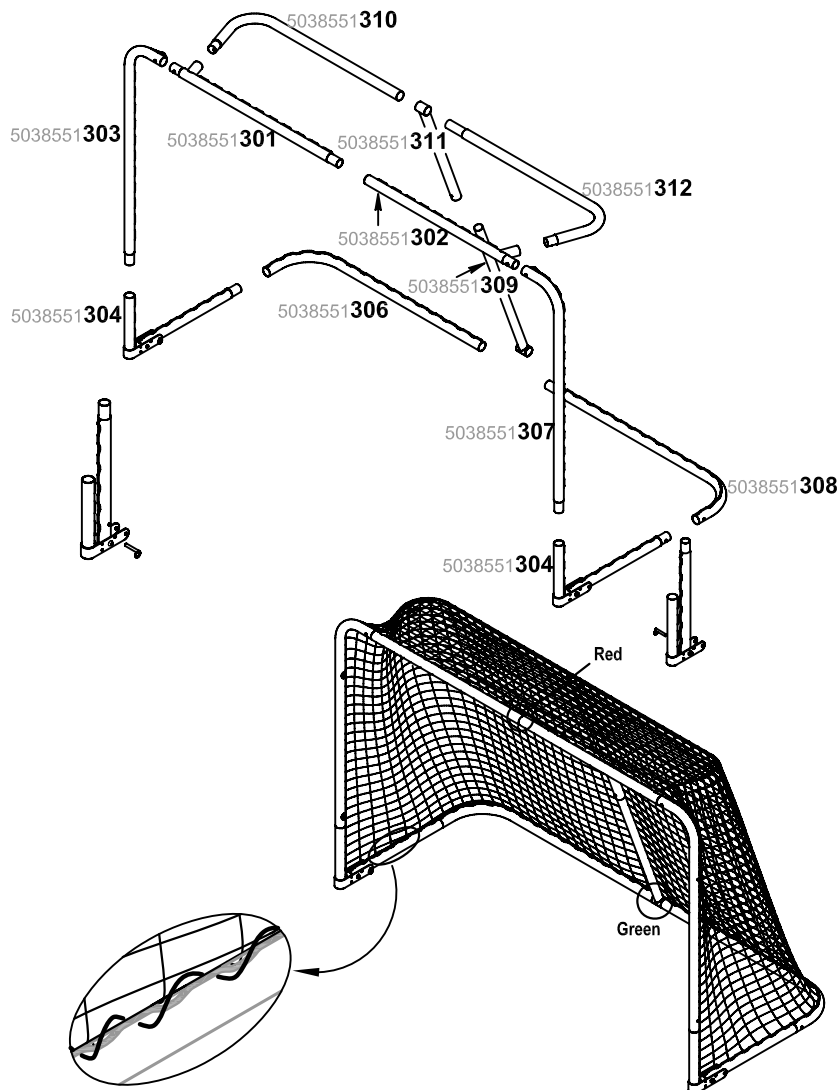


Folding & Storage

Folding & Storing goal with net attached:

1. Release the button on the back bar support and pull apart. Press the 4 buttons on the top rail and the top shelf will fold down.

  2. Pull the pins on both folding legs and lift base up and into the front of the goal. Reinsert pins on the top hole to secure base so the folded section will stay in the up position.

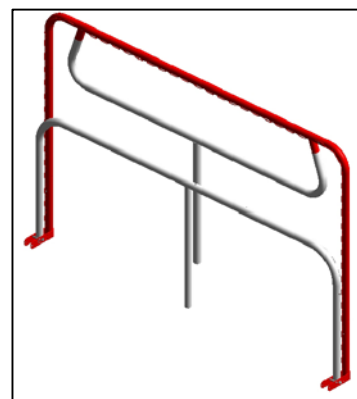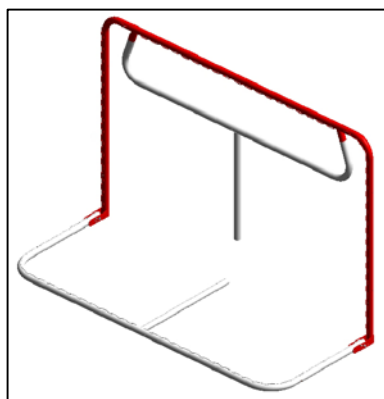


4'x6' 4 Pocket Target Nets Installation

Step 1 Lay out the EZ Goal target pockets in front Fig. 1 of the goal. Align the colored tabs in each pocket with the appropriate corner
BROWN upper right
BLUE upper left
ORANGE lower right
RED lower left



Figure 1

 Center color tab in corners

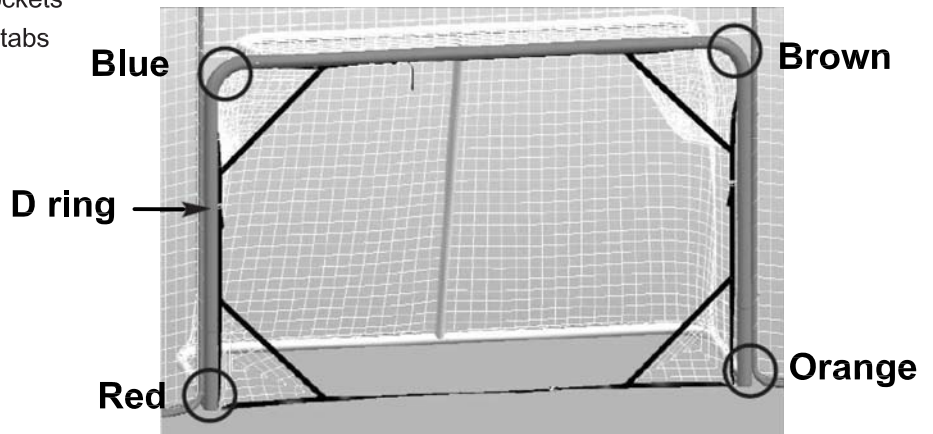


Step 2 Hook the 2 hooks on the back of the wire frame separated by about 4" or one wire loop. (see Figure 2) Keep the color tab in the middle of the corner while adjusting, leaving slack in the line for final adjustment with the D rings.

  Figure 2

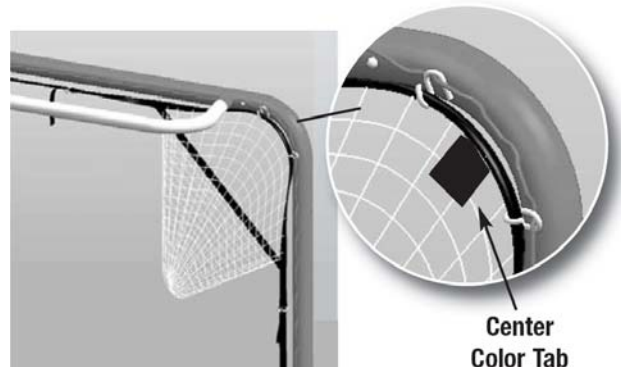
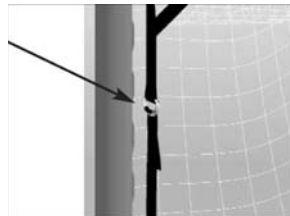


Step 3 Attach each bottom pocket by inserting hook through the lower bracket hole from the inside. (NOTE: you may also secure the hook in the bottom of the tube). Keep the color tabs in the four corners for the purpose of alignment. Fig. 3.

 Figure 3

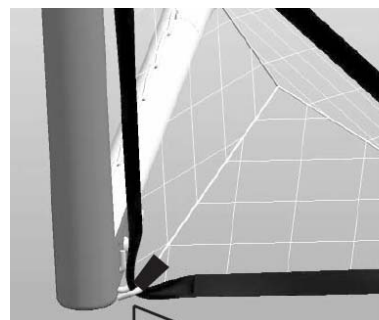


  Step 4 Remove the slack from the straps by tightening the D-rings to a snug fit. (NOTE: adjust the straps so that the pocket and color tabs are centered in the corners).

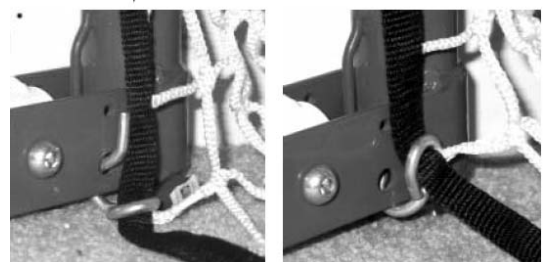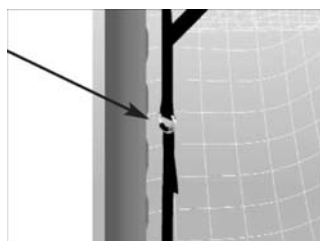



#69108

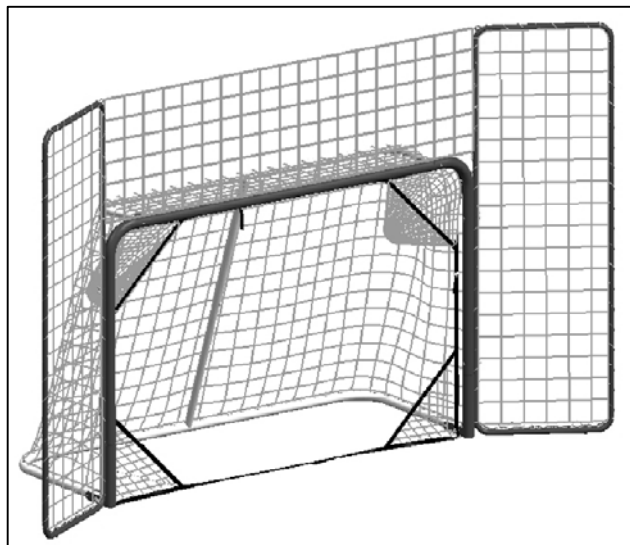 

BACKSTOP KIT WITH TARGETS FOR 4'x6' GOAL

No.	Sketch	Description	Part #	Qty
1		Outside Bottom L Tube	PS46251001	2
2		Top U Tube	PS46251002	2
3		Lower Inside Upright	PS46251003	2
4		Upper Inside Upright	PS46251004	2
5		Outside Upright	PS46251005	4
6		Inside Bottom L Tube	PS46251006	2
7		Bolts 6mm x 3"	8014	4
8		Butterfly Nuts	8015	5
9		15' Rope Black	9142	4
10		4' Rope Black	9143	4
11		15" Rope Black	9144	6
12		Side Backstop Net	9175	2
13		Top Backstop Net	9176	1
14		4x6 Hockey 4 Pocket Target Nets	69101	1

**Installation
Instructions**
Please read instructions
COMPLETELY
before assembly.



**DO NOT
RETURN
PRODUCT TO
THE STORE**

Missing Parts,
Need Replacements, or
Help With Assembly

Please Contact
Customer Service:

203 933 4442

West Haven, CT 06516



NOTE: Precision connection will fit snugly, use a rubber mallet or block of wood if needed.

Figure 1 Assemble 2 panels according to the diagram. Note: the corner loops on each panel should face each other and the down tube loops face back.

Figure 2 Side panel Assembly Lacing
Secure the 4 corners of the net, so it is easy to lace. Then labels should be on top. The lacing should be snug. Start at the bottom in the middle of the wiggle wire. Use the 15' black ropes. See Details

- 1) B Corners, lace every square box.
 - 2) C Side and top, lace every other square box.
 - 3) D Bottom, lace every square box
- Tie off with good Knots.

Figure 3 Bolting the Side panels
The holes are predrilled to secure the side panels. Stand the side panels along side of the goal. Attach them to the frame using the (4) Long bolts and butterfly nuts. The bottom hole on the side panels adjusts up and down if needed to the goal holes. Detail (E)
Note: The head of the bolt should be on the inside of the goal.

Figure 4 Backstop Top Nets

The thick rope and label must be on top. (Detail F.) Using thin short corner ties attach the top net to the 4 corner steel loops. Secure the heavy main rope on one panel to the steel loop. Pull tight and secure the main rope to the opposite side panel. (Detail G.) Repeat for the bottom rope box. Use the 4' ropes to lace the top net to the side panels, see Detail G Figure 5 and the front of the box. Use the 15" rope, bow tie off the top net to the goal in a few locations. (Detail H.)

Folding & Storing :

Figure 5 Fold panels forward, this will help stabilize the unit in windy conditions. Note: never leave the unit unattended within 8' of vehicles, boats, homes, or any structure which may incur damage from the backstop or cause damage to the backstop.

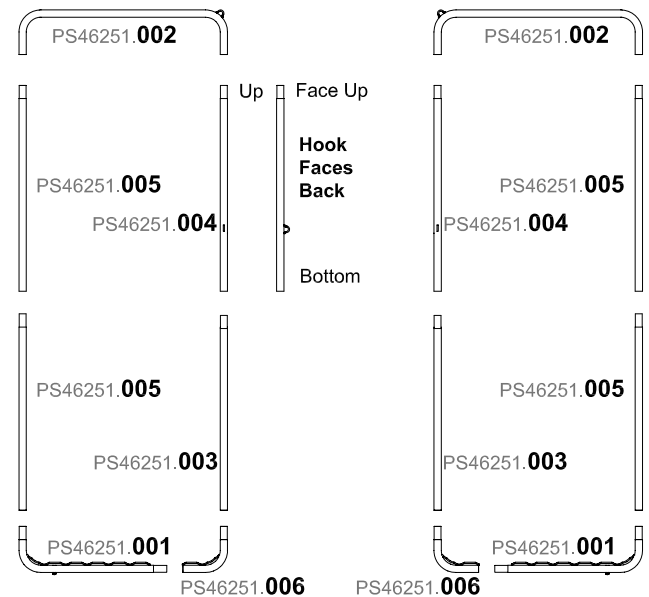 


Figure 2 Fasten tight every other square with the cordage

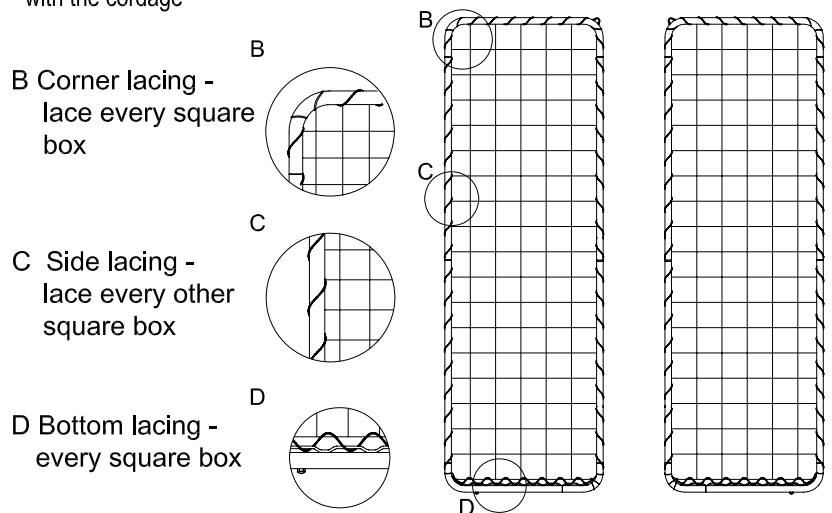 


Figure 3

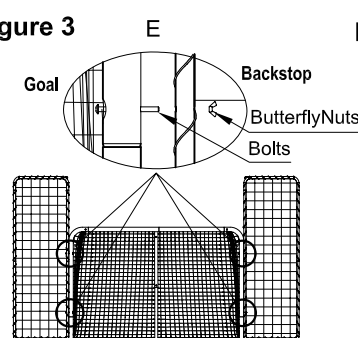 


Figure 4



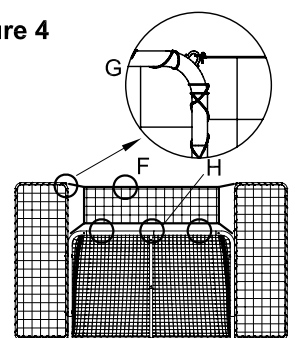 


Figure 5

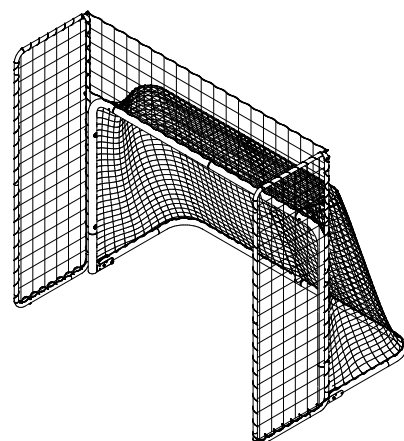 

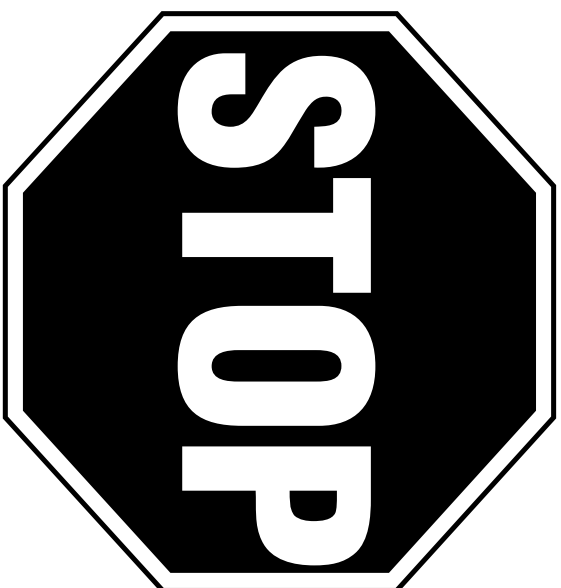 

DO NOT RETURN TO THE STORE

 
Check inside the larger diameter pipes for other tubes
For Installation Assistance, Parts and Information



203.933.4442

CALL US AT



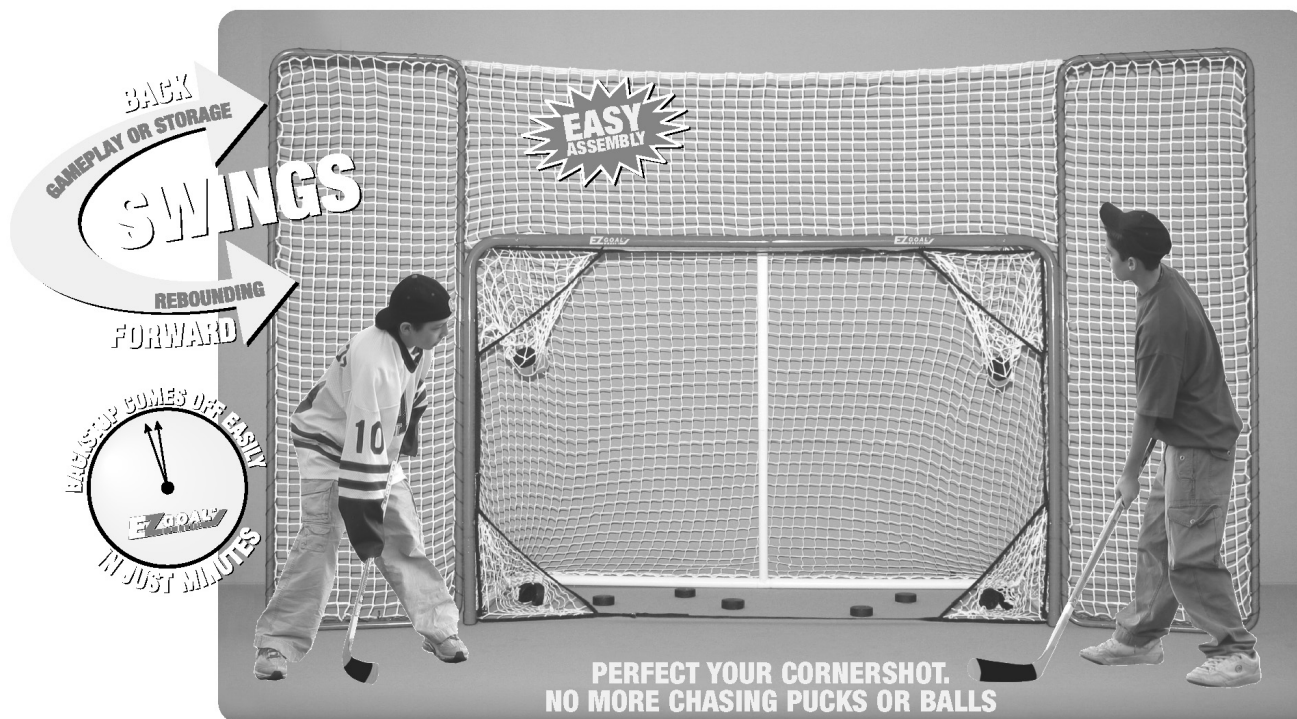

CUSTOMER ASSISTANCE

For help, replacement parts, questions or concerns about your EZ Goal Products® call **203.933.4442**

EZ Goal

Customer Service:

West Haven, CT 06516

SAFETY PRECAUTIONS



WARNING

- Manufacturer suggests wearing safety goggles for net assembly, to protect against bungee cords hitting eye.
- As with any play equipment, children **MUST** be supervised at all times.
- Use product on a level surface.
- Never use near steps or stairs.
- For outdoor use only.
- Allow 8 feet from structures such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Use common sense, and all the same precautions as you would when playing sports.
- Secure unit, so high winds do not blow it over.



WARNING

- **NEVER** allow anyone (people or pets) to stand behind the net or in any possible path of a ball or puck should you miss the net or should the ball or puck go through the net.
- Inspect unit before and during each use. Replace any worn or damaged parts.
- Never allow children to stand on unit. This could cause damage to unit and result in an injury.
- Do not use bungees for any other purposes other than to apply net.
- As with any sporting activity, always wear the recommended safety equipment.
- Never leave children unattended.
- Use protective eyewear when securing bungees.