

Operating instructions


Please read all the instructions before using



Name of product: Electric hair trimmer



Model No.: KB-1001

Input of trimmer: 5Vdc (By Micro-USB connect)

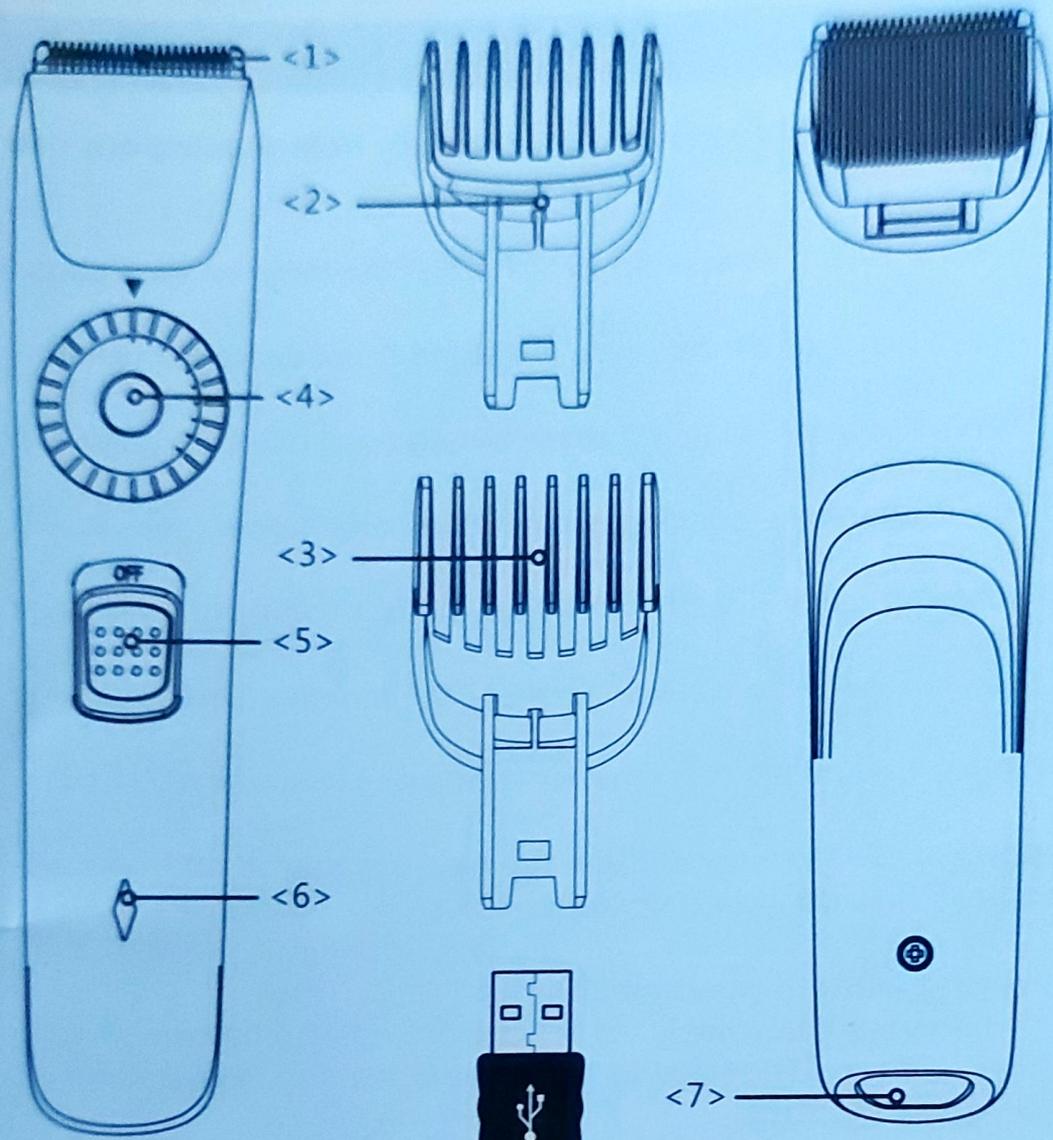

Parts list :

1. Blade
2. Position comb I
3. Position comb II
4. Regulator
5. ON/OFF Switch
6. Charge indicator
7. Power port
8. USB cord
9. Cleaning brush
10. Lube

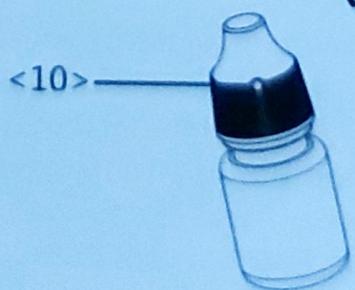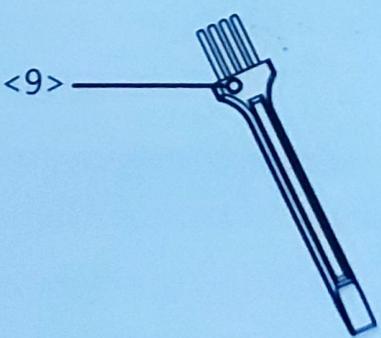


<8>


<9>

<10>


(1)

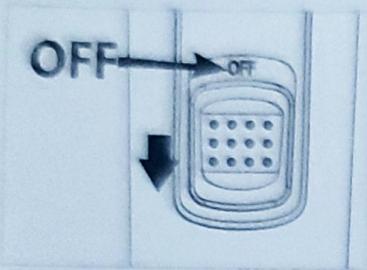


(2)

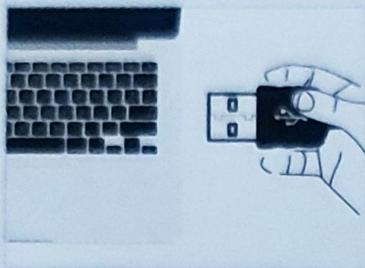


(3)

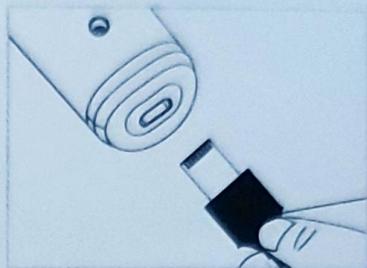


(4)

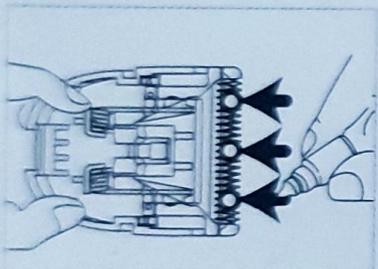


(5)

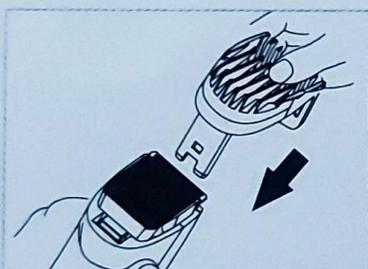

(6)

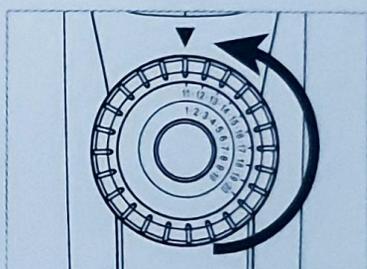


(7)

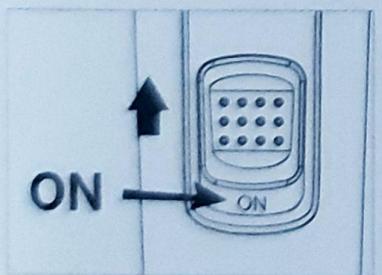


(8)




(9)

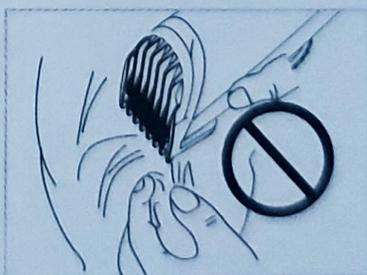


(10)

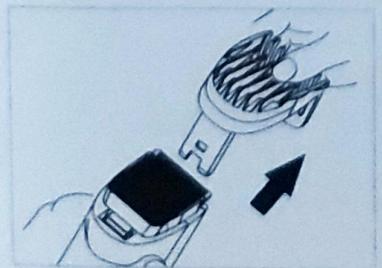


(11)

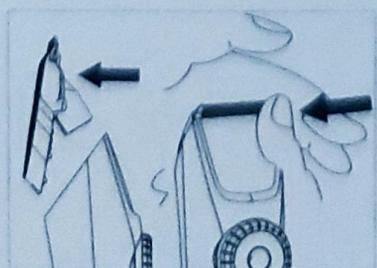

(12)

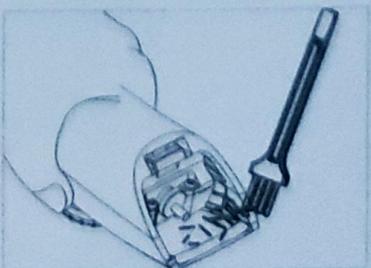


(13)

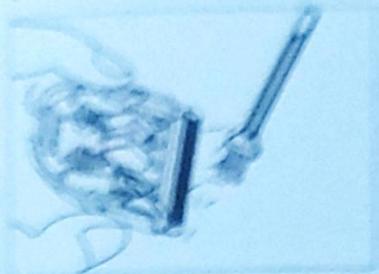

(14)



(15)

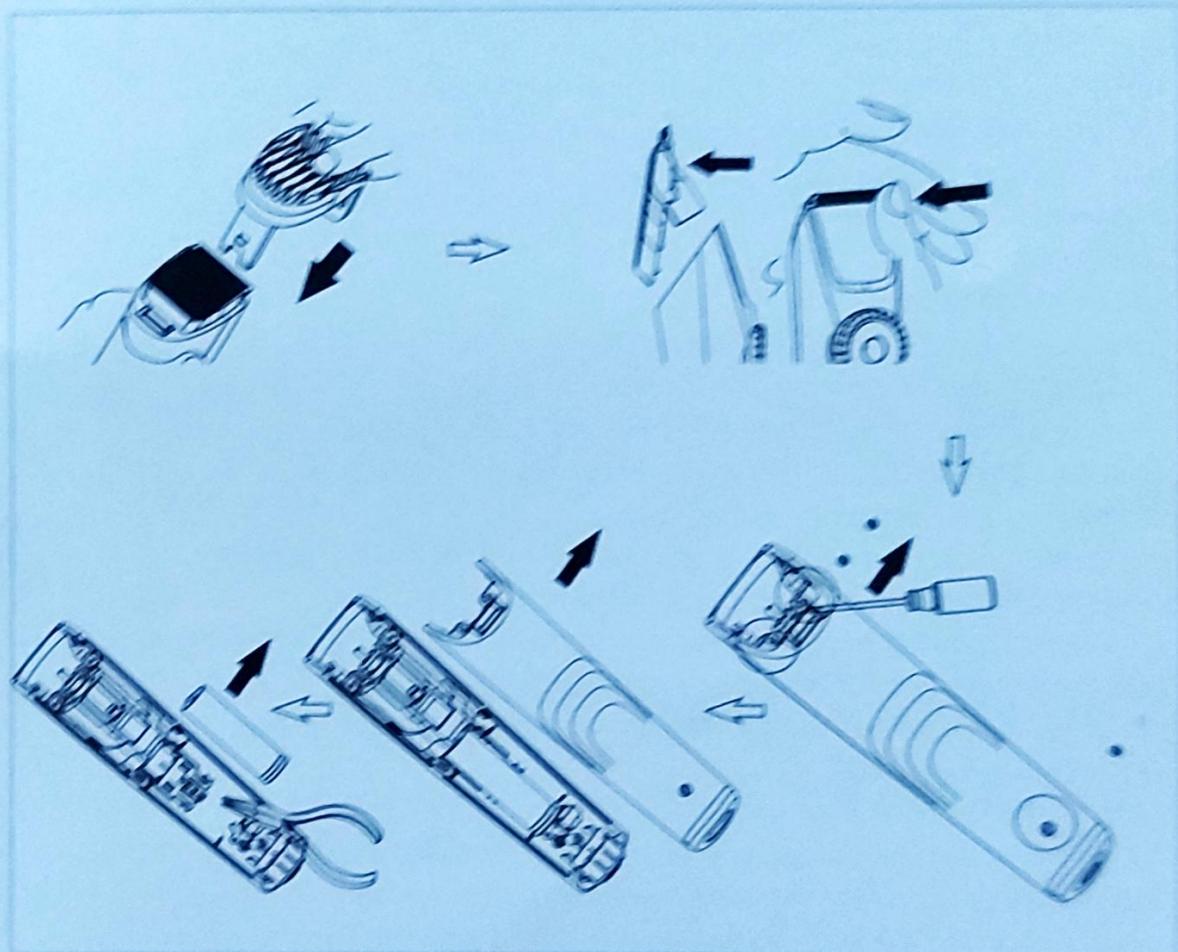

Warning

If the blade is deformed or damaged, please do not use it again, or it may cause skin irritation.

The blade has fixed life. In order to obtain best result, we recommend you replace the blade regularly.

Please do not charge at the place with temperature lower than 0 °C (32 °F), direct sunlight or near heat or humid source.

Please use the matching power line in the package.

Please dry the hair trimmer before charging.

Keep the hair trimmer far away from water source, keep your hands dry during the course of charging.

When you unplug the power cord from AC power supply, pull too hard may damage the appliance.

Store the power line to dry place as to avoid damage.

Do not pull, twist or bend the power line seriously.

Do not twist the power cord firmly to the appliance.

Please do not remove the shell, or it may result in damage for improper operation.

Do not trim in the shower.

The hair trimmer can not use water or other liquids to clean, this product is not waterproof.

This product is not suitable for animal hair or other purposes.

Put it to the place out of reach of children.

Keep the instruction to safe place.

Please contact the authorized after-sale service for any maintenance and damage question.

Children under 8 is not allowed to use this product, or the person with physiological malady or mental disease or lack of experience shall be supervised to operate this products, and shall be informed of relevant dangers.

Children shall not play with products.

Children shall not clean and repair this product without supervision.

Keep the equipment dry when you no longer use.

The discarded battery shall be removed from the hair trimmer.

Before removing the battery, you must unplug the power cord, make sure the product has been disconnected, otherwise it will likely cause electric shock.

Safely dispose the battery.

How to charge

Stop to use the hair trimmer if it lost power, charge it for 90 minutes, the hair trimmer could be used for about 90 minutes after fully charged.

Recommendation : the hair trimmer can continue to use about 90 minutes after fully charged, but we recommend you charge the hair trimmer when continuous use for 85 minutes or you feel about power down, you may not wait to be completely discharged when charging, it helps to extend the life of the hair trimmer.

Attention during the charging course

1. Never use this hair trimmer in the bathroom or shower room.
2. Charge the appliance in a location where it will not be exposed to direct sunlight or other heat sources, at temperature of 5°C to 35°C.
3. Plug the USB connect into the inlet of adaptor or any appliance where there is no moisture and handle it with dry hands.
4. Do not damage or deform the USB cord, do not place heavy objects on the USB cord.
5. Do not use the appliance if the USB cord is worn, or if the cord do not fit snugly in the hair trimmer coupling.

Charging the appliance

1. Slide the switch downward to turn 'OFF' the trimmer (See page 3, fig 1).
2. Plug the USB connect into the inlet of adaptor or any appliance including 5Vdc output (See page 3, fig 2).
3. Plug the USB connect into the power port of the hair trimmer (See page 3, fig 3).
4. When the charge connection is normal, the hair trimmer indicator turns on, the charge indicator must keep turning on during the course of charge. If the indicator fails to turn on, please try again and make sure normal charge.
5. The charging indicator will turn green after hair trimmer is fully charged.
6. Please break off the USB connection after 90 minutes charge.

Attention : In any conditions, please keep the product be charged at least once by per 3 months.

How to use

Please read the safe instruction carefully before using our hair trimmer.

1. Slide the switch downward to turn 'OFF' the trimmer (see page 3, fig 1).
2. Please check and make sure the blade is not damaged or with other foreign matters.
3. Please apply the oil at the blade before each use (see page 3, fig 4).
4. Please attach the position comb to the hair trimmer (see page 3, fig 5).
5. According to your desired to adjust the position comb (see page 3, fig 6).
6. Slide the switch upward to turn 'ON' the trimmer (see page 3, fig 7 - fig 8).
7. Please turn off the hair trimmer after using (See page 3, fig 9).

Important : Please do not use the hair trimmer in an inverted position, this can cut hair too deeply.

Trimming without position comb

Trimming your hair without an attachment will trim hair length to approx. 0.5 mm, You have to first remove the attachment combs (see page 3, fig 10)

Important : do not press firmly of trimming, maybe damage your scalp.

How to clean

Pay attention to following points before cleaning

1. Ensure the hair trimmer is turned off and the power cord is cut off.
2. Please clean the hair trimmer surface with wet cloth, do not use cleaner or chemical substance.
3. Wipe the hair trimmer surface with dry cloth, do not use blower or other dry heat exchange.
4. The hair trimmer should not be cleaned by immersing into water.

Explanation on cleaning

1. Slide the switch downward to turn 'OFF' the trimmer (see page 3, fig 1).
2. Take off the position comb (see page 3, fig 10).
3. Hold the main body, place your thumb against the blades and then push them away from the main body (See page 3, fig 11).
4. Brush off any hair trimmings from the hair storeroom (See page 3, fig 12).
5. Brush off any hair trimmings from the blade (See page 4, fig 13).
6. Take the blade back in place after cleaning. (see page 4, fig 14)

Comments

1. The life of blade is supposed to be 18 month on the condition that: the appliance will be used one time every day, 5 minutes for each time.

Attention

1. If you feel the blade become dull during the course of trimming, (obvious pulling feel), you needs to replace the blade.
2. Highly recommend you to clean the hair residue from the blade after each trimming, otherwise, may cause bad performance, or reduce the service life of blade.
3. Please ensure the trimmer is charged at least once every 2 month to keep the battery activated and prolong the service life of the battery.

Important : please remove the battery when you discard the product (see page 4, fig 15).