



LED PICO

Pocket Projector



User Guide

Caution!

WARNING: Please use this product as instructed. Misuse may cause injury or death.

DO NOT use while driving

DO NOT expose to water or wet surfaces. Electric shock may occur.

DO NOT expose the projected LED image to your eyes or the eyes of others

DO NOT block or restrict airflow from ventilation holes as this may cause the projector to overheat

Keep the projector, battery, or charger away from any heat sources

Caution for Battery Use

- Do not pierce or puncture the battery with sharp objects
- Do not heat the product or expose it to high temperature.
- Do not wet it or place it in any liquid

Caution for Headphone Use

- Prolonged use at high volume may impair your hearing.
- High volume during walking or driving may cause distractions and result in injury or death


Table of Contents

1	Chapter 1: LED Pico at a glance	16	Connecting to a USB Host
2	Main Unit Front/Back		Chapter 3: Menu Screens
3	Keypad	18	Main menu
4	Accessories	19	Video Player Menu
	Chapter 2: Getting Started	21	Video FAQ
5	Powering On / OFF	22	Photo Viewer Menu
6	Focus Adjustment / Throw	24	Photo FAQ
	Distance	25	Music Player Menu
7	Connecting to a Computer HDMI	27	Music FAQ
9	Connecting to Composite Video	28	Ebook Viewer Menu
11	Connecting to HDMI Video	29	Setup Menu
13	Connecting to Speaker or Headphones	34	Chapter 4: Technical Details
14	Connecting a Micro SD Card	35	Troubleshooting
		36	Specifications


LED Pico at a Glance

Chapter 1

 
Main Unit Front/Back

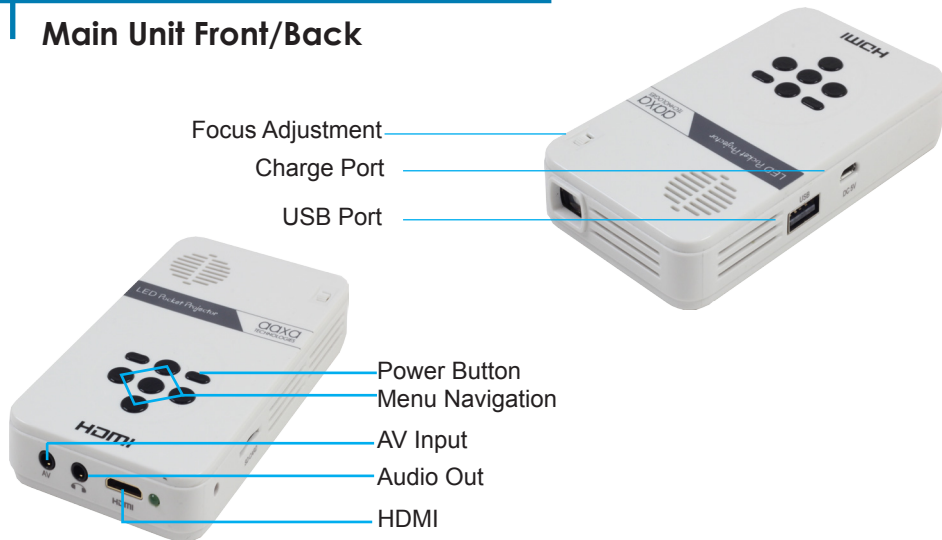


Keypad

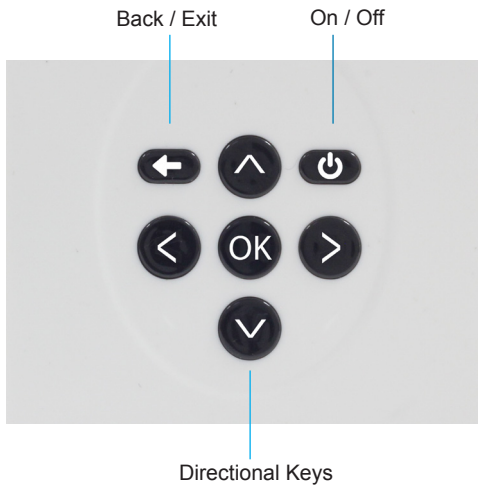 

Accessories

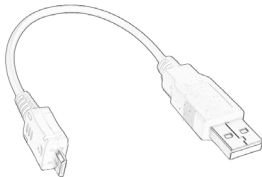 

Micro USB Cable

 

A/V Cable



Tripod

*Under various circumstances, the actual accessories may be different from those shown in the pictures above.

Getting Started

Chapter 2

Powering ON the projector

1. If you want to charge your LED Pico, simply plug in the Micro USB cable to any computer or wall adapter.



2. Once your LED Pico is charged, hold down the power button for approximately three seconds until the unit starts projecting.

Powering OFF the projector

1. Press and the power button once, then again to confirm.
2. After a few seconds, the unit should turn off fully.

 


Note: The LED Pico Projector battery does not charge when it is in operation.

Focus Adjustment / Throw Distance


Focus Adjustment

- Spin the focus wheel up or down until the image becomes clear.

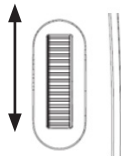

Throw Distance Chart

Distance inch (")	Diagonal Inch (")
26	17
38	25
51	34
63	42
75	50

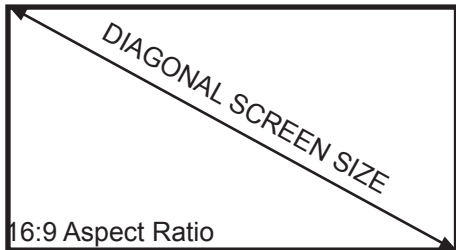

Throw Ratio 1.5

*minimum throw distance: 10 inches

Connecting to a Computer via HDMI

Step 1:

Connect one end of the



HDMI Cord

to your computer's



HDMI Adapter

Step 2:

Connect one end of the



HDMI Cord

 
to your LED Picos



HDMI Adapter

Step 3:

In the Main Menu

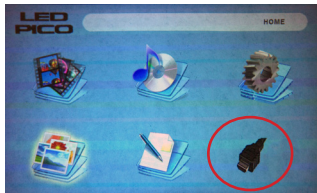

Select "INPUT" icon



 
Select "HDMI" icon

Connecting to a Computer Cont.

Step 4:

Enabling HDMI output on your Computer – To enable HDMI output on your computer most computers require “turning on” the video output feature. Each computer is different. Please consult your owner’s manual for instructions to enable HDMI output. Below are standard instructions for a Windows XP computer – not all systems are the same.

Step 5:

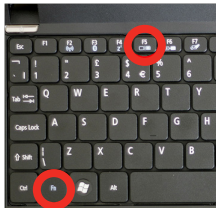


Press function & “F5” to instruct the computer to enable multiple displays.

You can also press Windows+P to toggle through display settings.

*NOTE: different operating systems may differ

 Step 6:

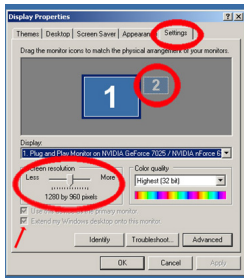

1. Right click on computer desktop and select “Properties”
2. Display Properties window will pop up
3. Click on the “Settings” Tab
4. If a secondary monitor is grayed out, click on it and check “Extend my Windows Desktop onto this monitor”
5. If the image is blurry or the text is not legible, adjust the screen resolution. We recommend 1280x800.

Connecting to Composite Video

Step 1:

Connect one end of the



Composite Cord

to your LED Pico's



A/V Adapter

Step 2:

Connect opposite end of

 


Composite Cord

to your devices




Composite Cord

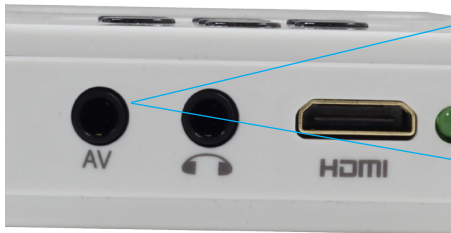

Connecting to Composite Video Cont.

Step 3:

 In the Main Menu

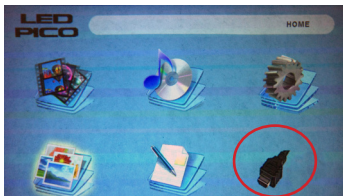

Select "INPUT" icon



Select "AV" icon

Step 4:

Turn on your multimedia device.

Connectivity with multimedia devices

The LED Pico can connect to many media devices including: iPod, iPhone, iPad, VHS players, DVD players, smart phones, cameras, video game consoles and other peripherals with ease.

*Apps on smart phones require video out capabilities to be displayed with the LED Pico.

Connecting to HDMI Video

Step 1:

Connect one end of the



Mini HDMI Cable

to your LED Pico's



Mini HDMI Adapter

Step 2:

Connect one end of the



HDMI

to your devices



 
HDMI Adapter



Connecting to HDMI Video Cont.

Step 3:

In the Main Menu

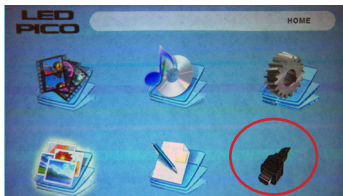

Select "INPUT" icon



Select "HDMI" icon

Step 4:

Turn on your multimedia device. If available select 960x540 or 1280x800

Connectivity with multimedia devices

The LED Pico can connect to many media devices including: iPod, iPhone, iPad, VHS players, DVD players, smart phones, cameras, video game consoles and other peripherals with ease.

*Apps on smart phones require video out capabilities to be displayed with the LED Pico.

Connecting Speakers/Headphones

Step 1: Connect your speakers/headphones to the projector's speaker adapter.



3.5 mm cord



Speaker Adapter

Step 2: Ensure the power and volume on your speaker or headphones is turned on

Step 3: Place the headphones on and enjoy!



***CAUTION for Headphone Use**

- Prolonged use at high volume may impair hearing

Micro SD Card

How to insert your Micro SD Card

- Slide in your SD card into the SD card slot on the front of the LED Pico. (as shown in picture)
- Gently slide the SD card until it clicks into place.

How to access your Micro SD Card

- Once your SD Card has been inserted, you can navigate to any media content in the main menu..
- After selecting the media content, choose the SD card selection.
- You can now access the data on your SD card through the onboard media player

***Review the Specification section of this manual to read about the supported file formats.**

 


Micro SD Card Cont.



Media Player menu

- In the Media Player selection you can choose from Videos, Audio, Pictures, and Ebooks.
- Select the appropriate menu for the type of file you wish to view.

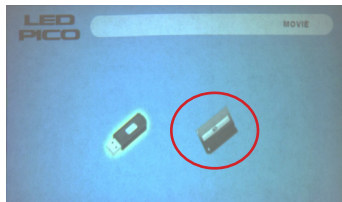

File Menu System

- The LED Pico will show all folders and files you have on your SD Card in the C: drive.
- Use the directional buttons to navigate to different folders or files.



Return: Brings you back to the main menu

USB Host

How to insert your USB Drive

- Slide your USB Drive into USB adapter. (as shown in picture)
- Gently slide the drive until it cannot go in any further


How to access your USB Drive

- Once your USB Drive has been inserted, you can navigate to any media content in the main menu..
- After selecting the media content, choose the USB selection.
- You can now access the data on your USB drive through the onboard media player

***Review the Specification section of this manual to read about the supported file formats.**




 USB Host Cont.

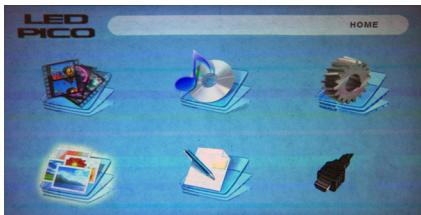

Media Player menu

 - In the Media Player selection you can choose from Videos, Audio, Pictures, and Ebooks.
- Select the appropriate menu for the type of file you wish to view.

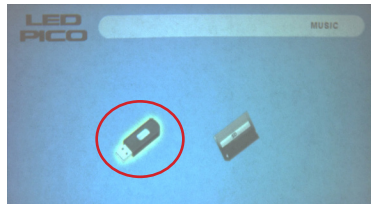

File Menu System

- The LED Pico will show all folders and files you have on your USB Drive.
- Use the directional buttons to navigate to different folders or files.




Return: Brings you back to the main menu

Menu Screens

Chapter 3


Main Menu

 The LED Pico features a built in PMP (Portable Media Player) function. This function allows the projector to play videos, pictures, music files, and text. To access the main menu simply turn on the projector.

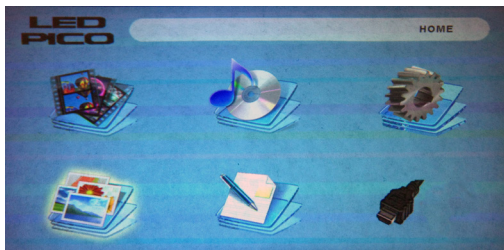

- Scroll Left/Right by pressing the left and right directional buttons
- To select a submenu, highlight the desired submenu and press the OK button located in the middle of the keypad.
- To go back to the previous page while in a submenu, press the back on the far right just underneath the directional keypad.

 Video Player Menu

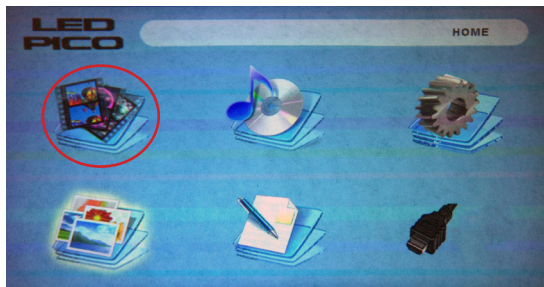

Opening a file:

- Select the video option from the main menu.
- Select the hardware media the file is stored on
- Choose which file you wish to play.

Select the “video” icon

The LED Pico will show all folders and files you have on your USB or SD Drives. Use the directional buttons to navigate to different folders or files.

Video Player Menu

Playing Videos

To use the video controls, use the directional keys to highlight the option you wish to choose.



Move selection left

 


Move selection right



Confirm selection

- To open the vide player menu, press “OK” on projector.
- To close the video player menu, hit “back” on projector.

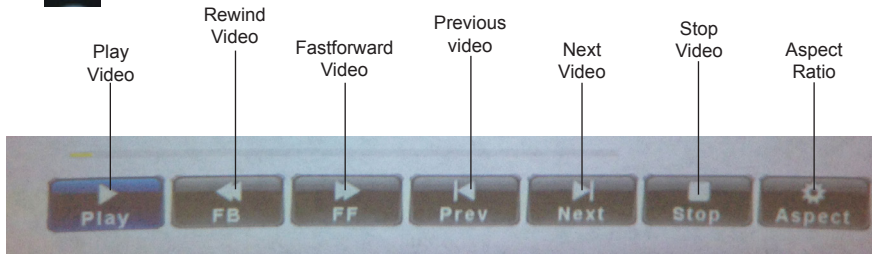

Video Playback FAQ

How do I loop a video?

1. Choose either USB or SD Card for playback



2. Navigate the folders until you reach the file you wish to play.
3. Highlight the file you want to play, then confirm the selection.
4. Move selection on video player menu to “Repeat A”, and press OK until it says “Repeat 1”.
5. The video will now loop after playback is finished.


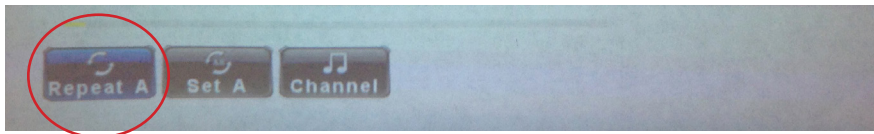 


Photo Menu

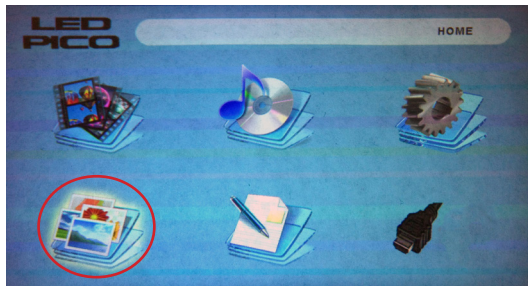 

Select the “photo” icon

The LED Pico will show all folders and files you have on your USB or SD Drives. Use the directional buttons to navigate to different folders or files.

Opening a file:

- Select the photo option from the main menu.
- Select the hardware media the file is stored on
- Choose which file you wish to play.

Photo Menu

Viewing Pictures

To use the photo controls, use the directional keys to highlight the option you wish to choose.



Move selection left



Move selection right



Confirm selection

- To open the vide player menu, press “OK” on projector.
- To close the video player menu, hit “back” on projector.

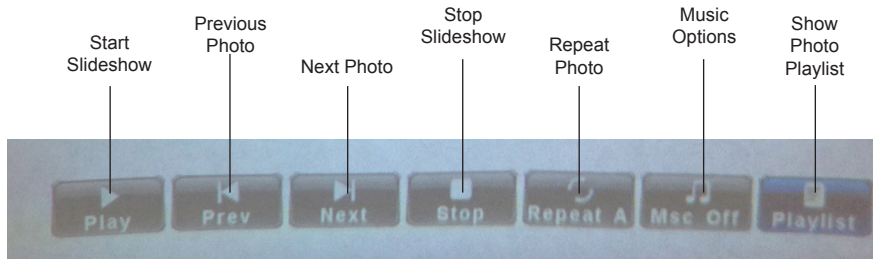 


Photo Slideshow FAQ

How do I play a slideshow?

1. Choose either USB or SD Card for playback

 


2. Navigate to the folder that contains the pictures you wish to see in the slideshow
3. Confirm selection of the first picture.
4. Press “play” in the photo menu
5. Slideshow will not play.
6. NOTE: Selecting “repeat” will loop slideshow.

How do I manually control the slideshow?

1. After selecting the photo you wish to be displayed, you can press “play” to start the slideshow (as outlined in the previous FAQ).
2. To manually control the slideshow, you must stop the slideshow with the “stop” button.
3. You may use either the controls on top of the projector itself to flip through the pictures in the current playlist.

Music Player Menu

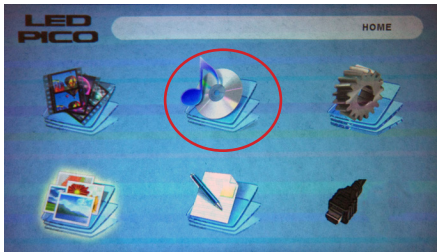

Opening a file:

- Select the audio option from the main menu.
- Select the hardware media the file is stored on
- Choose which file you wish to play.

Select the “Audio” icon

The LED Pico will show all folders and files you have on your USB or SD Drives. Use the directional buttons to navigate to different folders or files.

Music Player Menu

Listening to Audio

To use the audio controls, use the directional keys to highlight the option you wish to choose.



Move selection left

 


Move selection right



Confirm selection

- To open the music menu, press “OK” on projector.
- To close the music menu, hit “back” on projector.

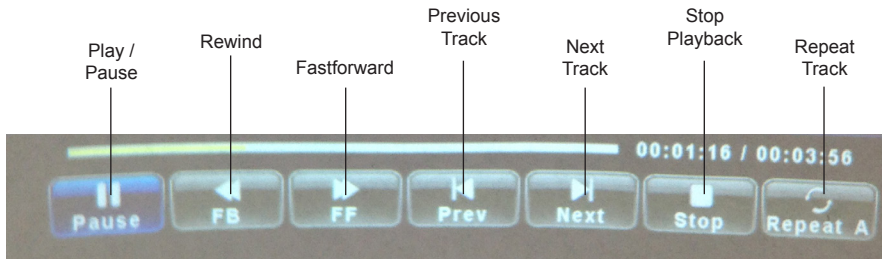

Music Playback FAQ

How do I loop a song?

1. Choose either USB or SD Card for playback



 
2. Navigate the folders until you reach the file you wish to play.
3. Highlight the file you want to play, then confirm the selection.
4. Move selection on music player menu to “repeat”, and confirm the selection.
5. The song will now loop after playback is finished.

How do I create a song playlist?

1. Insert your media device (either microSD card or USB) into computer.
2. Make a new folder on media device (folder name will be the name of the playlist).
3. Transfer songs from computer to the new folder, name accordingly.
4. Remove media device from computer and insert into projector.
5. Navigate to Audio section, then choose appropriate media device.
6. Navigate to your playlist folder.
7. Start at first song.
8. Playback will follow each successive song on the list.

*To create a special order for the list, add numerical numbering to the beginning of each file.

EBook Viewer Menu

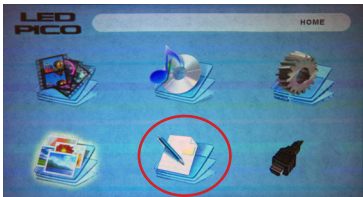

Opening a file:

- Choose “Open File” option
- Select device file is stored on
- Select file from list

The LED Pico will show all folders and files you have on your USB or SD Drives. Use the directional buttons to navigate to different folders or files.

Viewing text files

The LED Pico Projector allows you to view text files. Select the file you want to view in the file menu for the particular storage device on which the file is stored. You can press the left and right arrow buttons on the directional pad to flip through the pages you have in the present folder.

*Review Specification section of this manual for supported ebook formats.

Setup Menu

The Settings Menu can be accessed by selecting "Settings" on the main menu



Within the settings menu there are four more submenus that allow you to customize your LED Pico to the settings you want.

Picture

- Picture Mode
- Color Temperature
- Aspect Ratio

Sound

- Sound Mode
- Balance
- Auto Volume
- Surround Sound
- EQ

Time

- Clock
- Off Time
- Sleep Timer

Option

- OSD Language
- Restore Factory Default
- Blending
- OSD Duration

Picture Settings

Picture Mode

- Changes the picture mode to different settings depending on your choosing.

Color Mode

- Adjusts the color temperature from hot to cool (red to blue).

Slideshow Time

 
- Adjusts the time between photos when in slideshow mode

Aspect Ratio

- Adjusts the image's aspect ratio from 16:9 to 4:3


Upgrade

- Upgrades the LED Pico's firmware

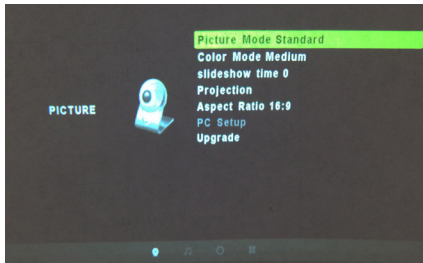

*Caution: Some pictures may be cut off when aspect ratio is set incorrectly

 Sound Settings

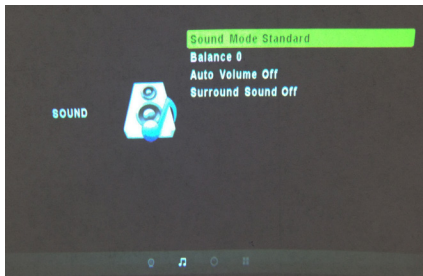

Sound Mode

- Change the sound mode depending on what is currently playing.

Balance

- Adjusts the balance of the sound, from left to right.

Auto Volume

- Sets the projector to auto-detect for the volume. The projector will auto detect the appropriate sound mode.

Surround Sound

- Adjusts the surround sound capabilities of the projector.

Time Settings

Clock

- Adjust the time/date.

Off Time

- Sets a time for auto turn off of projector

On Time

 
- Sets a time for the projector to auto turn on.

Sleep Timer


- Sets a timer until the projector to go into sleep mode

Auto Sleep

- Sets the auto sleep of the unit.

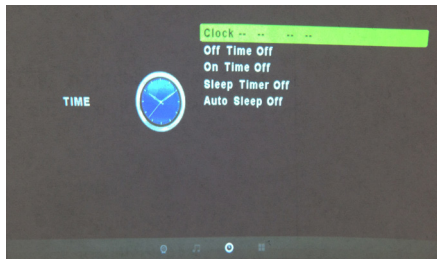

Option Settings

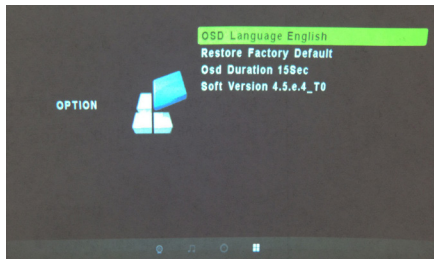 

OSD Language

- Changes the language of the device.

Restore Factory Default

- Restores the projector to factory settings.

OSD Duration

- Allows the projector to set a duration for the selected OSD language.

Soft Version

- Lists the firmware version your LED Pico is running

Troubleshooting

IMAGE IS BLURRED

Possible Causes	Solution
The Projector is not in focus	Adjust the focus with the focus adjustment dial until the image comes into focus
The Projector is offset from plane / angle of operation	Move the projector so that it is both 180 degrees and on an even plane with the screen.

No Sync, No Signal

1. Be sure to setup the computer to enable a video signal output. On some laptops this is done by pressing and holding Function F5 key. If using the LED Pico as an external monitor on Windows based systems, this can be done by selecting "extend my desktop to this monitor". The native resolution of the LED Pico projector is 960x540. Depending on the video driver different resolutions may need to be selected for proper output.

Technical Details

Troubleshooting

THE PROJECTOR DOES NOT TURN ON

Possible Causes	Solution
There is no power	Check to ensure the power outlet or battery source is good. check the power adapter to ensure a proper connection with the wall outlet as well as the projector. Confirm that the unit is charged and has enough power
The power button was not held long enough	To power on the projector, the power button needs to be depressed for a full 3 seconds. try holding the power button until the optical engine turns on

NO PICTURE / FILE NOT SUPPORTED

Possible Causes	Solution
The video source is not properly connected or selected	Check the video source signal to ensure that it is properly connected. Select the current input source by choosing the input desired from the main menu
Incorrect file extension / Video is encoded with incorrect codec	Please refer to "Specifications" page to see which file types and codecs are supported. Verify that the file was encoded properly.

Specifications

Brightness	25 Lumens
Native Resolution	960x540 (qHD)
Maximum Resolution	1920x1080(1080P)
Contrast Ratio	1000:1
Projectoin Lens:	Manual Focus
Image Size:	10~50 inches
Lamp:	Triple RGB LEDs with Vibrant Color Technology Life 15,000hrs
Video in:	Composite A/V HDMI(mini-HDMI)
Audio Output:	1.0 W speaker 3.5 mm audio jack
SD Card	MicroSD Card Slot (32GB maximum)
USB:	USB Host (Memory Sticks)
Dimensions	115mm x 62mm x 20mm
Weight	0.6 lbs

Please direct all customer service inquiries to:

AAXA Technologies, Inc.
1541 Parkway Loop
Tustin, CA 92780
(714) 957-1999
info@aaxatech.com