

Contact our experts
support@ppllee.net

CR1008

Digital LED Alarm Clock
CREATE YOUR PERFECT SLEEP ENVIRONMENT


[Http://www.ppllee.net](http://www.ppllee.net)



Made in PRC

Version 2.1

 Chapter 1 LOCATION OF CONTROLS

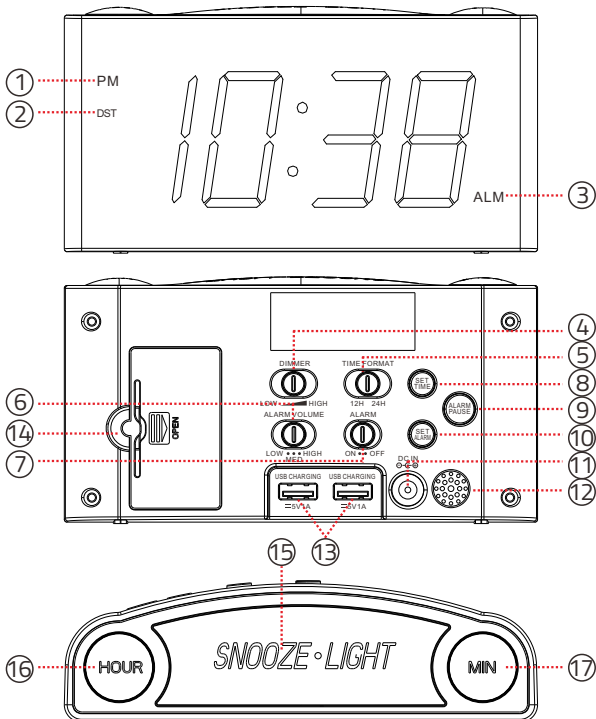


- 1. PM Indicator
- 2. DST Indicator
- 3. Alarm Indicator
- 4. Dimmer Slider
- 5. Time Format Slider
- 6. Alarm Volume Slider
- 7. Alarm ON/OFF Slider
- 8. Set Time Button
- 9. Alarm Pause Button
- 10. Set Alarm Button
- 11. DC IN
- 12. Speaker
- 13. USB Charging Port
- 14. Battery Compartment Cover
- 15. Snooze/Light Button
- 16. Hour Button
- 17. Minute Button

Chapter 2 POWERING ON

1. Install 2pcs 1.5V "AAA" size batteries to the proper terminals in the battery compartment to memorize the time setting and the alarm will ring in case of power outage.

NOTE: Batteries are not included and don't support time display or any other functions

 2. Connect the adapter line to DC jack, then plug into a 100~240V AC wall power outlet.

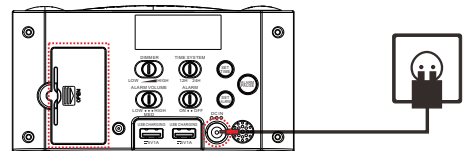









Chapter 3 TIME SETTING

- Press **SET TIME** button once, display **12:00** starts flashing.
- Press **HOUR** button to set the hour, press **MIN** button to set the minute.
- Press **SET TIME** button to save time or wait for another 5 seconds to confirm automatically.

To change 12H/24H time format






Slide switch button  to change 12H/24H time format.

Chapter 4 ALARM SETTING

1. Make sure the slide switch button  towards the left "ON".
2. Press  button, the alarm indicator  will light up, the display  starts flickering.
3. Press  button to set the hour, press  button to set the minute.
4. Press  button to save time or just wait for another 5 seconds to confirm automatically.
5. Slide switch button  to adjust alarm volume.

Turn off Alarm

When alarm goes off:

1. Press  button to temporarily turn off alarm for 9 minutes. Alarm will ring every next 9 minutes.
2. Press  button to turn off alarm for 24 hours. The alarm indicator  is still on, which means alarm is still activated and will ring after 24 hours.
3. To cancel alarm, slide switch button  to OFF, alarm indicator  will disappear from the display.

- 03 -

Chapter 5 DIMMER


Slide switch button  to adjust the brightness of display to your preference.

Chapter 6 NIGHT LIGHT


1. Turn on NIGHT LIGHT

Press  button then the night light will turn on.

 
2. Turn off NIGHT LIGHT

Long press  button for 2 seconds or press it repeatedly until the night light turns off.

3. Switch NIGHT LIGHT Color




When the night light turns on, you can press  button to switch to the color as you desired.

The night light colors are as below:



- 04 -

Chapter 7 DST SWITCH

 
1. Hold press  to light up the  indicator. An hour will be added to the current time on the display.
3. To turn off DST, hold press  until the  Indicator turns off.

Chapter 8 USB CHARGING

Plug charging cable into device such as phone or tablet.

Device can charge both your phone or tablet at the same time.

The maximum charge current is 1 Ampere.

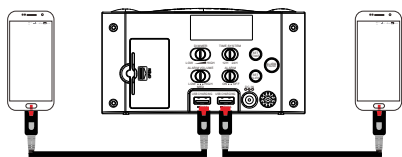

- 05 -

Chapter 9 WARRANTY

1. Yisong E-commerce Co.,Ltd warrants the Mesqool branded alarm clock and accessories contained in the original packaging against defects in materials and workmanship when used normally in accordance with PPLEE's published guidelines for a period of 1 year and replacement service within 3 months from the date of original retail purchase by the end-user purchaser("Warranty Period"). Moreover, 1-month refund policy is available for the original consumer or recipient.
- 2.The original consumer or recipient can sign up on our website for a 18 months extended warranty.
3. If you need any help for this product, please feel free to contact us by [Email: support@pplee.net](mailto:support@pplee.net)

Remarks:

- a. This warranty does not include: damage to product or components resulting from abuse, accident, or climatic/environmental conditions; damage resulting from normal wear or tear, misuse, or unauthorized repair; changes in surface finishes due to aging or exposure to light. The company's obligation under this warranty shall be limited to repairing the product or component, or at its option, replacing it with a new product or components.
- b. Our company reserves the right to revise the warranty policies without notification. Please check our website to obtain the latest updates.

- 06 -