

Ozeri®

INSTAVAC™ FOOD STORAGE SET

Beyond airtight with instant vacuum seal technology.



3.0 Cups	6.3 Cups	12.7 Cup	21 Cup
0.7 Liters	1.5 Liters	3.0 Liters	5.0 Liters

8-Piece Set (4 Food Containers with Lids)

Model #: FS1 User Guide

Ozeri InstaVac™ Food Storage Container Set 8-Piece Set (4 Food Containers with Lids)

Congratulations on your purchase of the Ozeri InstaVac™ Food Storage Container Set. The Ozeri food containers utilize a patented valve that reduces air volume so naturally occurring bacteria is less able to grow, and food stays fresh longer. The valve makes it easy to create and release a vacuum. When left in the open position, the valve helps prevent spills and splatters when the containers are used in a microwave. Each container features a date dial to track the number of days your food has been stored. Each container also has a wave patterned bottom to keep fruits and vegetables elevated from moisture and juices that can sometimes collect inside. Your Ozeri InstaVac™ Food Storage Containers are **BPA-free**, stain-resistant, shatter-proof, and safe to use in the freezer, microwave and dishwasher. Please keep this manual handy for future reference.

Date dial lets you set the date on which food is first stored.

Patented valve reduces air volume so naturally occurring bacteria is less able to grow.




Release valve prevents spills and splatters in microwaves.

Stain-resistant, shatter-proof and BPA-Free

Elongated snap 'n seal handles make opening and closing easy.

Food grade silicon seal maintains an air and liquid tight vacuum seal.

Wave patterned bottom keeps fruit and vegetables elevated from moisture and juices.

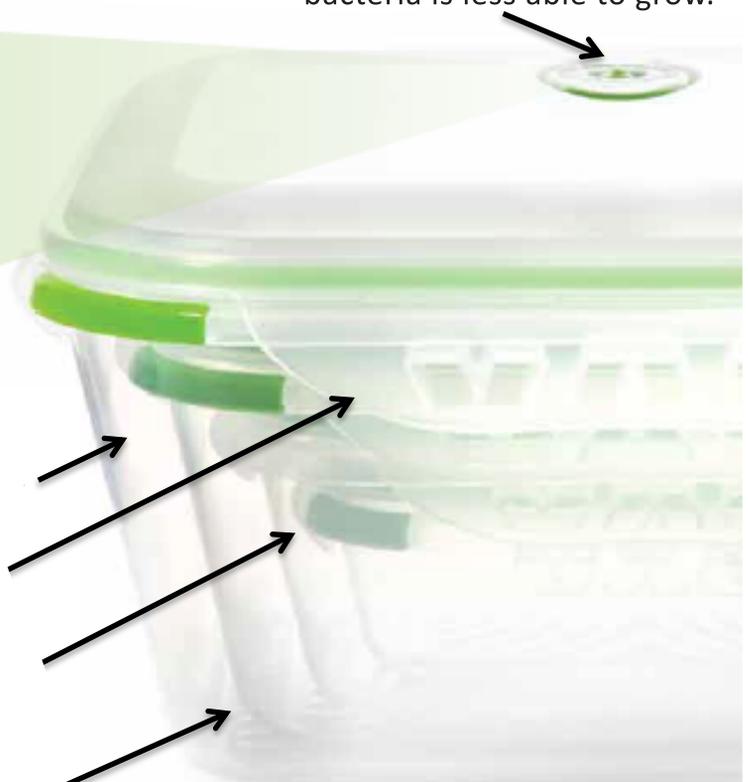

Ozeri InstaVac™ Food Storage Container Set

Creating and Releasing an Instant Vacuum:

- 1) Place items into the Ozeri food container and lock the handles of the lid into place.
- 2) (2a) Using either your thumbs side-by-side or the forefingers of both hands, simply press down on the center of lid. This forces air out through the **one-way valve**, but not in. Repeated pushes will increase the vacuum. When pressing down, a whistle sound will confirm that air is being drawn out to create a vacuum. (2b) Once the vacuum is created, push down on the valve. It will remain depressed until the lid is opened and vacuum is released.
- 3) Set the date dial on the valve to the day of the month to track the date on which the food was first stored.
- 4) To release the vacuum, pull the **one-way valve** lever up and listen to the whistling sound as air rushes back in. The vacuum indicator pops up indicating the vacuum has been released.
- 5) Release the handles and remove the lid.



Step 1



Step 2a



Step 2b



Step 3



Step 4



Step 5

Ozeri InstaVac™ Food Storage Container Set

Notes:

- 1) When using in the microwave, be sure that the valve lever is up (in the open position) to allow excess pressure to escape
- 2) Allow fine powder to settle before creating a vacuum. This will prevent powder from entering the valve itself.
- 3) Changes in air temperature, air pressure, and longer periods of storage can cause the vacuum to weaken at times. To correct this, periodically push down on the center of the top lid to recreate the vacuum.
- 4) **WARNING:** This product contains small parts which may present a choking hazard to children. Keep this product away from children.

Ozeri Warranty:

Your product is warranted to the original owner for 1 year from the date of purchase against defects in material and workmanship under normal use and service. Should your product prove defective within 1 year from the date of purchase, return the defective part or unit, freight prepaid along with an explanation of the claim to Ozeri. Please pack carefully to avoid damages in transit. Under this warranty, Ozeri will repair or replace any parts found to be defective due to a manufacturer's defect. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or use which is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. Ozeri is not responsible in any way for damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use not in accordance with the user guide or any additional safety, use, or warnings included in the product materials. Further, Ozeri is not liable for incidental or consequential damages of any nature resulting from the use of this product and any liability shall not exceed the purchase price of the product. This Warranty gives you specific legal rights. You may also have other rights which vary from state to state.

THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Damage due to accident, misuse, abuse, alterations or vandalism.
- Improper or inadequate maintenance.
- Unauthorized modification or commercial use.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Ozeri Customer Service:

Email: support@ozeri.com

Phone: 1-877-299-1296