 


AUTOMATIC HAIR CURLER

User Manual

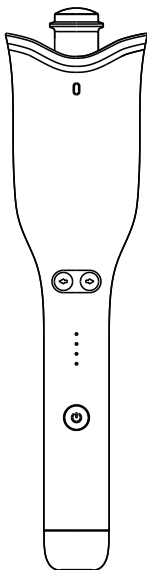

XPRE141

IMPORTANT SAFEGUARD

- The appliance is intended for indoor use only.
- For the persons who with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in the safe way and understand the hazards involved, then this appliance are available for them.
- Children shall not to play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- When the appliance is operated, never leave it unattended.

CAUTION

- 1 . Please use the device under its rated voltage to ensure that the plug is fully inserted,otherwise it may cause personal injury such as electric shock.
- 2 . Please do not use it if the equipment or the power cord is damaged.
- 3 . Do not use the device when your hands are wet.
- 4 . Persons insensitive to heat must be careful when using the appliance.
- 5 . Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



COMMON PROBLEMS AND SOLUTIONS

Problem	Reason	Solution
No response at boot	The socket is not in good contact\Not plugged in.	Plug it in again.
	Power switch not turned on.	Long press the power button for 1.5s to turn on.
Slight odor	The new product has not been used. Some odor may occur in the first time use.	This is the normal phenomenon, the smell will disappear after using a few times.
The curling iron does not rotate during use.	Check if the hair is knotted.	Pull out the hair, after combing it, press and hold the power button to turn on, and put the smoothed hair into the card slot before using.
	Product motor failure.	Contact the merchant.
Unable to curl hair/ effect	Temperature not reached.	Wait for the temperature to reach the set temperature.
	When curling, the curl left/right direction button is not pressed to the end.	When curling, press the rotation direction button to the end.
Shut down when in use.	Hair tangles before using.	Pull out the hair, after combing it, press and hold the power button to turn on, and put the smoothed hair into the card slot.
	Put too much hair in.	

PRODUCT OVERVIEW



Mode 1: About 160°C,
suitable for damaged hairstyle



Mode 2: About 180°C,
suitable for soft and thin hairstyle

Anti-Scald Tip

Hair Escape
Preventer

Negative Ion
Generator


Left Curling Button

Right Curling Button

Mode Indicators

Power/Mode Button

Front

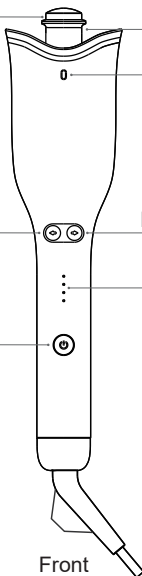


TEMPERATURE MODE SETTINGS



Mode 3: About 200°C,
suitable for normal hairstyle



Mode 4: About 220°C,
suitable for thick and coarse hairstyle

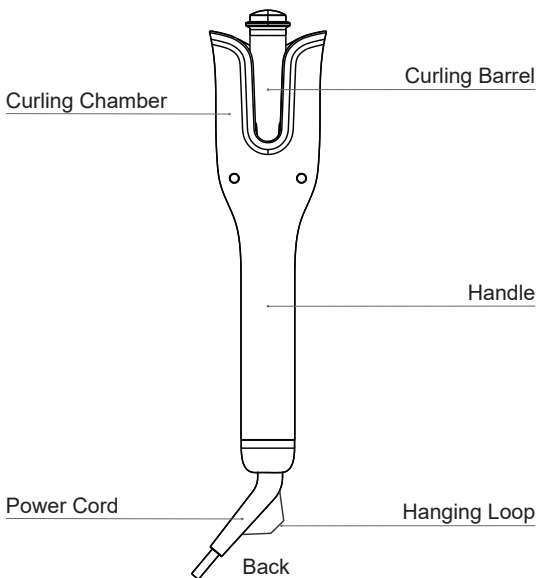



"For instructions in other languages, please scan the QR code"
"Für Anweisungen in anderen Sprachen scannen Sie bitte den QR-Code"
"Per istruzioni in altre lingue, scansiona il codice QR"
"Pour des instructions dans d'autres langues, veuillez scanner le code QR"
"Para obtener instrucciones en otros idiomas, escanee el código QR"



Check the France garbage classification policy
Überprüfen Sie die französische Müllklassifizierungsrichtlinie
Consulter la politique de classement des ordures en France
Controlla la politica di classificazione dei rifiuti in Francia
Consulte la política de clasificación de basura de Francia

UK REP British Representative
CET PRODUCT SERVICE LTD.
Chase Business Centre, 39-41 Chase Side,
London N14 5BP United Kingdom
+447419325266

EC REP EUBRIDGE ADVISORY GMBH
Virginia Str. 2 35510 Butzbach, Germany
eubridge@outlook.com
+4968196989045



MADE IN CHINA

CAUTION

1. Stop use the device if it is deformed or damaged to avoid the risk of electric shock or fire.
2. Do not use the device near flammable or explosive materials (alcohol, benzine, nail polish remover, spray, etc.), as this may result in fire or explosion.
3. Do not drop or hit the device. If the device is damaged due to a fall or collision, stop use it.
4. Do not use any flammable substances on your hair, such as styling spray, mousses, etc, before using the device . These materials may ignite when in contact with hot curling barrel.
5. When using the device, only hold the handle as other parts may be hot and avoid contact with the skin.
6. Do not cover the device with anything (e.g. a towel or clothing) when it is hot.
7. Do not insert metal objects into any openings to avoid electric shock.
8. Avoid the power cord from coming into contact with the hot parts of the device.
9. Do not pull on the power cord after using. Always unplug the device by holding the plug.
10. Do not place the device on a soft mat or blanket before it cooled down.
11. Wait until the device has cooled down before you store it.
12. Do not wind the power cord round the device.
13. Do not store the device in a humid environment.
14. The device can be used on natural and dry human hair only. Do not use it on wet hair, artificial hair or pet hair.
15. Wrong temperature choice or improper use of the device will make your hair dry or even burning in severe cases. Please choose a suitable temperature according to your hair type and follow correct instructions.

CAUTION

16. In the following cases, please unplug the power cord first, otherwise it may cause accidents or even personal injury:

- a. When the device is not in use;
- b. When the device is working abnormally;
- c. When the device is cleaning;

17. If the equipment cannot work normally, please check the plug firstly, then check whether it's turned on.

18. Disassembled only by professional.

19. Do not use the equipment for purposes other than its intended purpose.

PRODUCT PARAMETERS

Model: XPRE141

Rotation Setting: Right/Left

Cord Length: 2m

Suitable for Hairstyle: All Hairstyle

3 Auto Times: 10s/12s/15s

Heating Time: 160℃ -32s, 180℃ -43s, 200℃ -60s, 220℃ -75s

Main Plastic Material: PA66, PC, ABC



Product Size: 281.5*71.4*65.6mm

Product Weight: 430g

APPLICATION METHODS


1. Wash and dry your hair, and then comb it thoroughly.

Note: Please make sure that your hair is dry when using the device. Otherwise, you will not get desired shape or effect.

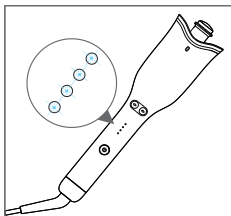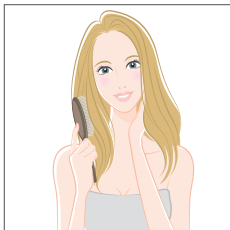

2. Insert the plug into the power socket. The 4 mode indicators flash at the same time, which indicates that the device has entered standby mode.



3. Press and hold the Power/Mode Button for 1.5 seconds to turn the device on. The default temperature mode is Mode 3.

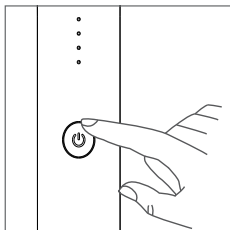

4. Press the Power/Mode Button to select a suitable temperature mode. The mode switches in a sequence of Mode 3-4-1-2. The corresponding mode indicator flashes during the heating up process and keeps on when the device reaches the set temperature.

Note: There may be a slightly burnt smell when the device is working. This is the normal smell when plastic meets high temperatures. And the

smell will disappear gradually as time goes on. Please feel free to use it.

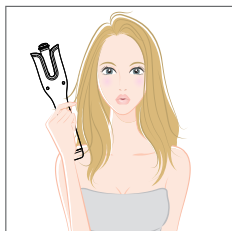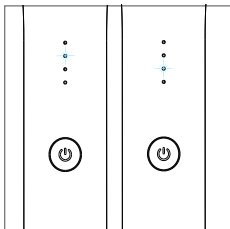


5. When the mode indicator keeps on, hold the handle of the device vertically with the front side facing the head.

Note: The device is not suitable for hair measures less than 25cm in length.

6. Section hair evenly. Take a small section of hair and insert it into the opening of the curling chamber at a 90° angle. If large sections are used, hair may be tangled.

Note: Keep a safe distance between the device and the skin, eyes.

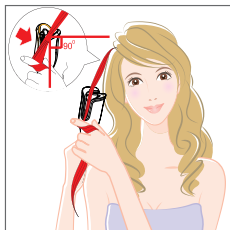

7. Press and hold the Left or Right Curling Button to curl the hair. The hair strand will be automatically curled into the chamber. The rotation will stop in 8 seconds, don't release the button until then.




Note: You will hear sizzling sound when using the device. This is because the negative ion generator are producing negative ions. Please feel assured to use.



8. After the curling iron stops rotating, you can stop pressing the curling button, but do not move the curling iron. The automatic timer will remind you of the time: 10-second beep, 12-second beep 2, and 15-second beep 3. The heating time can be selected according to the personal curling effect. The longer the time, the tighter the curl.

Note: The automatic hair curler uses an intelligent sensor chip, which can automatically stop and reverse rotation, and release your hair with one button. And it will automatically shut down and stop heating to protect your hair; after the hair is smooth, you can press and hold the power button to restart the curling iron.

9. After use, press and hold the Power Button for 2 seconds to standby the device off. Then unplug the plug and store the device after it cooled down.

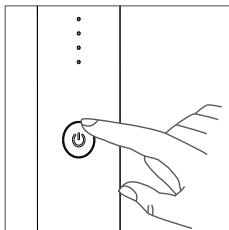

SPECIFICATIONS

Product Name	: Automatic Hair Curler
Rated Voltage	: AC100-240
Rated Frequency	: 50/60Hz
Rated Power	: 28W
Heating Method	: PTC
Heating Temperature	: 160° C -220° C (approx.)
Heating Time	: 15 Seconds
Barrel Diameter	: 30mm

PACKAGE CONTENTS

- 2* Hair clips
- 1* User Manual
- 1* Automatic Hair Curler