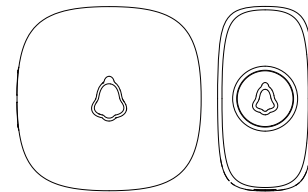 
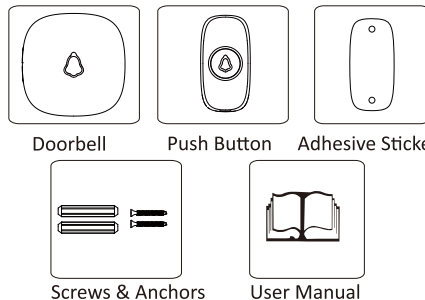 
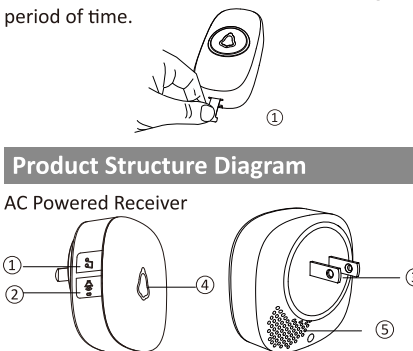 
 
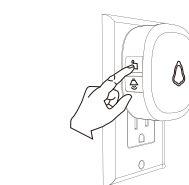 
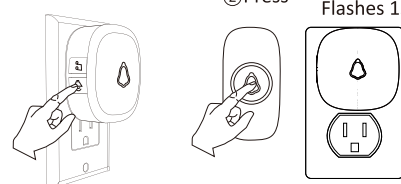 
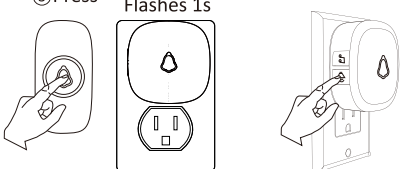 
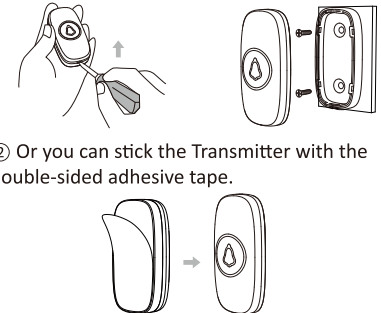 
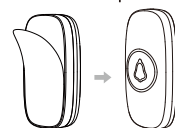 
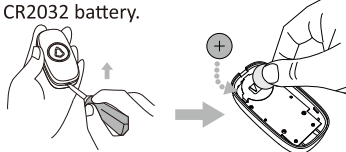 


secrui Wireless Doorbell User Manual  Model:M520+F55	Content  DoorbellPush ButtonAdhesive StickerScrews & AnchorsUser Manual Content will vary according to your kit The push button supplied with this kit is pre-programmed to operate with the doorbell. If it is not, see “Connect a Push Button” on page 5 Safety	⚠ Before proceeding with the installation, please note the following safety warnings: • Always follow the manufacturer’s advice when using power tools and wear suitable protective equipment (e.g. safety goggles) when drilling holes, etc. • Before drilling holes in walls, check for hidden electricity cables and water pipes. The use of a cable/pipe locator is advisable if in doubt. What You Should Know Before Installation 1.Test the operating range you desire. Choose an electric outlet at the height of 3.3 feet at least and plug in the receiver and take the button outside the door to test if it can work well within the range you have chosen. 2.Set a desired music (different or same one) for transmitters before installation. For music setting, see Operating Instructions.Doorbells have been paired and set to a default chime (Ding Dong) before leaving factory.	3.Please do not install transmitter on metal doors since it is hard for the signal to transmit. 4.Please take out the battery insulating strip before using. ((As picture ①) 5.Ensure all surfaces are clean by wiping the installation area with a clean cloth. Please note that the sticker will have poor adhesion if you attach it to a dirty or uneven surface. Sunlight or rain will also affect the adhesion over a longer period of time.  Product Structure Diagram AC Powered Receiver	① Music Control② Volume Control③ Plug④ LED light⑤ Speaker Waterproof Transmitter  Set Up and Operation Press the push button to test whether it is paired with the doorbell. The doorbell will light up and ring. If it does not, see “Connect a Push Button” on page 5. 1.Adjust the Volume Press the 【🔊】 1s. (when the power is cut off, and power is restored again, the volume will be automatically adjusted to maximum) 2.Change the Tune	Press the 【🎵】 1s: Loop tones in sequence and play the current tones. Long press 5s 【🎵】 :Change tones loop direction. Press and hold the 【🎵】 to power on:The doorbell receiver will turn on after beeps ten times, indicating that the doorbell receiver will restore the track to the first song, and all the buttons are not deleted.  3.Connect a Push Button You can connect up to 20 accessories to your doorbell, including other push buttons, window or door opening sensors, and motion sensors.	(1)VARIABLE - Tone Pairing ① Plug-in the receiver, pressing and holding the 【🔊】 on the receiver for 5s, the receiver will beeps once, which means receiver get into pairing mode. ② Press push button, the receiver will beeps twice with LED indicator flashes 1s. ③ Press push button again, the receiver will beeps once with LED indicator flashes 1s, which means the pairing is successful. ④ Short press 【🔊】 or leave it 20s without any operation, the doorbell will exit the pairing mode. ① Long press 5s②Press Beeps twice, Flashes 1s 	③Press Beeps once, Flashes 1s④ Short press  Adding the additional push buttons or receivers please according to the above steps. (2)FIXED - Tone Pairing (only play your saved tone) ① Select a tone that you like ② Pressing and holding the 【🔊】 & 【🎵】 button for about 5s until the receiver beeps once, which means receiver get into pairing mode. ③ Press push button once, the receiver will beeps twice with LED indicator flashes 1s.	④ Press push button once again, the receiver will beeps once with LED indicator flashes 1s, which means the pairing is successful. ⑤ Short press 【🔊】 or leave it 20s without any operation, the doorbell will exit the pairing mode. ① Select music ② 【🔊】 & 【🎵】 Press 5-7s  ③ Beeps twice, Press Flashes 1s④ Beeps once, Press Flashes 1s⑤ Short press, done.	Adding the additional buttons/receivers please according to the above steps. Note : Pair and set only one transmitter at a time to avoid interference and ensure successful operation. 4.Reset (Clearing out Settings) To return all settings to their default settings Hold down 【🔊】 and plug it into an outlet. After playing the beep 10 times, all settings will return to factory defaults. Hold down 【🔊】 and Plug in 																																																																																																																																																										
Installation Choose a location that is not near a heat source or on something that moves (like a door). For non-mounting locations, choose a place where the doorbell will be easy to see and hear. 1.For Receiver: Plug-in receiver: Just plug receiver into standard outlet in room. 2.For Push button: IMPORTANT: Before installation, please test if the operating range you choose is working and set music if needed. Before you drill any hole in the wall, please make sure there are not cables or pipes. To install you will require a drill and cross-head-ed screwdriver.	① Open the Transmitter with screw driver and separate the front cover from the back cover. Penetrate the two standby holes at the back cover with two screws. Then fix the screws on the wall at suitable height.  ② Or you can stick the Transmitter with the double-sided adhesive tape.  If you are not mounting the push button to the wall, place it where you want it.	Chimes List <table><tr><th>Number</th><th>Song Name</th></tr><tr><td>1</td><td>Dingdong-1</td></tr><tr><td>2</td><td>Dingdong-2</td></tr><tr><td>3</td><td>Dingdong-3</td></tr><tr><td>4</td><td>Scale 135i</td></tr><tr><td>5</td><td>Scale i531</td></tr><tr><td>6</td><td>Dingdong-4</td></tr><tr><td>7</td><td>Dingdong-5</td></tr><tr><td>8</td><td>Dingdong-6</td></tr><tr><td>9</td><td>Dingdong-7</td></tr><tr><td>10</td><td>Dingdong-8</td></tr><tr><td>11</td><td>Bell-1</td></tr><tr><td>12</td><td>Bell-2</td></tr><tr><td>13</td><td>Bell-3</td></tr><tr><td>14</td><td>Bell-4</td></tr><tr><td>15</td><td>Dingdong-9</td></tr><tr><td>16</td><td>Dingdong-10</td></tr><tr><td>17</td><td>take me out to the ball game</td></tr><tr><td>18</td><td>A Comme amour</td></tr></table>	Number	Song Name	1	Dingdong-1	2	Dingdong-2	3	Dingdong-3	4	Scale 135i	5	Scale i531	6	Dingdong-4	7	Dingdong-5	8	Dingdong-6	9	Dingdong-7	10	Dingdong-8	11	Bell-1	12	Bell-2	13	Bell-3	14	Bell-4	15	Dingdong-9	16	Dingdong-10	17	take me out to the ball game	18	A Comme amour	<table><tr><th>Number</th><th>Song Name</th></tr><tr><td>19</td><td>Susanna</td></tr><tr><td>20</td><td>Symphony No.40 in minor</td></tr><tr><td>21</td><td>Serenade for strings in G major</td></tr><tr><td>22</td><td>Love story</td></tr><tr><td>23</td><td>doraemon</td></tr><tr><td>24</td><td>Ten little Indians</td></tr><tr><td>25</td><td>Nutcracker two</td></tr><tr><td>26</td><td>Fast Ding Dong Ding Dong</td></tr><tr><td>27</td><td>Violin Concerto - spring</td></tr><tr><td>28</td><td>Four little swans</td></tr><tr><td>29</td><td>Serenade</td></tr><tr><td>30</td><td>Minuet</td></tr><tr><td>31</td><td>To Alice</td></tr><tr><td>32</td><td>Auld Lang Syne</td></tr><tr><td>33</td><td>Carman Overture</td></tr><tr><td>34</td><td>Bach Minuet</td></tr><tr><td>35</td><td>Turkey March</td></tr><tr><td>36</td><td>Music 01</td></tr><tr><td>37</td><td>Nokia classic ringtones</td></tr><tr><td>38</td><td>Radetzky march</td></tr></table>	Number	Song Name	19	Susanna	20	Symphony No.40 in minor	21	Serenade for strings in G major	22	Love story	23	doraemon	24	Ten little Indians	25	Nutcracker two	26	Fast Ding Dong Ding Dong	27	Violin Concerto - spring	28	Four little swans	29	Serenade	30	Minuet	31	To Alice	32	Auld Lang Syne	33	Carman Overture	34	Bach Minuet	35	Turkey March	36	Music 01	37	Nokia classic ringtones	38	Radetzky march	<table><tr><th>Number</th><th>Song Name</th></tr><tr><td>39</td><td>Scale 1351 1531</td></tr><tr><td>40</td><td>Ringng tone</td></tr><tr><td>41</td><td>Romeo and Juliet</td></tr><tr><td>42</td><td>Kung Fu episode</td></tr><tr><td>43</td><td>Violin Concerto No.1</td></tr><tr><td>44</td><td>Drinking song - Camellia girl</td></tr><tr><td>45</td><td>kiss the rain</td></tr><tr><td>46</td><td>Irish thrush</td></tr><tr><td>47</td><td>Lake Baikal</td></tr><tr><td>48</td><td>Cannon</td></tr><tr><td>49</td><td>Romance in the rain</td></tr><tr><td>50</td><td>Titanic</td></tr><tr><td>51</td><td>Scale 5351</td></tr><tr><td>52</td><td>Romance of love</td></tr><tr><td>53</td><td>Tetris</td></tr><tr><td>54</td><td>Yesenia</td></tr><tr><td>55</td><td>mermaid</td></tr><tr><td>56</td><td>Merry Christmas</td></tr><tr><td>57</td><td>Scarborough fair</td></tr><tr><td>58</td><td>Music box of love</td></tr></table>	Number	Song Name	39	Scale 1351 1531	40	Ringng tone	41	Romeo and Juliet	42	Kung Fu episode	43	Violin Concerto No.1	44	Drinking song - Camellia girl	45	kiss the rain	46	Irish thrush	47	Lake Baikal	48	Cannon	49	Romance in the rain	50	Titanic	51	Scale 5351	52	Romance of love	53	Tetris	54	Yesenia	55	mermaid	56	Merry Christmas	57	Scarborough fair	58	Music box of love	Battery Replacement of Push Button Open the battery cover and install the CR2032 battery.  Specifications <table><tr><th></th><th>Doorbell</th><th>Push Button</th></tr><tr><td>Operating Temperature</td><td>-4°F to 140°F</td><td>-4°F to 140°F</td></tr><tr><td>Radio Frequency</td><td>433 MHz</td><td>433 MHz</td></tr><tr><td>Range (open field)</td><td>1,000 ft</td><td>1,000 ft</td></tr><tr><td>Sound Level (typical)</td><td>0-120 dB</td><td>-</td></tr><tr><td>Battery Type</td><td>Plug in</td><td>CR2032</td></tr><tr><td>Battery Life (5 activations/day)</td><td>Up to 5 years</td><td>Up to 3 years</td></tr><tr><td>Rain Proof</td><td>N/A</td><td>IP55</td></tr></table>		Doorbell	Push Button	Operating Temperature	-4°F to 140°F	-4°F to 140°F	Radio Frequency	433 MHz	433 MHz	Range (open field)	1,000 ft	1,000 ft	Sound Level (typical)	0-120 dB	-	Battery Type	Plug in	CR2032	Battery Life (5 activations/day)	Up to 5 years	Up to 3 years	Rain Proof	N/A	IP55	Troubleshooting <table><tr><th>If</th><th>Then</th></tr><tr><td rowspan="5">The doorbell does not work</td><td>1.The doorbell might be out of range; try the doorbell in a different location.</td></tr><tr><td>2.Reconnect the doorbell. See “Connect a Push Button” on page 5.</td></tr><tr><td>3.Check all the batteries and replace if needed.</td></tr><tr><td>4.Check if the LED on the transmitters is working when activated.</td></tr><tr><td>5.Check if the doorbell is muted. Check that the transmitter is linked with the chime.</td></tr></table>	If	Then	The doorbell does not work	1.The doorbell might be out of range; try the doorbell in a different location.	2.Reconnect the doorbell. See “Connect a Push Button” on page 5.	3.Check all the batteries and replace if needed.	4.Check if the LED on the transmitters is working when activated.	5.Check if the doorbell is muted. Check that the transmitter is linked with the chime.	Range is reduced 1.Metal structures including uPVC door frames can reduce the range. Don’t mount the the doorbell or doorbell push on or near metal structures. 2.Move the doorbell closer to the doorbell push button. Weak batteries will reduce range. In cold conditions (below 5°C), batteries may need to be replaced more often.	1 Year Limited Warranty This product is warranted to the original purchaser only for a period of 1 year from the date of purchase for products damaged due to defect in workmanship and materials. Proof of purchase is required to obtain warranty service. Warranty is for replacement only. No service parts are available for these products. No other warranties are expressed or implied.Batteries are not covered under this warranty. For warranty service, please contact SECRUI Customer Service by email: contact@secrui.com IMPORTANT: PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE WHEN REPLACING BATTERIES FCC ID:2A2I3-F55 Made In China 	
Number	Song Name																																																																																																																																																																		
1	Dingdong-1																																																																																																																																																																		
2	Dingdong-2																																																																																																																																																																		
3	Dingdong-3																																																																																																																																																																		
4	Scale 135i																																																																																																																																																																		
5	Scale i531																																																																																																																																																																		
6	Dingdong-4																																																																																																																																																																		
7	Dingdong-5																																																																																																																																																																		
8	Dingdong-6																																																																																																																																																																		
9	Dingdong-7																																																																																																																																																																		
10	Dingdong-8																																																																																																																																																																		
11	Bell-1																																																																																																																																																																		
12	Bell-2																																																																																																																																																																		
13	Bell-3																																																																																																																																																																		
14	Bell-4																																																																																																																																																																		
15	Dingdong-9																																																																																																																																																																		
16	Dingdong-10																																																																																																																																																																		
17	take me out to the ball game																																																																																																																																																																		
18	A Comme amour																																																																																																																																																																		
Number	Song Name																																																																																																																																																																		
19	Susanna																																																																																																																																																																		
20	Symphony No.40 in minor																																																																																																																																																																		
21	Serenade for strings in G major																																																																																																																																																																		
22	Love story																																																																																																																																																																		
23	doraemon																																																																																																																																																																		
24	Ten little Indians																																																																																																																																																																		
25	Nutcracker two																																																																																																																																																																		
26	Fast Ding Dong Ding Dong																																																																																																																																																																		
27	Violin Concerto - spring																																																																																																																																																																		
28	Four little swans																																																																																																																																																																		
29	Serenade																																																																																																																																																																		
30	Minuet																																																																																																																																																																		
31	To Alice																																																																																																																																																																		
32	Auld Lang Syne																																																																																																																																																																		
33	Carman Overture																																																																																																																																																																		
34	Bach Minuet																																																																																																																																																																		
35	Turkey March																																																																																																																																																																		
36	Music 01																																																																																																																																																																		
37	Nokia classic ringtones																																																																																																																																																																		
38	Radetzky march																																																																																																																																																																		
Number	Song Name																																																																																																																																																																		
39	Scale 1351 1531																																																																																																																																																																		
40	Ringng tone																																																																																																																																																																		
41	Romeo and Juliet																																																																																																																																																																		
42	Kung Fu episode																																																																																																																																																																		
43	Violin Concerto No.1																																																																																																																																																																		
44	Drinking song - Camellia girl																																																																																																																																																																		
45	kiss the rain																																																																																																																																																																		
46	Irish thrush																																																																																																																																																																		
47	Lake Baikal																																																																																																																																																																		
48	Cannon																																																																																																																																																																		
49	Romance in the rain																																																																																																																																																																		
50	Titanic																																																																																																																																																																		
51	Scale 5351																																																																																																																																																																		
52	Romance of love																																																																																																																																																																		
53	Tetris																																																																																																																																																																		
54	Yesenia																																																																																																																																																																		
55	mermaid																																																																																																																																																																		
56	Merry Christmas																																																																																																																																																																		
57	Scarborough fair																																																																																																																																																																		
58	Music box of love																																																																																																																																																																		
	Doorbell	Push Button																																																																																																																																																																	
Operating Temperature	-4°F to 140°F	-4°F to 140°F																																																																																																																																																																	
Radio Frequency	433 MHz	433 MHz																																																																																																																																																																	
Range (open field)	1,000 ft	1,000 ft																																																																																																																																																																	
Sound Level (typical)	0-120 dB	-																																																																																																																																																																	
Battery Type	Plug in	CR2032																																																																																																																																																																	
Battery Life (5 activations/day)	Up to 5 years	Up to 3 years																																																																																																																																																																	
Rain Proof	N/A	IP55																																																																																																																																																																	
If	Then																																																																																																																																																																		
The doorbell does not work	1.The doorbell might be out of range; try the doorbell in a different location.																																																																																																																																																																		
	2.Reconnect the doorbell. See “Connect a Push Button” on page 5.																																																																																																																																																																		
	3.Check all the batteries and replace if needed.																																																																																																																																																																		
	4.Check if the LED on the transmitters is working when activated.																																																																																																																																																																		
	5.Check if the doorbell is muted. Check that the transmitter is linked with the chime.																																																																																																																																																																		