

nuwave[®]
— LIVE WELL FOR LESS —

**RECIPES
INCLUDED!**

NuWave Mosaic[®] Precision Induction Wok



Owner's Manual & Complete Recipe Book



NuWave Brio® 6Qt Digital Air Fryer

Super-heated air cooks your food to crispy, tender perfection. The digital touch screen gives you precise temperature control.

NuWave Nutri-Pot® 6Q Digital Pressure Cooker

Easily cook rice, poultry, vegetables and more all with the press of a button! The Nutri-Pot's safety release valve and hinged lid make for convenient and safe operation.

NuWave Primo™ Combo Grill

With the NuWave Primo™ Combo Grill, there's no need to worry about hot spots or dried-out leftovers. The intuitive controls of this countertop smart oven make it incredibly easy to cook like a professional chef. Everything from large family meals to frozen foods cook with ease, without preheating or defrosting.

NuWave PIC® (Precision Induction Cooktop)

Cook faster, safer, and more efficiently than you ever could on your gas or electric stovetop.

For more about our innovative products, visit:

www.nuwavenow.com

📞 1-877-689-2838



NuWave BruHub® Coffee Maker

Quality and convenience at your fingertips. The NuWave BruHub accommodates virtually all of your favorite single-serve pods, but with more flavor. Makes an 8- or 12-ounce cup and full carafe. The thermal stainless steel carafe keeps coffee hot for hours.

NuWave Moxie® High-Performance Vacuum Blender

With the simple press of a button, the NuWave Moxie can remove all the excess air from the blender. By vacuuming the air out of the blender, you can ensure no air is being mixed with your ingredients during the blending process, maximizing the nutritional value and ensuring your blender creations will remain fresher longer.

NuWave Duralon® Healthy Ceramic Non-Stick Cookware

Coated with Duralon Healthy Ceramic Non-Stick coating for easy cleanup, this versatile cookware is perfect for use in ovens or on gas, electric, and even induction cooktops.

NuWave Bravo™ XL

The NuWave Bravo™ XL Smart Oven is an air fryer, toaster, and convection oven all in one! The Bravo features an extra-large, 1-cubic-foot capacity. Includes 12 convenient, one-touch pre-programmed presets. Set precise temperatures from 100°F to 450°F.

For more about our innovative products, visit:

www.nuwavenow.com

1-877-689-2838

Welcome to NuWave® Precision Induction Cooking

Congratulations on purchasing your NuWave Precision Induction Wok™. This manual contains detailed instructions and images to help you get started. It is also filled with great recipes and time-saving tips to help you prepare delicious gourmet meals in a fraction of the time it would take when using a regular stovetop. Cooking is fast and easy with the Precision Induction Wok from NuWave, LLC. This versatile countertop appliance uses induction technology to save time, energy, and money. The NuWave Precision Induction Wok is efficient, safe, fast, and easy to clean. And because you can program times and temperatures from warm to sear, you can make almost any kind of food without the risk of under or overcooking.

What is Induction Cooking?

The NuWave Precision Induction Wok is comprised of a series of induction coils based on magnetic principles. These coils generate magnetic fields that produce an immediate warming reaction in steel and iron-based pots and pans. Heat is generated directly in the wok, limiting additional heat that radiates around the surface like traditional gas or electric ranges, making the Precision Induction Wok much more energy efficient.

Induction cooking is the most eco-friendly way to prepare meals because the method releases no toxins into the environment. Induction cooking emits no flame, so less residual heat is produced in your kitchen.


Additional Benefits:

- **Energy Conservation:** The magnetic field, generated by the copper coils, causes invisible molecules in the Wok to begin vibrating rapidly, creating heat, so the Wok itself heats the food.
- **Safety:** The NuWave Precision Induction Wok's design uses no red hot coils or open flames, essentially eliminating the risk of fire. Automatic shut-off feature enhances the Induction Wok Base's safety. Simply Touch and Go!
- **Fast Cooking:** Heating is immediate and temperature is precise with the NuWave Precision Induction Wok. Features 6 different temperature settings that are adjustable in 5-degree increments. There's no guessing!
- **Lightweight & Portable:** Because the NuWave Precision Induction Wok Base weighs only 6.9 pounds, you can take the NuWave Precision Induction Wok anywhere you go. Use it indoors or outdoors anywhere with a standard U.S. electrical outlet.
- **Easy to Clean:** Spills won't burn and stick to the Induction Wok Base surface. Just wipe and go!




TABLE OF CONTENTS

Welcome to NuWave Precision Induction Cooking	7	Stir-Fried Vegetables	38
What is Induction Cooking?	7	Sweet and Sour	
OWNER'S MANUAL		Chicken Tempura	39
Parts Descriptions	8	Sweet and Sour Shrimp	40
Important Safeguards	9-11	Vegetable Egg Rolls	41
Care & Maintenance - Induction Wok Base	12-13	Wonton Soup	43
Care & Maintenance - Wok	13	Spanish	44
Operating Instructions	14-15		
Control Panel	16-17		
Troubleshooting Guide	18-19		
Limited Warranty	20		
Recipes			
Beef Chop Suey	22		
Beef Chow Mein	23		
Crab Rangoon	24		
Egg Drop Soup	25		
Egg Foo Yung (Cantonese Style)	26		
Fried Rice with Shrimp, Ham, and Shiitake Mushrooms	27		
Fried Wontons	28		
General Tso's Chicken	29		
Kung Pao Chicken	30		
Orange Chicken	31		
Pot Stickers	32		
Sesame Chicken	33		
Shrimp Fried Rice	34		
Spring Rolls with Pork and Shrimp	35		
Stir-Fried Beef with Broccoli and Oyster Sauce	37		

PARTS DESCRIPTION

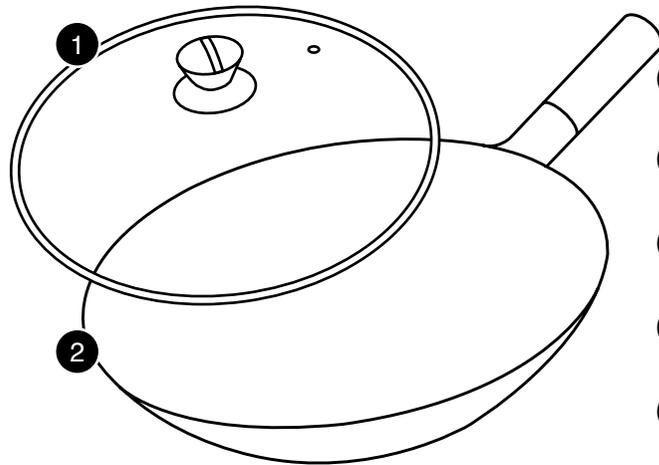

- 1 **Wok Lid**
Part #: 31752
- 2 **Wok**
Part #: 31751
- 3 **Induction Wok Base**
Part #: 30800
- 4 **Deep Frying Rack**
Part #: 31754
- 5 **Wok Stand**
Part #: 31753

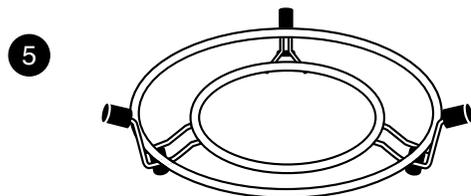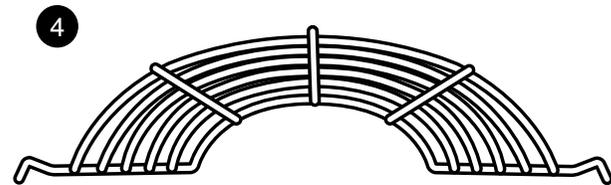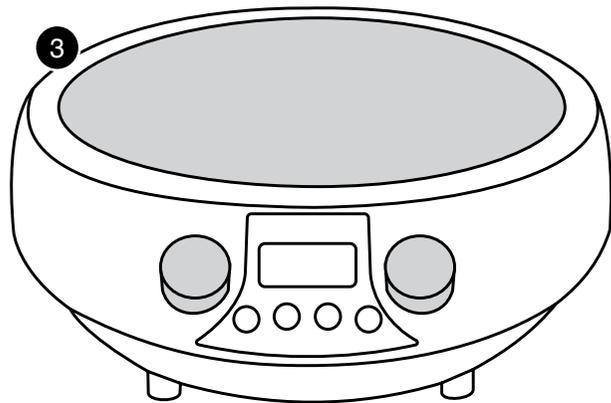

After cooking on the Induction Wok Base, the Wok Stand can be used as a serving tray.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS

Do not use outdoors When using electrical appliances, basic safety precautions should always be followed, including the following:

DANGER – To reduce the risk of electrocution:

1. Do not use outdoors.
2. Read all instructions, safeguards, and warnings before using the appliance.
3. Do not place appliance where it can fall or be pulled into water or other liquids.
4. Do not reach for an appliance that has fallen into water. Unplug immediately. Do not immerse cord, plug, or any portion of appliance in water or other liquids.

WARNING – For individuals with pacemakers:

1. This appliance emits an electromagnetic field that is strongest within 2 feet of the cooking surface.
2. Scientific tests have proven inconclusive as to whether the electrical field will disrupt the function of a pacemaker. Please consult your doctor or medical professional for guidance before use.

WARNING – To reduce the risk of burns, electrocution, fire, or injury:

1. This appliance is not meant for continuous use.
2. This appliance includes a heating function. Surfaces may develop high temperatures. Do not touch hot surfaces. Induction Wok Base may retain residual heat after Wok has been removed. The use of pot holders or alternative safety measures is highly recommended.
3. This appliance should not be used by children. Close supervision is necessary when this product is used near children.
4. Do not place on any gas or electric burner or in a heated oven.
5. Do not place metallic objects such as knives, forks, spoons, or lids on the Induction Wok Base as they may become hot.
6. This appliance is not intended for commercial use.
7. Use this appliance for its intended purpose as described in this manual. Do not use any other accessories or attachments not recommended by the manufacturer. They may result in fire, electrical shock, or personal injury. **It is recommended to only use supplied Wok with the Precision Induction Base.**
8. Never operate this appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped in water. Contact Customer Service at 1-877-689-2838 or help@nuwavenow.com.
9. Do not operate a broken Induction Wok Base. If Induction Wok Base should break, cleaning solutions and spillovers may penetrate the appliance and create a risk of electric shock.

IMPORTANT SAFEGUARDS (CONTINUED)

10. Keep cord away from heated surfaces. Do not let the cord hang over the edge of the table or counter. Never force the plug into an outlet. Always unplug power cord by pulling on the plug. Turn the unit off before removing the plug from the wall.
11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
12. This appliance should never be set up around unattended children or those unaware of its presence. The appliance should be situated on flat, stable surfaces, away from water sources such as pools, spas, sprinklers, hoses, etc.
13. Do not move the appliance while hot.
14. This appliance is for household use only; it is designed to process normal household quantities. It is not suitable for continuous or commercial operation.
15. Do not disassemble the product. There are no user serviceable parts.
16. Do not leave the appliance unattended while in use.
17. This appliance is not intended for operation by means of an external timer or separate remote-control system.
18. Clean Induction Wok Base with caution. Cleaning a hot surface with wet applications can cause steam and some cleaners can produce dangerous fumes. Unplug from outlet before cleaning.
19. Use caution when disposing of hot grease.
20. Keep this manual handy for future reference.

IMPORTANT SAFEGUARDS (CONTINUED)

Electrical Information

1. The short cord length of this appliance was selected to reduce safety hazards that may occur with a long cord.
2. An extension cord may be used with this appliance if:
 - a) The marked electrical rating of the extension cord is rated at least as great as the electrical rating of the appliance.
 - b) The longer is arranged so that it does not drape over the countertop or tabletop where it could be accidentally pulled off or tripped over.
3. Certain models of this appliance may have a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet:
 - a) Reverse the plug.
 - b) Contact a qualified electrician (if reversing plug does not work).
DO NOT ATTEMPT TO MODIFY PLUG IN ANY WAY.

 WARNING	
	<p>Electric shock hazard. Use with adequate electrical system. Do not use if cord or plug is damaged.</p> <p>WARNING: All items on the Induction Wok can get very hot during cooking. Please be careful when removing these items from the unit. Always wear oven mitts or use pot holders. Induction Wok may retain residual heat after Wok has been removed. Allow everything to cool completely before cleaning.</p> <p style="text-align: center;">1-877-689-2838 or help@nuwavenow.com</p>

SAVE THESE INSTRUCTIONS

IMPORTANT – FCC Information:

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The device complies with part 18 of the FCC Rules.

	<h3>Correct Disposal of This Product</h3> <p>This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use return and collection systems or contact the retailer where the product was purchased. They can handle environmentally-safe recycling.</p>
---	---

CARE & MAINTENANCE - INDUCTION WOK BASE

Before use, wipe surface with a damp dishcloth or sponge, and dry thoroughly.

IMPORTANT - Do not immerse unit in water or attempt to cycle through dishwasher. Make sure unit has cooled completely prior to cleaning. The outer surface may be cleaned by wiping carefully with a damp dishcloth or sponge.




AFTER USE:

- Clean after each use.
- Unplug the unit before cleaning.
- Make sure unit has cooled completely prior to cleaning.
- The outer surface may be cleaned by wiping carefully with a damp dishcloth or sponge.
- Remove the power plug prior to cleaning the NuWave Precision Induction Wok™. Do not use caustic cleaning agents. Water should not penetrate the interior of the Induction Wok Base.
- Never immerse the NuWave Precision Induction Wok, its cables, or plug in water or other liquids.
- Wipe the glass surface with a damp cloth or use a mild, non-abrasive soap solution. Make sure the unit has cooled completely before cleaning.
- Wipe casing and operating panel with a soft cloth dampened with water or a mild detergent.
- Do not use oil-based cleansing products as their use may damage plastic parts or the casing/operating panel.
- Do not use flammable, acidic, or alkaline materials or substances near the NuWave Precision Induction Wok, as this may reduce the service life of the Induction Wok Base or pose a fire risk when the Induction Wok Base is in use.
- In order to keep your NuWave Precision Induction Wok looking like new, take measures to ensure that the bottom of Wok does not scrape the unit's glass surface, although a scratched surface will not impair the use of the Induction Wok Base.
- Make sure to properly clean the unit before storing it in a cool, dry place.

Important Tips:

1. Check power outlets to ensure proper operation. Do not use in an outlet where other major appliances are engaged. Check settings if the unit is cooking too slowly.
2. The electrical plug must be properly plugged into the outlet.
3. Always turn off and unplug the unit before wiping.

CARE & MAINTENANCE - WOK

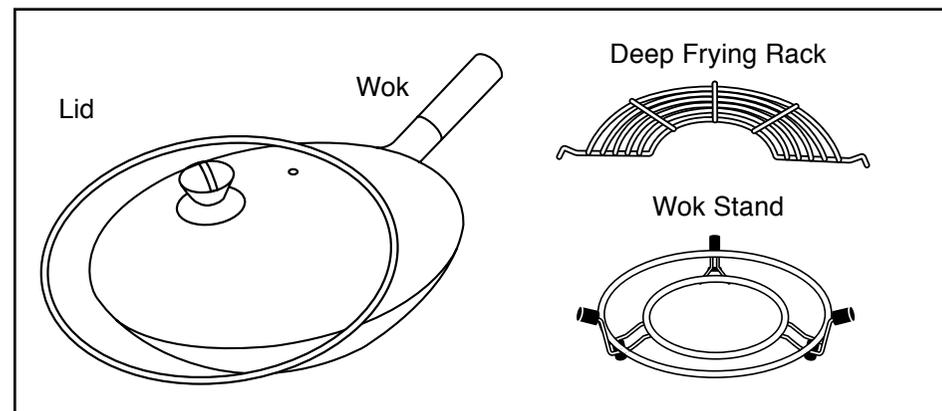

Note: Before seasoning the wok, it is recommended to clean the wok before first use. The Wok, Lid, Deep Frying Rack, and Wok Stand are dishwasher safe.

Seasoning/Care and Use

1. Make sure the Wok has been thoroughly dried.
2. Heat the Wok and rub 2 tablespoons of peanut oil in surface with a dry cloth or a thick wad of paper towels so new layer of oil coats the surface.
(Caution: Surface Will Be Hot!)
 - Leave a window open and use a fan to remove any smoke. The surface smoking is natural during this process.
3. Allow the pan to cool to room temperature. Repeat the steps two to three more times, rubbing a small amount of oil in the pan each time.

Cleaning the Wok:

1. After Wok has been used to cook, simply wipe Wok clean with a paper towel or a dry rag.
 - If the Wok is very dirty and requires a more thorough cleaning, wipe the Wok using clean oil or a bamboo brush (eucalyptus has antibacterial properties) to scratch off any encrustations. Simply run water into Wok and scrub away until residue is gone.
2. Dry the Wok thoroughly after cleaning.
3. When all residue has been removed from the Wok, repeat the seasoning process.

If a more thorough cleaning is needed:

1. Heat the Wok.
2. Add 2 tablespoons of peanut oil and add several tablespoons of kosher salt.

CARE & MAINTENANCE - WOK (CONTINUED)

3. Give Wok a hard scrub with a folded paper towel. (**Caution: Surface Will be Hot!**)
4. Cool the Wok.
5. Rinse under running water and dry thoroughly.
 - Afterward, a light rub of peanut oil can be applied to Wok once again.


Note: The “conventional” ideas of cleanliness and hygiene with cookware are somewhat counterproductive when dealing with a genuine wok—the residues that remain on the Wok’s surface after dry-wiping it after use will, over time, form a layer that will serve to enhance the taste of your stir-fried foods.

OPERATING INSTRUCTIONS

General Operating Instructions:

- Place the Induction Wok Base on a stable, level, non-metallic surface.
- Never use the Induction Wok Base on a flammable surface (e.g., tablecloth, carpet, etc.).
- Do not block the ventilation slots of the Induction Wok Base. This may cause the unit to overheat. Maintain a minimum distance of 3-5 inches from walls and other objects, appliances, etc.
- Do not place devices or objects that are sensitive to magnetic fields on top of or next to the NuWave Precision Induction Wok™ (e.g., credit cards, cellphones, radios, TVs, video recorders, etc.).
- Do not use the Precision Induction Wok in the proximity of open fires, heaters, or other heat sources.
- Do not place on stovetop.
- Ensure that the power cable is not damaged or compressed beneath the Induction Wok Base.
- The power cable must not come into contact with sharp edges and/or hot surfaces.
- Prior to connecting the Precision Induction Wok, confirm that the voltage needs indicated in this manual correspond to the voltage supply in your home. A wrong connection may lead to the unit’s damage and possible injury to persons.
- In the event that damage to the unit is observed, immediately disconnect the Precision Induction Wok from the power supply.

CONTROL PANEL

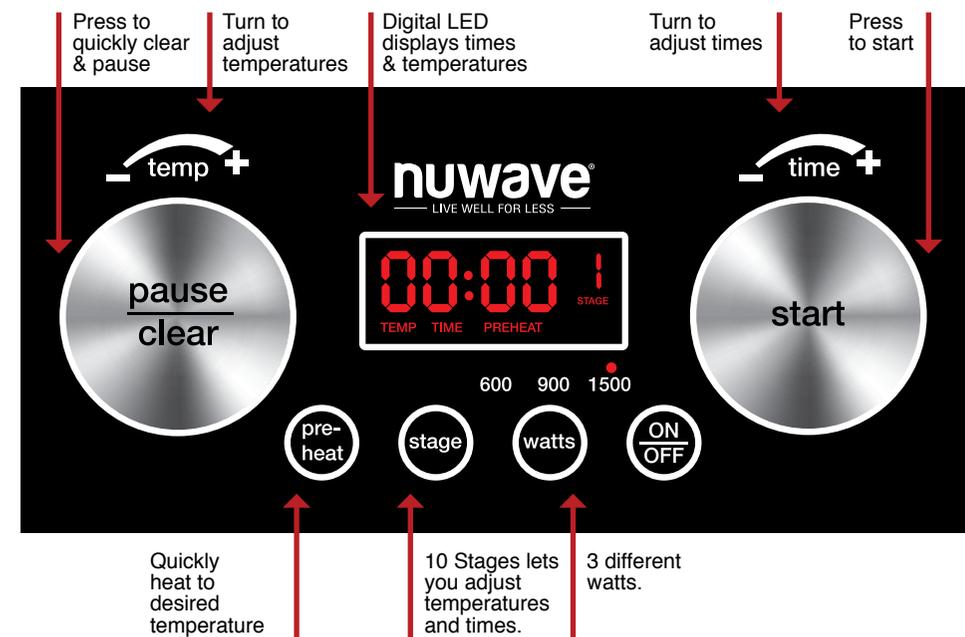

On/Off Function:

1. Press “ON/OFF” once to turn on. “0” will be displayed.
2. Press “ON/OFF” again to turn the unit off.

Watts Function:

1. The default wattage is set to 1500. Press “watts” repeatedly to switch to 600, 900, and back to 1500 watts.
 - When you turn unit off and on again, the previous watts selected will remain in the Wok until changed.

F/C Function:

1. Press “stage” and “watts” simultaneously until you see “F” or “C” flashing.
2. Press “stage” to switch from “F” to “C” and vice versa.
3. Press “on/off” to complete the selection.

Pause/Clear Function:

1. Press “pause/clear” once to pause the unit.
 - The temperature selected will be displayed and “F” will be flashing.
 - If have selected “TIME” and you press “pause”, “TIME” will not be flashing.
 - To resume cooking, press “start”.
2. Press “pause/clear” again to clear any program out.

CONTROL PANEL (CONTINUED)

Quick Start:

- After you turn the unit on, press “start” on the dial. “375F” and “TEMP” will be displayed and the countdown will begin.
 - The Wok is defaulted to 375F for 20 minutes.

Temperature Function:

Simply turn the dial to decrease or increase temperature.

- Located on the left dial.
- Temperature range 100-575F in 5-degree increments.

Time Function:

Simply turn the dial to decrease or increase time.

- Located on the right dial.
- Time range is from 1 minute to 9 hours and 59 minutes (Time is in Hours and Minutes).

Stage Function:

- Press “stage”. “STAGE” will be flashing and “1”, “TIME”, and “00:00” will be displayed.
- Set time and adjust temperature, if needed.
- Press “stage” again. “STAGE” will be flashing and “2”, and “TIME”, and “00:00” will be displayed.
- Set time and adjust temperature, if needed.
- Repeat steps, if necessary.
 - You can create up to 10 stages. Stage 10 will display as “0”.
- Press “start”.

Preheat Function:

- Press “preheat”. “PREHEAT” and “375F” will be displayed.
- Adjust time and adjust temperature, if needed.
 - Preheat program has a default of 375F for 20 minutes.
- Press “start”. Selected temperature and “F” will be flashing.
- Once the temperature you selected has been reached, “selected temperature” and “ready” will be displayed indicating the Wok will hold that temperature for 5 minutes or until you press “start”.
- Once you press “start”, the countdown you selected will begin with the programmed temperature.
 - If you press “pause” when the unit is preheating, “5” will be flashing, indicating the Wok will hold the program for 5 minutes or until you press “start”.

TROUBLESHOOTING GUIDE

Error Message	Solution
E1	An E1 reading typically means that your NuWave Precision Induction Wok™ does not detect Wok on its surface. This can occur for one of two reasons: <ol style="list-style-type: none"> The induction coils contained within the NuWave Precision Induction Wok will only work when they are in direct contact with a piece of Wok. To maintain your appliance's effectiveness, always ensure that it rests on a flat surface and that contact is consistent with your Wok. An E1 message may also occur if your Wok is not induction-ready. It is recommended to only use supplied Wok with the Precision Induction Base.
E2	The unit is malfunctioning. Contact customer service.
E3	The unit's voltage is too low. Minimum = 85 volts
E4	The unit's voltage is too high. Maximum = 144 volts
E5	The unit is malfunctioning. Contact Customer Service.
E6	The unit is malfunctioning. Contact Customer Service.
E7	Overheating or air ventilation is obstructed. If internal temperature exceeds 230°F, operation will cease and a “beep” noise will be produced. Press “pause/clear” twice. Wait for the unit to cool.
E8	Overheating or if unit exceeds a temperature 20°F higher than sear, the appliance will turn off. Contact Customer Service.
E9	The unit is malfunctioning. Contact Customer Service at 1-877-689-2838 or help@nuwavenow.com.
FULL	In programming mode, when the total entered time reaches the appliance's limit of 99:59, no additional stages can be inputted.

- When any of the above error messages displays on the LED, the unit will “beep” at least once.
- The fan will run up to a maximum of 60 seconds after pressing “pause/clear” once. Continue cooking by pressing “start” within 45 minutes.
- The unit will turn off after 45 minutes if no buttons (such as “start”) are pressed. When the unit shuts off, it will clear all previous cooking history.
- After pressing “pause/clear” twice or cooking has stopped, the fan will run up to a maximum of 60 seconds until the unit cools. At that point, the NuWave Precision Induction Wok will turn off.

TROUBLESHOOTING GUIDE (CONTINUED)

When the Wok is off of the NuWave Precision Induction Wok

Initial	Single beep	“F” or “C” or “Sear” or “.” Flashing	After returning the Wok to the surface of the NuWave Precision Induction Wok, it will automatically resume cooking.
<10 seconds	None	“F” or “C” or “Sear” or “.” Flashing	
11-70 seconds	Yes	E1	Resume cooking by pressing “start”.
After 70 seconds	None	0	Cooking stops.

LIMITED WARRANTY

The NuWave Mosaic® Precision Induction Wok

THE MANUFACTURER WARRANTIES

The NuWave Mosaic Precision Induction Wok, including the Wok Stand, the Deep Frying Rack, and the Lid are to be free from manufacturer defects. All electrical components are warranted for 1 year from the date of purchase, under normal household use, and when operated in accordance with the Manufacturer’s written instructions.

The Manufacturer will provide the necessary parts and labor to repair any part of the NuWave Mosaic Precision Induction Wok at NuWave, LLC Service Department. After the expiration of the warranty, the cost of the labor and parts will be the responsibility of the owner.

THE WARRANTY DOES NOT COVER

The Limited Warranty is voided if repairs are made by an unauthorized dealer and/or the serial number data plate is removed and/or defaced. Normal deterioration of finish due to use or exposure is not covered by this Warranty. This Limited Warranty does not cover failure, damages or inadequate performance due to accident, acts of God (such as lightning), fluctuations in electric power, alterations, abuse, misuse, misapplications, corrosive-type atmospheres, improper installation, failure to operate in accordance with the Manufacturer’s written instructions, abnormal use or commercial use. NuWave, LLC reserves the right to void the Limited Warranty, where allowable by law, for products purchased from an unauthorized dealer.

TO OBTAIN SERVICE

The owner shall have the obligation and responsibility to: Pay for all services and parts not covered by the warranty; Prepay the freight to and from Service Department for any part or system returned under this warranty; Carefully package the product using adequate padding material to prevent damage in transit. The original container is ideal for this purpose. Include in the package the owner’s name, address, day time telephone number, a detailed description of the problem, and your “**RGA number.**” **Call 1-877-689-2838 or email help@nuwavenow.com** to obtain the **RGA** number (Return Goods Authorization number). Provide the cooking system model & serial number and proof of date of purchase (a copy of the receipt) when making claims under this warranty.

LIMITED WARRANTY (CONTINUED)

MANUFACTURER'S OBLIGATION

The Manufacturer's obligation under this Limited Warranty is limited, to the extent allowable by law, to repairing or replacing any part covered by this Limited Warranty which upon examination is found to be defective under normal use. The Limited Warranty is applicable only within the continental United States and only to the original purchaser of the manufacturer's authorized channels of distribution. THE LIMITED WARRANTY MAY NOT BE ALTERED, VARIED OR EXTENDED EXCEPT BY A WRITTEN INSTRUMENT EXECUTED BY THE MANUFACTURER. THE REMEDY OF REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS EXCLUSIVE. IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES TO ANY PERSON, WHETHER OR NOT OCCASIONED BY NEGLIGENCE OF THE MANUFACTURER, INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOSS OF USE, COSTS OF SUBSTITUTION, PROPERTY DAMAGE, OR OTHER MONEY LOSS.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation exclusions may not apply. This Limited Warranty gives specific legal rights, and there may also be other rights which vary from state to state. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED ABOVE, THE MANUFACTURER MAKES NO WARRANTIES EXPRESSED OR IMPLIED ARISING BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE TO ANY OTHER PERSON. READ YOUR OWNER'S MANUAL. IF YOU STILL HAVE ANY QUESTIONS ABOUT OPERATION OR WARRANTY OF THE PRODUCT, PLEASE CONTACT NUWAVE, LLC.

READ YOUR OWNER'S MANUAL:

If you still have any questions about operation or warranty of the product, please contact **NuWave, LLC** at: **1-877-689-2838** or email help@nuwavenow.com.

Recipes



nuwave
LIVE WELL FOR LESS



Beef Chop Suey Serves: 4-6

Ingredients:

½ pound beef (round or chuck), cut into thin slices	2 carrots, chopped
2 teaspoons peanut oil	¼ pound mushrooms, sliced
2 teaspoons soy sauce	7 ounces bean sprouts
1 teaspoon sugar	3 slices ginger, crushed
1 teaspoon sea salt	½ cabbage, chopped
4 teaspoons cornstarch	1 teaspoon sugar
2 onions, chopped	4 cloves garlic, crushed
	2 cups cooked rice

Directions:

1. In a bowl, mix oil, soy sauce, sugar, sea salt, cornstarch, and fresh ground pepper.
2. Add beef to mixture and marinate in refrigerator.
3. Heat Wok to 425°F and add peanut oil. Add onions and carrots and sauté.
4. Add mushrooms, sprouts, ginger, and cabbage, and stir-fry. Add sugar and sea salt.
5. Remove vegetables from Wok; set aside.
6. Add more oil to Wok and add garlic and sauté.
7. Add marinated beef and sauté for 4 minutes until cornstarch is no longer visible and beef is cooked.
8. Serve chop suey over cooked rice.

Beef Chow Mein Serves: 4-6

Ingredients:

Beef (round), sliced
1 tablespoon peanut oil
1 package chow mein noodles
1 package frozen vegetables
2 cups beef stock
¼ teaspoon garlic, minced
2 tablespoons soy sauce

Directions:

1. Heat up Wok to 425°F and add peanut oil.
2. Place sliced beef into Wok and sauté for about 4 minutes.
3. Remove meat from Wok and put in a bowl with soy sauce and garlic. Combine.
4. Return beef to Wok. Add beef stock, chow mein noodles, and frozen vegetables.
5. Cook until vegetables are crisp and noodles are done.
6. Remove from heat. Serve immediately.



Crab Rangoon Serves: 8

Ingredients:

- 6 ounces lump crabmeat
- 6 ounces cream cheese, softened
- 3 green onions, thinly sliced
- 1 egg, beaten
- Peanut oil, enough for deep-frying in Wok
- 1 package wonton skins (wrappers)

Directions:

1. In a bowl, add crabmeat, cream cheese, and green onions. Mix well.
2. Fill each wonton skin (wrapper) with ½ teaspoon of filling for each wonton.
3. Seal edges of wrapper with beaten egg.
4. Fold over and squeeze out any air of wonton.
5. Heat Wok to 375°F and add peanut oil (pour in enough for deep-frying in Wok).
6. Place in wontons. Deep-fry until they are golden brown and crispy.
7. Remove and allow excess oil to drip off. Drain on paper towel.



Egg Drop Soup Serves: 4

Ingredients:

- 2 large eggs, lightly beaten
- 6 cups chicken broth
- 1 teaspoon sugar
- ½ teaspoon fresh grated ginger
- ¼ teaspoon ground white pepper
- ½ teaspoon sea salt
- 1 green onion, sliced thin
- 1 tablespoon cornstarch
- 3 tablespoons cold water
- 1 teaspoon rice wine

Directions:

1. Heat up the Wok, add chicken broth, and bring up to a boil.
2. Add rice wine and ginger, reduce to a simmer, and add sugar and ground white pepper.
3. Slowly add cornstarch mixture to the broth.
4. Pour lightly beaten eggs into stock and stir. Garnish with green onions.



Egg Foo Yung (Cantonese Style) Serves: 4

- Ingredients:**
- | | |
|--|--|
| 3 large eggs, lightly beaten | 2 ounces cooked pork, chicken, or shrimp |
| 6 Chinese mushrooms, sliced | 1 teaspoon rice wine |
| 2 ounces fresh spinach | 1 teaspoon sea salt |
| ½ teaspoon sugar | ½ teaspoon freshly ground black pepper |
| 1 cup bean sprouts | 3 tablespoons peanut oil |
| ½ cup chopped water chestnuts, drained | 2 tablespoons cilantro, freshly chopped |

Directions:

1. Pour beaten eggs into a bowl. Add sea salt and add fresh ground black pepper; set aside.
2. Heat Wok and add all the vegetables. Cook for 1 minute.
3. Add pork (or chicken or shrimp) and cook until golden brown and cooked through.
4. Add mushrooms, spinach, bean sprouts, and chestnuts.
5. Once cooked, pour eggs from bowl into Wok and cook, flipping occasionally, for 2 minutes.
6. Remove and cut into desired sizes.
7. Drizzle with rice wine and garnish with cilantro sprigs.



Fried Rice with Shrimp, Ham, and Shiitake Mushrooms

Serves: 4-6

Ingredients:

- | | |
|---|--|
| ½ ounce dried shiitake mushrooms | 5 cups sticky rice, cooked according to directions |
| ¼ cup oyster sauce | 1 cup baby peas |
| 1 tablespoon soy sauce | 8 ounces smoked deli ham, cut into ½-inch pieces |
| 3½ teaspoons peanut oil | 2 garlic cloves, minced |
| 2 large eggs, lightly beaten | 5 scallions, thinly sliced |
| 8 ounces small shrimp, peeled, deveined | |

Directions:

1. Rehydrate the shiitake mushrooms in steaming water for about 5 minutes.
2. Remove stems and slice caps into ¼-inch-thick pieces; set aside.
3. In a bowl, combine oyster sauce and soy sauce; set aside.
4. Heat Wok to 275°F. Add 1½ teaspoons of the peanut oil. Add eggs and cook for 20 seconds. Stir-fry an additional 30 seconds to break eggs into small pieces.
5. Transfer to a bowl; set aside.
6. Add 1½ teaspoons of the peanut oil to Wok and add shrimp, stirring constantly until they are opaque and cooked through, approximately 30 seconds.
7. Transfer to the bowl with egg pieces; set aside.
8. Heat remaining peanut oil in Wok, adding peas, ham, and mushrooms. Cook 1 minute, stirring constantly.
9. Add rice and oyster sauce mixture and cook, stirring constantly to break up rice clumps, about 3 minutes.
10. Add scallions, eggs, and shrimp. Cook until heated through, about 1 minute.



Fried Wontons Serves: 6

- Ingredients:**
- | | |
|-----------------------------|-----------------------------------|
| 1 pound ground pork | 1 tablespoon sesame oil |
| 2 carrots, finely chopped | 1 tablespoon fresh ginger, minced |
| 5 scallions, finely chopped | 2 cloves of garlic, minced |
| 1 tablespoon soy sauce | 40 to 50 wonton wrappers |
| | Peanut oil (for deep-frying) |

- Directions:**
1. In a bowl, mix pork, garlic, ginger, sesame oil, soy sauce, scallions, and carrots.
 2. Take one wonton wrapper and place about 1 tablespoon of pork filling on top.
 3. Wet the edges of the wonton wrapper with some water and fold the edges over to make a triangle. Press down on edges with fingers to seal.
 4. Repeat to make several.
 5. Heat Wok to 365°F and add enough peanut oil to deep-fry, about 1½ inches deep.
 6. Deep-fry 5 to 6 wontons at a time until golden brown.
 7. Drain cooked wontons on a rack or plate lined with paper towel.

Tip: Serve wontons with chili sauce or a sweet and sour sauce.



General Tso's Chicken Serves: 4

- Ingredients:**
- | | |
|---|---------------------------------|
| 2 pounds chicken meat, boneless, skinless, cut into 1-inch pieces | 1 tablespoon rice vinegar |
| 2 tablespoons peanut oil | 1½ tablespoons honey |
| 2 cloves of garlic, minced | 1 tablespoon sugar |
| 2 teaspoons fresh ginger, minced | 2 teaspoons chili sauce |
| 4 scallions, chopped | ¾ cup chicken broth |
| 1 teaspoon sesame seeds | 5 teaspoons cornstarch, divided |
| 3 tablespoons soy sauce | Sea salt |
| | Freshly ground black pepper |

- Directions:**
1. In a small bowl, whisk together soy sauce, rice vinegar, honey, sugar, chili sauce, chicken broth, and 2 teaspoons of the cornstarch; set aside.
 2. In a medium bowl, add the remaining 3 teaspoons of cornstarch.
 3. Add sea salt and fresh ground pepper to the medium bowl.
 4. Add the chicken and coat on all sides.
 5. Over high heat (425°F), add peanut oil, and swirl to coat the Wok.
 6. Add the chicken, cooking until there is a brown crust on all sides. Cook in batches, if necessary, to avoid chicken sticking to the bottom of the Wok.
 7. After the brown crust develops, take chicken out of Wok; set aside.
 8. Turn heat down to medium (275°F), and add garlic, ginger, and scallions and stir-fry for 20 seconds.
 9. Pour sauce into the Wok and bring to a simmer.
 10. Return the chicken to Wok and toss to combine with sauce. Stir-fry the chicken for another 1 to 2 minutes or until cooked.
 11. Garnish chicken with sesame seeds and serve with rice.



Kung Pao Chicken Serves: 4

Ingredients:

1 pound boneless, skinless chicken thighs, diced into small pieces	8 to 10 Chinese chilies, dry, whole
1 tablespoon balsamic vinegar	3 scallions, chopped
2 teaspoons hoisin sauce	2 cloves of garlic, minced
1 teaspoon sesame oil	½ cup unsalted roasted peanuts
½ teaspoon ground peppercorns or chili flakes	1 tablespoon soy sauce, and 1 teaspoon soy sauce, (divided)
2 tablespoons peanut oil	2 teaspoons rice wine
	3 teaspoons cornstarch (divided)

Directions:

1. In a medium bowl, mix 1 tablespoon of the soy sauce, rice wine, and 2 teaspoons of the cornstarch.
2. Add chicken thighs and stir to coat. Let chicken sit for 10 minutes.
3. In another bowl, mix balsamic vinegar, remaining 1 teaspoon of soy sauce, hoisin sauce, sesame oil, remaining 1 teaspoon of cornstarch, and ground peppercorns; set aside.
4. Heat the Wok to 425°F. A drop of water should sizzle on contact. Add the peanut oil and coat the Wok.
5. Add red chilies and stir-fry for 20 seconds.
6. Add chicken and stir-fry until light brown, about 3 minutes.
7. Add scallions and garlic and stir-fry for 1 minute.
8. Pour the sauce mixture in, toss and coat the chicken, and then remove from heat. Serve.

Orange Chicken Serves: 4

Ingredients:

2 pounds chicken breasts, cut into 1-inch cubes	½ teaspoon red chili flakes
2 large eggs, beaten	⅔ cup fresh squeezed orange juice
½ cup cornstarch, plus 1 tablespoon cornstarch, divided	2 tablespoons soy sauce
2 tablespoons water	1 tablespoon rice wine vinegar
¼ cup all-purpose flour	1 tablespoon sweet chili sauce
2 cloves of garlic minced	1 tablespoon brown sugar
½ teaspoon ginger, minced	2 green onions, chopped
	Steamed white rice
	Oil (enough for deep-frying in Wok), plus 1 tablespoon

Directions:

1. Place beaten eggs in a bowl. In a second bowl, mix dry ingredients: ½ cup of the cornstarch, flour, sea salt, and fresh ground black pepper.
2. Coat chicken pieces in egg then toss into cornstarch mixture. Shake off excess flour.
3. In the Wok, bring up to 375°F. Add enough oil to deep-fry chicken pieces.
4. Deep-fry chicken (in a couple of batches) until golden and crispy, about 4 to 5 minutes. Drain on paper towels; set aside.
5. In a small bowl, mix 1 tablespoon of the cornstarch with 2 tablespoons of water; set aside.
6. When cooled, clean out Wok. Reheat, bringing up to 375°F.
7. Add 1 tablespoon oil and add garlic, ginger, and chili flakes. Cook until fragrant, about 2 minutes.
8. Whisk in orange juice, soy sauce, rice wine vinegar, chili sauce, and brown sugar and mix. Bring up to a boil.
9. Once boiling, slowly whisk in cornstarch mixture to the sauce to thicken. Bring heat down on sauce to 175°F and simmer for about 5 minutes. Once sauce gets a syrupy consistency, turn heat off.
10. Return chicken to Wok and toss with sauce to coat.
11. Plate and garnish with green onions. Serve over steamed white rice.



Pot Stickers Serves: 6

Ingredients:

½ pound ground pork	2 teaspoons ketchup
¼ cup scallions, finely chopped	2 teaspoons Worcestershire sauce
¼ teaspoon cayenne pepper	1 teaspoon yellow mustard
1 teaspoon light brown sugar	3 to 4 tablespoons vegetable oil, for frying
1½ cup chicken broth	Non-stick cooking spray
2 tablespoons red pepper, finely chopped	Sea salt and freshly ground black pepper

Directions:

1. In a bowl, mix ground pork, scallions, red pepper, egg, ketchup, yellow mustard, Worcestershire, light brown sugar, cayenne, sea salt, and fresh ground black pepper.
2. Keep wonton wrappers in the package and place a damp cloth on top, as they will dry up quickly.
3. Take 1 wonton wrapper and lightly brush water on the edges.
4. Place ½ teaspoon of pork mixture in center of the wrapper and shape as desired.
5. Lightly spray non-stick vegetable spray on a tray or baking sheet and place dumplings on.
6. Covered the dumplings with a damp cloth.
7. Heat up the Wok to 400°F and brush with vegetable oil.
8. Add 8 to 10 pot stickers at a time and cook for 2 minutes.
9. Add chicken broth, turn heat down to 100°F, and then cook for another 2 minutes.
10. Remove wontons and place on a platter.
11. Clean the Wok and repeat process until all pot stickers are cooked.

Tip: To keep the cooked pot stickers warm, preheat your regular oven in a low setting at 220°F and keep them in oven.



Sesame Chicken Serves: 4

Ingredients:

1 pound boneless chicken thighs, fat trimmed off, meat cut into bite-sized pieces	1 tablespoon sugar
1½ teaspoons peanut oil	1 tablespoon honey
2 tablespoons sesame seeds	2 tablespoons rice vinegar
1 scallion, finely sliced	1 tablespoon fresh ginger, grated
2 tablespoons soy sauce	1 clove of garlic, minced
2 teaspoons sesame oil	1 egg, beaten
	3 tablespoons cornstarch
	Sea salt and freshly ground black pepper

Directions:

1. In a bowl, mix soy sauce, sesame oil, sugar, honey, rice vinegar, and garlic; set aside.
2. In a big bowl, mix beaten egg with cornstarch and season with sea salt and fresh ground pepper. Let it rest for 10 minutes.
3. Add chicken to mixture, tossing to coat all the pieces.
4. Bring Wok up to 425°F. Once hot, add oil and swirl to coat the Wok.
5. Add chicken and stir-fry for 5 to 6 minutes or until golden brown.
6. Add the sauce to Wok, toss with chicken, and continue to stir-fry for 2 minutes or until sauce thickens. Remove from heat.
7. Garnish with sesame seeds and scallions. Serve.



Shrimp and Fried Rice Serves: 4-6

Ingredients:

2 tablespoons peanut oil	4 leaves green cabbage, finely shredded
12 large shrimp, cleaned, shelled and deveined	4 cups cooked jasmine or long-grain rice
1 teaspoon Shaoxing rice wine	1 tablespoon soy sauce (and additional amount to taste)
2 eggs, beaten	Sea salt
2 scallions, chopped	Freshly ground black pepper
1 tablespoon sesame oil	

Directions:

1. Heat Wok to 425°F. A drop of water should sizzle on contact. Add peanut oil and swirl to coat.
2. Add shrimp and rice wine and stir-fry for 1-2 minutes or until shrimp just turns pink.
3. Transfer shrimp to a plate; set aside.
4. Add eggs, scallions, and sesame oil to Wok and stir-fry for 1 minute.
5. Add cabbage in and stir-fry for an additional 1-2 minutes.
6. Turn heat down to 375°F and add rice. Toss, mixing everything together.
7. Add shrimp back to Wok and mix. Cook for an additional 1-2 minutes until shrimp are all opaque.
8. Turn off heat and add the soy sauce, stirring in to incorporate. Season with sea salt and fresh ground pepper to taste.



Spring Rolls with Pork and Shrimp Serves: 6

Ingredients:

12 spring roll wrappers	½ teaspoon cornstarch, mixed with 1 teaspoon soy sauce
2 tablespoons flour (with water for paste to seal spring rolls)	3 ounces grated carrot
6 Chinese mushrooms, dried, soaked for 30 minutes, drained, and chopped	3 ounces bean sprouts
8 ounces ground pork	3 ounces chestnuts, sliced
8 ounces shrimp, cooked, chopped	6 spring onions, finely chopped
	½ teaspoon sesame oil
	4 cups peanut oil, plus 1 tablespoon for initial heating of Wok

Directions:

1. Heat Wok to 275°F and add the 1 tablespoon of peanut oil.
2. Add ground pork and stir-fry for 2-3 minutes. Add shrimp, cornstarch paste, and carrot.
3. Increase heat to 375°F and add bean sprouts and spring onions. Toss for 1 minute, and then incorporate the dry mushrooms.
4. Take off the heat and add sesame oil.
5. Cool the filling mixture down quickly on a sheet tray.
6. Once filling has cooled, take a wrapper and place it on a clean work surface or cutting board. Spoon the filling in the center of the wrapper and fold the corner of the wrapper nearest to you over the filling.
7. Smear a little of the flour paste on the free sides, turn the sides to the middle, and then roll it up.
8. Repeat with the remaining wrappers and pork filling.
9. Return Wok to heat and bring temperature down to 350°F. Add the 4 cups of peanut oil.
10. Once oil is hot, carefully drop 4 spring rolls in and cook until they are golden and crisp. Cook remaining spring rolls. Drain on paper towels. Serve.



Stir-Fried Beef with Broccoli and Oyster Sauce Serves: 4-6

Ingredients:

Sauce:

5 tablespoons oyster sauce
2 tablespoons chicken broth
1 tablespoon dry sherry
1 tablespoon packed light brown sugar
1 teaspoon toasted sesame oil
1 teaspoon cornstarch

4½ teaspoons oil, divided
1¼ pounds broccoli florets, cut into
1-inch pieces, stalks peeled, sliced on
the bias, and 1/8 inch thick
⅓ cups water
1 small red bell pepper, stemmed,
seeds removed, cut into ¼-inch pieces
3 scallions, sliced thin and on the bias

Stir-fry:

1 pound flank steak, trimmed, sliced into
2-inch-long strips, each ⅛ inch thick
3 tablespoons soy sauce
6 cloves garlic, minced
2 tablespoons vegetable oil, plus extra

Directions:

1. For the sauce, whisk all sauce ingredients together in a small bowl; set aside.
2. Combine beef and soy sauce in a medium bowl and let sit for at least 10 minutes or up to an hour, stirring once.
3. Combine garlic, ginger, and 1½ teaspoons oil in Wok, Heat Wok to 425°F, until it's just smoking.
4. Add half of the beef in a single layer, breaking up clumps. Cook without stirring for 1 minute.
5. Stir and continue to cook until browned, about 30 more seconds. Transfer beef to bowl and repeat with an additional 1½ teaspoons oil and remaining beef.
6. Add 2 tablespoons vegetable oil to empty Wok and heat Wok to 425°F, until it's just smoking. Add broccoli and cook for 30 seconds.
7. Add water, cover, and reduce heat to 275°F. Cook until broccoli is tender-crisp, about 2 minutes. Do not overcook broccoli. Transfer to paper towel-lined plate.
8. Add remaining vegetable oil to Wok. Bring heat up to 425°F, until it's just smoking. Add bell pepper and cook, stirring frequently, for about 1½ minutes.
9. Push bell pepper up the sides of the Wok. Add garlic mixture to center and cook for 15-20 seconds, mashing mixture in Wok. Stir garlic mixture into bell pepper.
10. Return beef and broccoli to Wok and toss to combine.
11. Whisk sauce to recombine and add to the Wok and cook. Stir constantly until sauce thickens and is evenly distributed, about 30 seconds.
12. Transfer to platter and sprinkle with scallions.



Stir-Fried Vegetables Serves: 4

- Ingredients:**
- | | |
|--|--|
| 1 cup snow peas | ½ teaspoon sesame oil |
| 8 dried black Chinese mushrooms, soaked in hot water, stems removed, caps sliced or left whole | ½ teaspoon soy sauce |
| ¾ cup canned bamboo shoots | Sea salt |
| ½ tablespoon grated ginger | Freshly ground black pepper |
| 2 tablespoons rice wine | ½ teaspoon sugar |
| ½ teaspoons oyster sauce | 2 tablespoons peanut oil |
| | Extra vegetables of your choice (optional) |

- Directions:**
1. Heat Wok to 525°F and add peanut oil.
 2. Once hot, add snow peas and cook 30 seconds, adding sea salt and sugar.
 3. Add mushrooms and bamboo shoots.
 4. Add in extra vegetables (optional). Add ginger, rice wine, oyster sauce, sesame oil, soy sauce, and fresh ground black pepper.
 5. Serve with white rice.

Tip: Add 1 cup of the mushroom liquid (from when they were soaked), if needed.

Sweet and Sour Chicken Tempura Serves: 4

- Ingredients:**
- | | |
|---|--|
| 2 8-ounce chicken breasts, diced into 2-inch pieces | Sweet and Sour Sauce (makes 2½ cups): |
| 4 cups peanut oil | 1 cup sugar |
| | 3 tablespoons ketchup |
| | ½ cup water |
| | ½ cup rice vinegar |

- Batter:**
- ¼ cup self-rising flour
 - ¼ cup cornstarch
 - ¼ teaspoon sea salt
 - ¼ teaspoon sugar
 - ½ cup cold water

- Directions:**
1. For the batter, place water in a bowl then add all the dry ingredients. Mix well.
 2. For the sweet and sour sauce, place all the ingredients in a saucepan and bring up to a boil. Let sauce cool.
 3. Heat Wok to 350°F and add 4 cups peanut oil.
 4. Coat the chicken in the batter and place each piece separately in the oil. Cook for 4 to 5 minutes.
 5. Remove the chicken and drain on paper towel. Repeat until all are cooked.
 6. Pour sweet and sour sauce into Wok. Return cooked chicken to Wok and toss to coat well. Serve.



Sweet and Sour Shrimp Serves: 4-6

- Ingredients:**
- 11 ounces cooked jumbo shrimp (tiger prawns)
 - 1 small head romaine lettuce
 - 2 teaspoons fresh ginger root, finely chopped
 - 2 tablespoons light soy sauce
 - 2 tablespoons soft light brown sugar
 - 3 tablespoons rice vinegar
 - 1 tablespoon Shaoxing rice wine
 - ½ cup chicken or vegetable stock
 - 1 tablespoon cornstarch paste
 - Sesame oil (a few drops)
- For sauce:**
- 1 tablespoon vegetable oil
 - 1 tablespoon scallions, green parts only, finely chopped

- Directions:**
1. Separate lettuce leaves and arrange them on a platter.
 2. Peel cooked shrimp and dry with paper towel; set aside.
 3. For the sauce, heat Wok to 375°F. Add scallions and ginger. Toss to mix.
 4. Add soy sauce, sugar, rice vinegar, rice wine, and stock. Bring up to a boil.
 5. Add shrimp to the sauce and toss to coat. Cook the shrimp through.
 6. Thicken the sauce with cornstarch paste, stirring until smooth.
 7. Remove from heat, place on lettuce, and drizzle with sesame oil.



Vegetable Egg Rolls Serves: 4

- Ingredients:**
- 2 tablespoons peanut oil, plus extra 1 tablespoon, divided
 - 2 cloves garlic, minced
 - 1 tablespoon ginger, minced
 - ½ sweet onion, sliced thin
 - 1 celery stalk, sliced thin
 - 2 carrots, cut into matchsticks
 - ½ small cabbage head, shredded
 - 2 tablespoons rice vinegar
 - 2 teaspoons soy sauce
 - 1 teaspoon sugar
 - 40-50 egg roll wrappers

- Directions:**
1. Heat Wok to 375°F and add the 2 tablespoons of peanut oil.
 2. Add garlic and ginger and cook for 30 seconds. Add onion, celery, and carrots and stir-fry for 2 minutes.
 3. Add cabbage, rice vinegar, soy sauce, and sugar, and continue to stir-fry for an additional 2 minutes.
 4. Remove vegetables and place on a sheet tray to cool down. Turn heat off.
 5. Take one egg roll wrapper and place on a clean surface. The point nearest to you should be directly facing you.
 6. Spread 1 tablespoon of the filling, making a horizontal line across.
 7. Roll the point of the wrapper closest to you over the filling. Fold in the two side corners.
 8. Dampen the remaining open point with water. Finish rolling the egg roll away from you.
 9. Heat Wok to 375°F and add the extra 1 tablespoon of peanut oil.
 10. Place 2 egg rolls in Wok, seam-side down. Fry for about 5 to 8 minutes, turning them constantly to ensure even cooking. Fry the egg rolls in 2 separate batches.
 11. When cooked, drain on paper towels.

Tip: Serve with a plum sauce or a sweet and sour sauce.



Wonton Soup Serves: 6

Ingredients:

Soup:

- 8 cups chicken broth
- 1 small carrot, shredded
- 1 onion, diced small
- 2 garlic cloves, minced
- 1 1-inch piece of ginger, minced
- 3 scallions, finely minced
- 4 ounces ground pork

Wonton Mixture:

- 25 pieces wontons
- 6 ounces ground pork
- 2 scallions, minced
- 1 onion, finely chopped
- 1/8 teaspoon freshly ground black pepper
- 1 clove garlic, minced
- 1 tablespoon soy sauce
- 1 teaspoon sesame oil
- 1 egg white, lightly beaten

Directions:

1. For the mixture filling, in a bowl, mix ground pork, onion, ginger, scallions, soy sauce, and fresh ground black pepper.
2. Wrap with plastic and place in freezer for 10 minutes.
3. Line a sheet pan with parchment paper.
4. Place one wonton skin on a clean working surface with one point of the wrapper facing toward you.
5. Place 1 teaspoon of the mixture filling in the middle of the wonton wrapper.
6. Brush the edges of wonton skin with water and fold into a triangle. Press down to seal, and then brush the corners with water and fold over the ends with your finger and press to seal. Place each wonton on the sheet pan.
7. Cover wontons with a damp paper towel. Repeat until all wontons are done. Refrigerate for 3 hours.
8. Remove, and then cover with plastic before cooking.
9. Heat the Wok to 425°F and add oil.
10. Once oil is hot, add ground pork, onions, garlic, and ginger to Wok. Cook for 4 to 5 minutes. Do not allow pork to brown, but cook completely.
11. Add the chicken broth, bring broth up to a boil, and then lower heat to 175°F and simmer for 30 minutes. Strain the soup, if you wish.
12. Place wontons in Wok and broth. Bring heat up 425°F. Cook wontons for 4 to 6 minutes or until all are cooked through.
13. Serve soup on the side with the wontons or use the soup “as is” and add cooked (boiled separately) wontons and carrots before pouring into bowls. Garnish with scallions.

NuWave Mosaic[®] Wok de Precisión e Inducción



Manual del Usuario

Bienvenido a la Cocina de Precisión e Inducción NuWave[®]

Felicidades por la compra del Wok de Precisión e Inducción NuWave. Este manual contiene instrucciones detalladas e imágenes para ayudarle a comenzar. También está lleno de grandes recetas y consejos para ahorrar tiempo, los cuales le ayudarán a preparar deliciosas comidas gourmet en una fracción de tiempo que tomaría hacerlo al utilizar una estufa convencional. Cocinar es rápido y fácil con el Wok de Precisión e Inducción de Nu-Wave, LLC. Este versátil electrodoméstico de barra utiliza tecnología de inducción para ahorrar tiempo, energía y dinero. El Wok de Precisión e Inducción NuWave es eficiente, seguro, rápido y fácil de limpiar. Y, debido a que puede programar tiempos y temperaturas desde tibio hasta abrasador, usted puede preparar casi cualquier tipo de comida sin el riesgo de cocinarlo de más o de menos.

¿Qué es la Cocción por Inducción?

El Wok de Precisión e Inducción NuWave se compone de una serie de bobinas de inducción basadas en principios magnéticos. Estas bobinas generan campos magnéticos que producen una reacción inmediata de calentamiento en ollas y sartenes de acero y hierro. El calor se genera directamente en el wok, limitando el calor adicional que se irradia alrededor de la superficie como sucede en las estufas tradicionales de gas o eléctricas, haciendo el Wok de Precisión e Inducción mucho más eficiente energéticamente.

La cocción por inducción es la forma más ecológica de preparar las comidas porque el método no libera toxinas en el medio ambiente. La cocción por inducción no emite llama, por lo que se produce menos calor residual en su cocina.

Beneficios adicionales:

Conservación de la Energía: El campo magnético, generado por las bobinas de cobre, hace que las moléculas invisibles en el Wok comiencen a vibrar rápidamente creando así calor, por lo que el Wok calienta la comida por sí mismo.


Seguridad: El diseño del Wok de Precisión e Inducción NuWave no utiliza ninguna bobina roja caliente o llamas abiertas, eliminando esencialmente el riesgo de incendio. La función de Apagado Automático realza la seguridad de la Base del Wok de Inducción. ¡Solamente tóquelo y adelante!

Cocción Rápida: Se calienta inmediatamente y la temperatura es precisa en el Wok de Precisión e Inducción NuWave. Cuenta con 6 ajustes de temperatura diferentes que pueden cambiarse en incrementos de 5 grados. ¡No tendrá que calcular!




Ligero y portátil: Debido a que el Wok de Precisión e Inducción NuWave pesa sólo 6.9 libras, se puede llevar a donde sea. Úselo en interiores o al aire libre, en cualquier lugar donde haya un contacto eléctrico estándar (E.U.A.).

Fácil de limpiar: Los derrames no se quemarán o pegarán en la superficie de la Base del Wok de Inducción. ¡Sólo límpielo y listo!

DESCRIPCIÓN DE PIEZAS

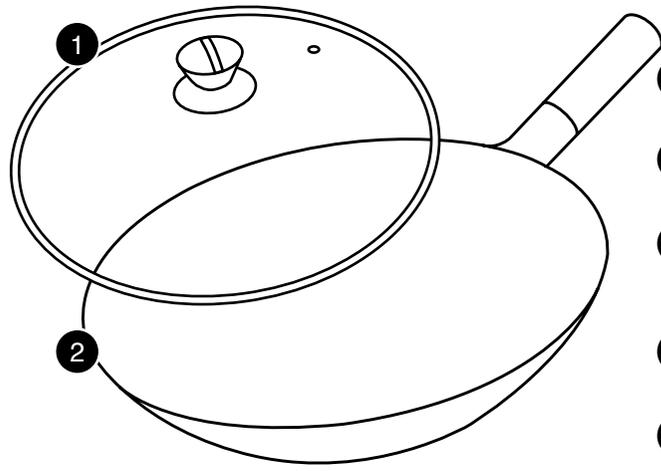

- 1 **Tapa del Wok**
Parte: 31752
- 2 **Wok**
Parte: 31751
- 3 **Base del Wok de Inducción**
Parte: 30801
- 4 **Estante de Freír**
Part #: 31754
- 5 **Plataforma**
Part #: 31753

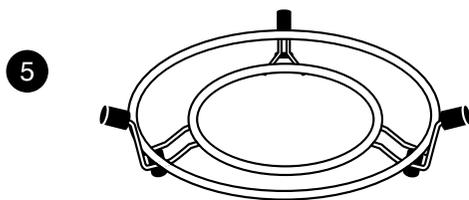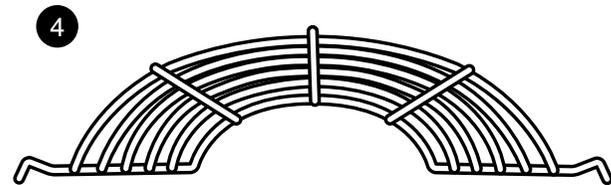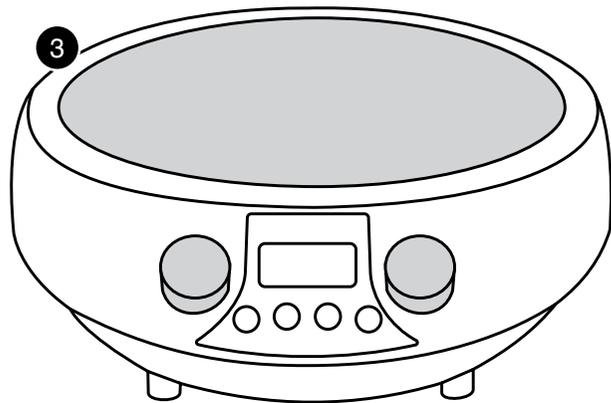

Después de cocinar en la Base de Wok de Inducción, la Plataforma del Wok se puede usar como bandeja de servir.

MEDIDAS DE SEGURIDAD IMPORTANTES

LEA TODAS LAS INSTRUCCIONES

Cuando utilicen electrodomésticos, siempre se deben seguir precauciones básicas de seguridad, incluyendo las siguientes:

PELIGRO - Para reducir el riesgo de electrocución:

1. No lo use al aire libre.
2. Lea todas las instrucciones, medidas de seguridad y advertencias antes de usar el aparato.
3. No coloque el electrodoméstico donde pueda caerse o ser jalado hacia agua u otros líquidos.
4. No trate de sacar un aparato que ha caído al agua. Desenchúfelo inmediatamente. No sumerja el cable, el enchufe o cualquier parte del aparato en agua u otros líquidos.

ADVERTENCIA - Para personas con marcapasos:

1. Este aparato emite un campo electromagnético que es más fuerte dentro de 2 pies de la superficie de cocción.
2. Las pruebas científicas han demostrado ser poco concluyentes en cuanto a si el campo eléctrico interrumpirá la función de un marcapasos. Por favor, consulte a su médico o profesional médico antes de usarlo.

ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio y lesiones:

1. Este aparato no está diseñado para uso continuo.
2. Este aparato incluye una función de calentamiento. Las superficies pueden alcanzar temperaturas altas. No toque las superficies calientes. La Base del Wok de Inducción puede conservar calor residual después de retirar el recipiente. El uso de agarradores u otras medidas de seguridad alternativas son altamente recomendables.
3. Este electrodoméstico no deberá ser utilizado por niños. Tenga aún más cuidado cuando utilice el producto cerca de niños.
4. No lo coloque sobre ninguna parrilla de gas o eléctrica, o dentro de un horno caliente.
5. No coloque sobre la Base del Wok de Inducción objetos metálicos como cuchillos, tenedores, cucharas o tapas, ya que se pueden calentar.
6. Este aparato no está diseñado para uso comercial.
7. Utilice este electrodoméstico para el propósito para el que está diseñado como se describe en este manual. No utilice otros accesorios o aditamentos no recomendados por el fabricante, ya que ello podría provocar un incendio, una descarga eléctrica o lesiones personales. **Se recomienda utilizar únicamente el Wok incluido en la Base de Precisión e Inducción.**

MEDIDAS DE SEGURIDAD IMPORTANTES

8. Nunca utilice este electrodoméstico si tiene el cable o la clavija dañados, si no funciona adecuadamente, si se cayó o ha sido dañado, o si se ha sumergido en agua. Contacte a Servicio al Cliente al 1-877-689-2838 o escriba a help@nuwavenow.com
9. No utilice un aparato roto. En caso de una ruptura, los limpiadores o derrames pueden penetrar el aparato creando el riesgo de una descarga eléctrica.
10. Mantenga el cable lejos de superficies calientes. No deje el cable colgando de las orillas de mesas o barras. Nunca forcé la clavija en un contacto. Siempre desconecte jalando la clavija. Apague el aparato antes de desconectarlo del contacto.
11. No lo utilice donde se estén usando productos aerosoles, así como en lugares donde el oxígeno sea reducido.
12. Utilice un juicio apropiado y cuidado cuando utilice el aparato al aire libre o espacios públicos. Este aparato nunca deberá ser puesto donde haya niños sin cuidar o alguien que no sepa de su presencia. Debe ser colocado en una superficie plana y estable, lejos de fuentes de agua como albercas, spas, rociadores, mangueras, etc.
13. No mueva el aparato mientras esté caliente.
14. Este electrodoméstico es para uso doméstico únicamente; está diseñado para procesar cantidades normales de una casa. No es conveniente para un uso continuo u operación comercial.
15. No desarme el producto. Las partes no sirven por sí solas.
16. No deje el electrodoméstico desatendido si está en uso.
17. Este aparato no está diseñado para utilizarse por medio de un reloj externo.
18. Limpie el aparato con precaución. Al limpiar una superficie caliente con aplicaciones húmedas se puede provocar vapor y algunos limpiadores pueden producir humo peligroso. Desconecte del contacto antes de limpiar.
19. Tome precaución cuando deseche el aceite caliente.
20. Mantenga este manual a la mano para una referencia en el futuro.

Información Eléctrica

1. La longitud del cordón corto de este electrodoméstico se seleccionó para reducir los riesgos de seguridad que pueden presentarse con un cable largo.
2. Se puede usar un cable de extensión con este electrodoméstico si:
 - a) La clasificación eléctrica marcada del cable de extensión se clasifica al menos tan bien como la clasificación eléctrica del dispositivo.
 - b) La más larga está dispuesta para que no caiga sobre la encimera o sobre la mesa donde podría ser extraída o tropezada accidentalmente.

MEDIDAS DE SEGURIDAD IMPORTANTES

3. Algunos modelos de este aparato pueden tener un enchufe polarizado (una cuchilla es más ancha que la otra). Este enchufe está diseñado para encajar en un tomacorriente polarizado de una sola manera. Si el enchufe no entra completamente en el tomacorriente:
 - a) Invierta el enchufe.
 - b) Póngase en contacto con un electricista calificado (si el enchufe de reversa no funciona). **NO INTENTE MODIFICAR EL ENCHUFE DE NINGUNA MANERA.**

⚠ ADVERTENCIA	
	<p>Peligro de descarga eléctrica. Utilizar con el sistema eléctrico adecuado. No lo utilice si el cable o el enchufe están dañados.</p> <p>ADVERTENCIA: Todos los artículos del Wok de Inducción pueden calentarse mucho al cocinar. Tenga cuidado al quitarlos de la unidad. Siempre use guantes de horno o utilice sujetadores. El Wok de Inducción puede retener calor residual después de retirarlo. Deje que todo se enfríe completamente antes de limpiarlo.</p> <p style="text-align: center;">1-877-689-2838 o help@nuwavenow.com</p>

GUARDA ESTAS INSTRUCCIONES

IMPORTANTE - Información de la FCC:

Advertencia: Los cambios o modificaciones a esta unidad que no sean aprobados explícitamente por la parte responsable podrían invalidar la autoridad del usuario para operar el equipo.

Nota: El equipo cumple con la parte 18 del Reglamento FCC.

Forma correcta para desechar este producto	
	<p>Esta marca indica que este producto no debe desecharse con otros residuos domésticos dentro de E.U.A. Para evitar posibles daños al medio ambiente o a la salud humana por el desecho incontrolado de residuos, reciclelos responsablemente para promover la reutilización sostenible de los recursos materiales. Para devolver el dispositivo usado, utilice sistemas de devolución y recolección o póngase en contacto con el distribuidor donde adquirió el producto. Se puede manejar reciclaje ambientalmente seguro.</p>

CUIDADO Y MANTENIMIENTO - BASE DEL WOK DE INDUCCIÓN

Antes de usarlo, limpie la superficie con un trapo húmedo o una esponja, y seque bien.

IMPORTANTE: no sumerja la unidad en agua ni intente girar por el lavavajillas. Asegúrese de que la unidad se haya enfriado por completo antes de limpiarla. La superficie exterior se puede limpiar limpiando cuidadosamente con un paño húmedo o una esponja.



DESPUÉS DE USARLO:

- Limpie después de cada uso.
- Desconecte la unidad antes de limpiarla.
- Asegúrese de que la unidad se haya enfriado completamente antes de limpiarla.
- La superficie externa se puede limpiar con un paño húmedo o una esponja.
- Retire el cable de alimentación antes de limpiar el Wok de Precisión e Inducción NuWave. No utilice agentes de limpieza cáusticos. El agua no debe penetrar en el interior de la Base de Wok de Inducción.
- Nunca sumerja el Wok de Precisión e Inducción NuWave, sus cables o el enchufe en agua u otros líquidos.
- Limpie la superficie de vidrio con un paño húmedo o use una solución jabonosa suave y no abrasiva. Asegúrese de que la unidad se haya enfriado por completo antes de limpiarla.
- Limpie la cubierta y el panel de operación con un paño suave humedecido con agua o un detergente suave.
- No utilice productos de limpieza a base de aceite, ya que su uso puede dañar las partes plásticas o la cubierta/panel de operación.


CUIDADO Y MANTENIMIENTO - BASE DEL WOK DE INDUCCIÓN (CONTINUACIÓN)

- No utilice materiales inflamables, ácidos o alcalinos cerca del Wok de Precisión e Inducción NuWave, ya que esto puede reducir la vida útil de la Base del Wok de Inducción o crear un riesgo de incendio cuando la Base está en uso.
- Con el fin de mantener su Wok de Precisión e Inducción NuWave como nuevo, tome medidas para asegurarse de que la parte inferior del Wok no raspe la superficie de vidrio de la unidad. Aunque una superficie rayada no pone en peligro el uso de la Base del Wok de Inducción.
- Asegúrese de limpiar adecuadamente la unidad antes de guardarla en un lugar fresco y seco.

Consejos Importantes:

1. Revise las tomas de corriente para asegurar un funcionamiento correcto. No lo utilice en un tomacorriente donde se encuentren otros aparatos importantes. Compruebe los ajustes si la unidad está cocinando demasiado lento.
2. El enchufe eléctrico debe estar conectado correctamente a la toma de corriente.
3. Siempre apague y desenchufe la unidad antes de limpiarla.

CUIDADO Y MANTENIMIENTO - WOK

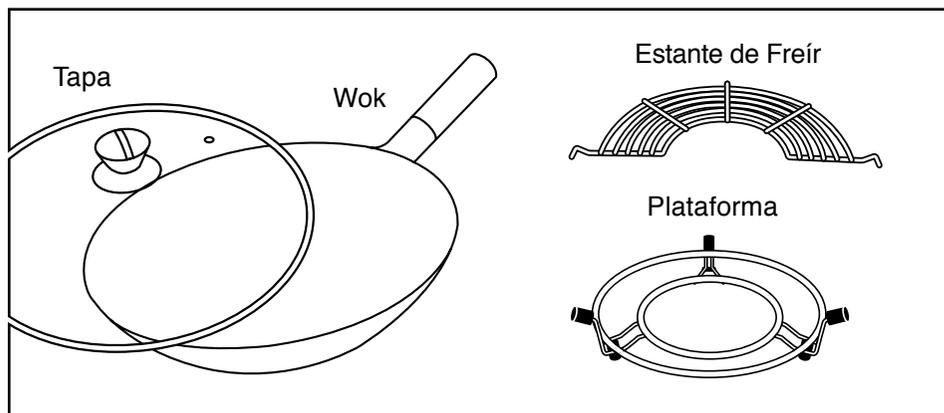

Nota: Antes de curar el Wok; se recomienda limpiar el Wok antes del primer uso. El Wok, Tapa del Wok, Estante de Freír y la Plataforma son aptos para el lavado de platos.

Curación/Cuidado y Uso

1. Asegúrese de que el Wok se ha secado completamente.
2. Caliente el Wok y frote 2 cucharadas de aceite de cacahuete en la superficie con un paño seco o un conjunto grueso de toallas de papel para que la nueva capa de aceite recubre la superficie. **(Precaución: la superficie estará caliente).**
 - Deje una ventana abierta y utilice un ventilador para quitar cualquier humo. El humo de la superficie es normal durante este proceso.
3. Deje que la sartén se enfríe a temperatura ambiente. Repita los pasos de dos a tres veces más, frotando una pequeña cantidad de aceite en la sartén cada vez.

Limpeza del Wok:

1. Después de que el Wok se ha utilizado para cocinar, simplemente límpielo con una toalla de papel o un trapo seco.
 - Si el wok está muy sucio y requiere una limpieza más profunda, limpie el wok usando aceite limpio o un cepillo de bambú (el eucalipto tiene propiedades antibacterianas) para raspar cualquier incrustación. Solamente deje que corra agua en el wok y frote hasta que el residuo desaparezca.
2. Seque el wok bien después de la limpieza.
3. Cuando todos los residuos hayan sido retirados del Wok, repita el proceso de curación.

CUIDADO Y MANTENIMIENTO - WOK (CONTINUACIÓN)

Si se necesita una limpieza más profunda:

1. Caliente el Wok.
2. Agregue 2 cucharadas de aceite de cacahuete y agregue varias cucharadas de sal kosher.
3. De una tallada fuerte al wok con una toalla de papel doblada. (Precaución: ¡La superficie estará caliente!)
4. Enfríe el Wok.
5. Enjuague con agua corriente y seque completamente.
 - Posteriormente, se puede aplicar al wok una ligera frotación de aceite de cacahuete una vez más.


Nota: Las ideas “convencionales” de limpieza e higiene con los utensilios de cocina son algo contraproducentes cuando se trata de un wok auténtico – los restos que se quedan en la superficie del wok, después de secarlo luego de su uso, forman una capa que con el tiempo servirá para mejorar el sabor de sus alimentos.

INSTRUCCIONES DE FUNCIONAMIENTO

Instrucciones de uso generales:

- Coloque la Base del Wok de Inducción sobre una superficie estable no metálica.
- Nunca utilice la Base del Wok de Inducción sobre una superficie inflamable (por ejemplo, un mantel, una alfombra, etc.).
- No bloquee las ranuras de ventilación de la Base del Wok de Inducción. Esto podría hacer que la unidad se sobrecaliente. Mantenga una distancia mínima de 3-5 pulgadas a las paredes y otros objetos, electrodomésticos, etc.
- No coloque dispositivos u objetos que son sensibles a los campos magnéticos encima o al lado del Wok de Precisión e Inducción NuWave (por ejemplo, tarjetas de crédito, teléfonos celulares, radios, televisores, grabadoras de vídeo, etc.).
- No use el Wok de Precisión e Inducción cerca de flamas abiertas, calentadores u otras fuentes de calor.
- No lo coloque sobre la estufa.
- Asegúrese de que el cable de alimentación no esté dañado o presionado debajo de la Base del Wok de Inducción.
- El cable de alimentación no debe entrar en contacto con bordes afilados y/o superficies calientes.
- Antes de conectar el Wok de Precisión e Inducción, confirme que las necesidades de voltaje indicadas en este manual corresponden a la alimentación de tensión de su hogar. Una conexión incorrecta puede provocar daños a la unidad y posibles lesiones a personas.
- En el caso de que se observen daños en la unidad, desconecte inmediatamente el Wok de Precisión e Inducción de la fuente de alimentación.

PANEL DE CONTROL

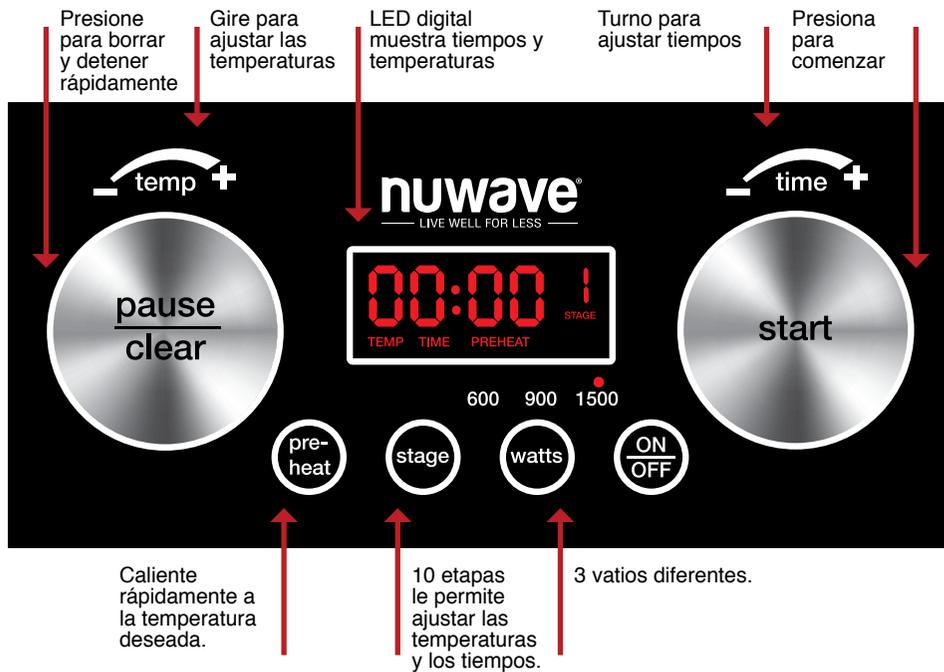

Función Encendido / Apagado:

1. Pulse "ON/OFF" una vez para encenderlo. Se visualizará "0".
2. Presione "ON/OFF" nuevamente para apagar la unidad.

Función de Watts:

1. La potencia en watts predeterminada se establece en 1500. Presione "watts" repetidamente para cambiar a 600, 900 o volver a 1500 watts.
 - Cuando apague y vuelva a encender la unidad, los watts anteriores seleccionados permanecerán en el Wok hasta que sean cambiados.

Función F/C:

1. Presione "stage" y "watts" simultáneamente hasta que vea "F" o "C" parpadeando.
2. Presione "stage" para cambiar de "F" a "C" y viceversa
3. Pulse "on/off" para completar la selección.

Función Pausa/Borrar:

1. Presione "pause/clear" una vez para pausar la unidad.
 - Se visualizará la temperatura seleccionada y "F" parpadeará.
 - Si ha seleccionado "Time" y presiona "pause", "TIME" no parpadeará.
 - Para reanudar la cocción, presione "start".
2. Presione "pause/clear" nuevamente para borrar cualquier programa.

PANEL DE CONTROL (CONTINUACIÓN)

Inicio Rápido:

1. Después de encender la unidad, presione "start" en la perilla. "375F" y "TEMP" se mostrarán y comenzará la cuenta regresiva.
 - El Wok está predeterminado a 375F por 20 minutos.

Función de Temperatura:

Simplemente gire la perilla para disminuir o aumentar la temperatura.

- Ubicada en la perilla derecha.
- El intervalo de tiempo es de 1 minuto a 9 horas y 59 minutos (el tiempo es en horas y minutos).

Función de Tiempo:

Simplemente gire la perilla para disminuir o aumentar el tiempo.

- Ubicada en la perilla derecha.
- El intervalo de tiempo es de 1 minuto a 9 horas y 59 minutos (el tiempo es en horas y minutos).

Función de Cocción por Etapas:

1. Presione "stage". "STAGE" parpadeará y aparecerán "1", "TIME" y "00:00".
2. Ajuste el tiempo y la temperatura si es necesario.
3. Presione "stage" otra vez. "STAGE" parpadeará y aparecerán "2", "TIME" y "00:00".
4. Ajuste el tiempo y la temperatura si es necesario.
5. Repita los pasos si es necesario.
 - Puede crear hasta 10 etapas. La etapa 10 se mostrará como "0".
6. Presione "start".

Función de Precalentamiento:

1. Presione "preheat". "PREHEAT" y "375F" se visualizarán.
2. Ajuste el tiempo y la temperatura si es necesario.
 - El programa de precalentamiento está predeterminado a 375F por 20 minutos.
3. Presione "start". La temperatura seleccionada y "F" parpadearán.
4. Una vez que se haya alcanzado la temperatura seleccionada, se visualizará "selected temperature" y "ready", indicando que el Wok mantendrá esa temperatura durante 5 minutos o hasta que se presione "start".
5. Una vez que se presione "start", comenzará la cuenta regresiva que usted seleccionó con la temperatura programada.
 - Si presiona "pause" cuando la unidad está precalentando, "5" parpadeará, indicando que el Wok mantendrá el programa durante 5 minutos o hasta que se presione "start".

GUÍA DE SOLUCIÓN DE PROBLEMAS

Mensaje de error	Solución
E1	<p>Un E1 normalmente significa que el Wok de Precisión e Inducción NuWave no detecta el Wok en su superficie. Esto puede ocurrir por una de las dos siguientes razones:</p> <ol style="list-style-type: none"> 1. Las bobinas de inducción contenidas dentro del Wok de Precisión e Inducción NuWave sólo funcionarán cuando están en contacto directo con una pieza de Wok. Para mantener la eficacia de su electrodoméstico, asegúrese siempre de que quede sobre una superficie plana y que el contacto sea compatible con su Wok. 2. Un mensaje E1 también puede ocurrir si su Wok no es para inducción. <p>Se recomienda utilizar sólo el Wok incluido con la Base de Precisión e Inducción.</p>
E2	La unidad no funciona correctamente. Contacte a Servicio al Cliente.
E3	El voltaje de la unidad es demasiado bajo. Mínimo = 85 voltios.
E4	El voltaje de la unidad es demasiado alto. Máximo = 144 voltios.
E5	La unidad no funciona correctamente. Contacte a Servicio al Cliente.
E6	La unidad no funciona correctamente. Contacte a Servicio al Cliente.
E7	Sobrecalentamiento o la ventilación de aire está obstruida. Si la temperatura interna supera los 230°F, el funcionamiento cesará y se producirá un "pitido". Presione "pause/clear" dos veces. Espere a que la unidad se enfríe.
E8	Sobrecalentamiento o si la unidad excede una temperatura de 20°F más alta que la temperatura máxima, el aparato se apagará. Contacte a Servicio al Cliente.
E9	La unidad no funciona correctamente. Contacte a Servicio al Cliente al 1-877-689-2838 o escriba a help@nuwavenow.com.
FULL	En el modo de programación, cuando el tiempo total ingresado alcance el límite del aparato que es de 99:59, no se podrán introducir etapas adicionales.

GUÍA DE SOLUCIÓN DE PROBLEMAS (CONTINUACIÓN)

- Si aparece alguno de los mensajes de error anteriores en el LED, la unidad emitirá un "pitido" al menos una vez.
- El ventilador funcionará hasta un máximo de 60 segundos después de presionar "pause/clear" una vez. Continúe cocinando presionando "start" dentro de los siguientes 45 minutos.
- La unidad se apagará después de 45 minutos si no se presiona ningún botón (como "start"). Cuando la unidad se apague, borrará todo el historial de cocción previo.
- Después de presionar "pause/clear" dos veces o la cocción se haya detenido, el ventilador funcionará hasta un máximo de 60 segundos hasta que la unidad se enfríe. En ese momento el Wok de Precisión e Inducción NuWave se apagará.

Quando el Wok está fuera del Wok de Precisión e Inducción NuWave

Inicial	Un solo pitido	"F" o "C" o "Sear" o ":" parpadeando	Después de devolver el Wok a la superficie del Wok de Precisión e Inducción NuWave, se reanudará automáticamente la cocción.
<10 segundos	Ninguno	"F" o "C" o "Sear" o ":" parpadeando	Reanuda la cocción presionando "start".
11-70 segundos	Si	E1	La cocción se detiene.
After 70 segundos	Ninguno	0	

GARANTÍA LIMITADA

El Mosaic® Wok de Precisión e Inducción NuWave

EL FABRICANTE GARANTIZA

El Wok de Precisión e Inducción NuWave, incluyendo la Plataforma del Wok, el Estante de Freír, y la Tapa están libres de defectos de fabricación. Todos los componentes eléctricos están garantizados por 1 año a partir de la fecha de compra, bajo un uso doméstico normal y siempre que se hayan manejado de acuerdo a las instrucciones por escrito del Fabricante. El Fabricante proporcionará las partes necesarias y mano de obra para reparar cualquier parte del Wok de Precisión e Inducción NuWave en el Departamento de Servicio de NuWave, LLC. Una vez vencida la garantía, el costo de mano de obra y las partes será responsabilidad del propietario.

LA GARANTÍA NO CUBRE

La Garantía Limitada se invalida si la reparación es hecha por un distribuidor no autorizado o si la placa del número de serie es retirada o maltratada. El deterioro normal del acabado, por uso o exposición, no está cubierto por esta Garantía. Esta Garantía Limitada tampoco cubre fallas, daños o desempeño inadecuado por accidentes, desastres naturales (tales como relámpagos), fluctuaciones en la energía eléctrica, alteraciones, abuso, mal uso, ambientes corrosivos, instalación inadecuada, o falla en la operación de acuerdo con las instrucciones escritas por el Fabricante, uso no normal o comercial. NuWave, LLC se reserva el derecho de invalidar la Garantía Limitada, donde lo permita la ley, a los productos que hayan sido comprados a distribuidores no autorizados.

PARA OBTENER EL SERVICIO

El propietario tendrá la obligación y responsabilidad de: Pagar por todos los servicios y partes no cubiertas por la garantía; pagar por adelantado el envío hacia y desde el Departamento de Servicio para cualquier pieza o sistema devuelto bajo esta garantía; Empacar cuidadosamente el producto utilizando el material de relleno adecuado para prevenir cualquier daño durante el tránsito. El empaque original es ideal para este propósito. Incluya en el empaque el nombre del propietario, dirección, teléfono durante el día, una descripción detallada del problema y su “**número RGA**”. **Llame al 1-877-689-2838 o escriba a help@nuwavenow.com** para obtener el **RGA** (Número de Autorización de Devolución del Producto). Proporcione el modelo del producto, el número de serie y comprobante de la fecha de compra (una copia del recibo) cuando reclame su garantía.

GARANTÍA LIMITADA (CONTINUACIÓN)

OBLIGACIONES DEL FABRICANTE

La obligación del Fabricante bajo esta Garantía Limitada está limitada, hasta lo permitido por ley, a reparar o reemplazar cualquier parte cubierta por esta Garantía Limitada cuya revisión muestre que el defecto es por uso normal. La Garantía Limitada aplica únicamente en los Estados Unidos y sólo para el comprador original en los canales de distribución autorizados por el fabricante. LA GARANTÍA LIMITADA NO PUEDE SER ALTERADA, CAMBIADA O EXTENDIDA EXCEPTO POR UN INSTRUMENTO POR ESCRITO REALIZADO POR EL FABRICANTE. LA SOLUCIÓN DE REPARACIÓN O REEMPLAZO INCLUIDA EN ESTA GARANTÍA ES EXCLUSIVA. EN NINGÚN CASO EL FABRICANTE SERÁ RESPONSABLE DE NINGÚN DAÑO RELEVANTE O FORTUITO A ALGUNA PERSONA, SEA O NO OCASIONADO POR LA NEGLIGENCIA DEL FABRICANTE, INCLUYENDO, SIN LÍMITE, DAÑOS POR PÉRDIDA POR USO, COSTOS POR REEMPLAZO, DAÑO A LA PROPIEDAD, U OTRAS PÉRDIDAS MONETARIAS.

Algunos estados no permiten la exclusión o limitación de daños relevantes o fortuitos, así que la exclusión mencionada podría no aplicar. Esta Garantía Limitada proporciona derechos legales específicos y podría haber otros derechos que varíen entre estado y estado. EXCEPTO POR LO QUE YA SE EXPRESÓ DE FORMA DIFERENTE, EL FABRICANTE NO GARANTIZA EXPRESA O IMPLÍCITAMENTE POR LEY U OTRAS, INCLUYENDO SIN LIMITACIONES, LAS GARANTÍAS IMPLÍCITAS DE COMERCIALIZACIÓN Y EJERCICIO PARA UN PROPÓSITO PARTICULAR A CUALQUIER OTRA PERSONA. LEA EL MANUAL DEL USUARIO. SI TUVIERA ALGUNA DUDA SOBRE EL FUNCIONAMIENTO O LA GARANTÍA DEL PRODUCTO, CONTACTE A NUWAVE, LLC.

EA SU MANUAL DEL USUARIO: Si tuviera alguna duda sobre el funcionamiento o la garantía del producto, contacte a **NuWave, LLC al: 1-877-689-2838 o escriba a help@nuwavenow.com.**

**Brio® 6-Qt
Digital Air Fryer**



**Nutri-Pot® 6-Qt
Digital Pressure Cooker**



**NuWave Primo™
Combo Grill**



**NuWave PIC® Gold
Precision Induction Cooktop**



**BruHub®
Coffee Maker**



**Moxie® High-Performance
Vacuum Blender**



**Duralon® Healthy Ceramic
Non-Stick Cookware**


nuwave®

— LIVE WELL FOR LESS —

www.nuwavenow.com



Intertek

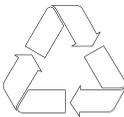

FOR HOUSEHOLD USE ONLY

Model: 30801, 120V, 60Hz, 1500 Watts

For patent information please go to: www.nuwavenow.com/legal/patent

Designed & Developed in USA by:

NuWave, LLC

1795 N. Butterfield Road
Libertyville, IL 60048, U.S.A.

Customer Service:

1-877-689-2838 • help@nuwavenow.com

Made in China

©2019 NuWave, LLC • All Rights Reserved.

Item No. BM 30801

Rev. 10-TH

02-25-19